
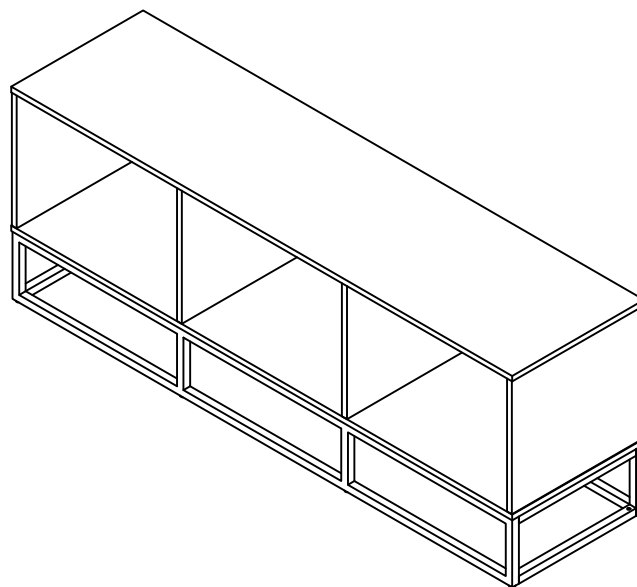
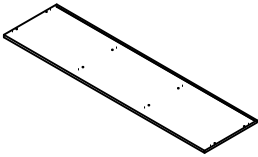


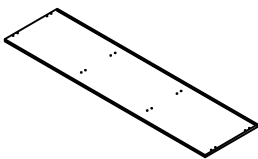

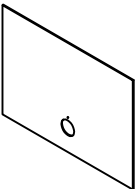



CROSLEY
FURNITURE





Large Record Storage Media Console
CF1127

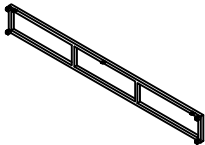

PARTS LIST


A2 	B2 	C2 	D2 	E2 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Partition Panel 2 PCS
F2 	G2 	H2 	I 	
Back Panel 3 PCS	Metal Bar 4 PCS	Metal Leg Frame 2 PCS	Cover 3 PCS	

HARDWARE LIST

#1  1/4"*12mm Bolt 14 PCS (Extra 1)	#2  7*38mm Screw 8 PCS (Extra 1)	#3  Cam Bolt 8 PCS (Extra 1)	#4  Cam Lock 8 PCS (Extra 1)	#5  8*30mm Wood Dowel 16 PCS (Extra 1)
#6  Back Bracket 4 PCS (Extra 1)	#7  3*15mm Short Screw 4 PCS (Extra 1)	#8  Binding Post 3 SETS (Extra 1)	#9  Cam Sticker 8 PCS (Extra 1)	#10  M2 Small Allen Wrench 1 PC
#11  M4 Allen Wrench 1 PC				

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Screw cam bolts (part #3) into top panel (part A2) using phillips head screwdriver.



Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

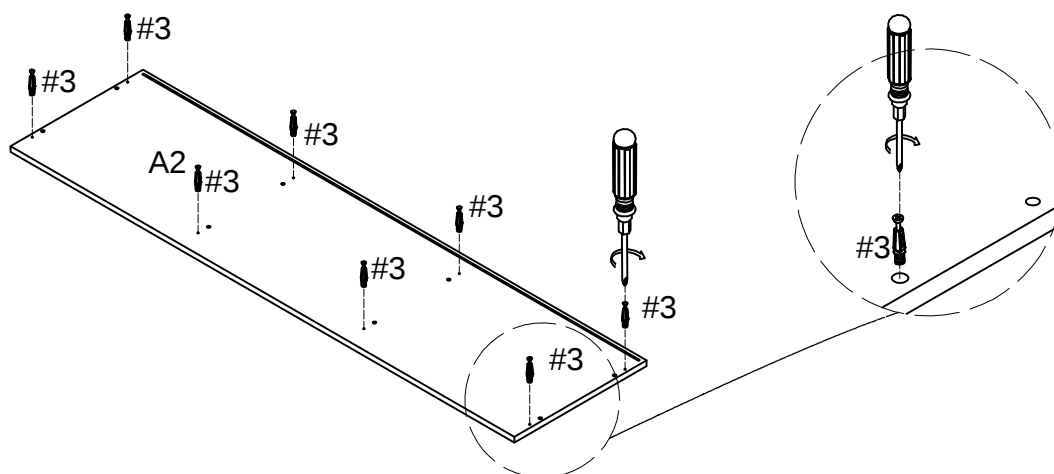

#3  x 8

Step 2. Attach panels (parts B2, C2 & E2) to top panel (part A2) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

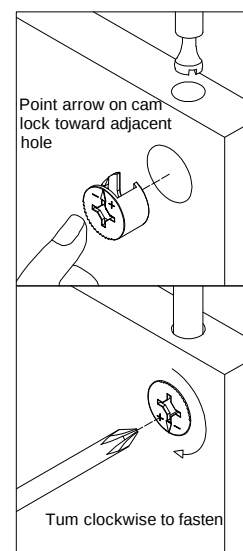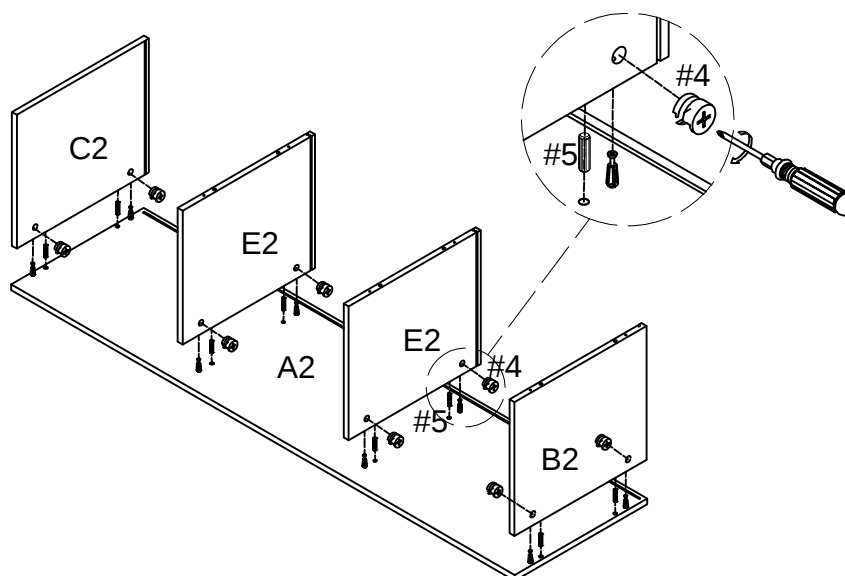


#4  x 8

#5  x 8


Step 3. Attach covers (part I) to back panels (part F2) using binding posts (part #8) and small allen wrench (part #10).

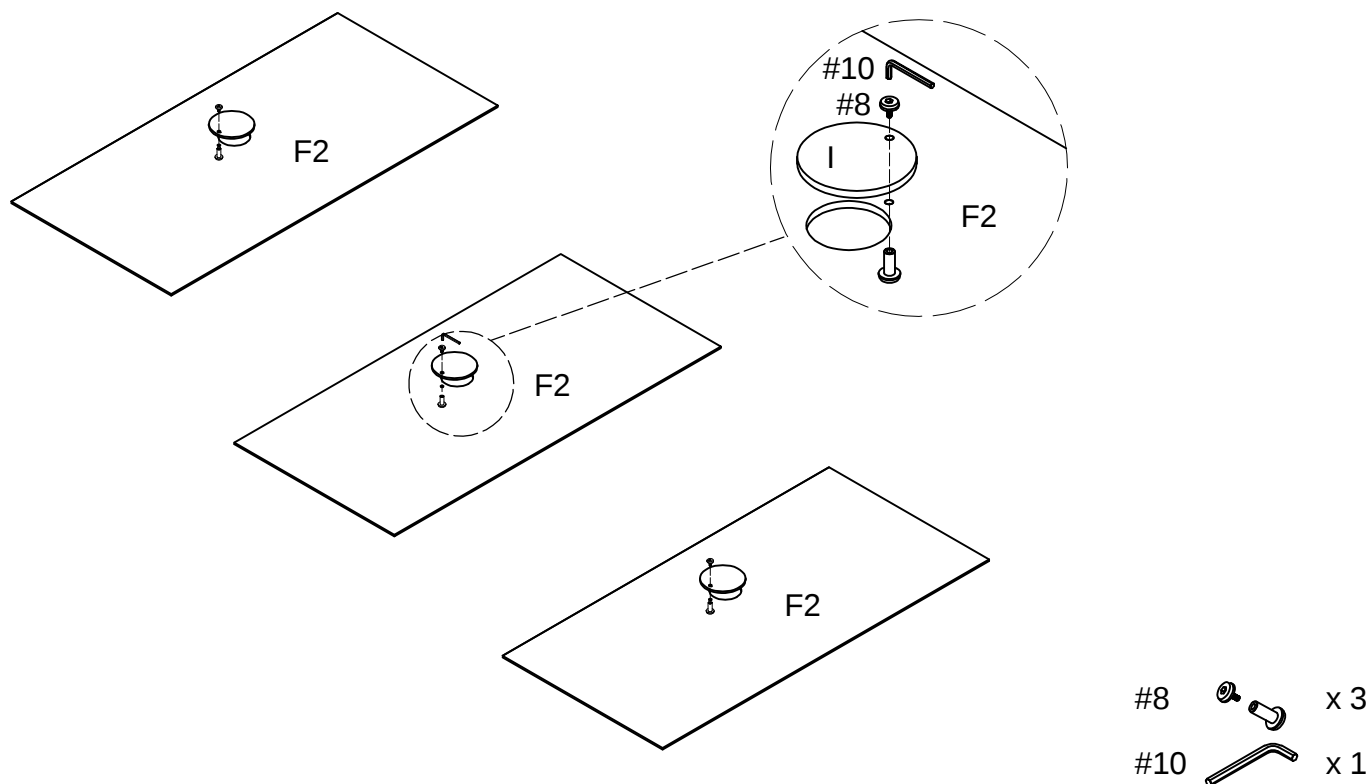

Step 4. Insert back panels (part F2) to assembled unit (parts A2, B2, C2 & E2).

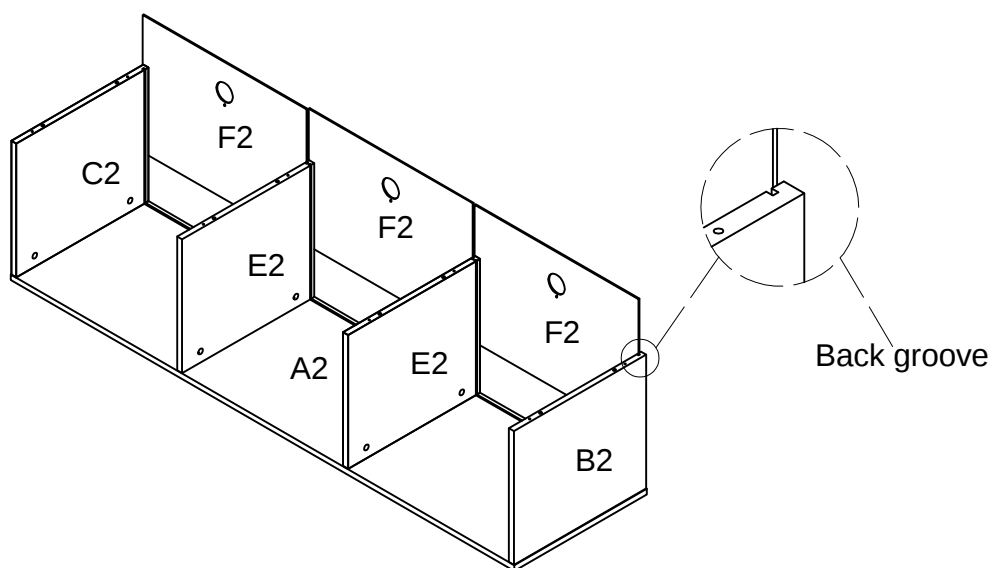


Step 5. Attach bottom panel (part D2) to assembled unit (parts B2, C2, E2 & F2) using screws (part #2), wood dowels (part #5) and allen wrench (part #11).

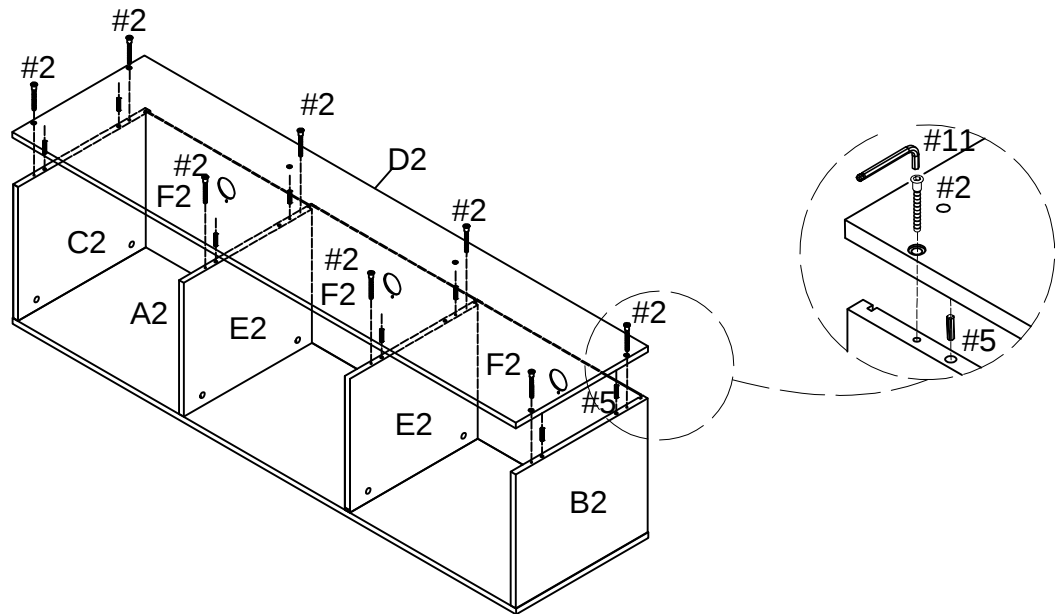


#2		x 8
#5		x 8
#11		x 1

Step 6. Insert metal leg frames (part H2) into metal bars (part G2). Secure metal bars (part G2) and metal leg frames (part H2) using bolts (part #1) and allen wrench (part #11) .

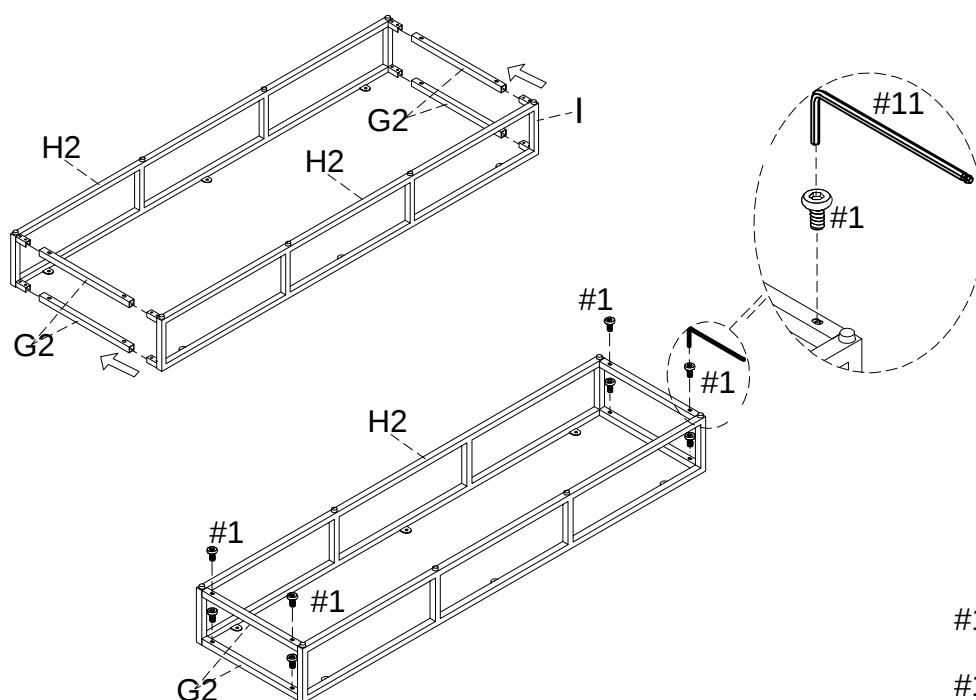


#1		x 8
#11		x 1

Step 7. Attach assembled unit (parts G2 & H2) to bottom panel (part D2) using bolts (part #1) and allen wrench (part #11).


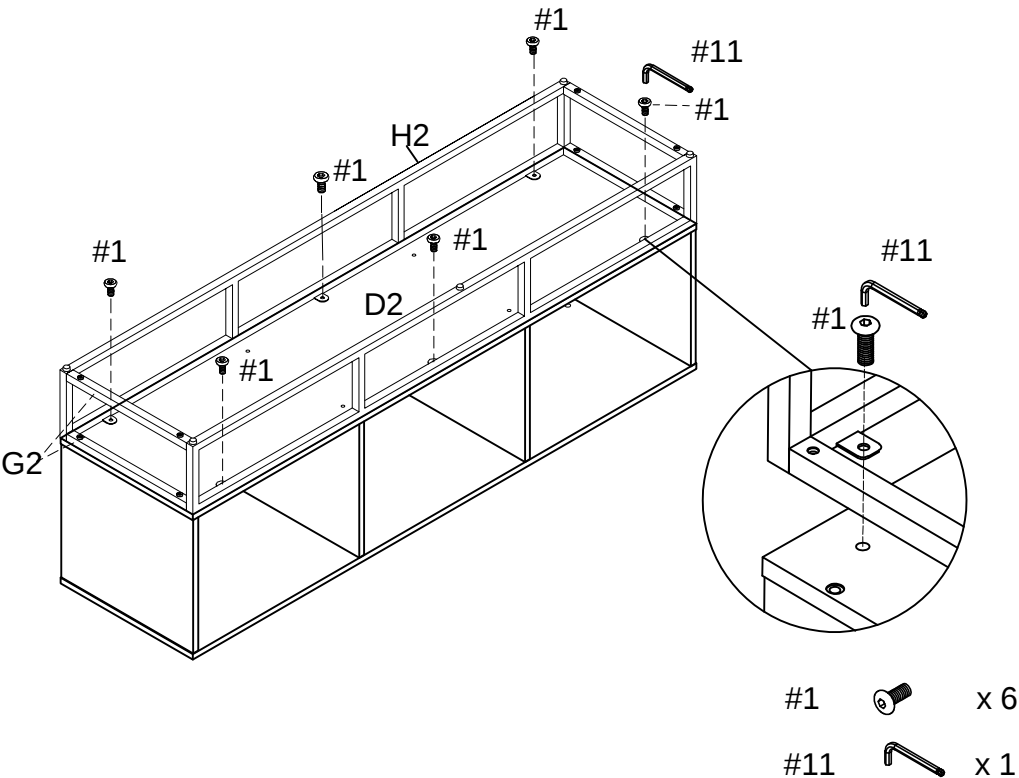


Step 8. Carefully turn unit upright. Secure back brackets (part #6) at the corner of back panels (part F2) using short screws (part #7) and phillips head screwdriver.

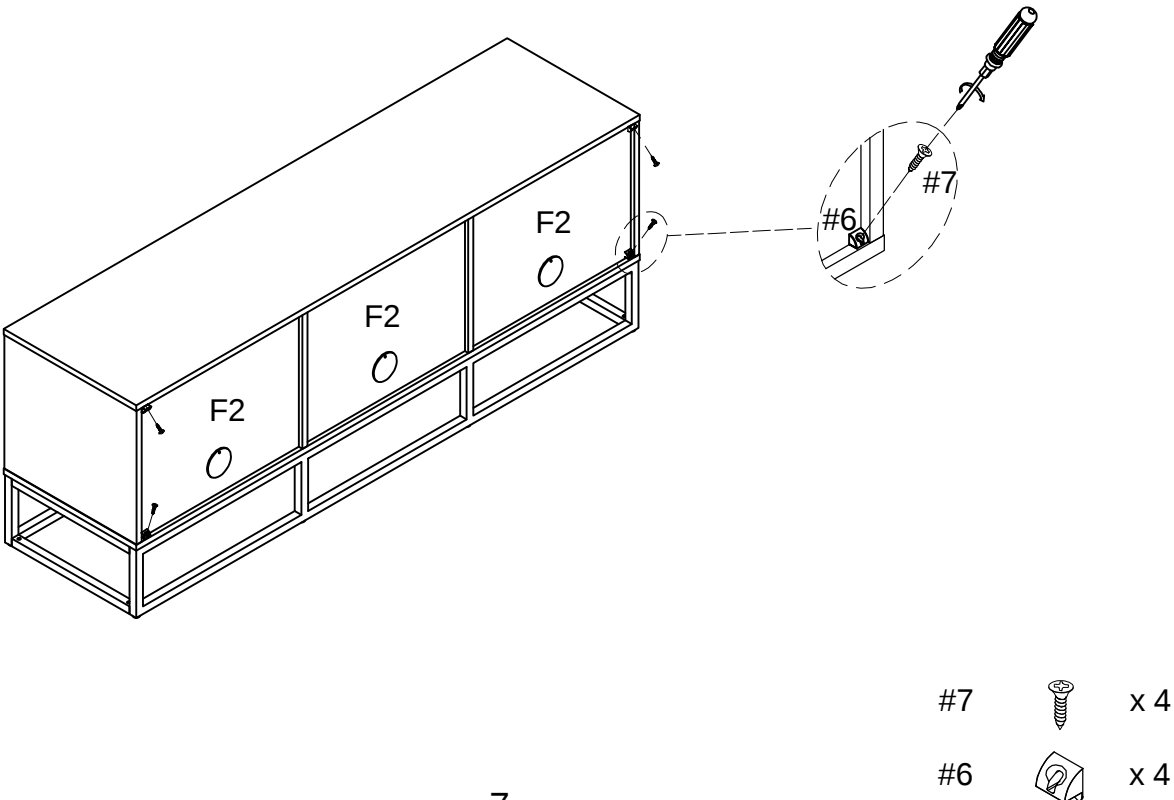

Step 9. Using cam stickers (part #9) cover all cam locks (part #4).

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

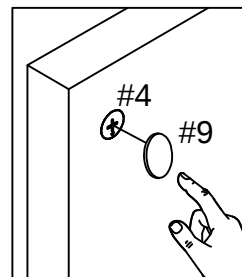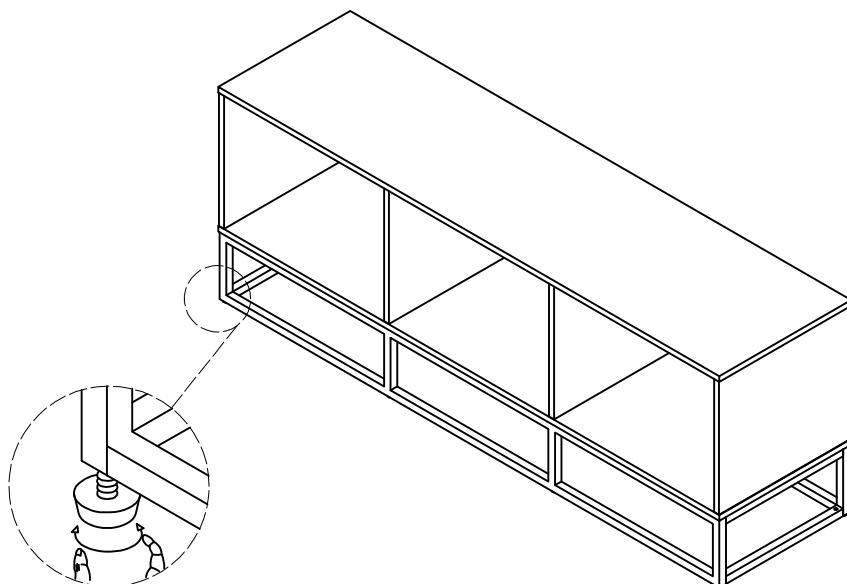

#9  x 8

