

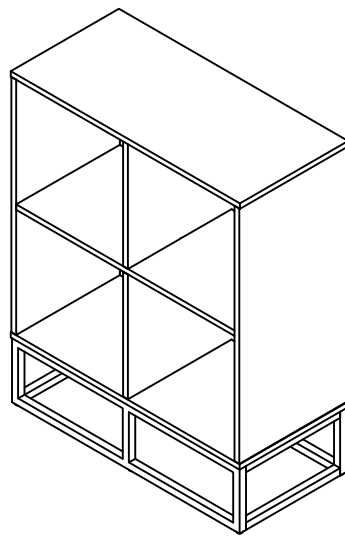
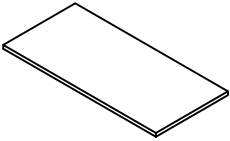
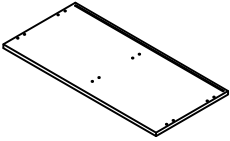

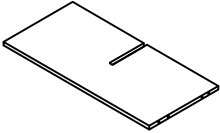









Record Storage Cube Bookcase
CF1128

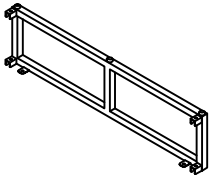

PARTS LIST


A2 	B2 	C2 	D2 	E2 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Partition Panel 1 PC
F2 	G2 	H2 	I2 	J 
Fixed Shelf Panel 1 PC	Back Panel 2 PCS	Metal Bar 4 PCS	Metal Leg Frame 2 PCS	Cover 4 PCS

HARDWARE LIST
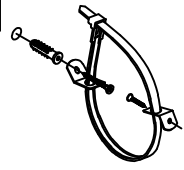
#1  1/4"*12mm Bolt 12 PCS (Extra 1)	#2  7*38mm Screw 6 PCS (Extra 1)	#3  Cam Bolt 10 PCS (Extra 1)	#4  Cam Lock 10 PCS (Extra 1)	#5  8*30mm Wood Dowel 16 PCS (Extra 1)
#6  Back Bracket 8 PCS (Extra 1)	#7  3*15mm Short Screw 8 PCS (Extra 1)	#8  Binding Post 4 SETS (Extra 1)	#9  Cam Sticker 10 PCS (Extra 1)	#10  M2 Small Allen Wrench 1 PC
#11  M4 Allen Wrench 1 PC	#12  Safety Strap Kit 1 SET			

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach covers (part J) to back panels (part G2) using binding posts (part #8) and small allen wrench (part #10).

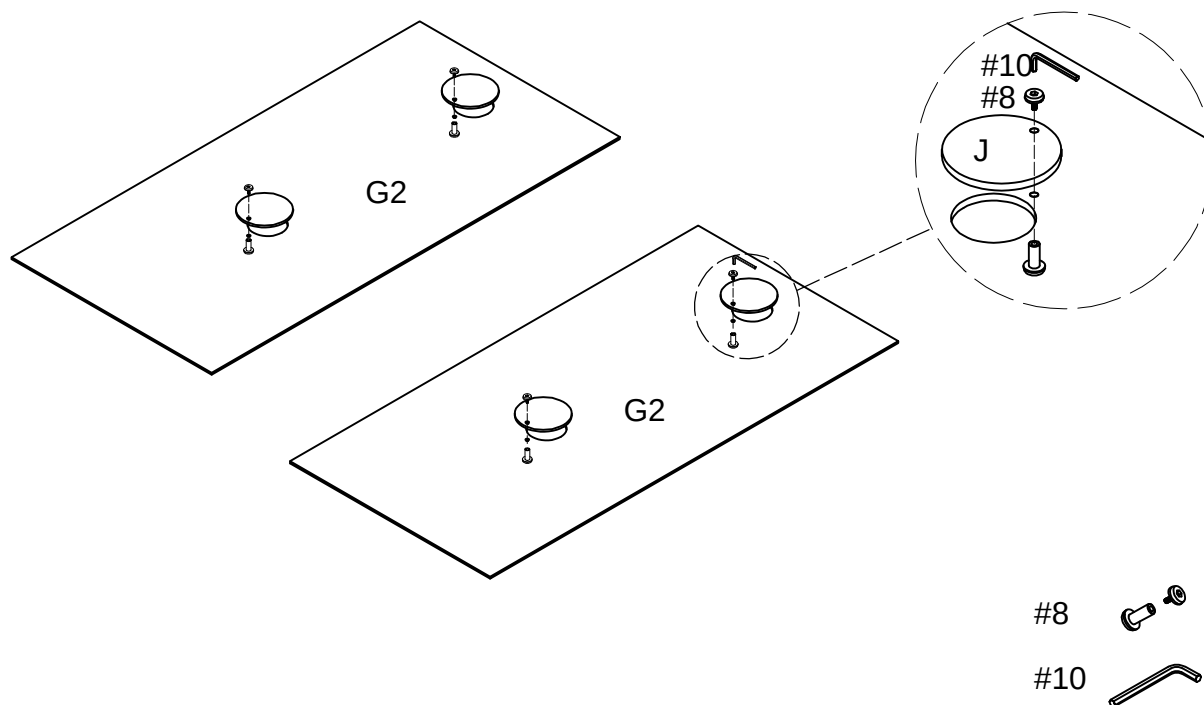


Step 2. Insert partition panel (part E2) to fixed shelf panel (part F2) .

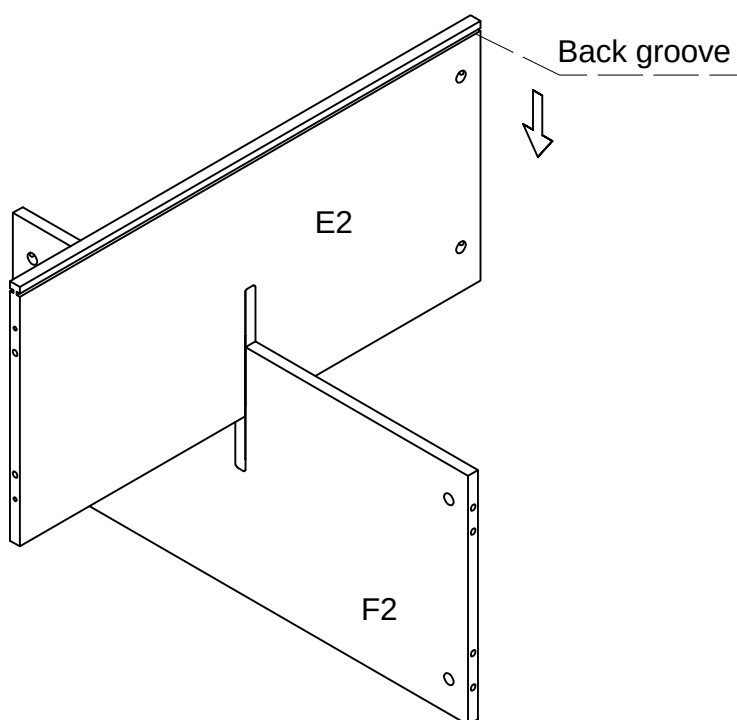

Step 3. Screw cam bolts (part #3) into panels (parts A2, B2 & C2) using phillips head screwdriver.



Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

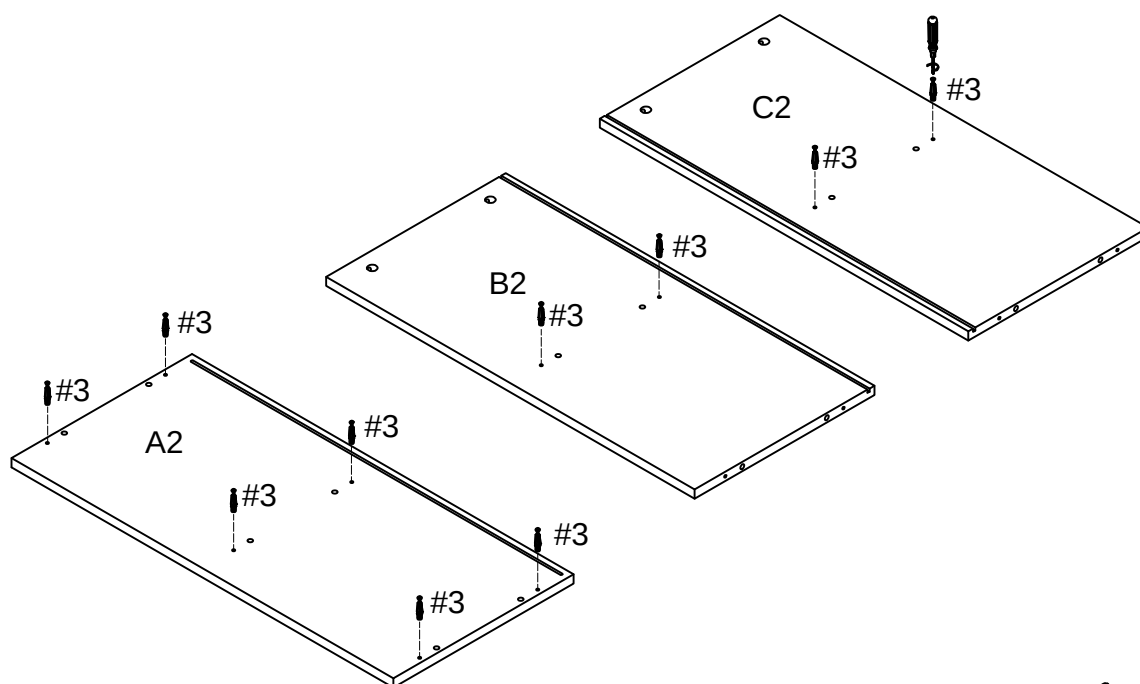

#3  x 10

Step 4. Attach left panel (part B2) and right panel (part C2) to fixed shelf panel (part F2) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

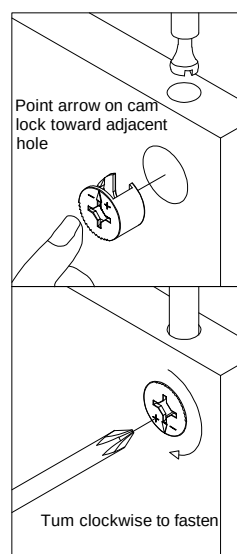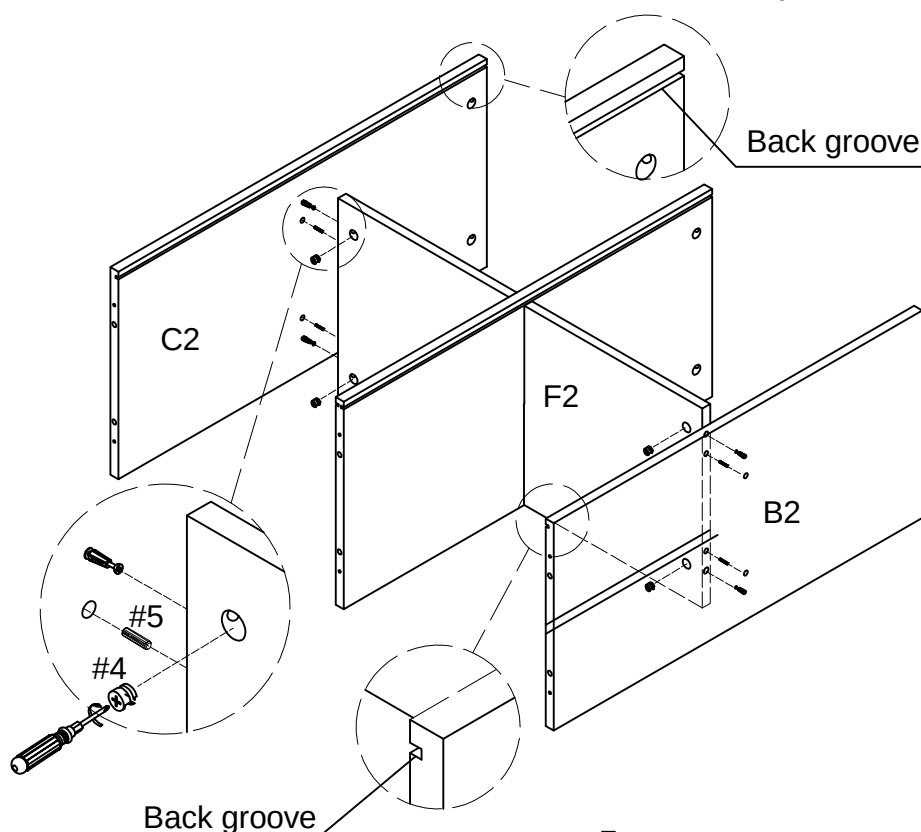


#4  x 4
#5  x 4

Step 5. Attach top panel (part A2) to assembled unit (part B2, C2 & E2), using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

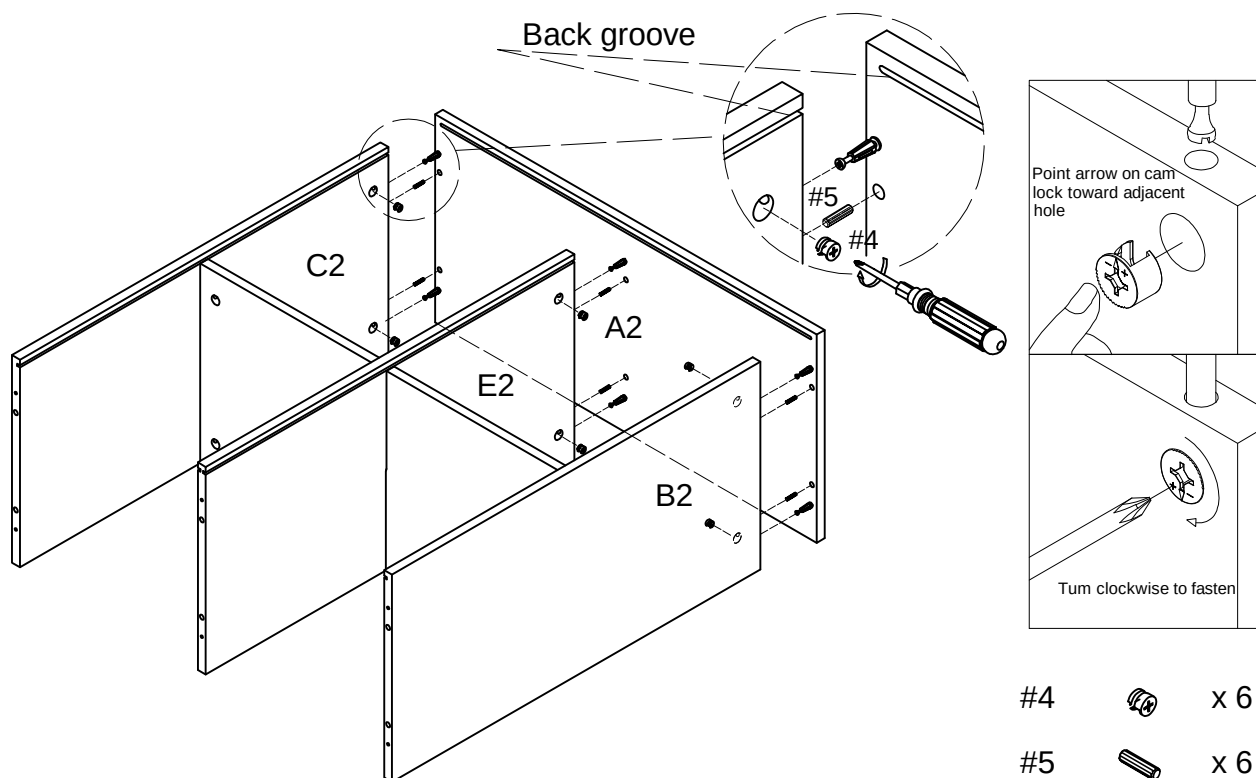


Step 6. Insert back panels (part G2) to grooves of assembled unit (parts A2, B2, C2 & E2) .

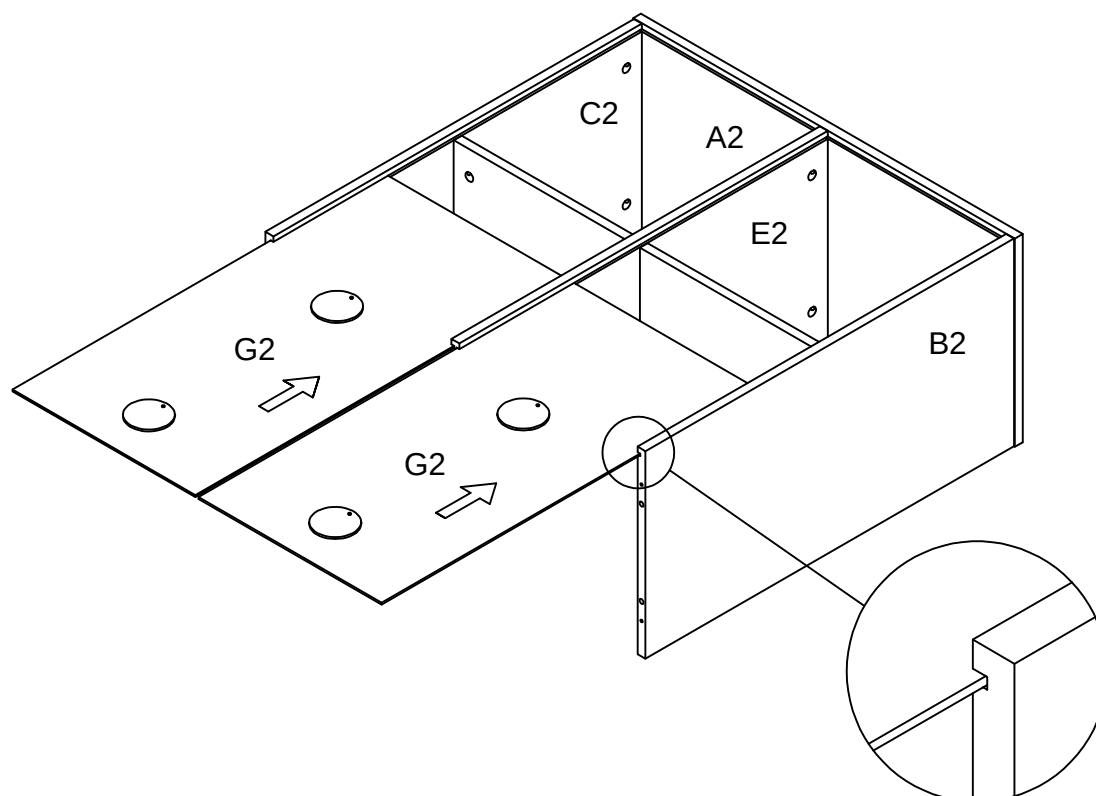


Step 7. Attach bottom panel (part D2) to assembled unit (parts B2, C2 & E2), using wood dowels (part #5), screws (part #2) and allen wrench (part #11).

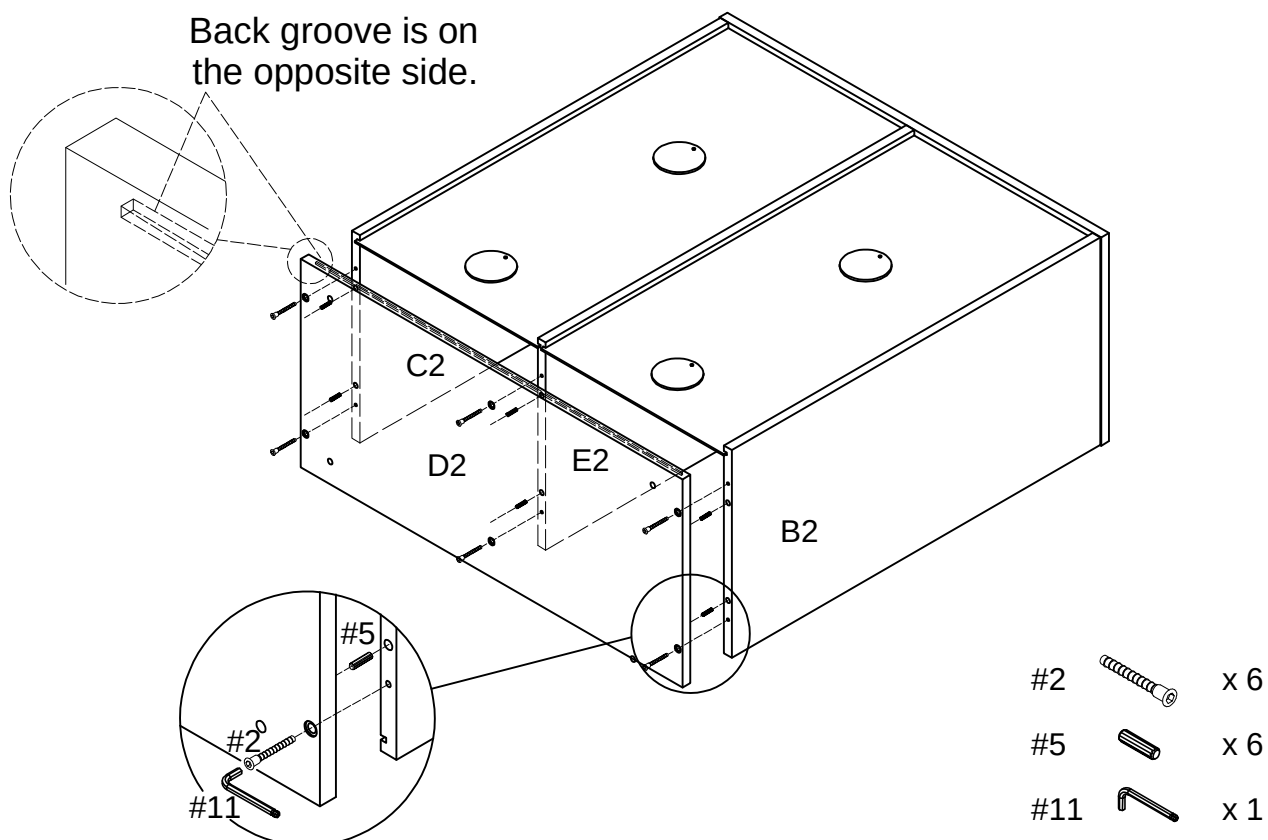


Step 8. Insert metal leg frames (part I2) into metal bars (part H2). Secure metal bars (part H2) and metal leg frames (part I2) using bolts (part #1) and allen wrench (part #11).

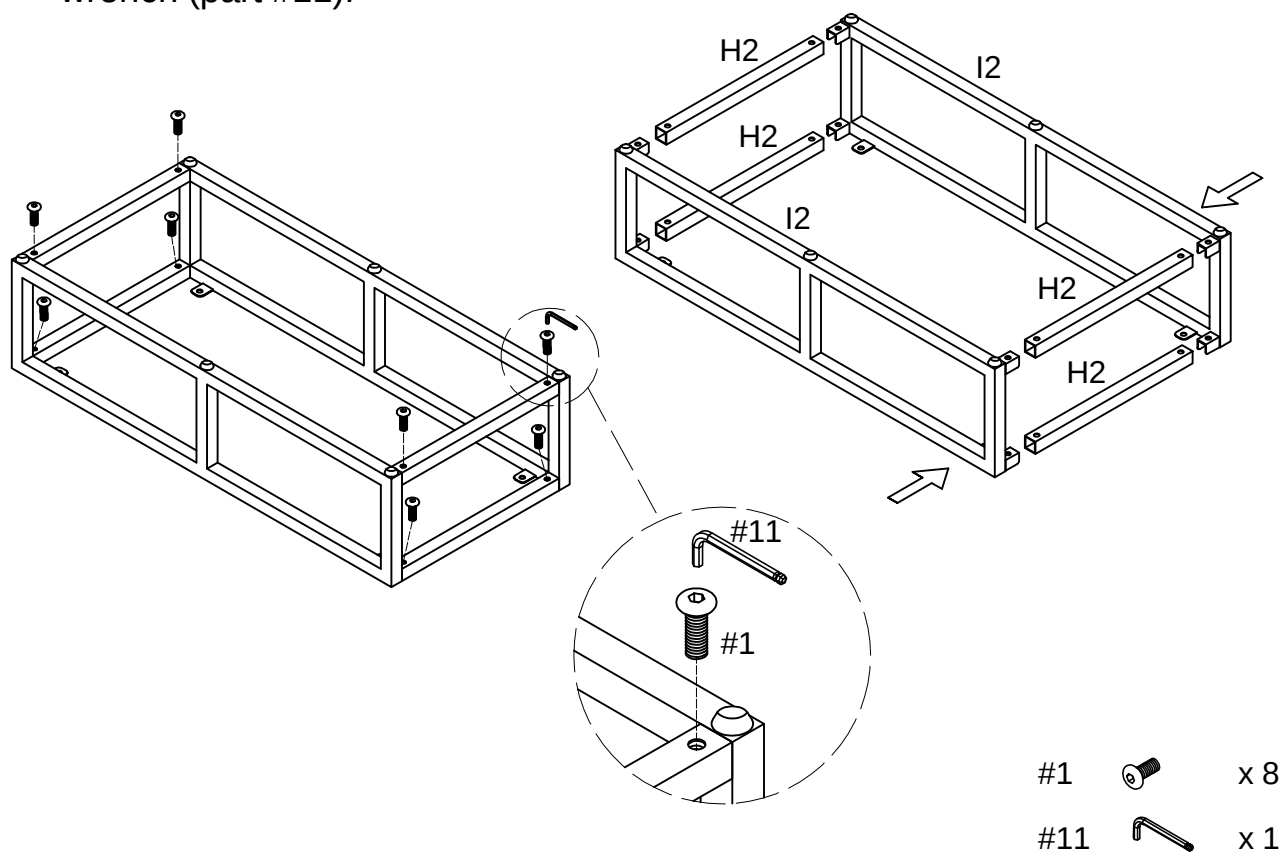

Step 9. Attach assembled unit (parts H2 & I2) to bottom panel (part D2) using bolts (part #1) and allen wrench (part #11).

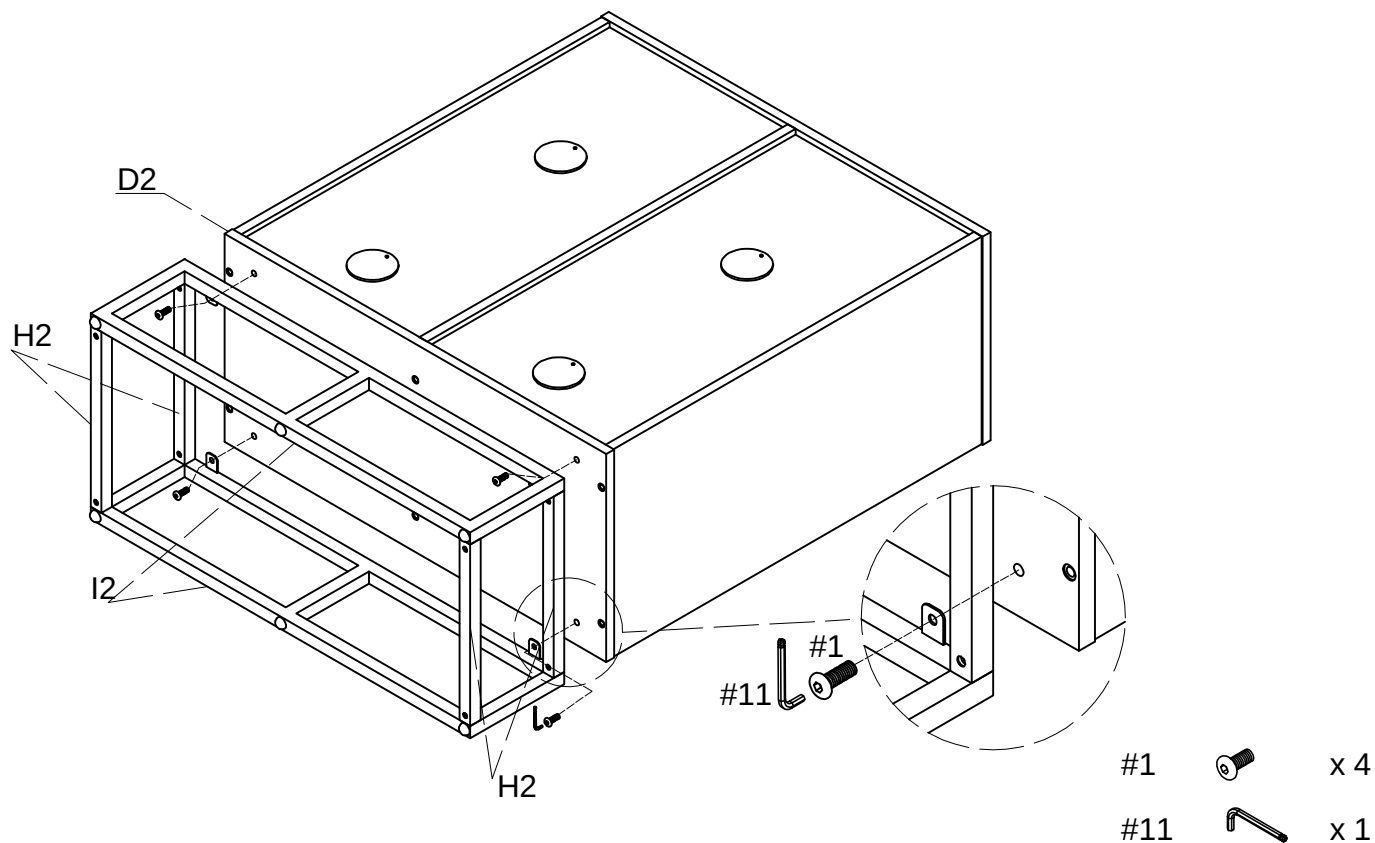




Step 10. Carefully turn unit upright. Secure back brackets (part #6) at the corner of back panels (part G2) using short screws (part #7) and phillips head screwdriver.

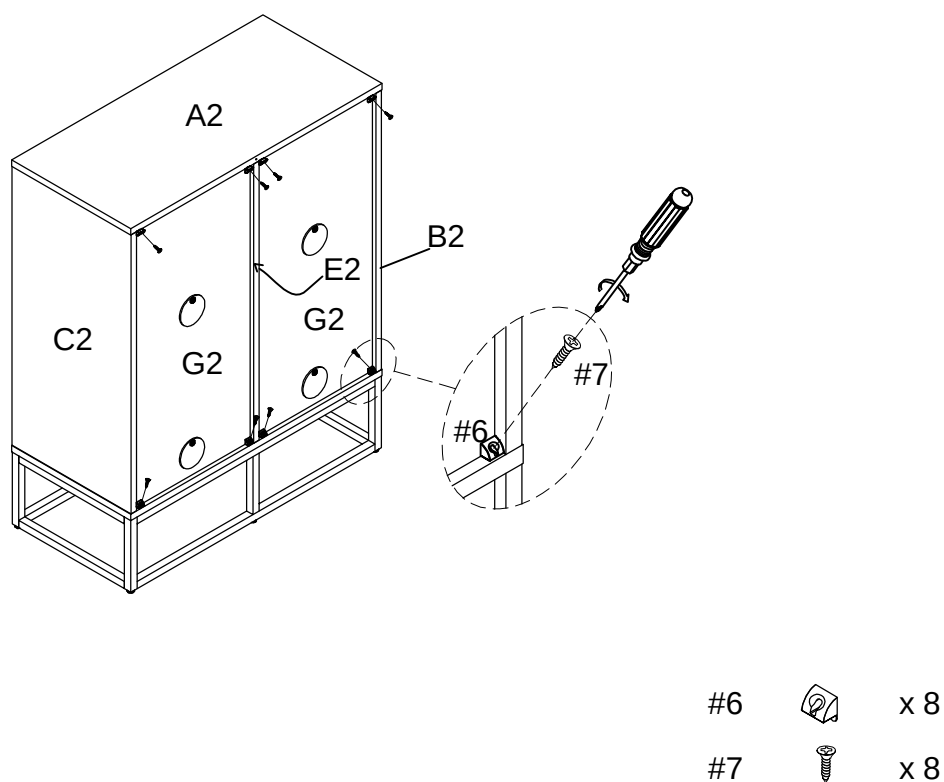


Step 11. Using cam stickers (part #9) cover all cam locks (part #4).


NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #12) must be installed to prevent tipping damage and/or injury.

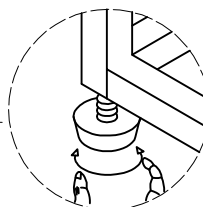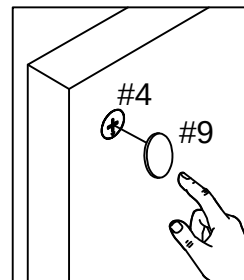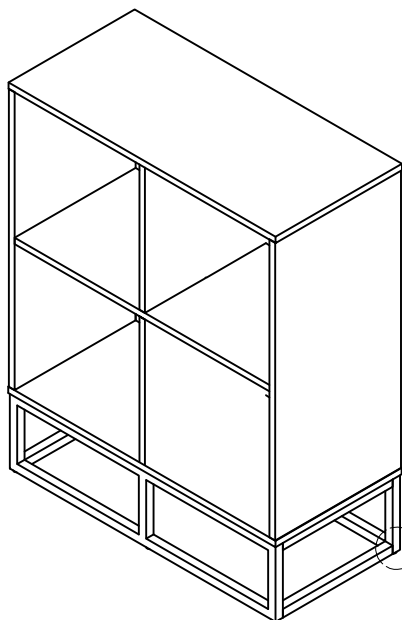

#9  x10

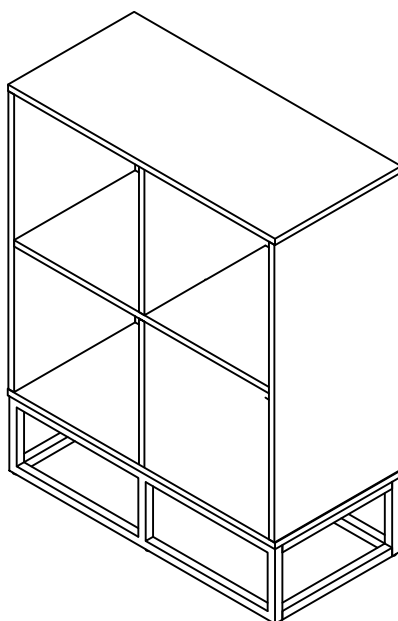

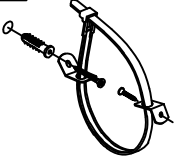
#12	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A2) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A2) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

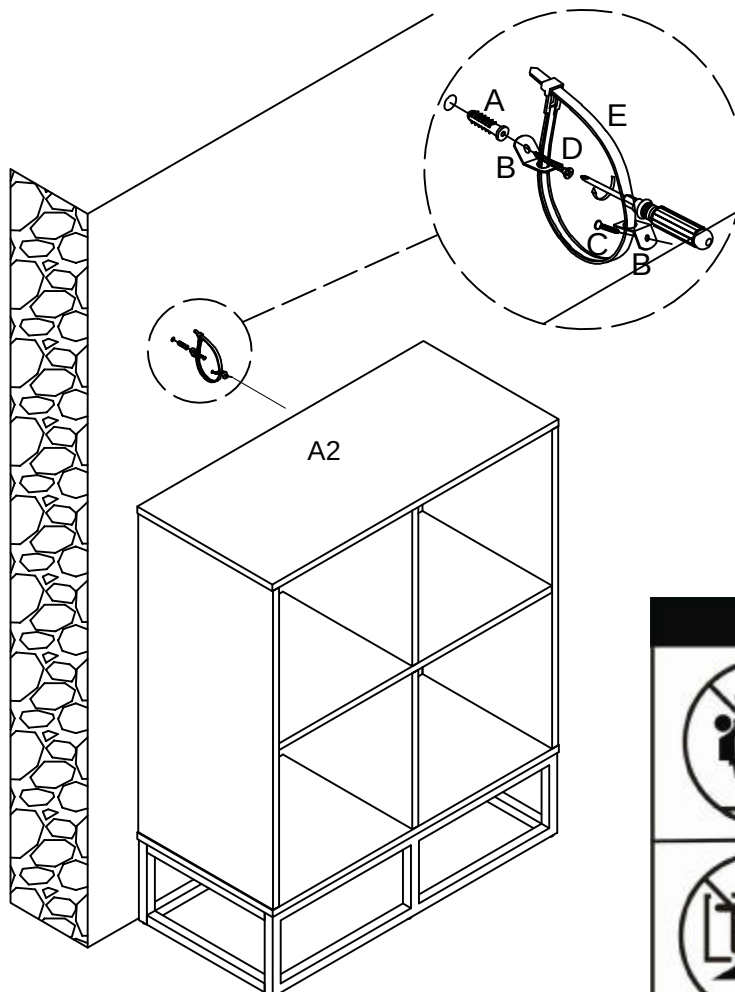

⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!