







CROSLEY

FURNITURE





4 Cube Record Storage Bookcase CF1131

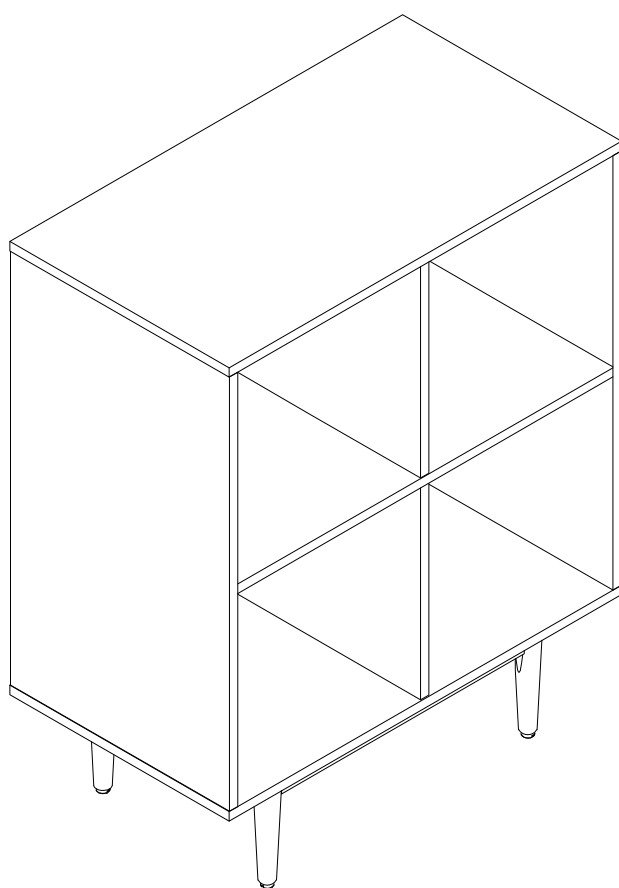

PARTS LIST

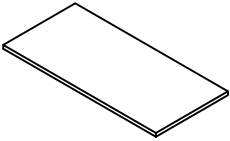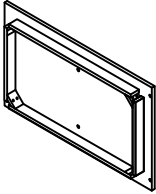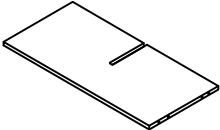
A2 	B2 	C2 	D2 	E2 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Partition Panel 1 PC
F2 	G2 	H2 	I 	
Fixed Shelf Panel 1 PC	Back Panel 2 PCS	Leg 4 PCS	Cover 4 PCS	

HARDWARE LIST
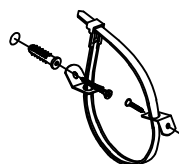
#1  1/4"*45mm Bolt 8 PCS (Extra 1)	#2  1/4"*10mm Spring Washer 8 PCS (Extra 1)	#3  1/4"*13mm Flat Washer 8 PCS (Extra 1)	#4  7*38mm Screw 6 PCS (Extra 1)	#5  10 PCS (Extra 1) Cam Bolt 10 PCS (Extra 1)
#6  10 PCS (Extra 1) Cam Lock 10 PCS (Extra 1)	#7  8*30mm Wood Dowel 16 PCS (Extra 1)	#8  8 PCS (Extra 1) Back Bracket 8 PCS (Extra 1)	#9  3*15mm Round Head Screw 8 PCS (Extra 1)	#10  4 SETS (Extra 1) Binding Post 4 SETS (Extra 1)
#11  10 PCS (Extra 1) Cam Sticker 10 PCS (Extra 1)	#12  M2 Small Allen Wrench 1 PC	#13  M4 Allen Wrench 1 PC	#14  1 SET Safety Strap Kit 1 SET	

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach covers (part I) to back panels (part G2) using binding posts (part #10) and small allen wrench (part #12).

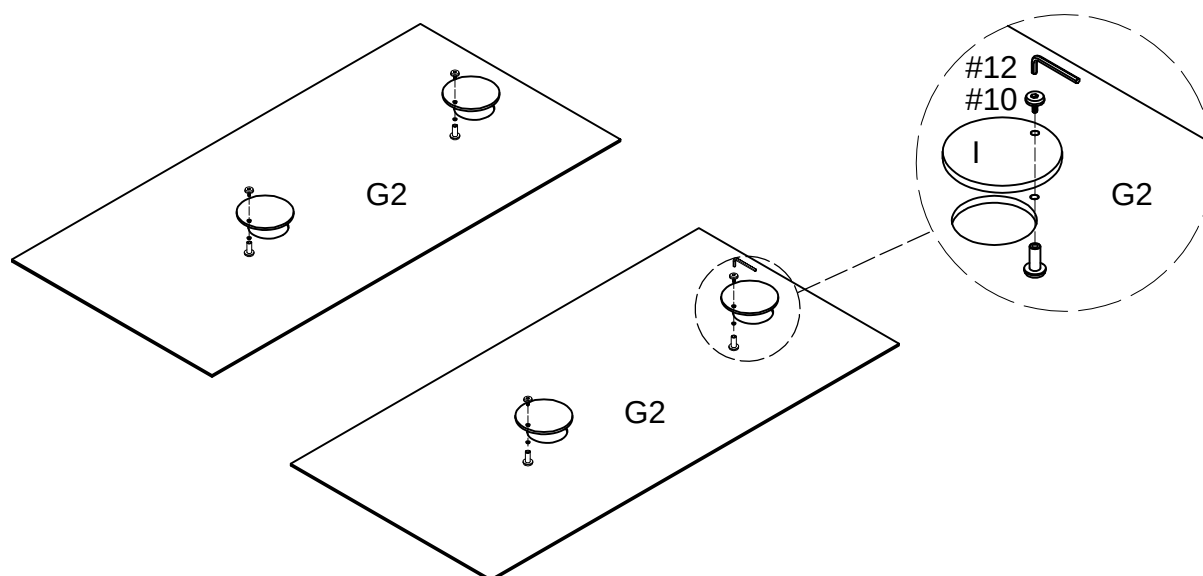

#10		x 4
#12		x 1


Step 2. Attach legs (part H2) to bottom panel (part D2) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #13).

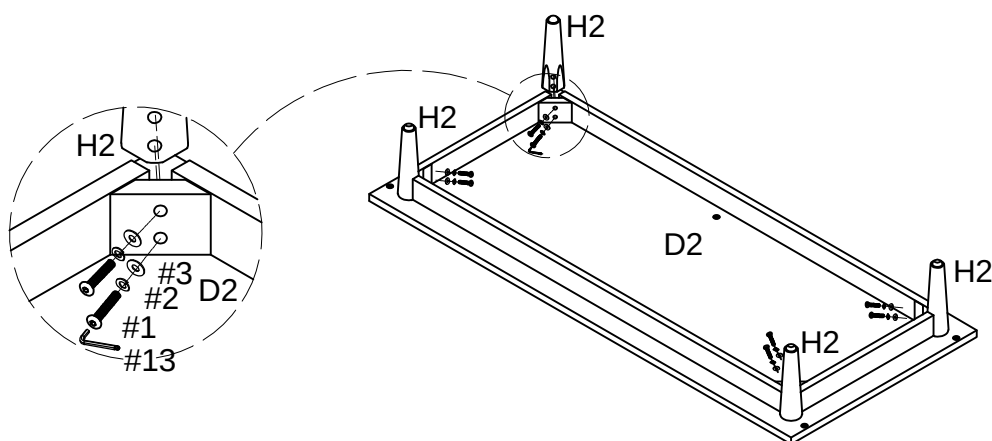


#1		x 8
#2		x 8
#3		x 8
#13		x 1

Step 3. Insert cam bolts (part #5) into pre-drilled holes of panels (parts A2, B2 & C2) using phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.


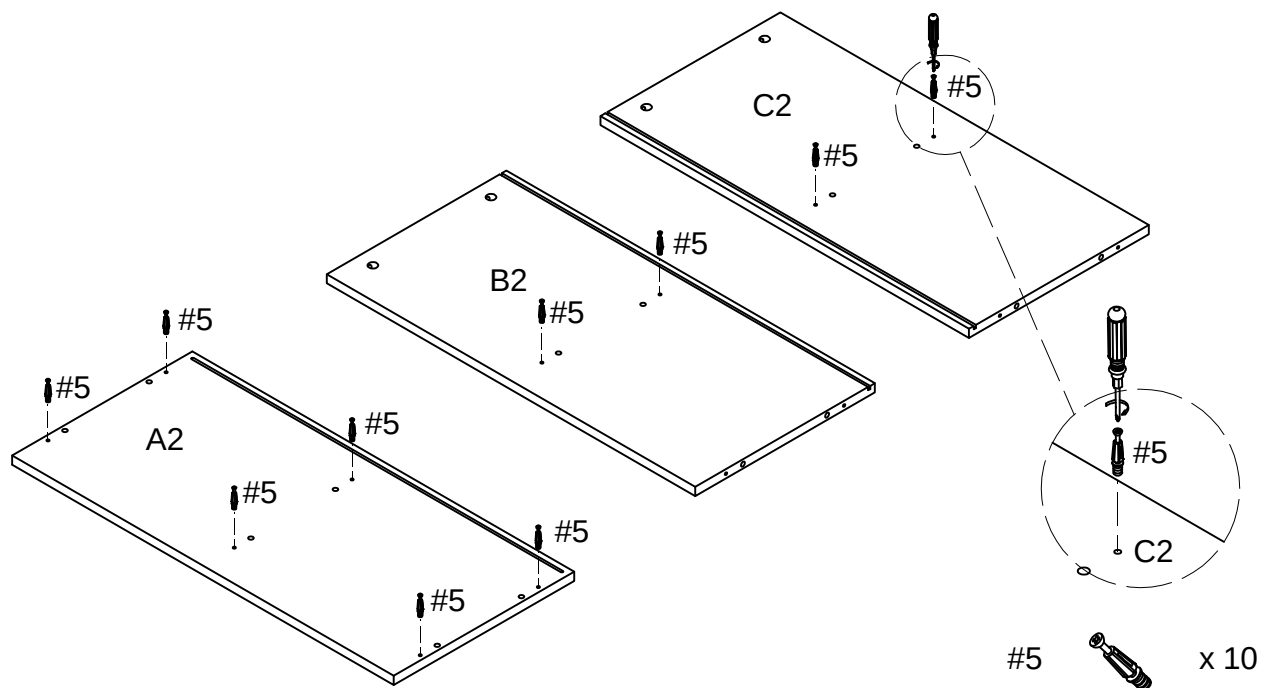


Step 4. Insert partition panel (part E2) to fixed shelf panel (part F2).

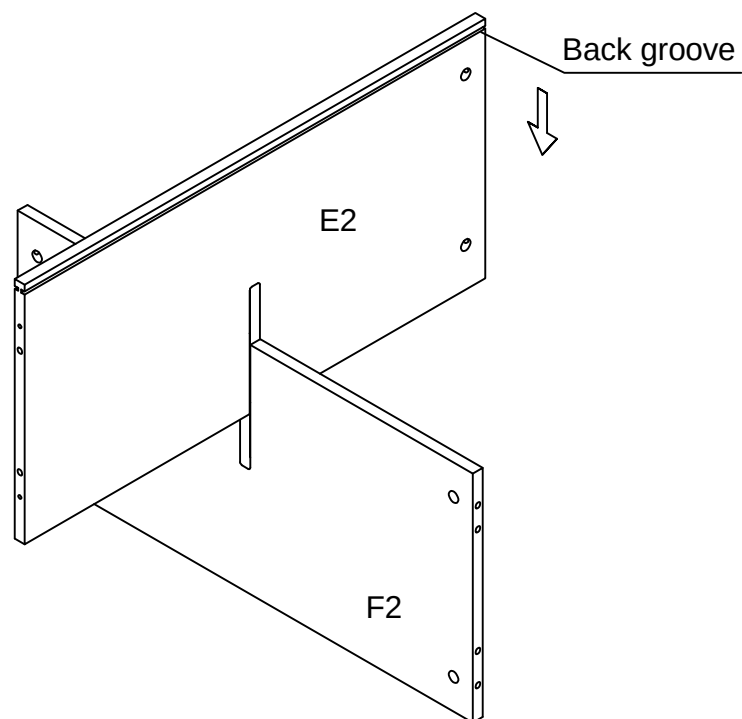

Step 5. Attach left panel (part B2) and right panel (part C2) to fixed shelf panel (part F2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

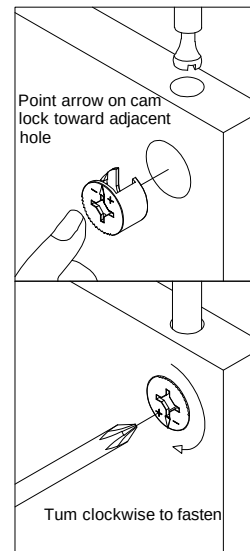
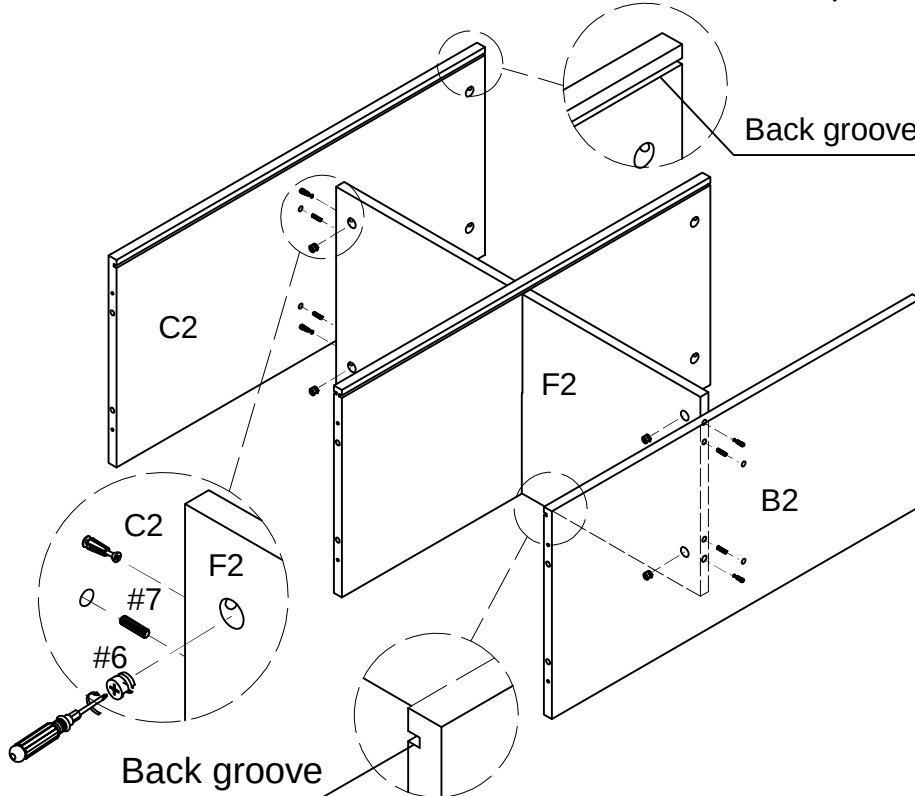


#6  x 4

#7  x 4

Step 6. Attach top panel (part A2) to assembled unit (parts B2, C2 & E2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

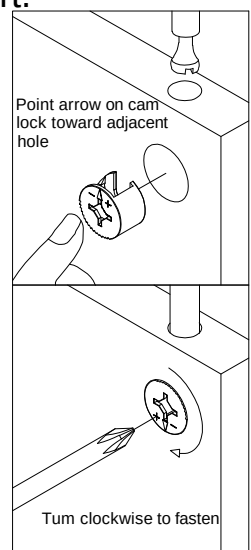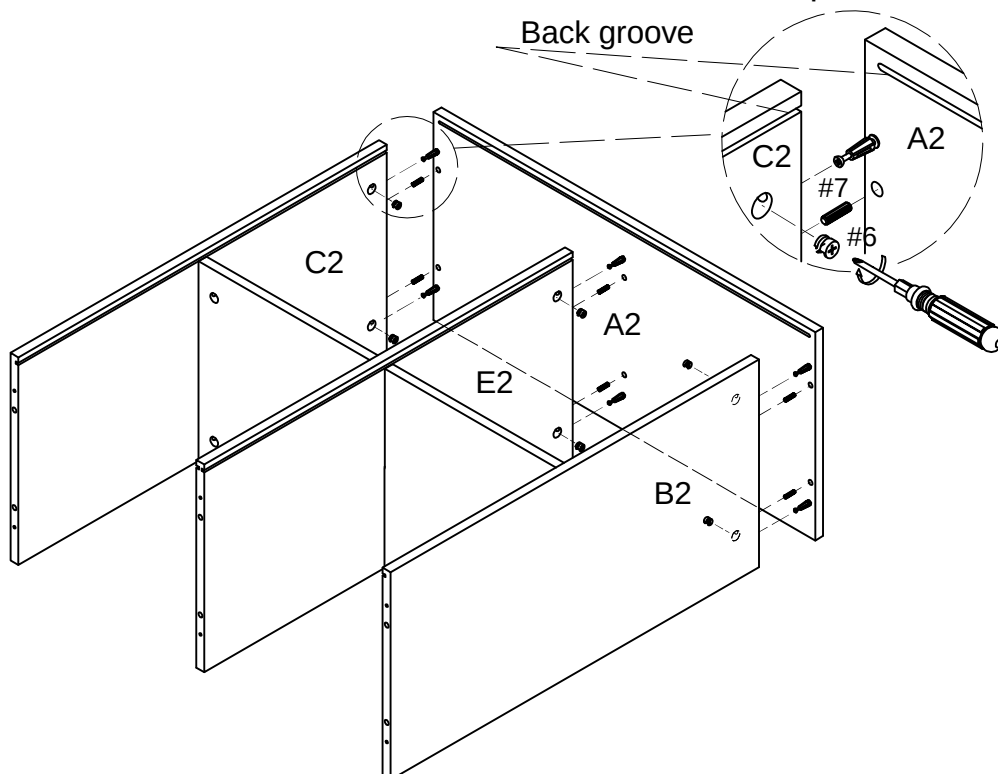


#6  x 6

#7  x 6

Step 7. Insert back panels (part G2) to assembled unit (parts A2, B2, C2 & E2) .

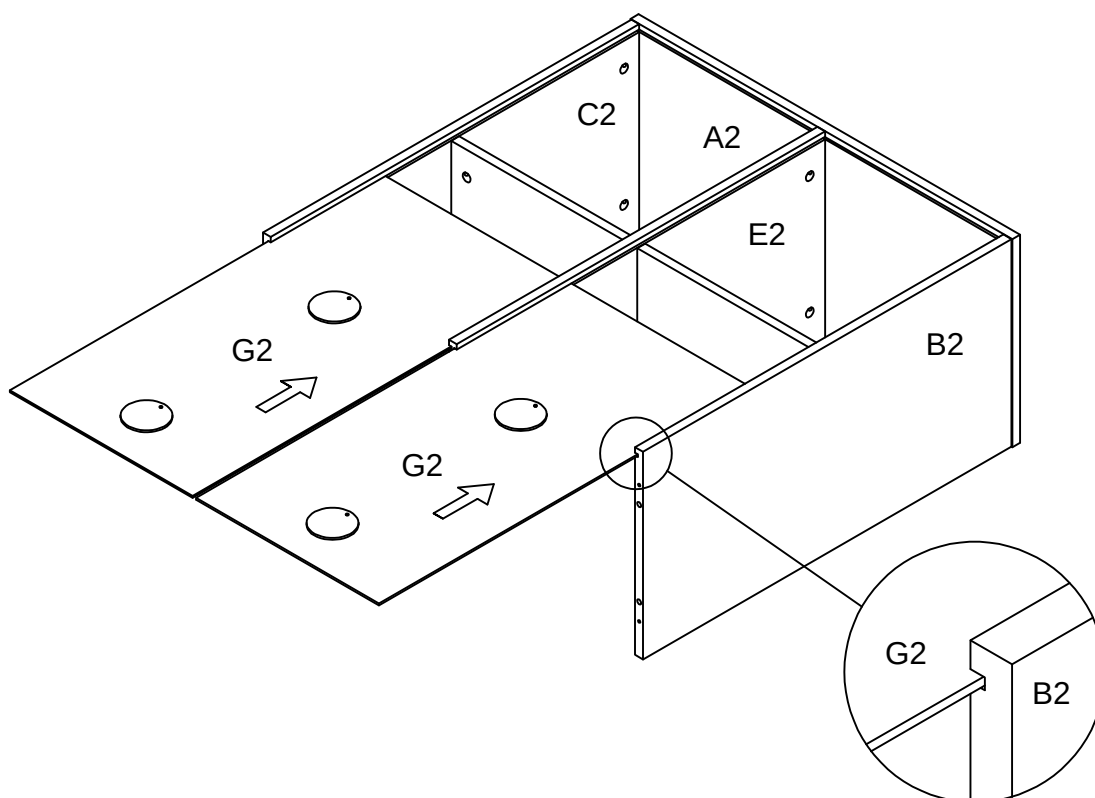

Step 8. Attach bottom panel (part D2) to assembled unit (parts B2, C2 & E2) using screws (part #4), wood dowels (part #7) and allen wrench (part #13).

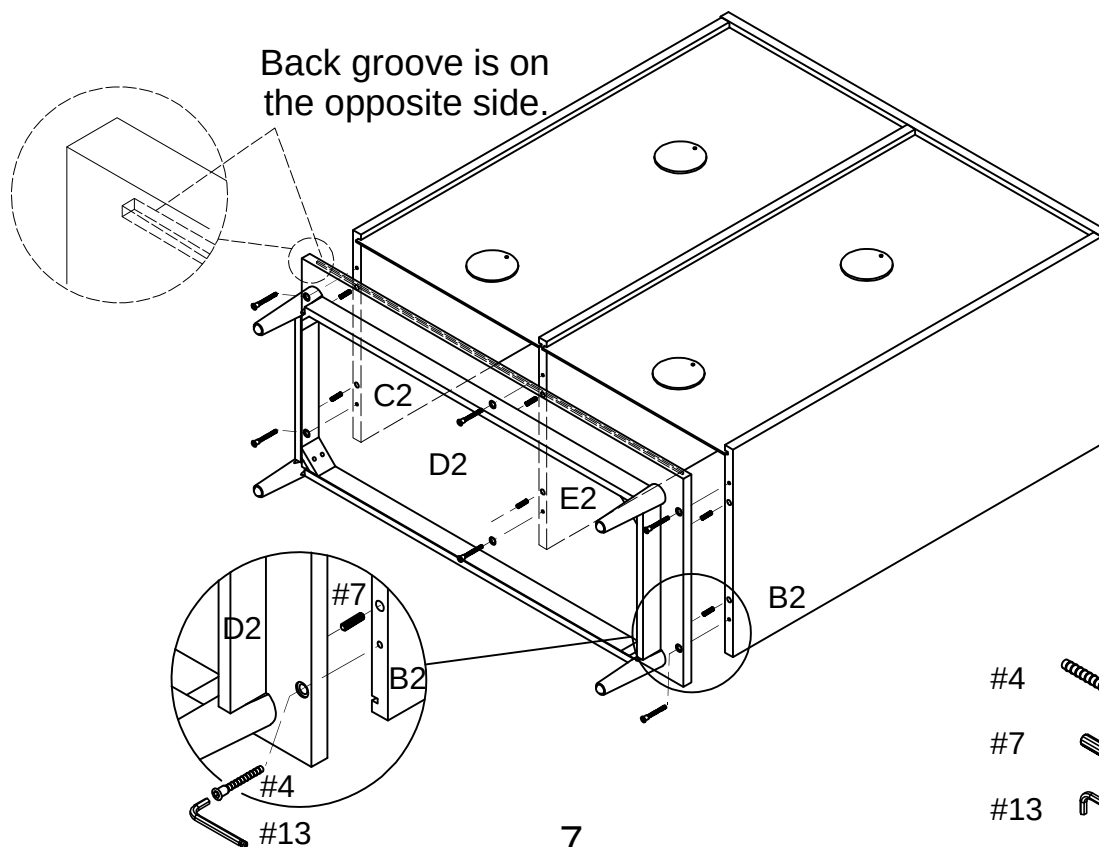



- | | | |
|-----|---|-----|
| #4 |  | x 6 |
| #7 |  | x 6 |
| #13 |  | x 1 |

Step 9. Secure back brackets (part #8) to the corners of back panels (part G2) using round head screws (part #9) and phillips head screwdriver. Using cam stickers (part #11) cover all cam locks (part #6).

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #14) must be installed to prevent tipping damage and/or injury.

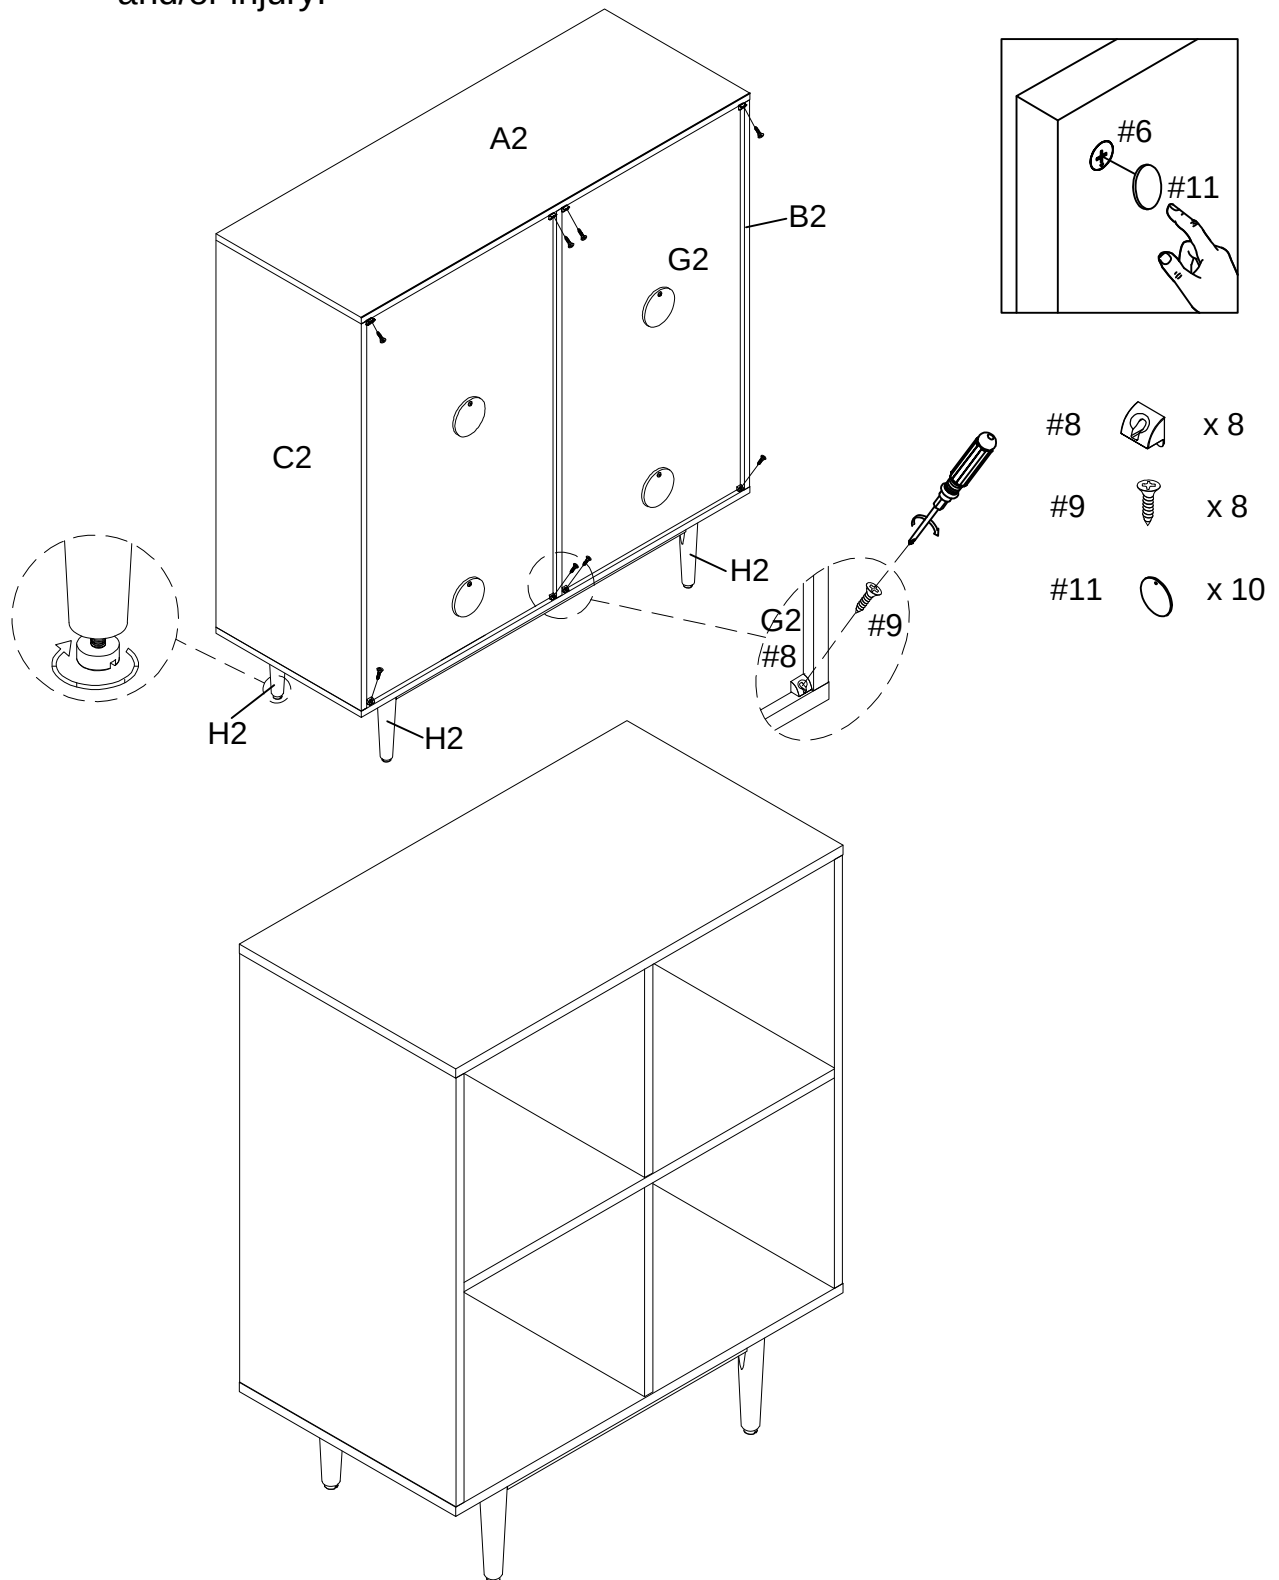

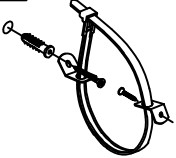
#14	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A2) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A2) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

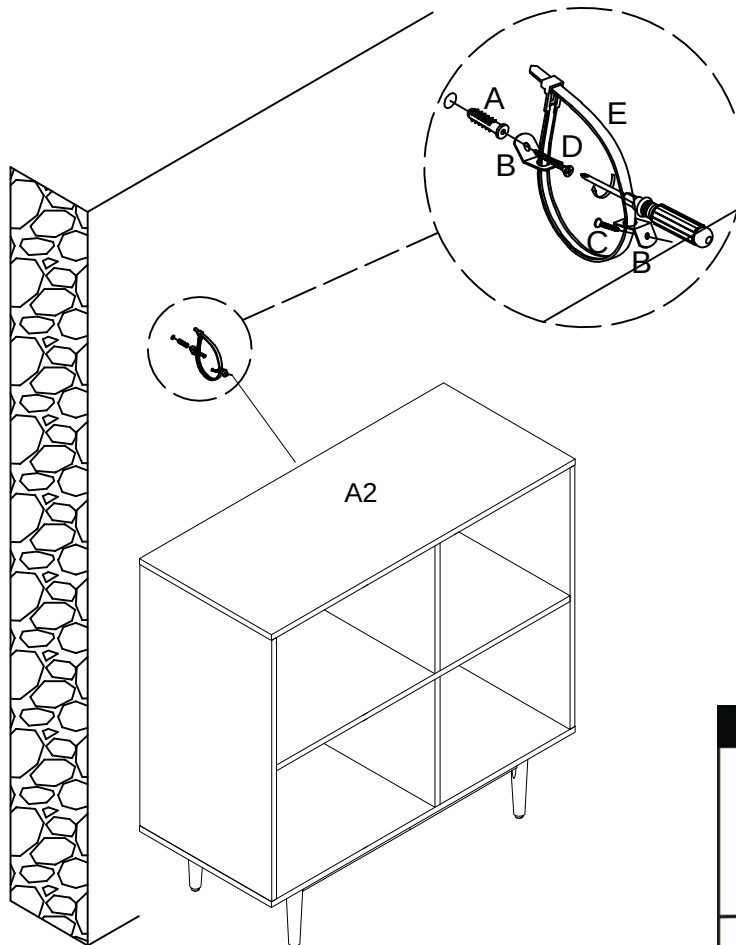

⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!