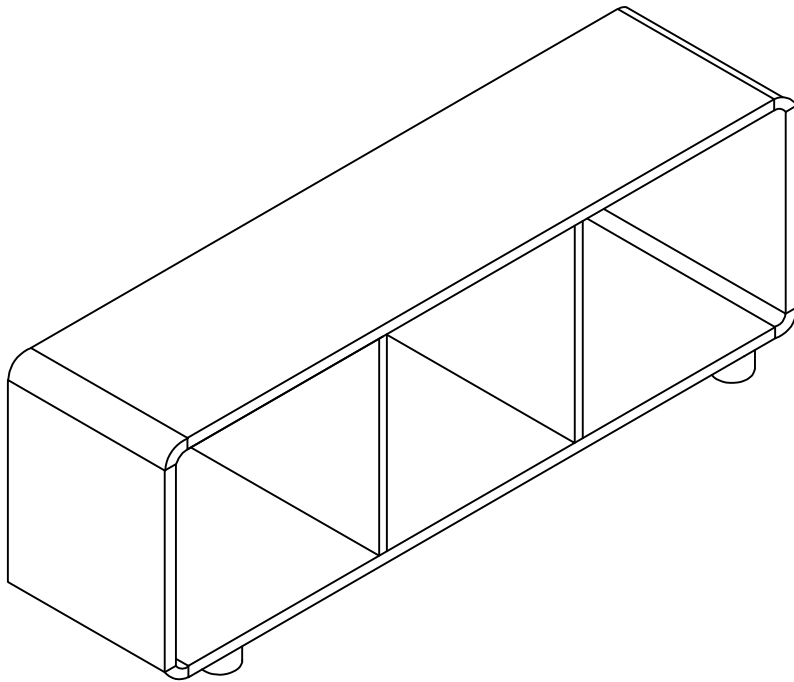












CROSLEY

FURNITURE







Large Record Storage Console CF1137



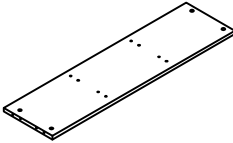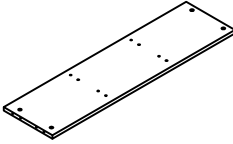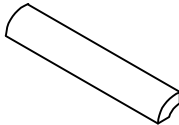PARTS LIST


A2	B2	C2	D2	E2
				
Top Panel 1 PC	Right Panel 1 PC	Left Panel 1 PC	Left Partition Panel 1 PC	Right Partition Panel 1 PC
F2	G2	H2	I2	J2
				
Bottom Panel 1 PC	Left Back Panel 1 PC	Right Back Panel 1 PC	Middle Back Panel 1 PC	Corner 4 PCS
K2	L2			
				
Leg 5 PCS	Cover 3 PCS			

HARDWARE LIST

#1  10*50mm	#2  7*38mm	#3  1/4*12mm	#4 	#5 
Wood Dowel 24 PCS (Extra 1)	Tapping Bolt 4 PCS (Extra 1)	Bolt 4 PCS (Extra 1)	Cam Bolt 20 PCS (Extra 1)	Cam Lock 20 PCS (Extra 1)
#6 	#7 	#8 	#9 	#10  M4
Screw 28 PCS (Extra 1)	Metal Plate 2 PCS	Cam Sticker 20 PCS (Extra 1)	Binding Post 3 SETS (Extra 1)	Allen Wrench 1 PC
#11  M2 Small Allen Wrench 1 PC				

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #4) into pre-drilled holes of top panel (part A2) and corners (part J2) using phillips head screwdriver.

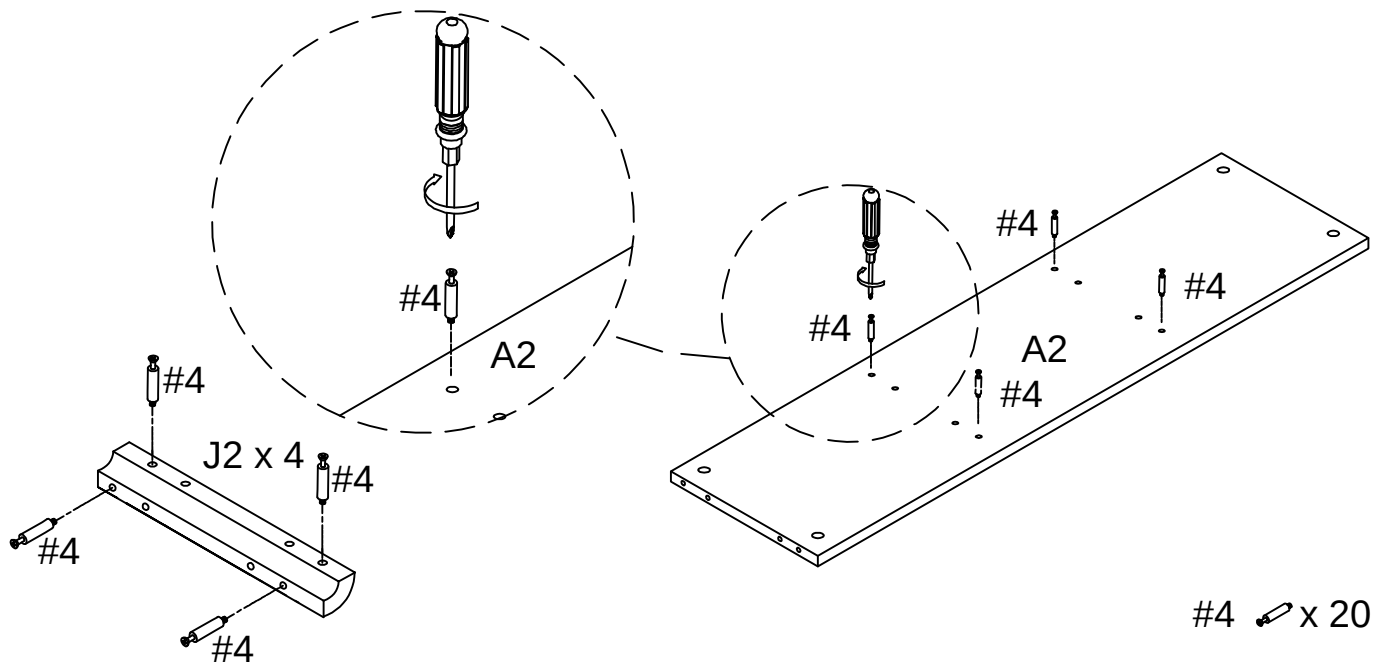Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.




Step 2. Attach corners (part J2) to panels (parts A2 & F2) using wood dowels (part #1), cam locks (part #5) and phillips head screwdriver.

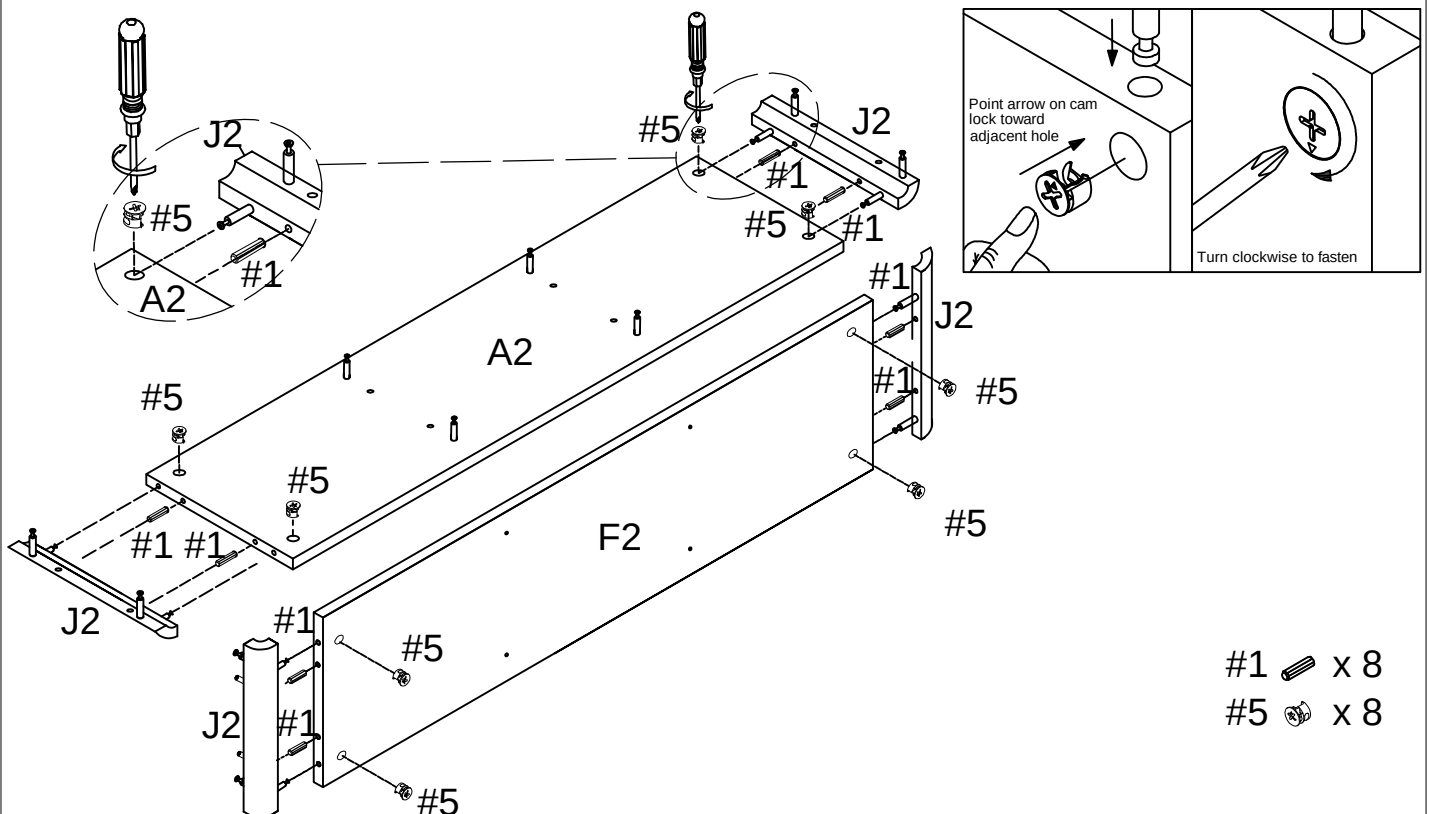Note: Cam locks must rotate a full 180°. See pictured insert.



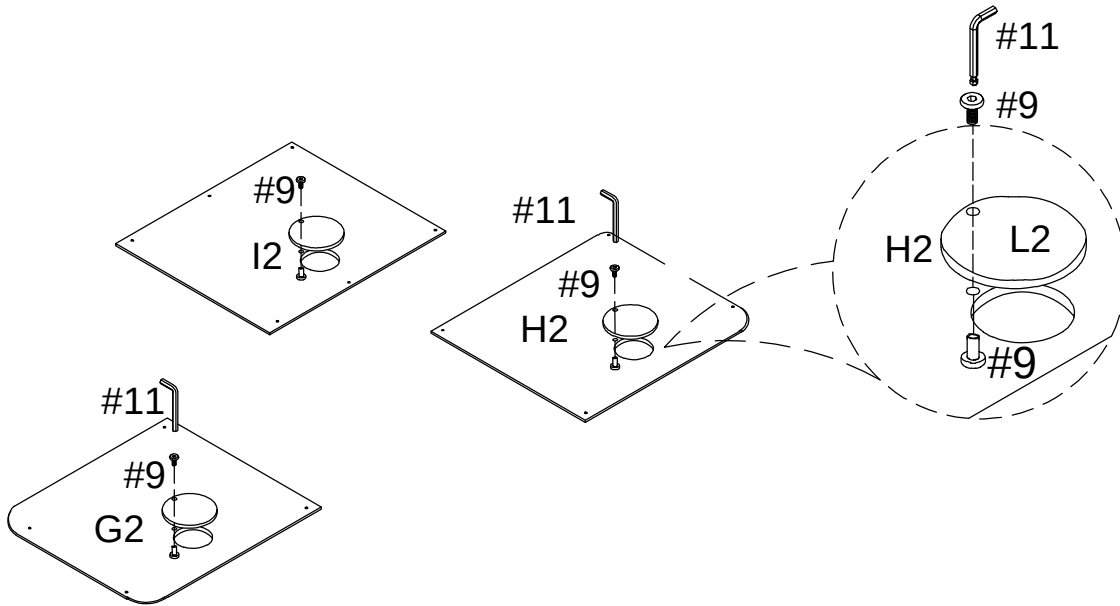
Step 3. Attach covers (part L2) to back panels (parts G2, H2 & I2) using binding posts (part #9) and small allen wrench (part #11).



#9  x 3
#11  x 1

Step 4. Attach panels (parts B2, C2, D2 & E2) to top panel (part A2) using wood dowels (part #1), cam locks (part #5) and phillips head screwdriver.

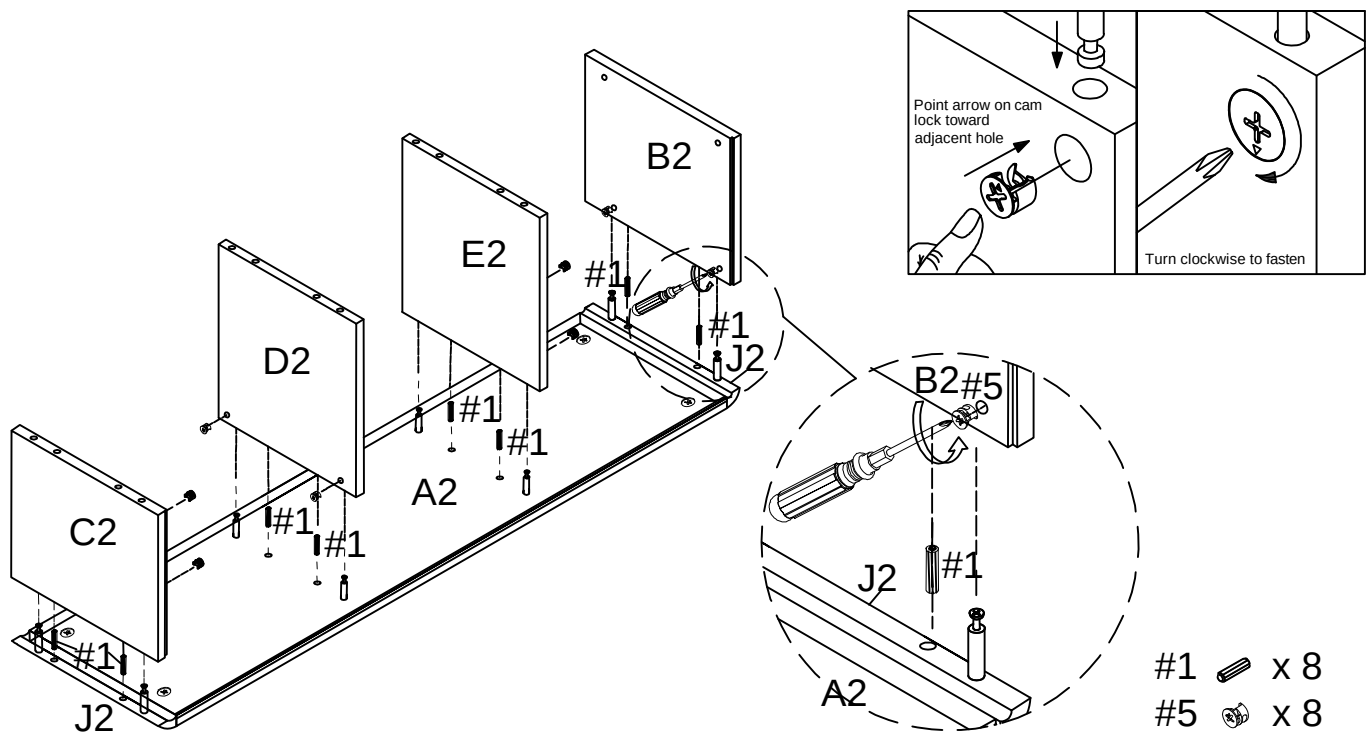
Note: Cam locks must rotate a full 180°. See pictured insert.




#1  x 8
#5  x 8

Step 5. Attach panels (parts F2 & J2) to assembled unit (parts B2, C2, D2, & E2) using wood dowels (part #1), cam locks (part #5), tapping bolts (part #2) and allen wrench (part #10).

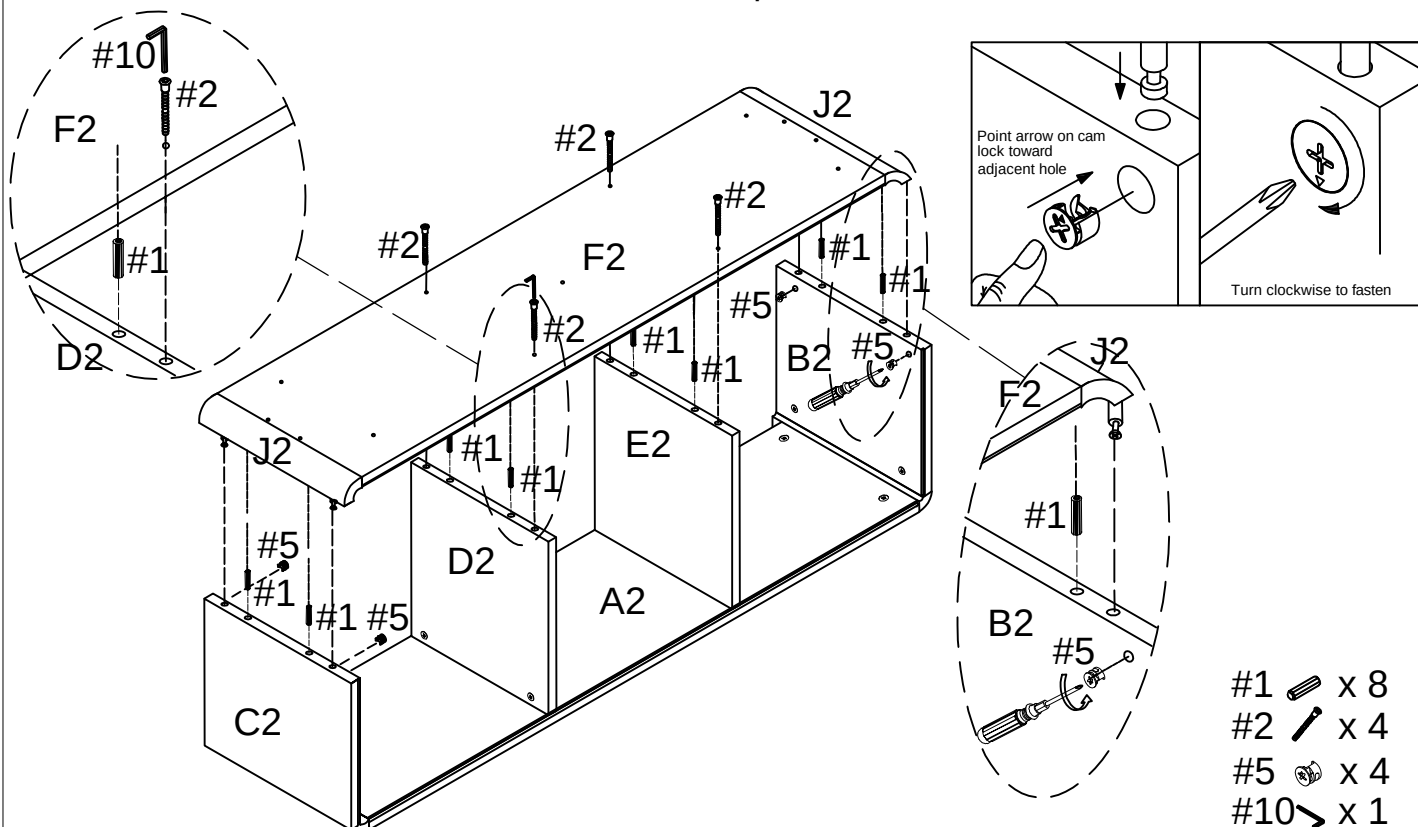
Note : Cam locks must rotate a full 180°. See pictured insert.



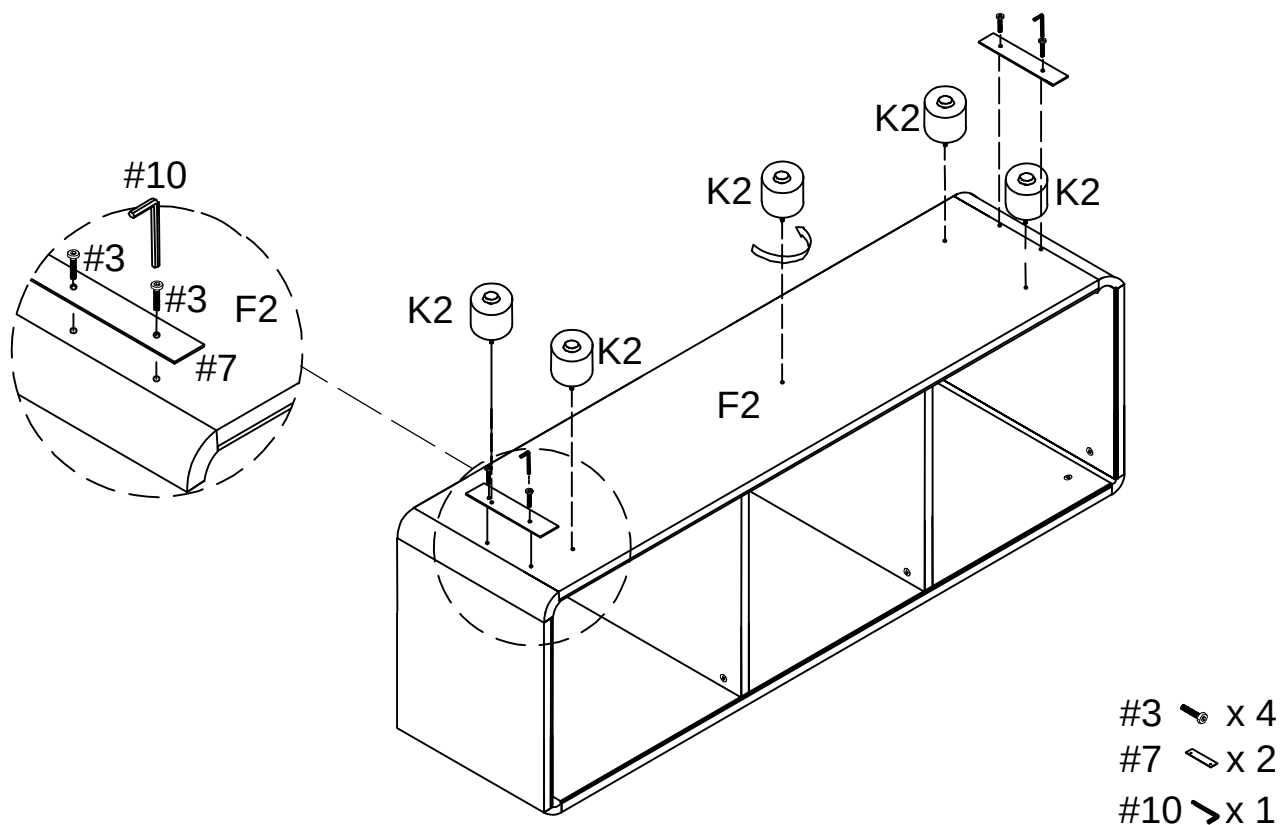Step 6. Attach metal plates (part #7) to bottom panel (part F2) using bolts (part #3) and allen wrench (part #10). Attach legs (part K2) to bottom panel (part F2).



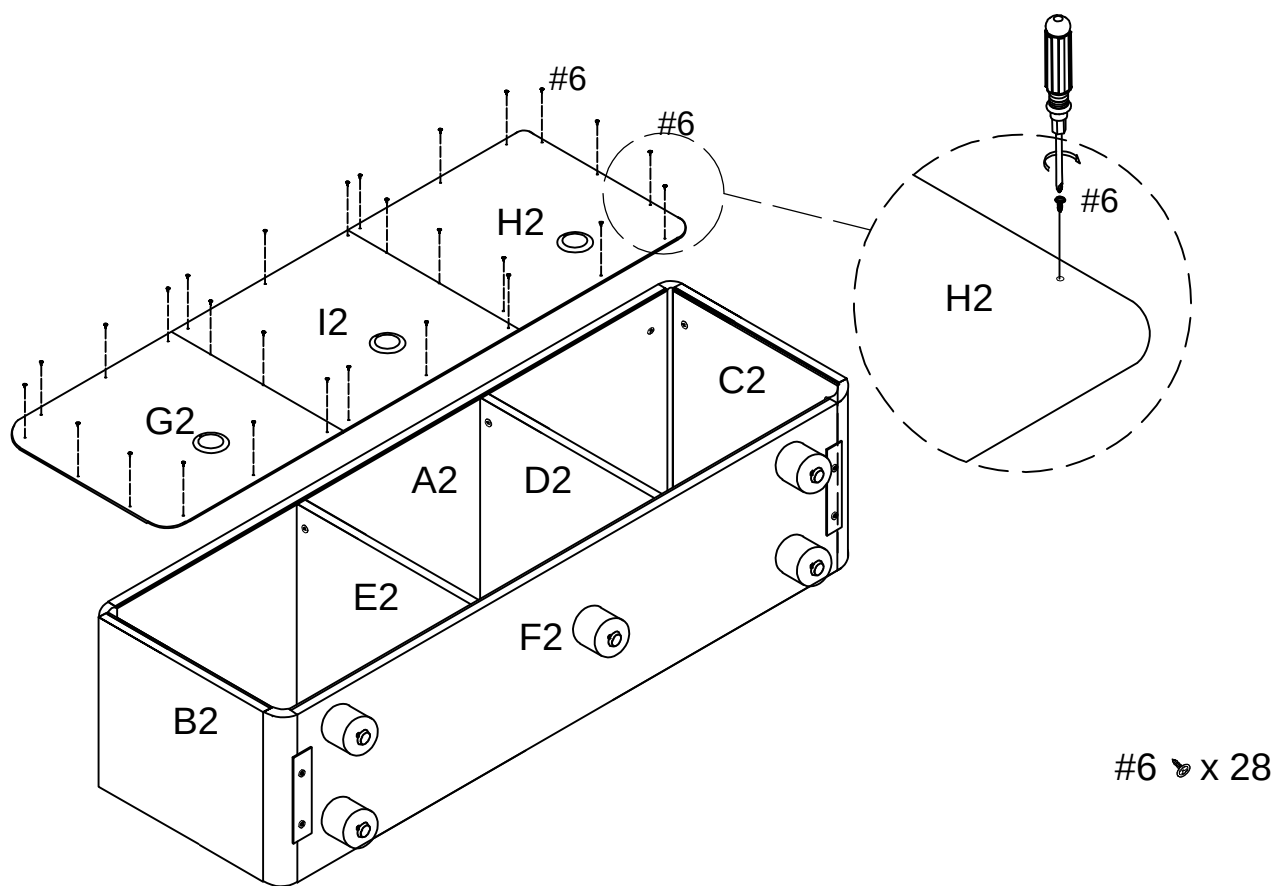Step 7. Attach back panels (parts G2, H2 & I2) to assembled unit (parts A2, B2, C2, D2, E2 & F2) using screws (part #6) and phillips head screwdriver.



Step 8. Carefully turn unit upright. Attach cam stickers (part #8) to the hole of cam locks (part #5).

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

