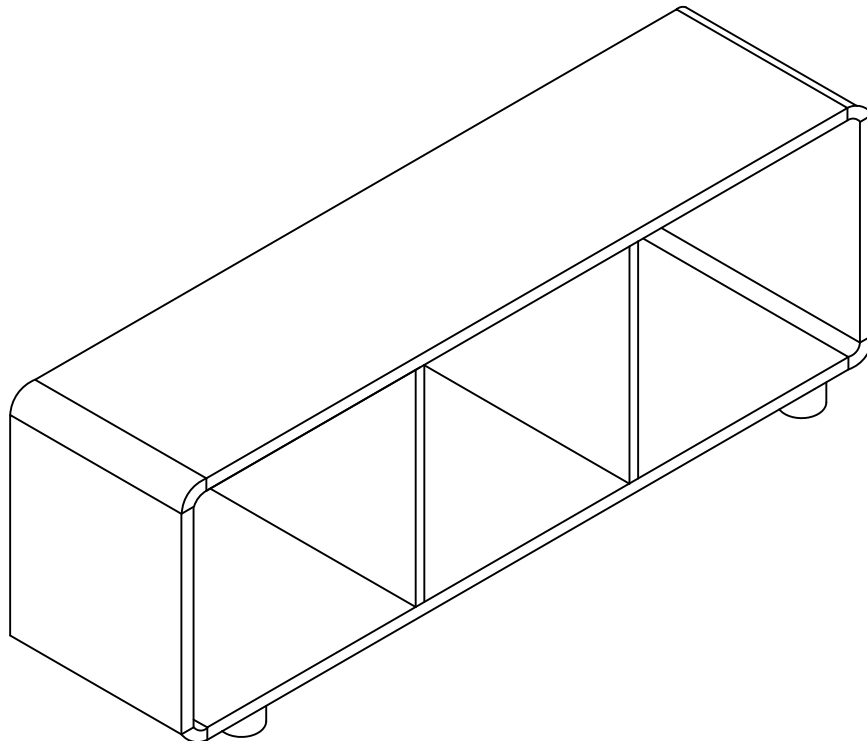













CROSLEY

FURNITURE










Large Record Storage Console CF1137



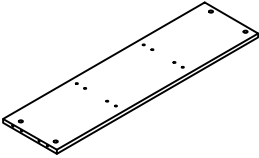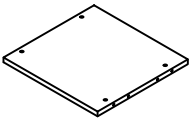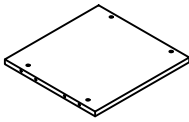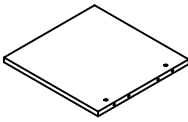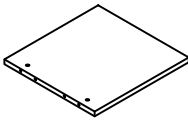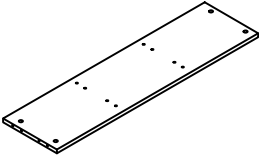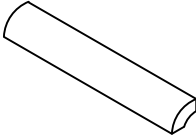PART LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Left Partition Panel 1 PC	Right Partition Panel 1 PC
F 	G 	H 	I 	J 
Bottom Panel 1 PC	Left Back Panel 1 PC	Right Back Panel 1 PC	Middle Back Panel 1 PC	Corner 4 PCS
K 	L 			
Leg 5 PCS	Cover 3 PCS			

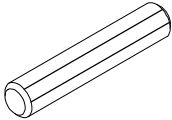HARDWARE LIST

#1  Ø10*50mm Wood Dowel 24 PCS(Extra 1)	#2  1-1/2"*Ø1/4 Long Bolt 4 PCS (Extra 1)	#3  1/2"*Ø1/4 Short Bolt 4 PCS (Extra 1)	#4  Cam Bolt 20 PCS(Extra 1)	#5  Cam Lock 20 PCS (Extra 1)
#6  Screw 28 PCS (Extra 1)	#7  Adjustable Leveler 5 PCS	#8  Cover 12 PCS	#9  Binding Post 3 SETS (Extra 1)	#10  ØM4 Allen Wrench 1 PC
#11  ØM2 Small Allen Wrench 1 PC	#12  Metal Plate 2 PCS			

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (parts #4) into pre-drilled holes of top panel and corners (parts A & J) using phillips head screwdriver.

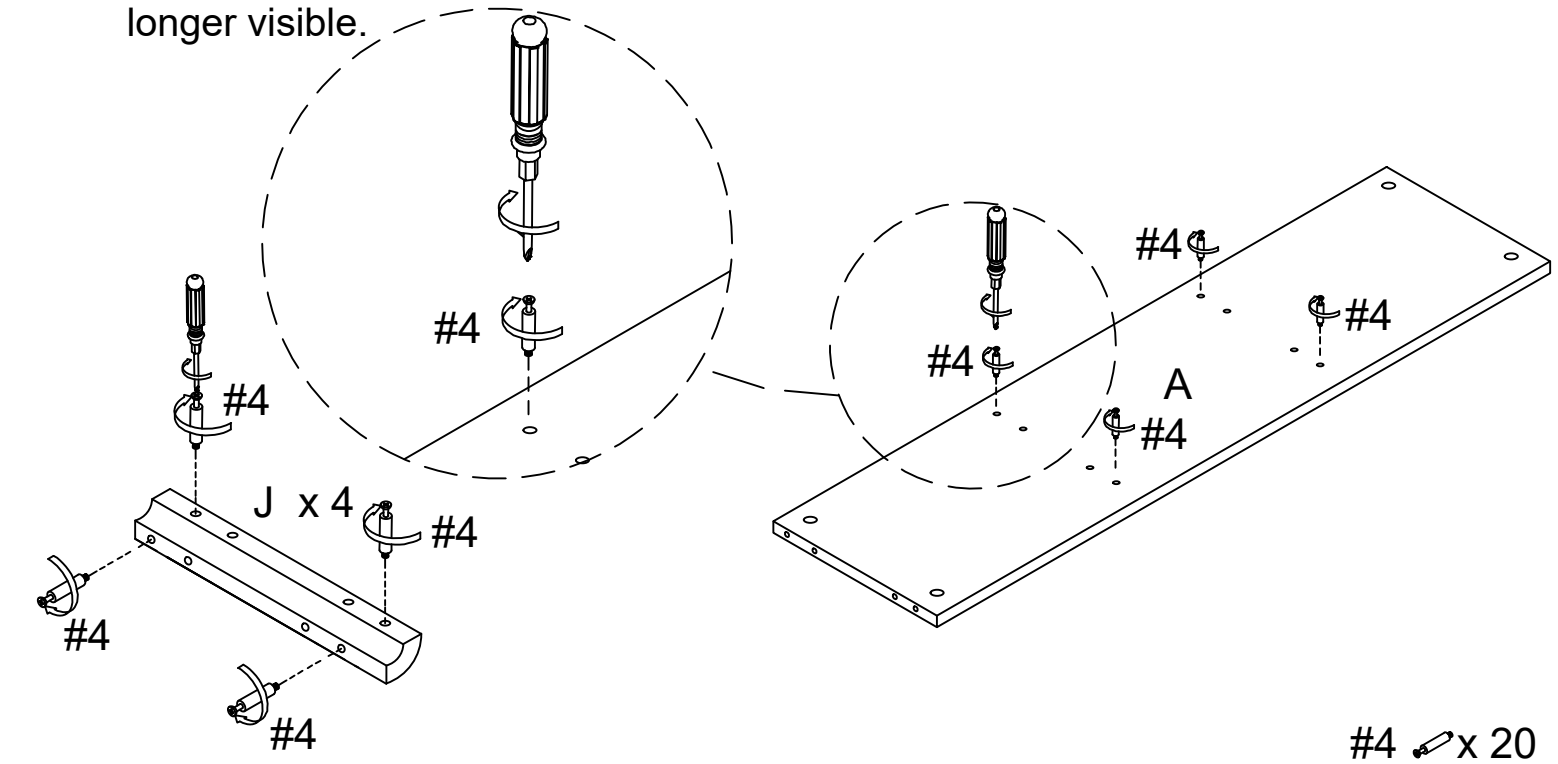Note : Do not over tighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.




Step 2. Attach corners (part J) to panels (parts A & F) using wood dowels (part #1), cam locks (part #5) and phillips head screwdriver.

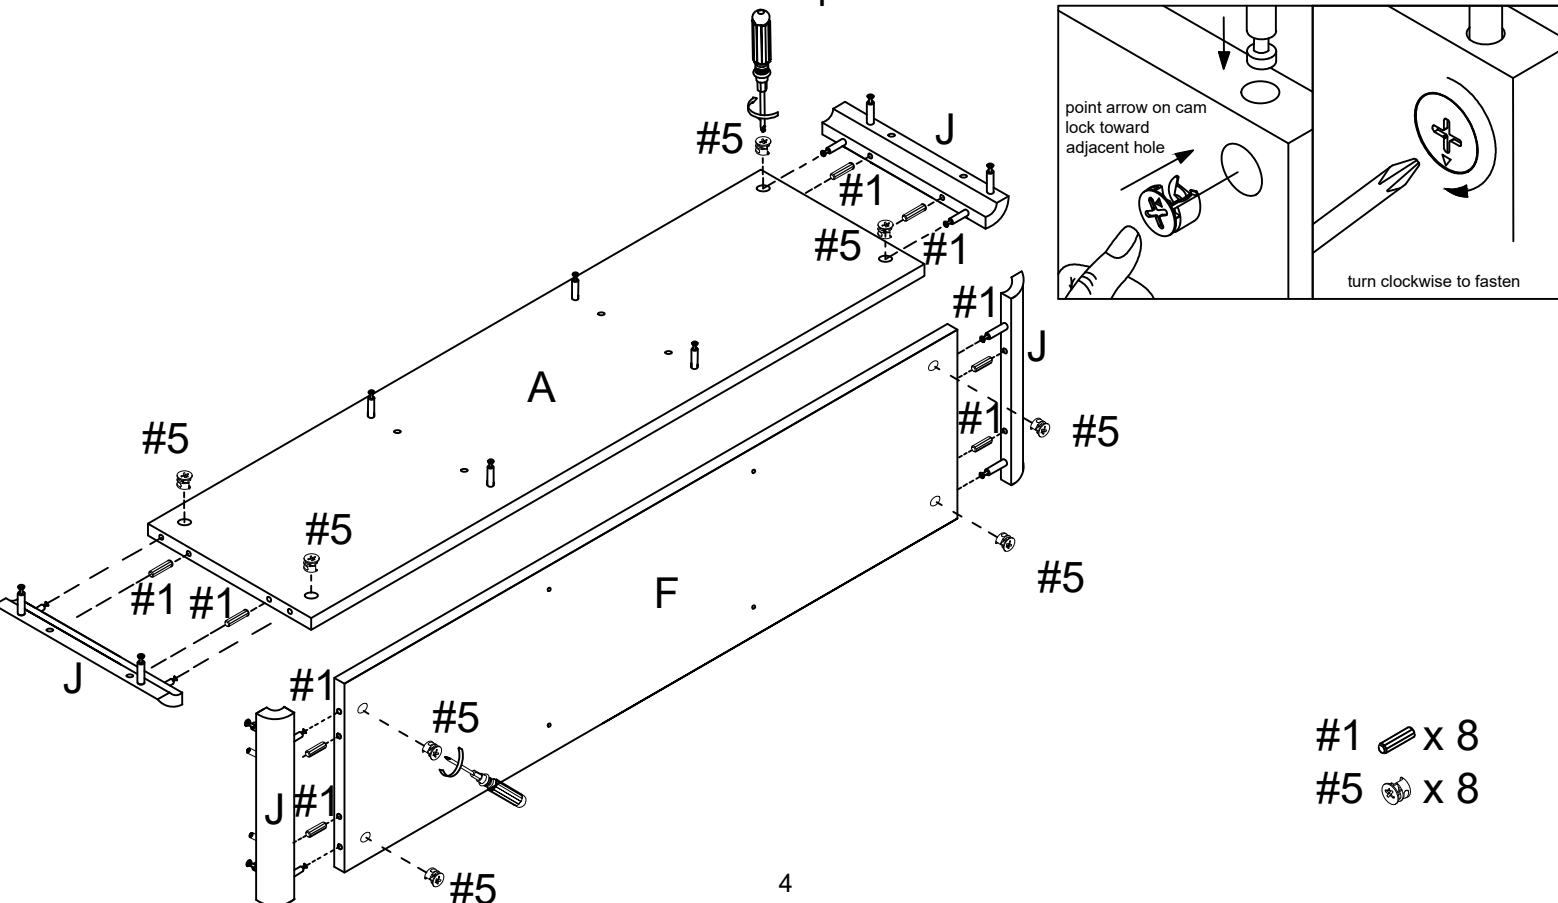Note : Cam locks must rotate a full 180°. See pictured insert.




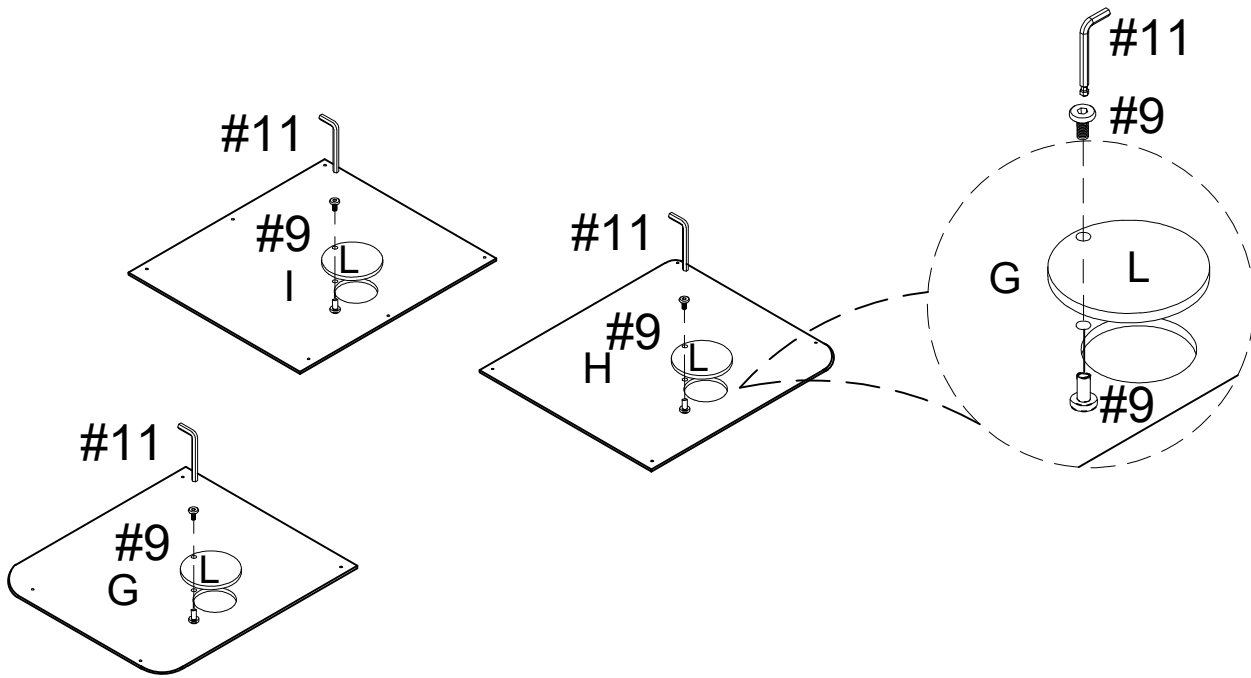
Step 3. Attach covers (part L) to back panels (parts G, H & I) using binding posts (part #9) and small allen wrench (part #11).



#9  x 3
#11  x 1

Step 4 . Attach panels (parts B, C, D & E) to top panel (part A) using wood dowels (part #1), cam locks (part #5) and phillips head screwdriver.

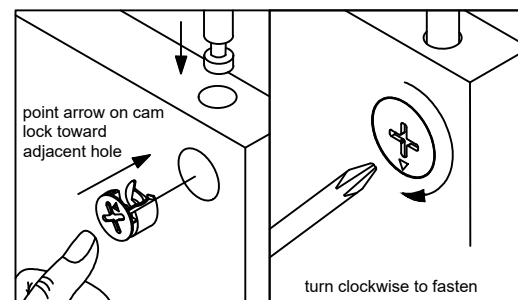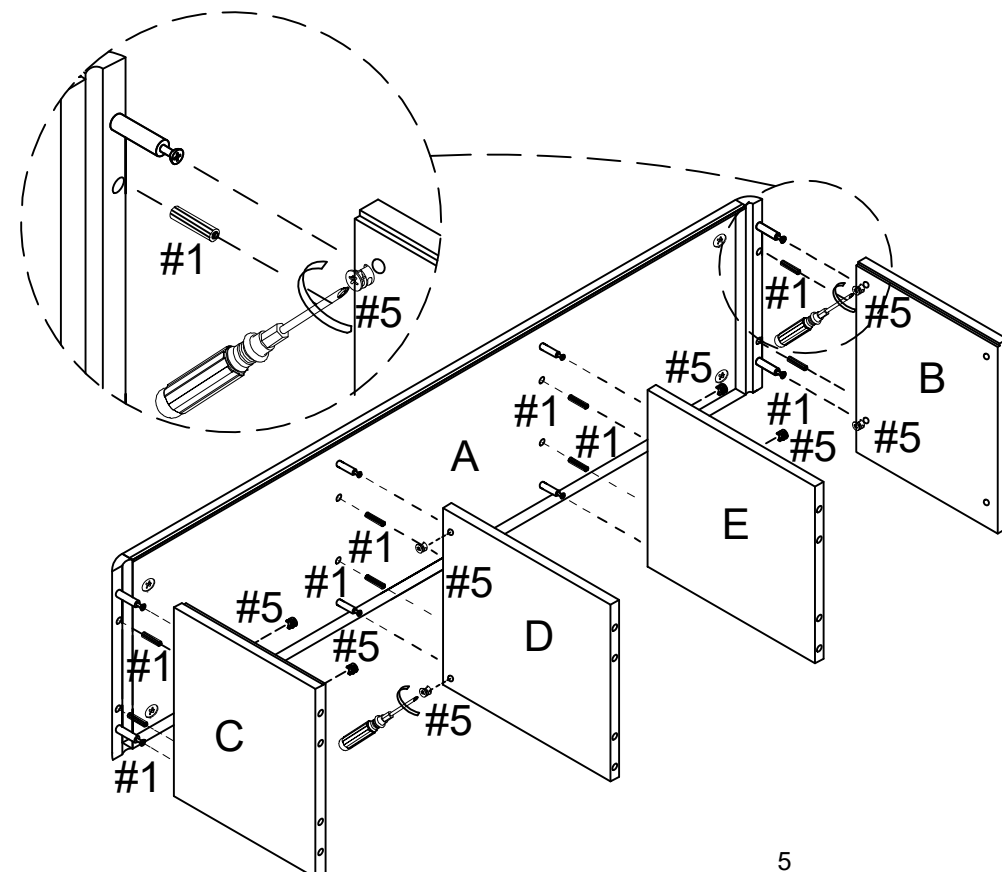
Note : Cam locks must rotate a full 180°. See pictured insert.




#1  x 8
#5  x 8

Step 5 . Attach panels (parts F & J) to assembled unit (parts B, C, D, & E) using wood dowels (part #1), cam locks (part #5), long bolts (part #2) and allen wrench (part #10).

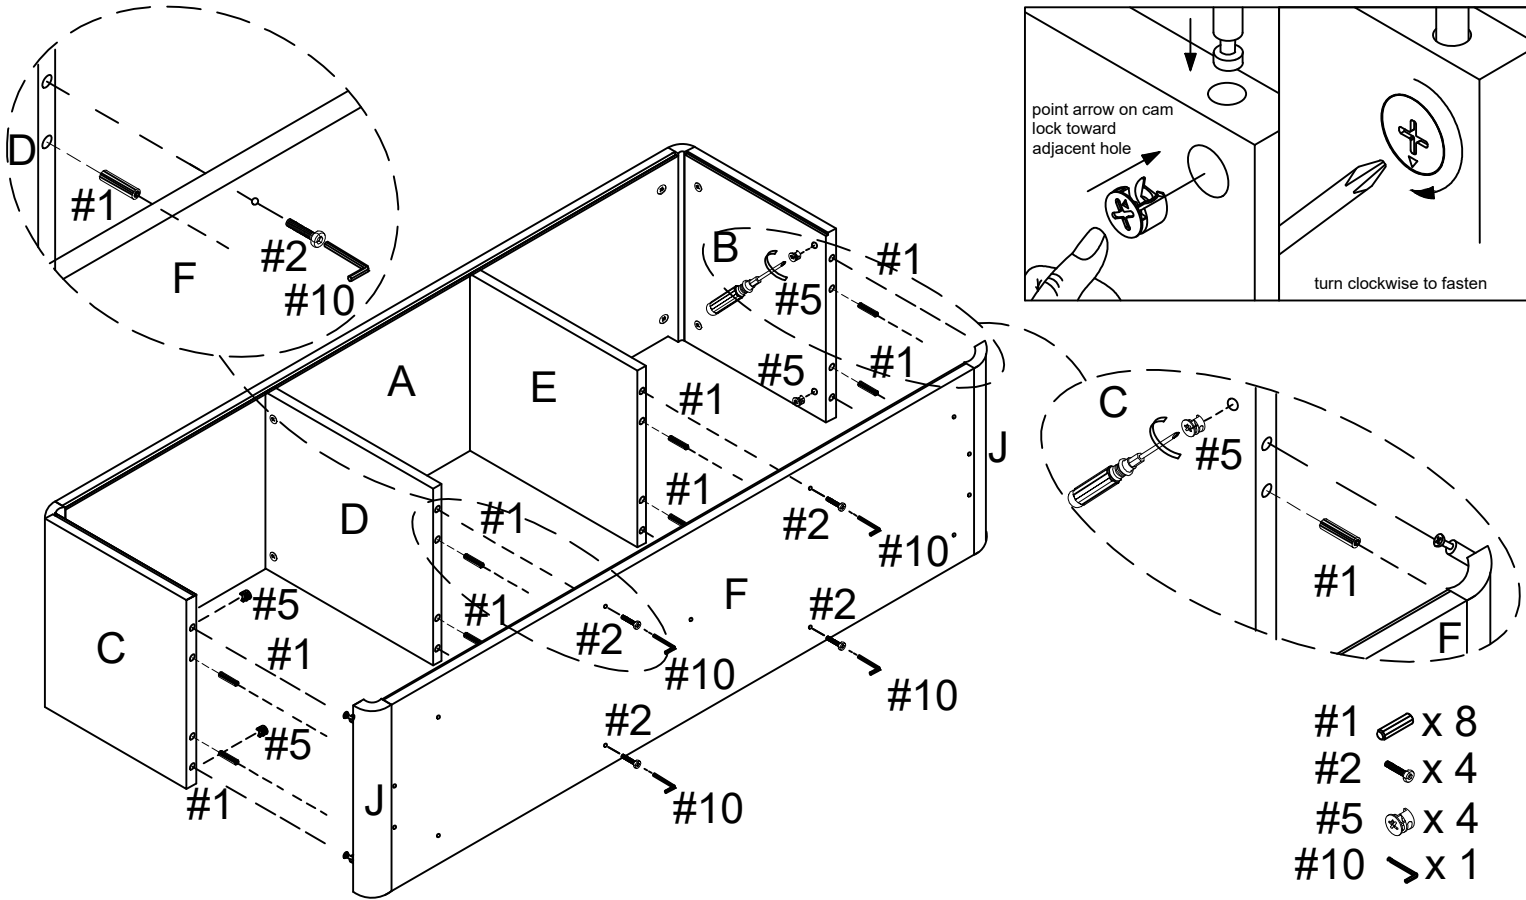
Note : Cam locks must rotate a full 180°. See pictured insert.



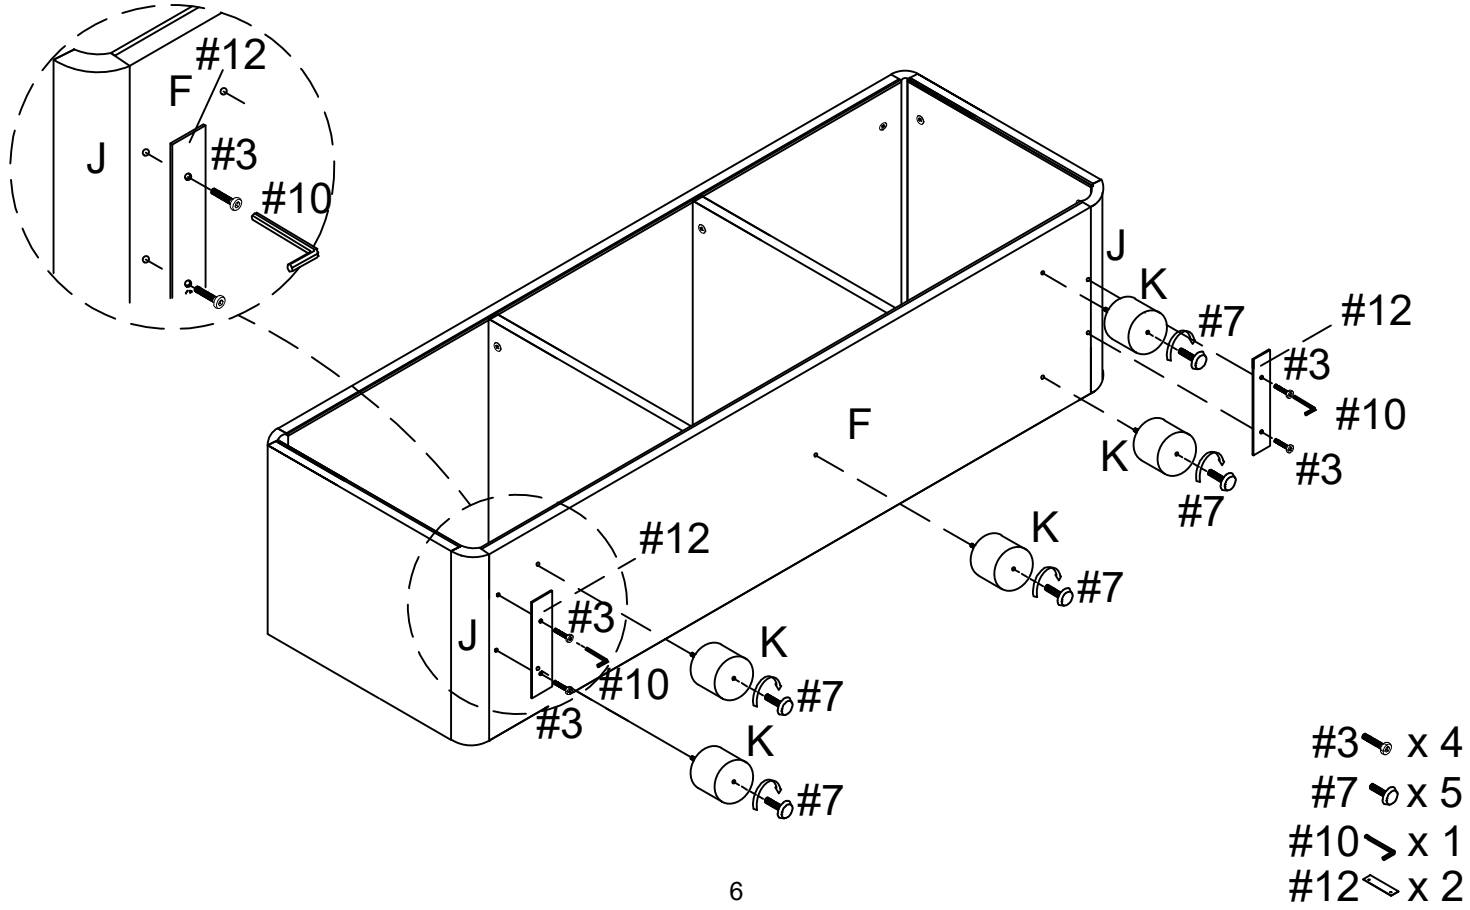Step 6 . Attach metal plates (part #12) to bottom panel (part F) using short bolts (part #3) and allen wrench (part #10). Attach legs (part K) to bottom panel (part F). Attach adjustable levelers (part #7) to legs (part K).



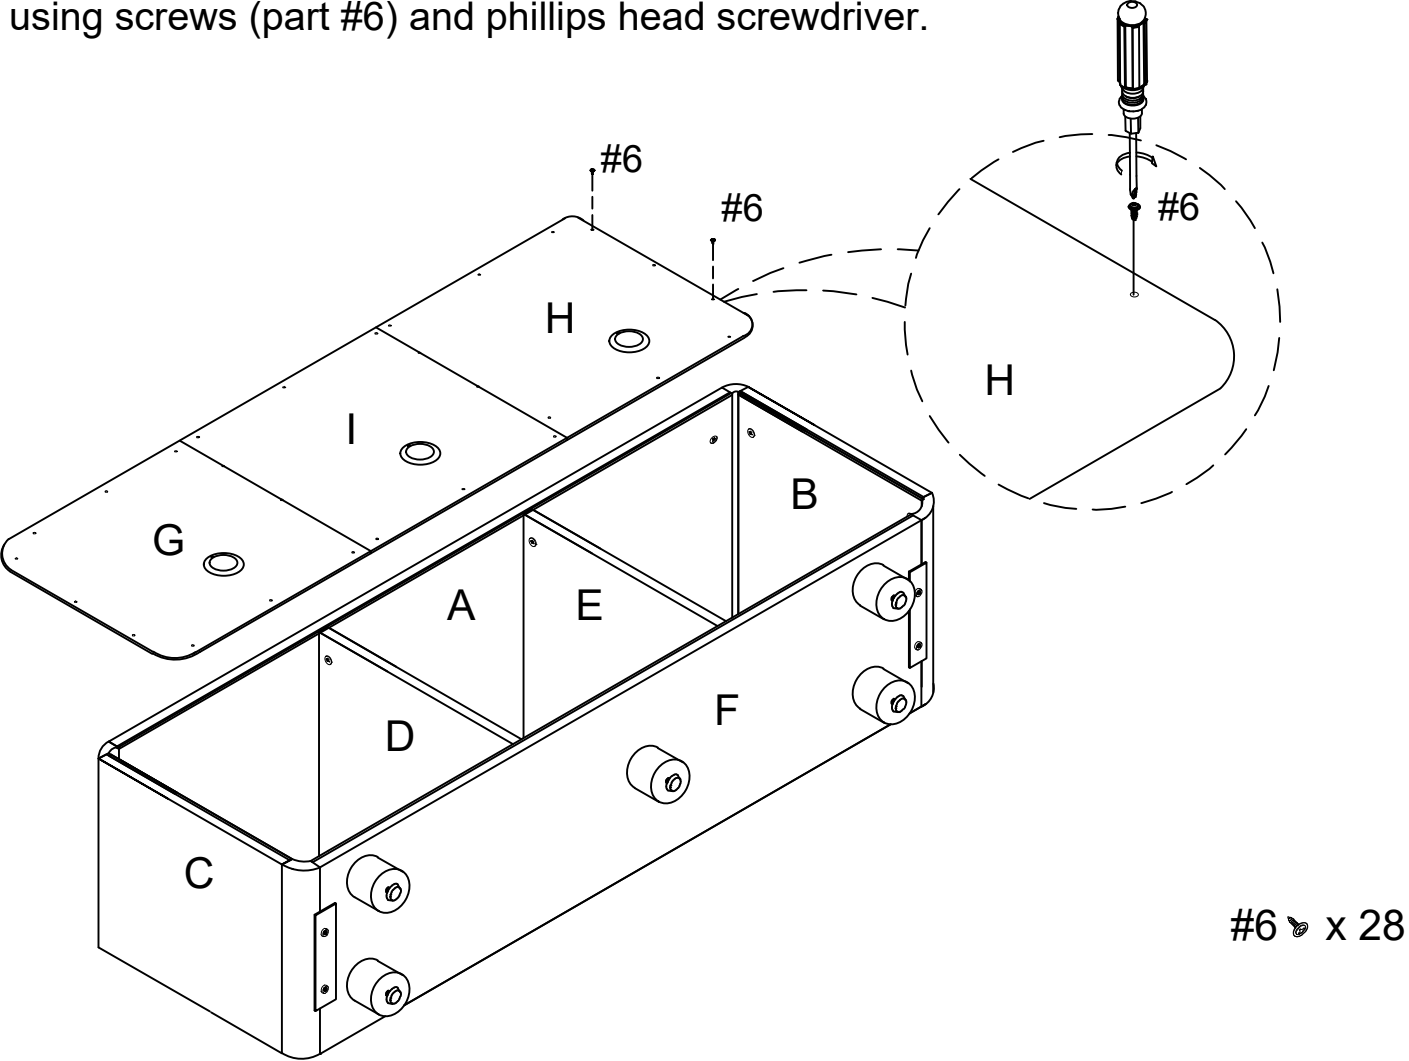Step 7. Attach back panels (parts G, H & I) to assembled unit (parts A, B, C, D, E & F) using screws (part #6) and phillips head screwdriver.



Step 8. Attach covers (part #8) to the hole of cam locks (part #5).

