











CROSLEY
FURNITURE

Record Player Stand with Vinyl Storage
CF1189

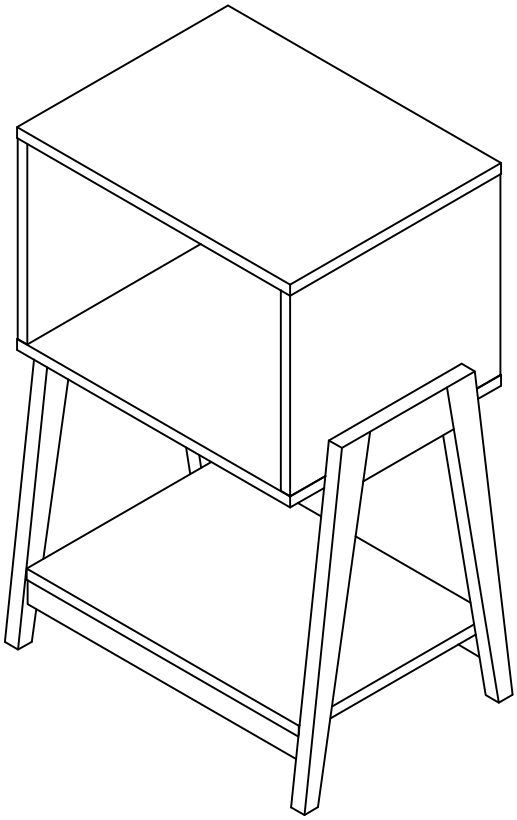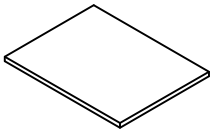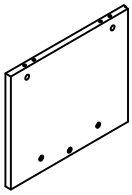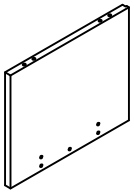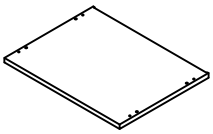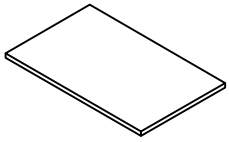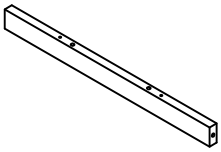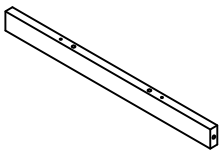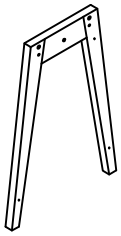
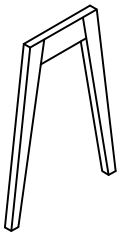
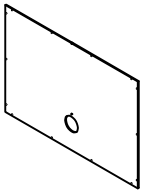
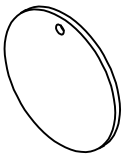


PARTS LIST

A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Shelf Panel 1 PC
F 	G 	H 	I 	J 
Upper Rail 1 PC	Lower Rail 2 PCS	Left Leg 1 PC	Right Leg 1 PC	Back Panel 1 PC


K 
Cover 1 PC

HARDWARE LIST

#1  1/4"*25mm	#2  1/4"	#3  1/4"*13mm	#4  8*30mm	#5  7*38mm
Bolt 6 PCS (Extra 1)	Spring Washer 6 PCS (Extra 1)	Flat Washer 6 PCS (Extra 1)	Wood Dowel 18 PCS (Extra 1)	Tapping Bolt 4 PCS (Extra 1)
#6 	#7 	#8  8*4*31mm	#9 	#10  8*3*12mm
Cam Bolt 10 PCS (Extra 1)	Cam Lock 10 PCS (Extra 1)	Long Screw 6 PCS (Extra 1)	Binding Post 1 SET (Extra 1)	Short Screw 14 PCS (Extra 1)
#11 	#12  M4	#13  M2	#14 	
Cam Sticker 16 PCS (Extra 1)	Allen Wrench 1 PC	Small Allen Wrench 1 PC	Safety Strap Kit 1 SET	

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #6) into pre-drilled holes of panels (parts A, H & I) using phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

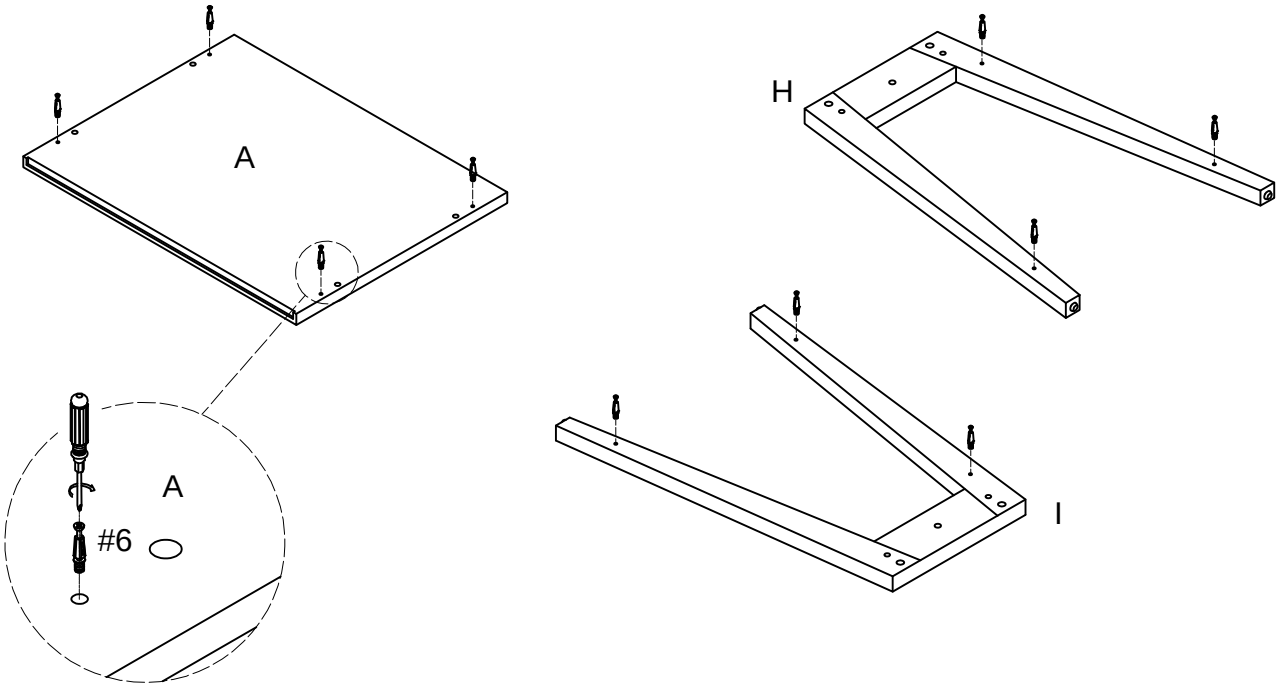

#6 x 10


Step 2. Attach upper rail (part F) to bottom panel (part D) using wood dowels (part #4), long screws (part #8) and phillips head screwdriver.

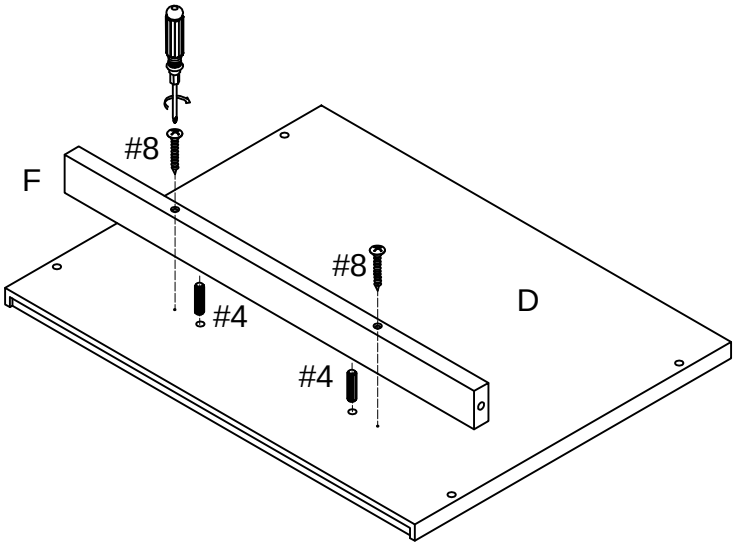

#4 x 2

#8 x 2


Step 3. Attach lower rails (part G) to shelf panel (part E) using wood dowels (part #4), long screws (part #8) and phillips head screwdriver.

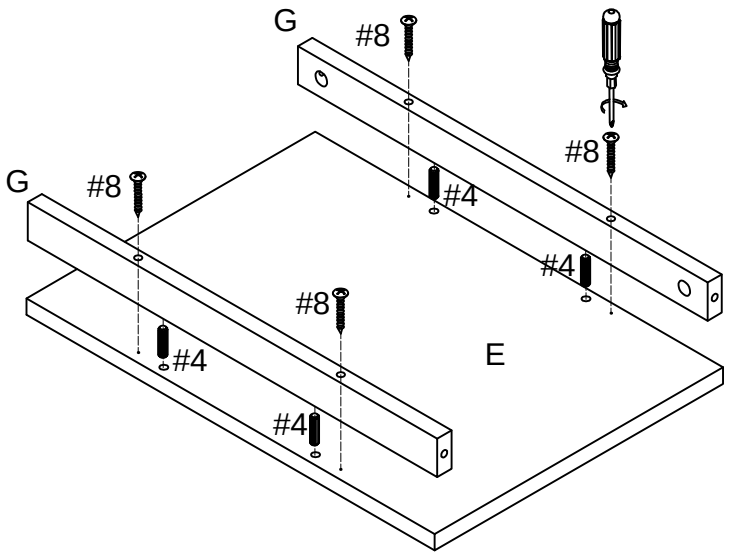

#4 x 4

#8 x 4

Step 4. Attach cover (part K) to back panel (part J) using binding post (part #9) and small allen wrench (part #13).

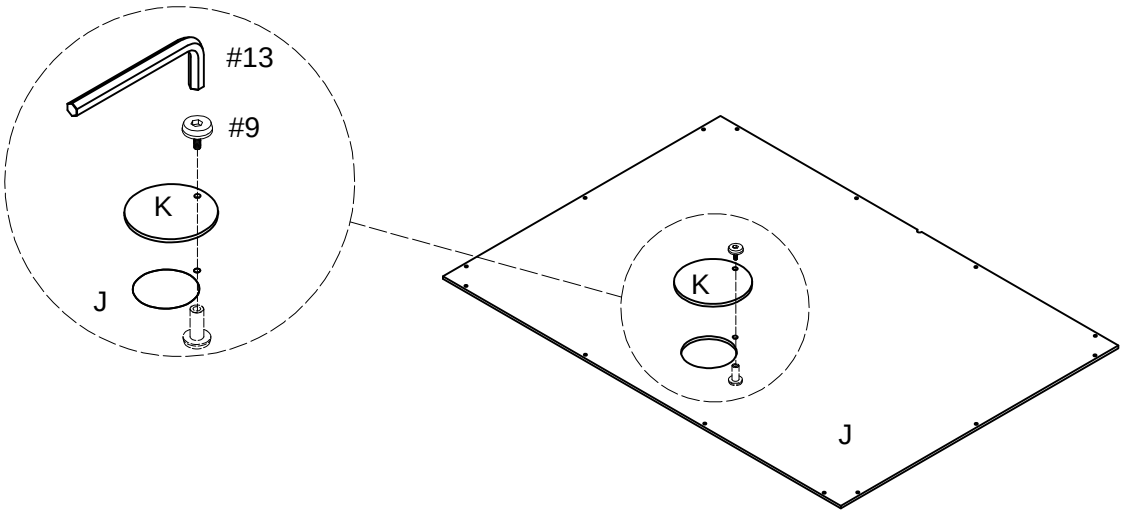



#9 x 1

#13 x 1

Step 5. Attach panels (parts B & C) to top panel (part A) using wood dowels (part #4), cam locks (part #7) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

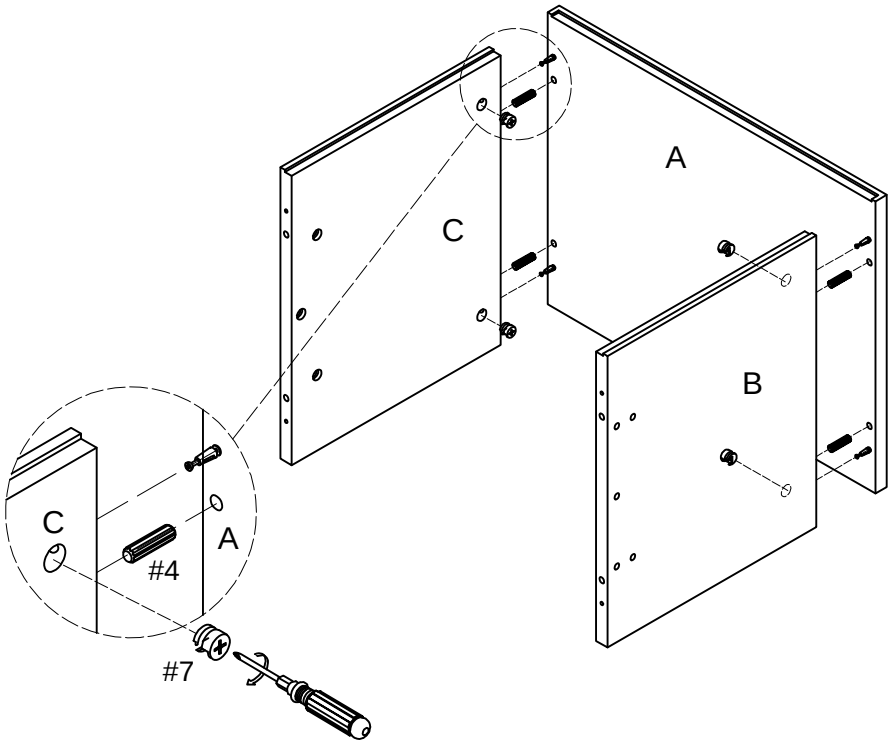

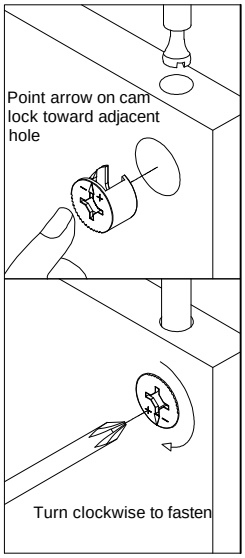


#4		x 4
#7		x 4


Step 6. Attach bottom panel (part D) to assembled unit (parts B & C) using wood dowels (part #4), tapping bolts (part #5) and allen wrench (part #12).

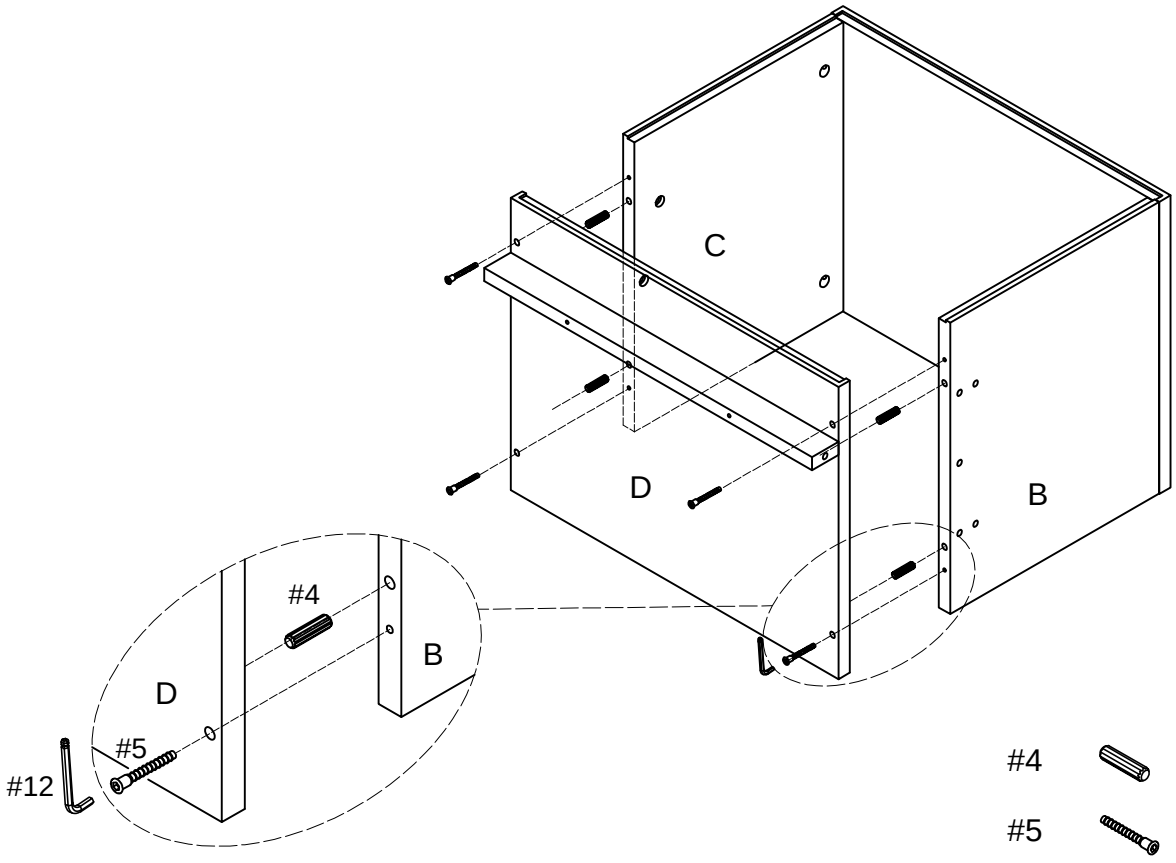

#4		x 4
#5		x 4
#12		x 1


Step 7. Attach right leg (part I) to assembled unit (parts C & F) using bolts (part #1), spring washers (part #2), flat washers (part #3), wood dowels (part #4), cam lock (part #7), allen wrench (part #12) and phillips head screwdriver.
Note: Cam locks must rotate a full 180°. See pictured insert.

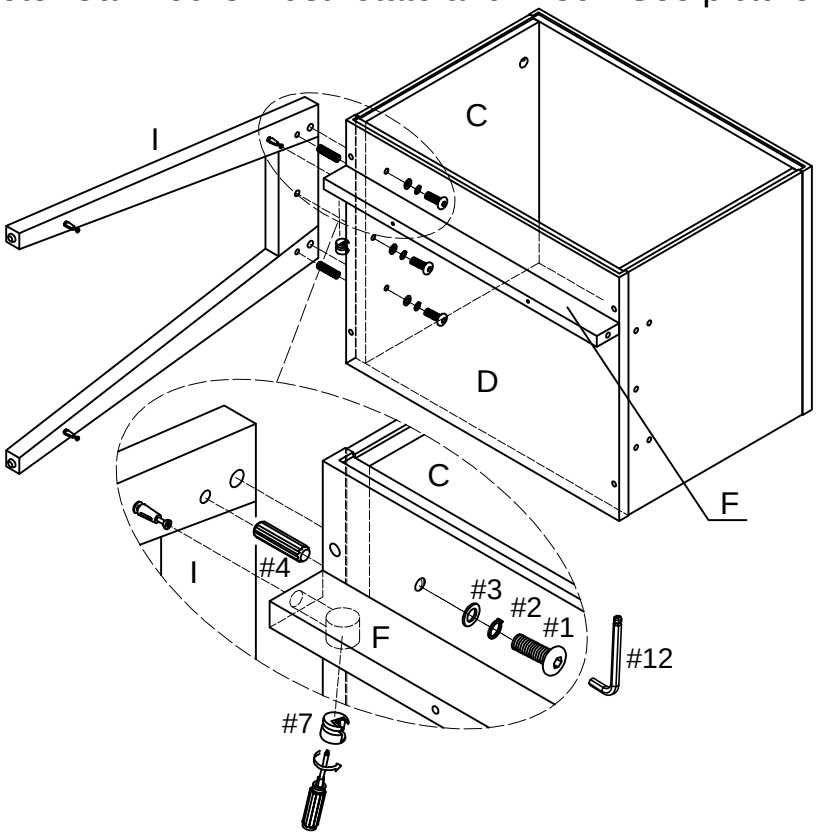


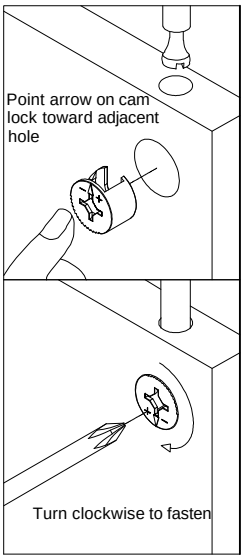

#1		x 3
#2		x 3
#3		x 3
#4		x 2
#7		x 1
#12		x 1


Step 8. Attach assembled unit (parts E & G) to right leg (part I) using cam locks (part #7) and phillips head screwdriver.
Note: Cam locks must rotate a full 180°. See pictured insert.

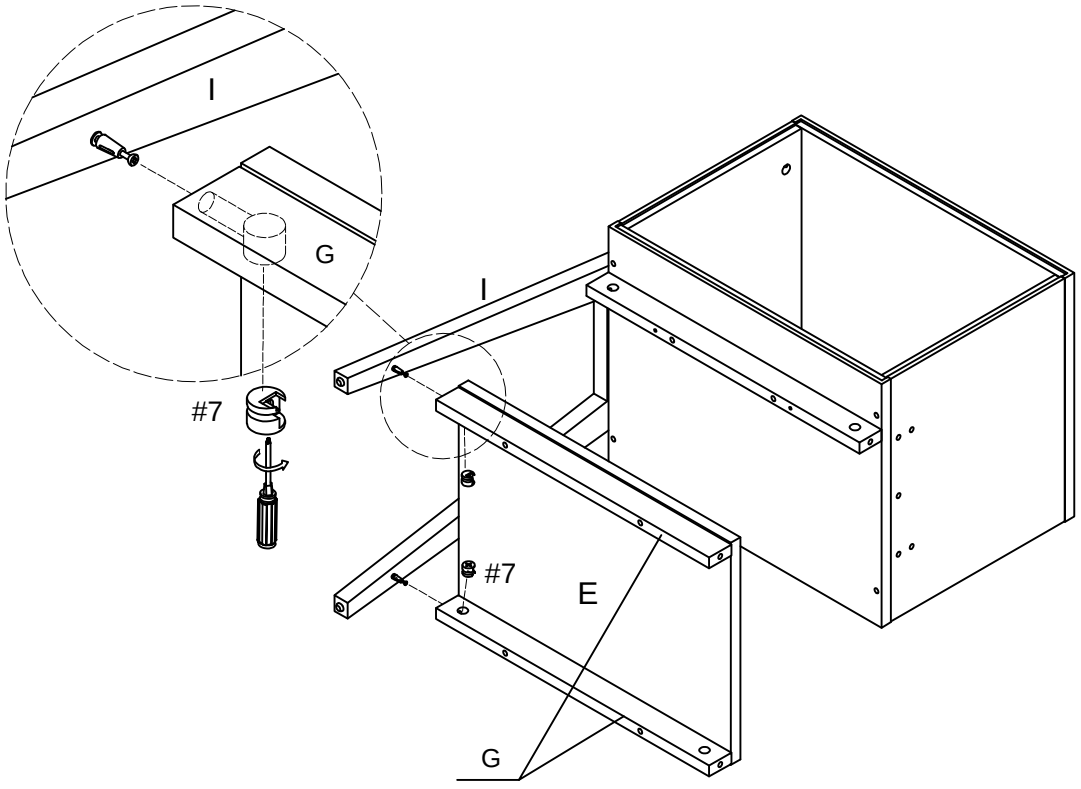


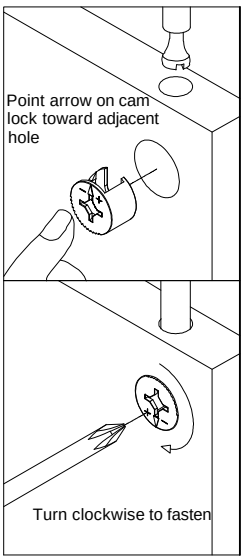

#7		x 2


Step 9. Attach left leg (part H) to assembled unit (parts B, F & G) using bolts (part #1), spring washers (part #2), flat washers (part #3), wood dowels (part #4), cam locks (part #7), allen wrench (part #12) and phillips head screwdriver.
Note: Cam locks must rotate a full 180°. See pictured insert.

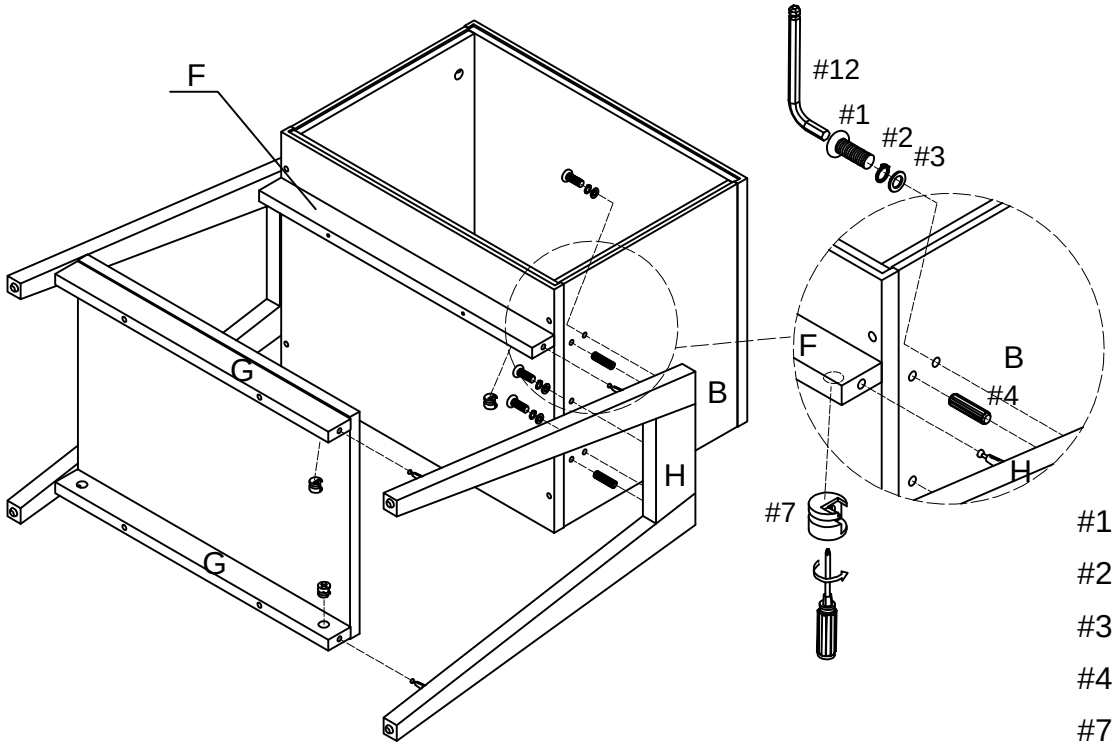

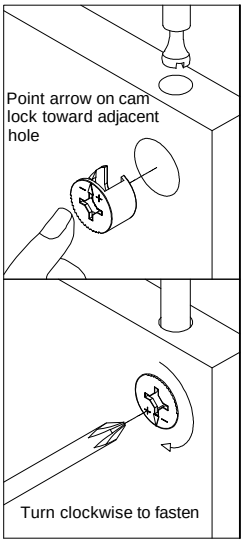

#1		x 3
#2		x 3
#3		x 3
#4		x 2
#7		x 3
#12		x 1

Step 10. Attach back panel (part J) to assembled unit (parts A, B, C & D) using short screws (part #10) and phillips head screwdriver.

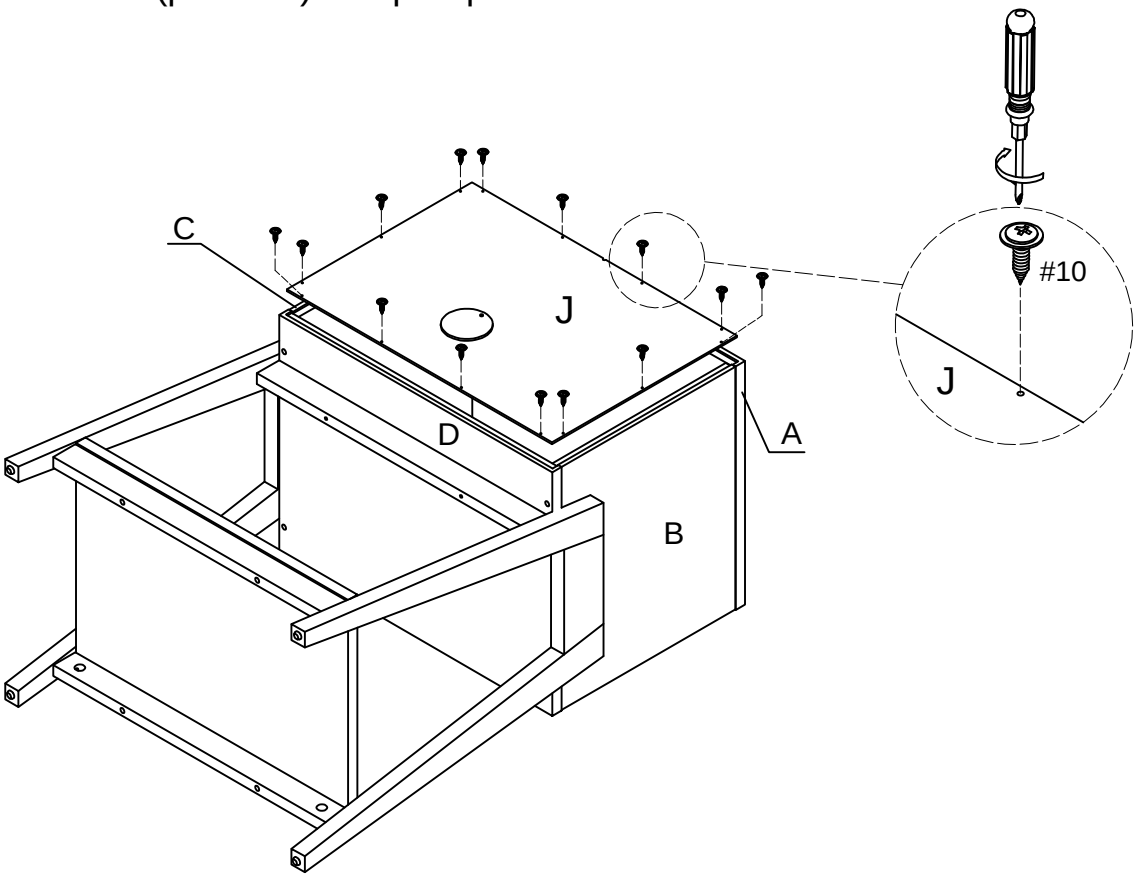



#10		x 14

Step 11. Carefully turn unit upright. Using cam stickers (part #11) cover bolts (part #1) and cam locks (part #7).



NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #14) must be installed to prevent tipping, damage and/or injury.

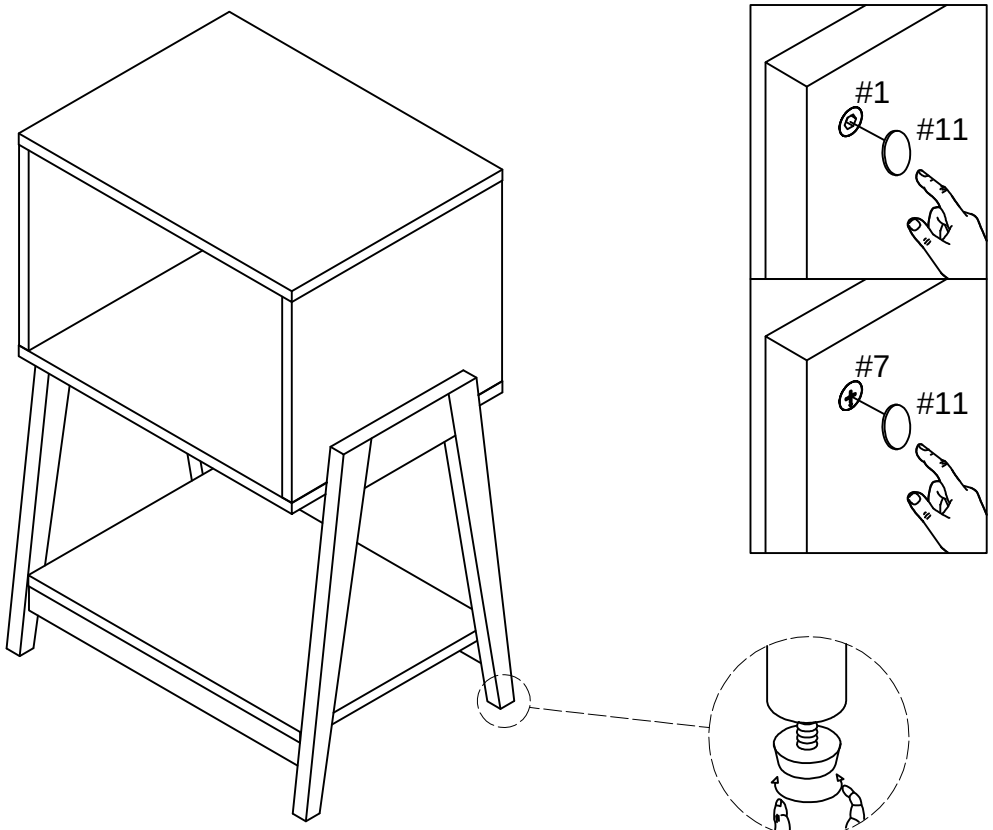

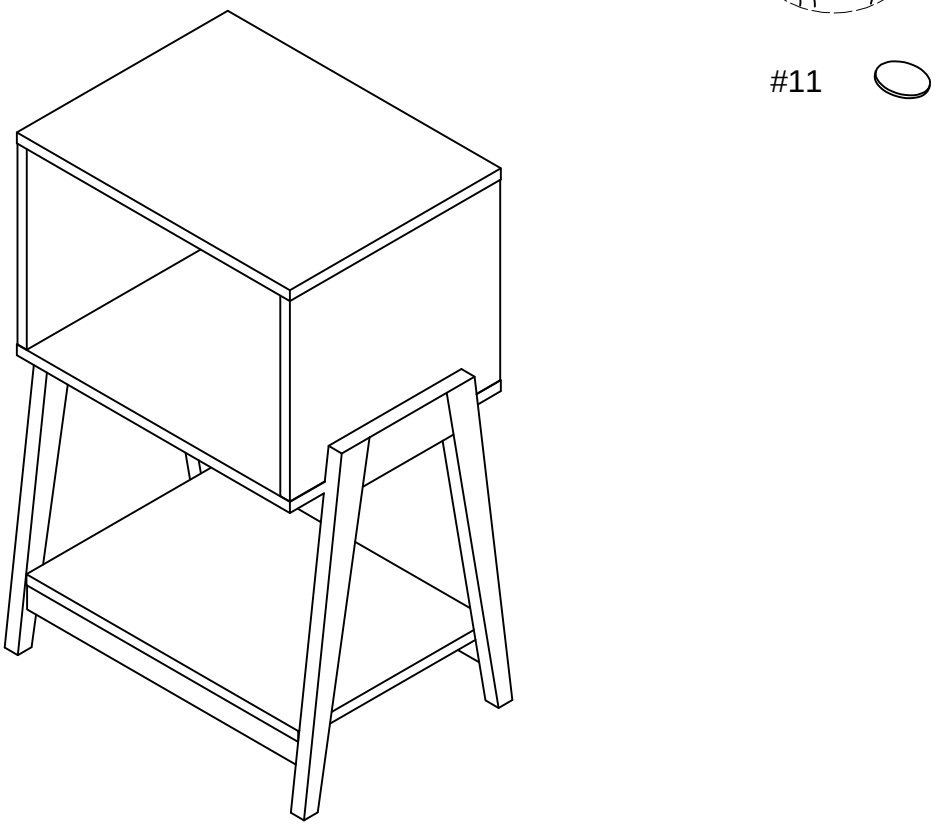

#11 x 16
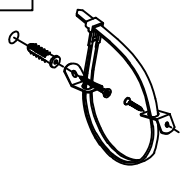
#14	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.
   Note: This item is not intended for clothing storage use.

