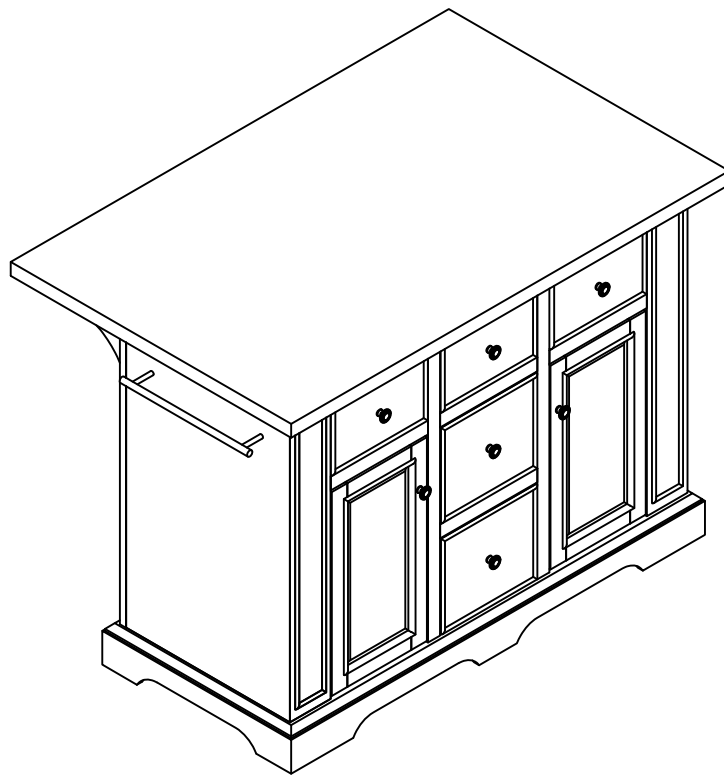























CROSLEY

FURNITURE












Kitchen Island CF3025



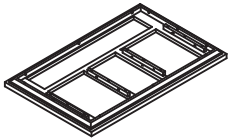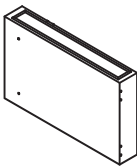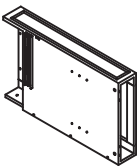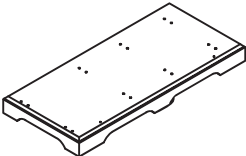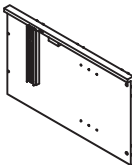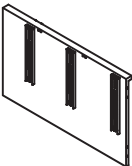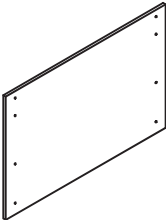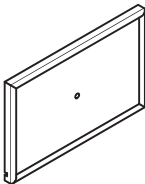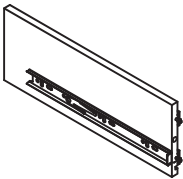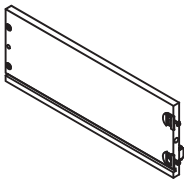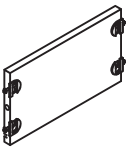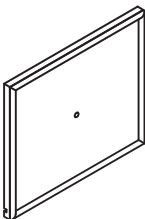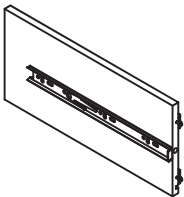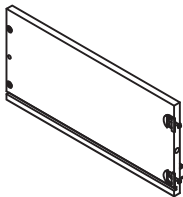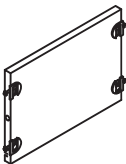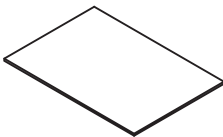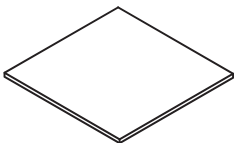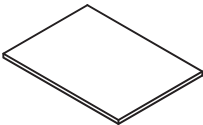PART LIST

A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Left Partition Panel 1 PC
F 	G 	H 	I 	J 
Right Partition Panel 1 PC	Front Rail 2 PCS	Front Middle Rail 2 PCS	Back Panel 1 PC	Small Drawer Front Panel 3 PCS
K2 	L2 	M2 	N 	O2 
Small Drawer Left Panel 3 PCS	Small Drawer Right Panel 3 PCS	Small Drawer Back Panel 3 PCS	Large Drawer Front Panel 2 PCS	Large Drawer Left Panel 2 PCS
P2 	Q2 	R2 	S 	T 
Large Drawer Right Panel 2 PCS	Large Drawer Back Panel 2 PCS	Drawer Bottom Panel 5 PCS	Left Door Panel 1 PC	Right Door Panel 1 PC
U2 	V2 	W 	X 	
Left Adjustable Shelf 1 PC	Right Adjustable Shelf 1 PC	Support Panel 2 PCS	Towel Bar 2 PCS	

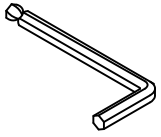HARDWARE LIST

#1  Ø8*30mm	#2  Ø6*30mm	#3  Magnet	#4  12*Ø3"*D6mm	#5  Knob
Large Wood Dowel 32 PCS (Extra 1)	Small Wood Dowel 20 PCS (Extra 1)	2 PCS	Round Head Screw 4 PCS (Extra 1)	7 PCS
#6  3/4"*Ø5/32*D9mm	#7  Barrel Nut	#8  2"*Ø1/4"*D11mm	#9  1"*Ø1/4"*D11mm	#10  1-1/4"*Ø1/4"*D11mm
Round Head Bolt 7 PCS (Extra 1)	8 PCS	Long Bolt 12 PCS (Extra 1)	Short Bolt 4 PCS (Extra 1)	Bolt 12 PCS (Extra 1)
#11  Spring Washer	#12  Flat Washer	#13  Shelf Holder	#14  Allen Wrench	
8 PCS (Extra 1)	8 PCS (Extra 1)	8 PCS	1 PC	

ADDITIONAL TOOLS (Not Provided)

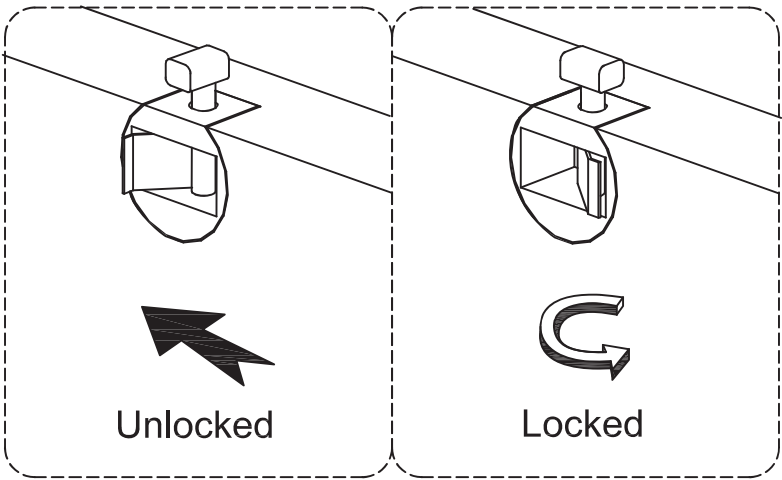
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Please do not use tools to assemble this unit unless specifically indicated.




Reference the images above any time the instructions state "lock the hardware".
Note: Be sure to check all hardware is locked when completed.

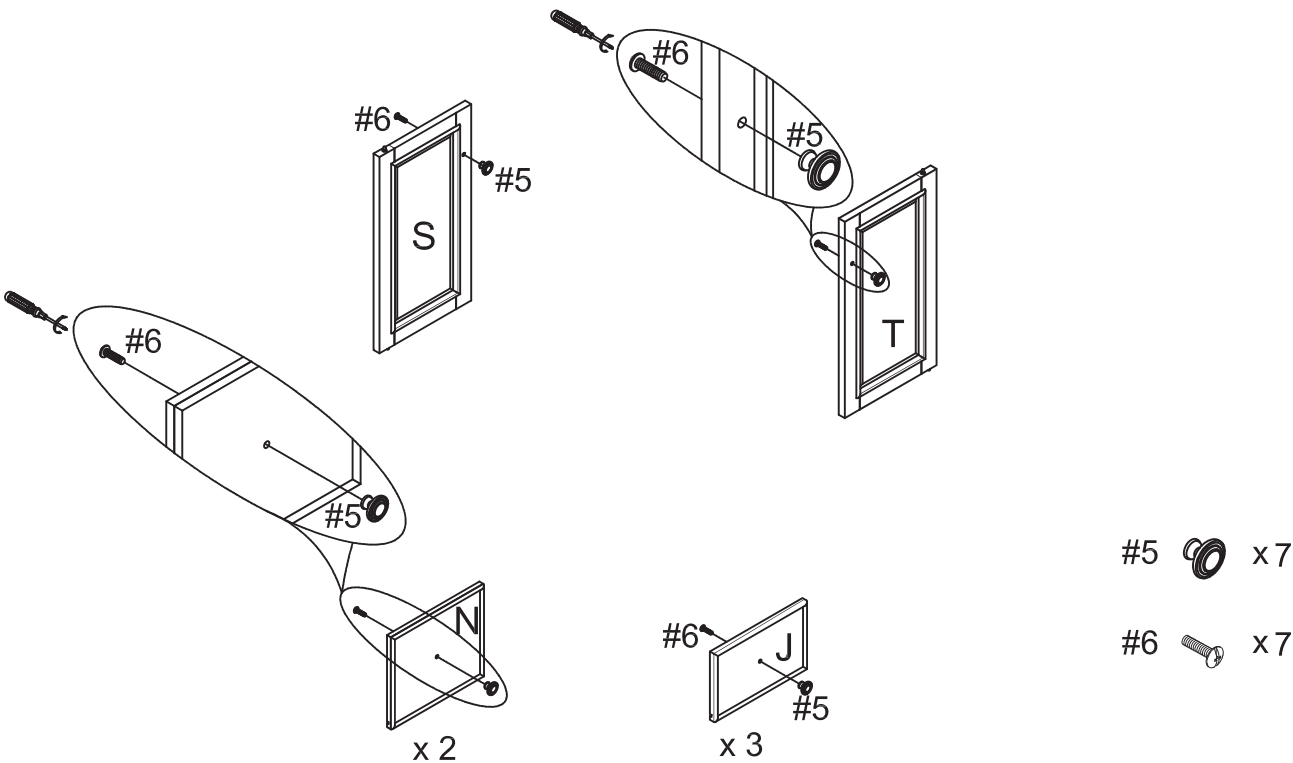Step 1. Attach knobs (part #5) to door panels (parts S & T) and drawer front panels (parts J & N) using round head bolts (part #6) and phillips head screwdriver.



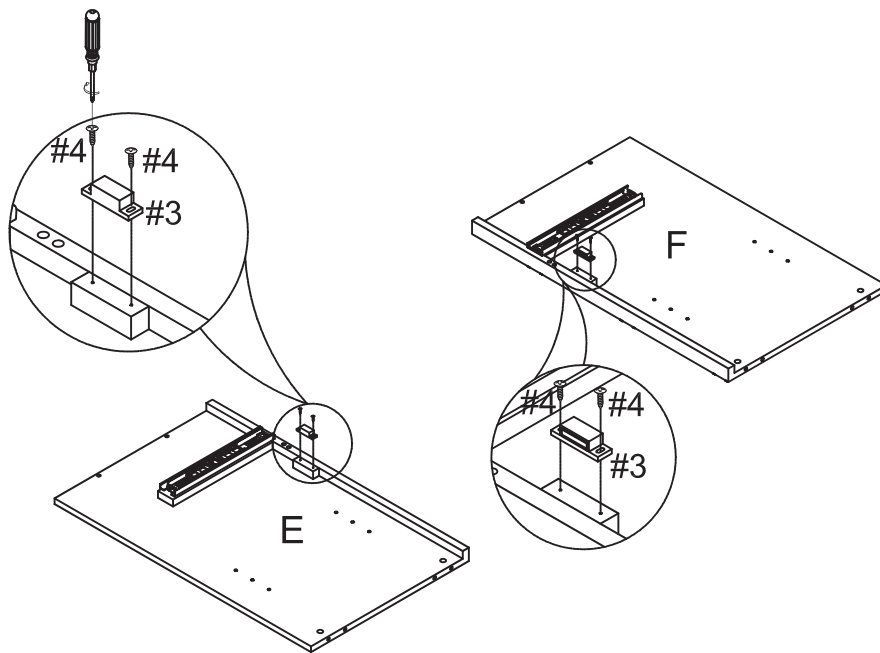
Step 2. Attach magnets (part #3) to partition panels (parts E & F) using round head screws (part #4) and phillips head screwdriver.



#3  x 2


#4  x 4

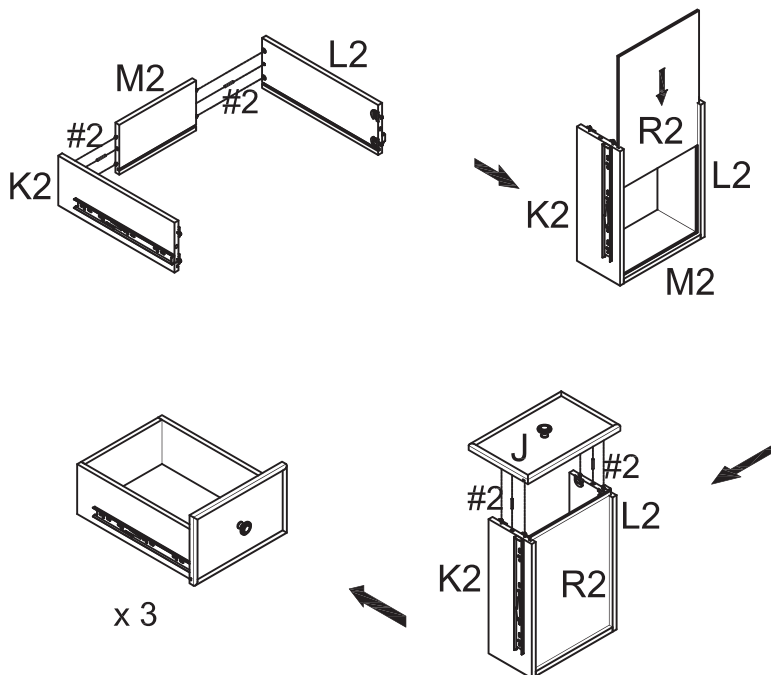Step 3. Attach small drawer panels (parts K2 & L2) to small drawer back panel (part M2) using small wood dowels (part #2) and lock the hardware. Slide drawer bottom panel (part R2) into grooves of assembled unit (parts K2, L2 & M2). Attach small drawer front panel (part J) to assembled unit (parts K2, L2 & R2) using small wood dowels (part #2) and lock the hardware. Repeat for remaining drawers.




#2  x 12

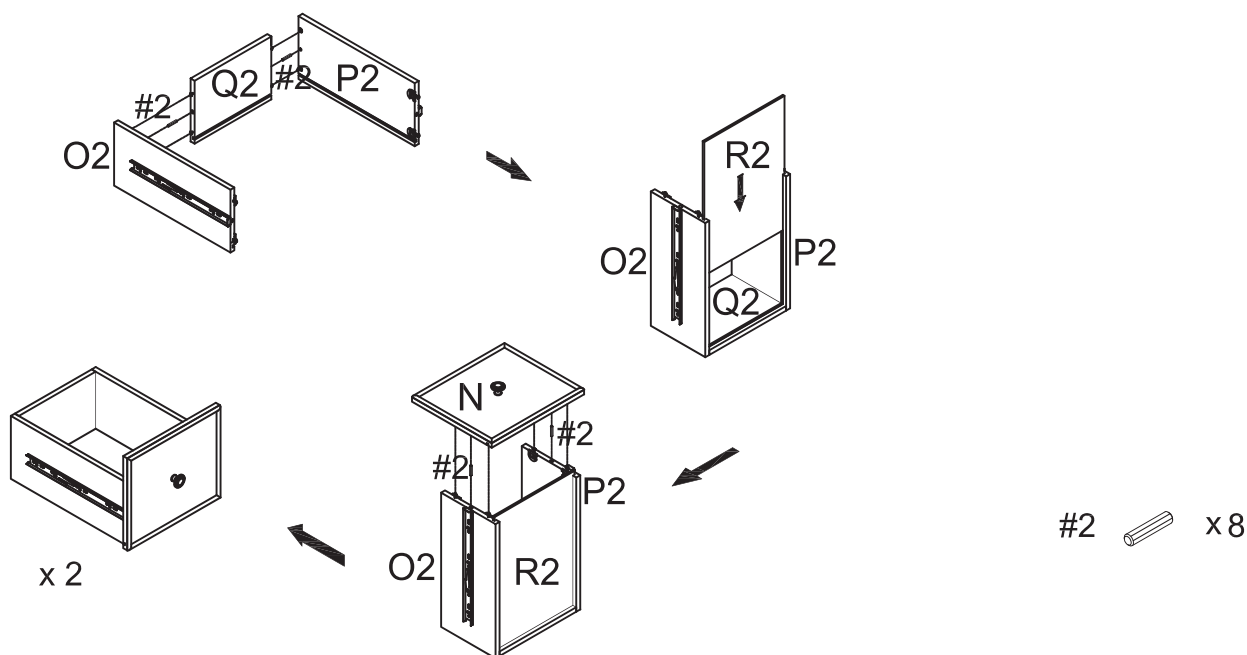Step 4. Attach large drawer panels (parts O2 & P2) to large drawer back panel (part Q2) using small wood dowels (part #2) and lock the hardware. Slide drawer bottom panel (part R2) into grooves of assembled unit (parts O2, P2 & Q2). Attach large drawer front panel (part N) to assembled unit (parts O2, P2 & R2) using small wood dowels (part #2) and lock the hardware. Repeat for remaining drawer.



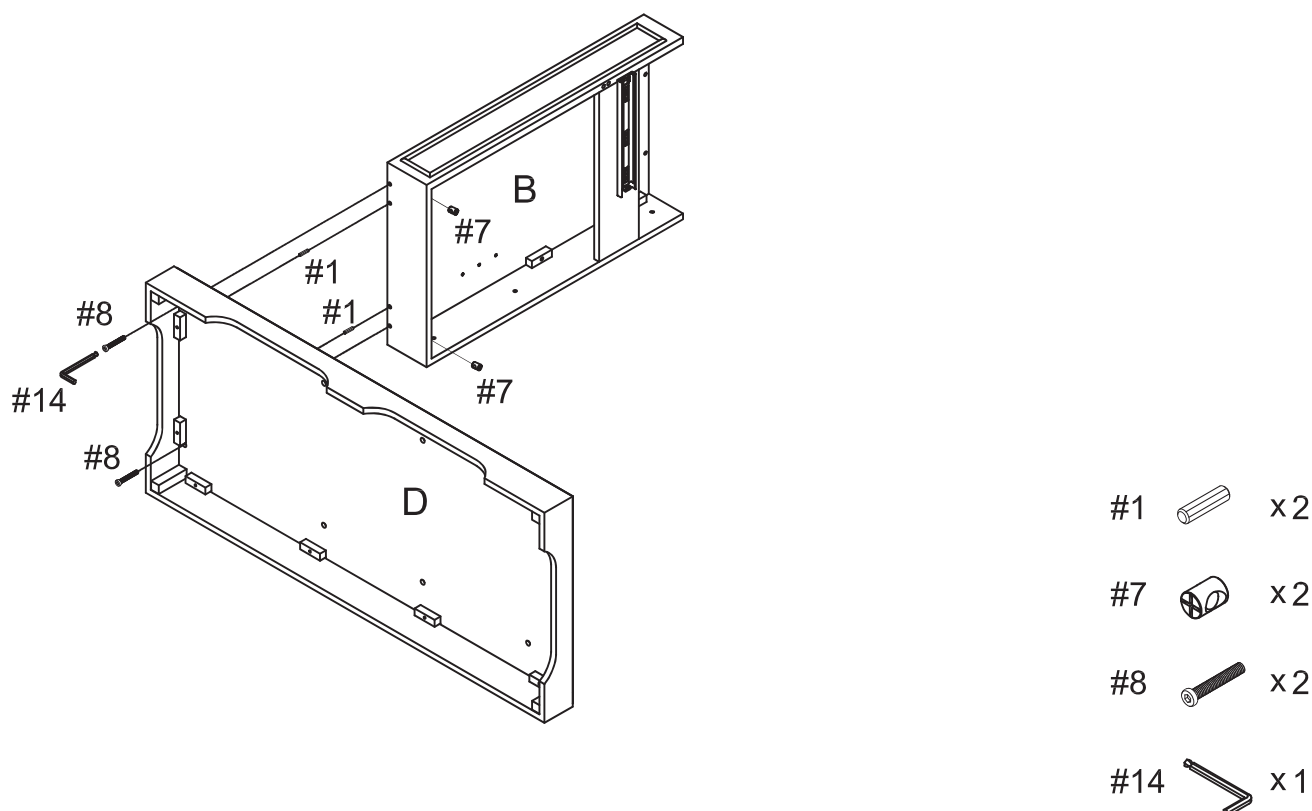Step 5. Attach left panel (part B) to bottom panel (part D) using large wood dowels (part #1), barrel nuts (part #7), long bolts (part #8) and allen wrench (part #14).



Step 6. Attach front rail (part G) to left panel (part B) using large wood dowels (part #1). Attach left partition panel (part E) to front rail (part G) and bottom panel (part D) using large wood dowels (part #1), barrel nuts (part #7), long bolts (part #8) and allen wrench (part #14).

The diagram shows an exploded view of the assembly. Part G (front rail) is being attached to part B (left panel) using two large wood dowels (#1). Part E (left partition panel) is being attached to part G and part D (bottom panel) using two large wood dowels (#1), two barrel nuts (#7), two long bolts (#8), and one allen wrench (#14). The allen wrench is shown inserted into the bottom of part D.


#1		x 6
#7		x 2
#8		x 2
#14		x 1

Step 7. Attach front middle rails (part H) to left partition panel (part E) using large wood dowels (part #1). Attach right partition panel (part F) to front middle rails (part H) and bottom panel (part D) using large wood dowels (part #1), barrel nuts (part #7), long bolts (part #8) and allen wrench (part #14).

The diagram shows an exploded view of the assembly. Part H (front middle rail) is being attached to part E (left partition panel) using two large wood dowels (#1). Part F (right partition panel) is being attached to part H and part D (bottom panel) using two large wood dowels (#1), two barrel nuts (#7), two long bolts (#8), and one allen wrench (#14). The allen wrench is shown inserted into the bottom of part D.


#1		x 10
#7		x 2
#8		x 2
#14		x 1

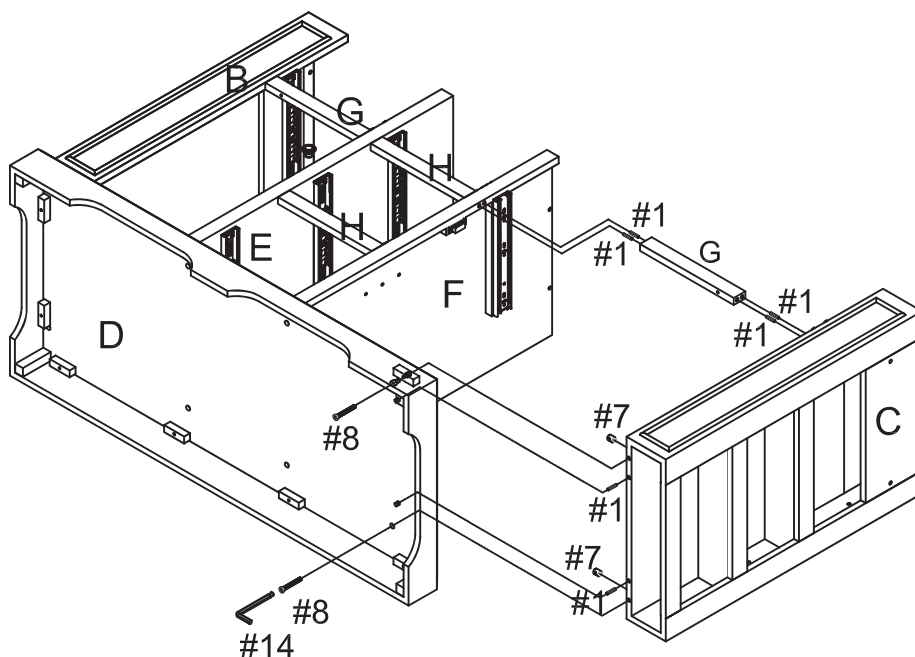Step 8. Attach front rail (part G) to right partition panel (part F) using large wood dowels (part #1). Attach right panel (part C) to front rail (part G) and bottom panel (part D) using large wood dowels (part #1), barrel nuts (part #7), long bolts (part #8) and allen wrench (part #14).




- | | | |
|-----|---|----|
| #1 |  | x6 |
| #7 |  | x2 |
| #8 |  | x2 |
| #14 |  | x1 |

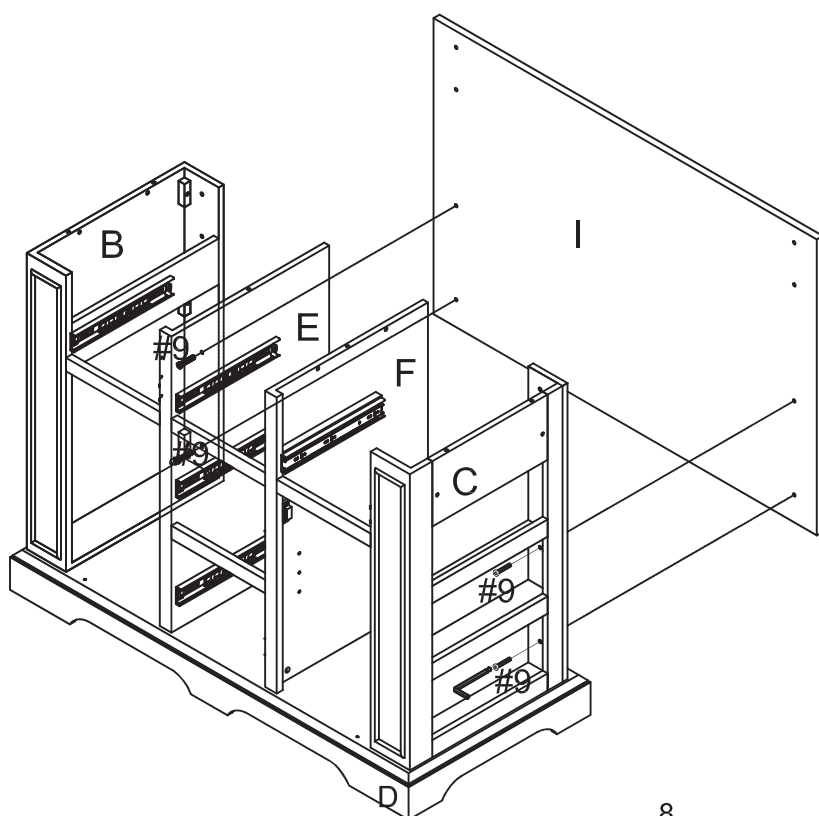Step 9. Carefully turn unit upright. Attach back panel (part I) to assembled unit (parts B, C, E & F) using short bolts (part #9) and allen wrench (part #14).




- | | | |
|-----|---|----|
| #9 |  | x4 |
| #14 |  | x1 |

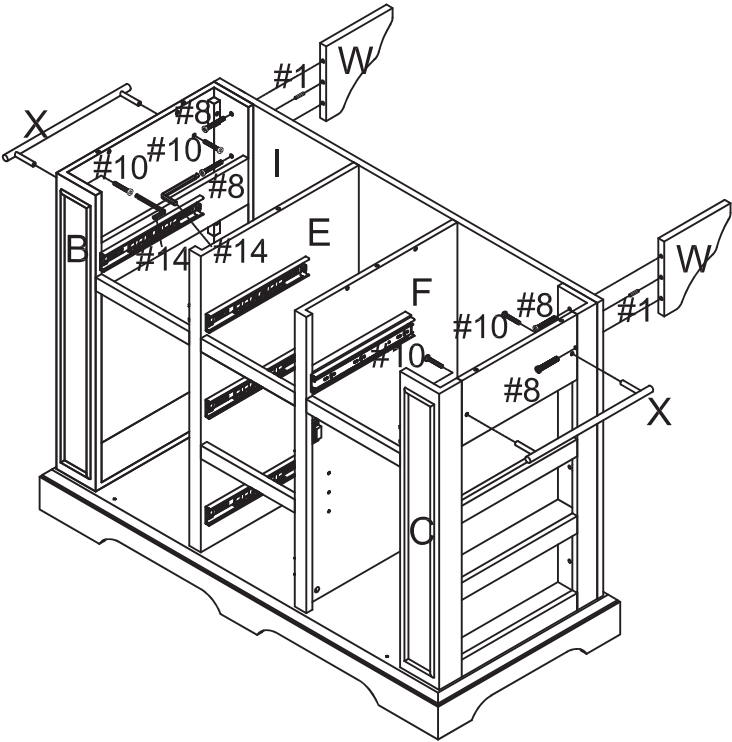Step 10. Attach towel bars (part X) to left panel (part B) and right panel (part C) using bolts (part #10) and allen wrench (part #14). Attach support panels (part W) to back panel (part I) using large wood dowels (part #1), long bolts (part #8) and allen wrench (part #14).



- #1  x2
- #8  x4
- #10  x4
- #14  x1

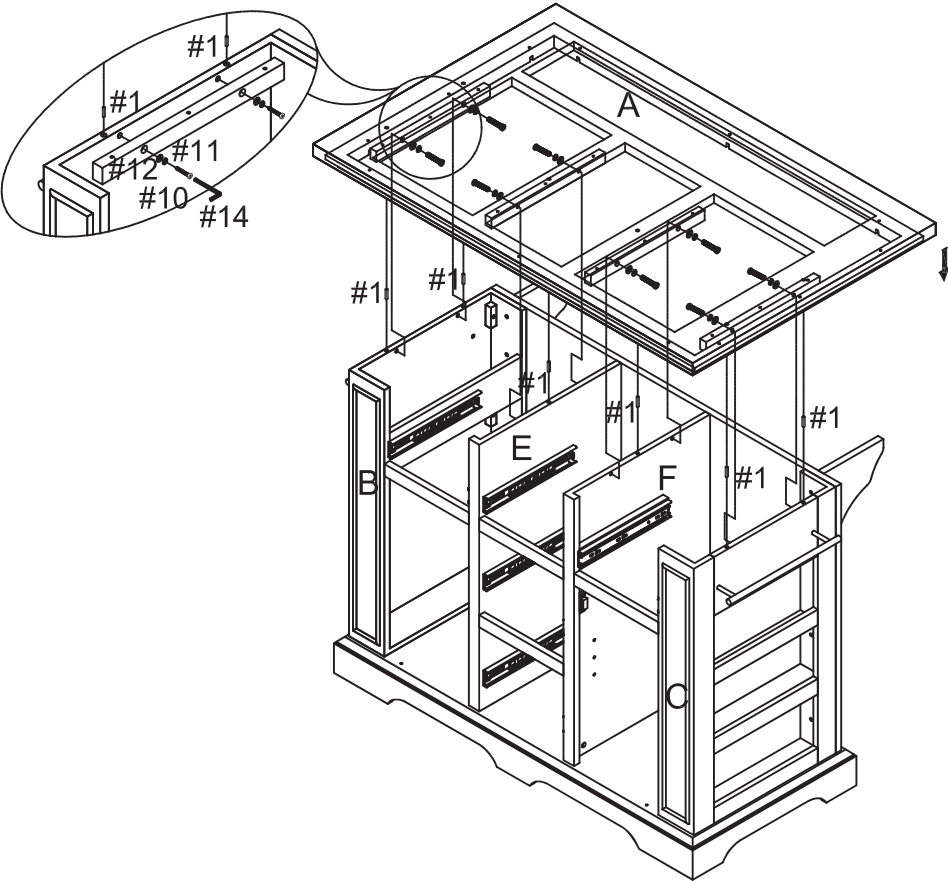
Step 11. Attach top panel (part A) to assembled unit (parts B, C, E, F & I) using large wood dowels (part #1), flat washers (part #12), spring washers (part #11), bolts (part #10) and allen wrench (part #14).




- #1  x6
- #10  x8
- #11  x8
- #12  x8
- #14  x1

Step 12. Slide assembled drawers into place.

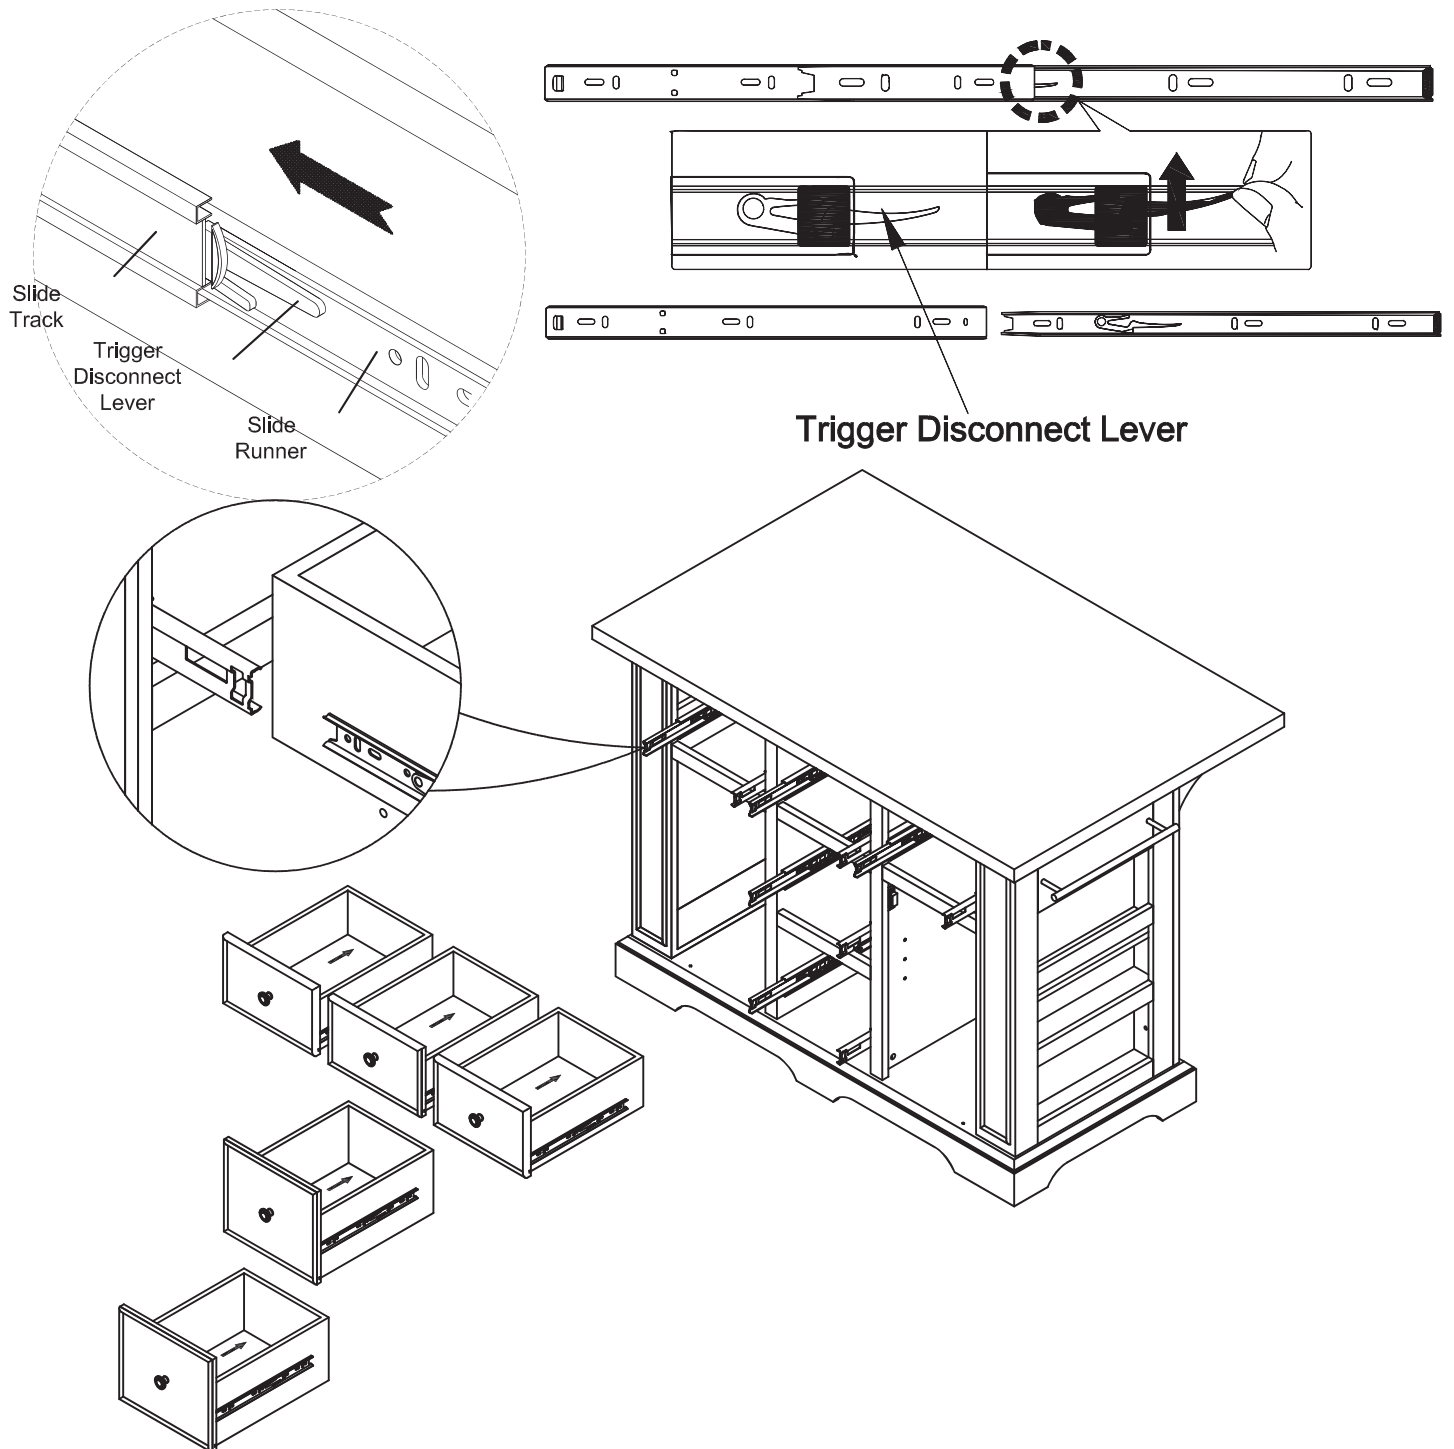Note: To release trigger disconnect levers push one side up and the other down.



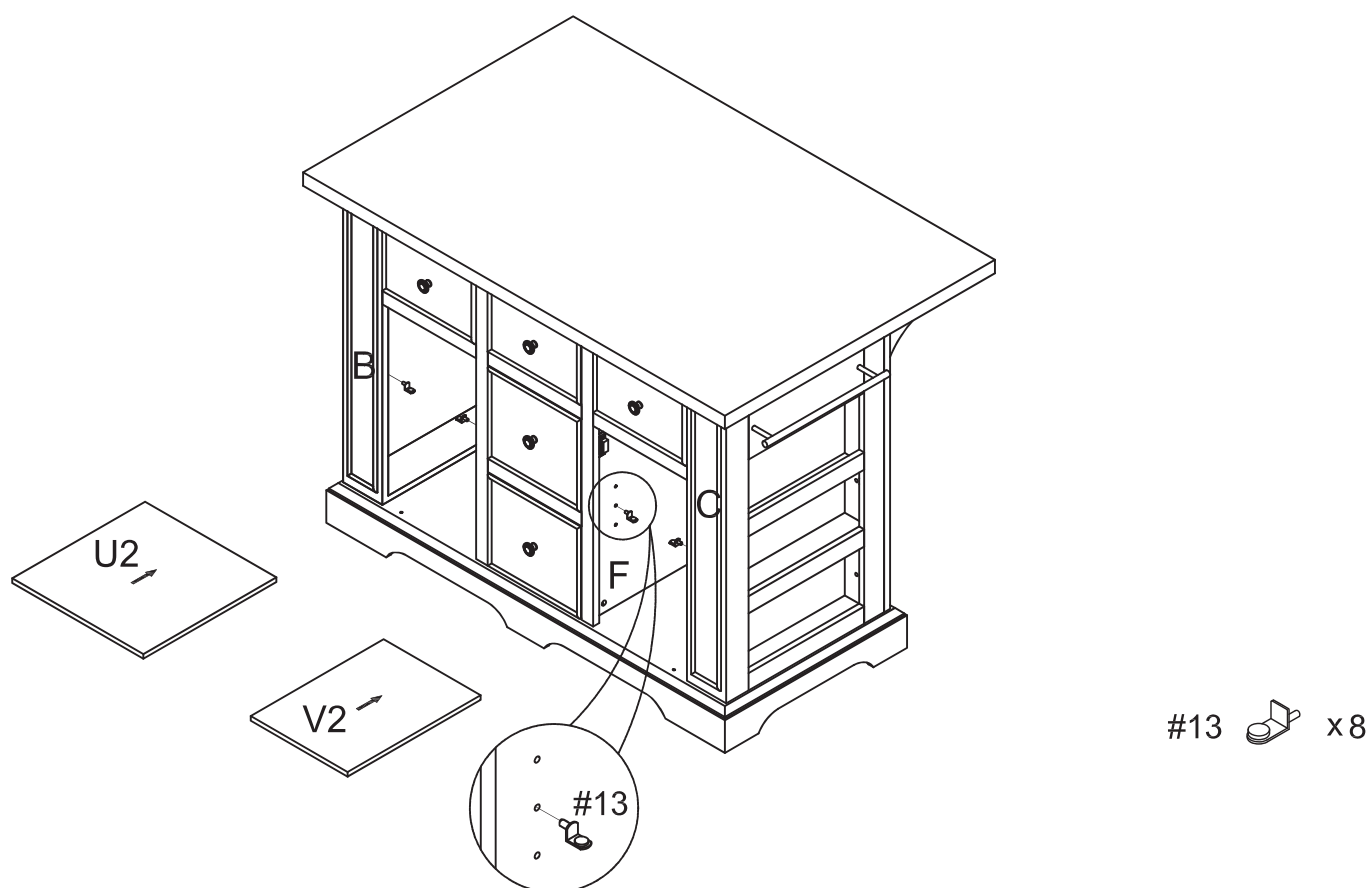Step 13. Place shelf holders (part #13) into desired position and then slide left adjustable shelf (part U2) and right adjustable shelf (part V2) into place.



Step 14. Attach door panels (parts S & T) by placing bottom pin hinges (pre-installed in door) in the pre-drilled holes of bottom panel (part D). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled holes of front rails (part G).

Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

