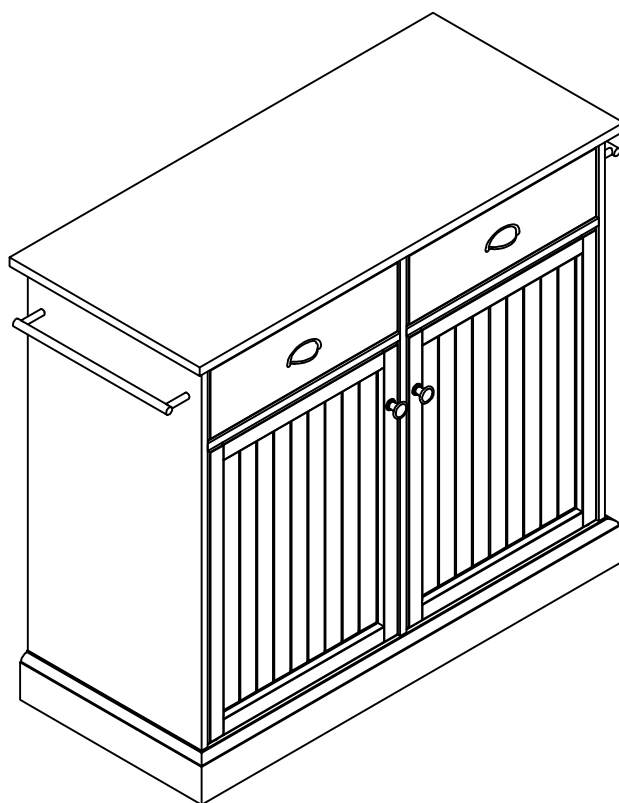



















CROSLEY

FURNITURE






Kitchen Island
CF3038



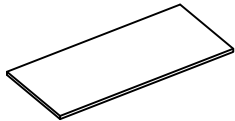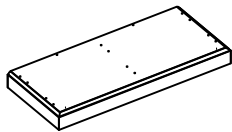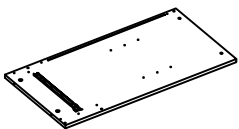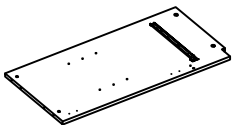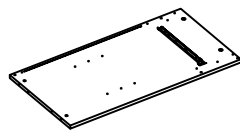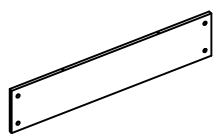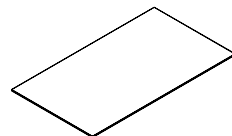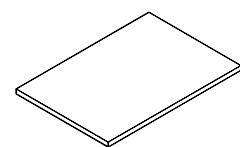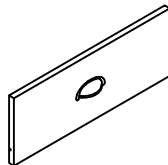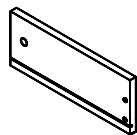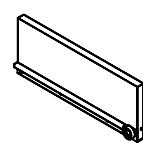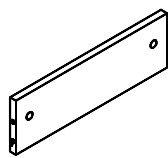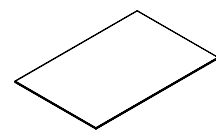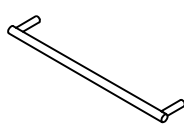PARTS LIST


A2	B2	C2	D2	E3
				
Top Panel 1 PC	Bottom Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Middle Partition Panel 1 PC
F2	G2	H2	I2	J2
				
Left Door 1 PC	Right Door 1 PC	Left Cross Rail 1 PC	Right Cross Rail 1 PC	Front Top Rail 1 PC
K3	L2	M2	N3	O3
				
Back Top Panel 1 PC	Back Bottom Rail 1 PC	Back Partition Rail 2 PCS	Back Panel 3 PCS	Adjustable Shelf 2 PCS
P2	Q3	R3	S3	T3
				
Drawer Front Panel 2 PCS	Drawer Left Panel 2 PCS	Drawer Right Panel 2 PCS	Drawer Back Panel 2 PCS	Drawer Bottom Panel 2 PCS
U2				
				
Towel Bar 2 PCS				

HARDWARE LIST

#1  8*30mm Short Wood Dowel 26 PCS (Extra 1)	#2  8*50mm Long Wood Dowel 1 PC (Extra 1)	#3  6*30mm Wood Dowel 8 PCS (Extra 1)	#4  Cam Lock 34 PCS (Extra 1)	#5  Cam Bolt 34 PCS (Extra 1)
#6  Barrel Nut 6 PCS (Extra 1)	#7  1/4*50mm Long Bolt 6 PCS (Extra 1)	#8  1/4*32mm Short Bolt 4 PCS (Extra 1)	#9  5/32*20mm Long Round Head Bolt 2 PCS (Extra 1)	#10  5/32*12mm Short Round Head Bolt 4 PCS (Extra 1)
#11  7*3*15mm Round Head Screw 8 PCS (Extra 1)	#12  8*4*32mm Flat Head Screw 1 PC (Extra 1)	#13  Shelf Holder 8 PCS (Extra 1)	#14  Magnet 4 PCS	#15  Knob 2 PCS
#16  Handle 2 PCS	#17  Cam Sticker 34 PCS (Extra 1)	#18  M4 Allen Wrench 1 PC		

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach cam bolts (part #5) into pre-drilled holes of panels (parts A2, C2, D2, E3, P2, Q3 & R3) using phillips head screwdriver.

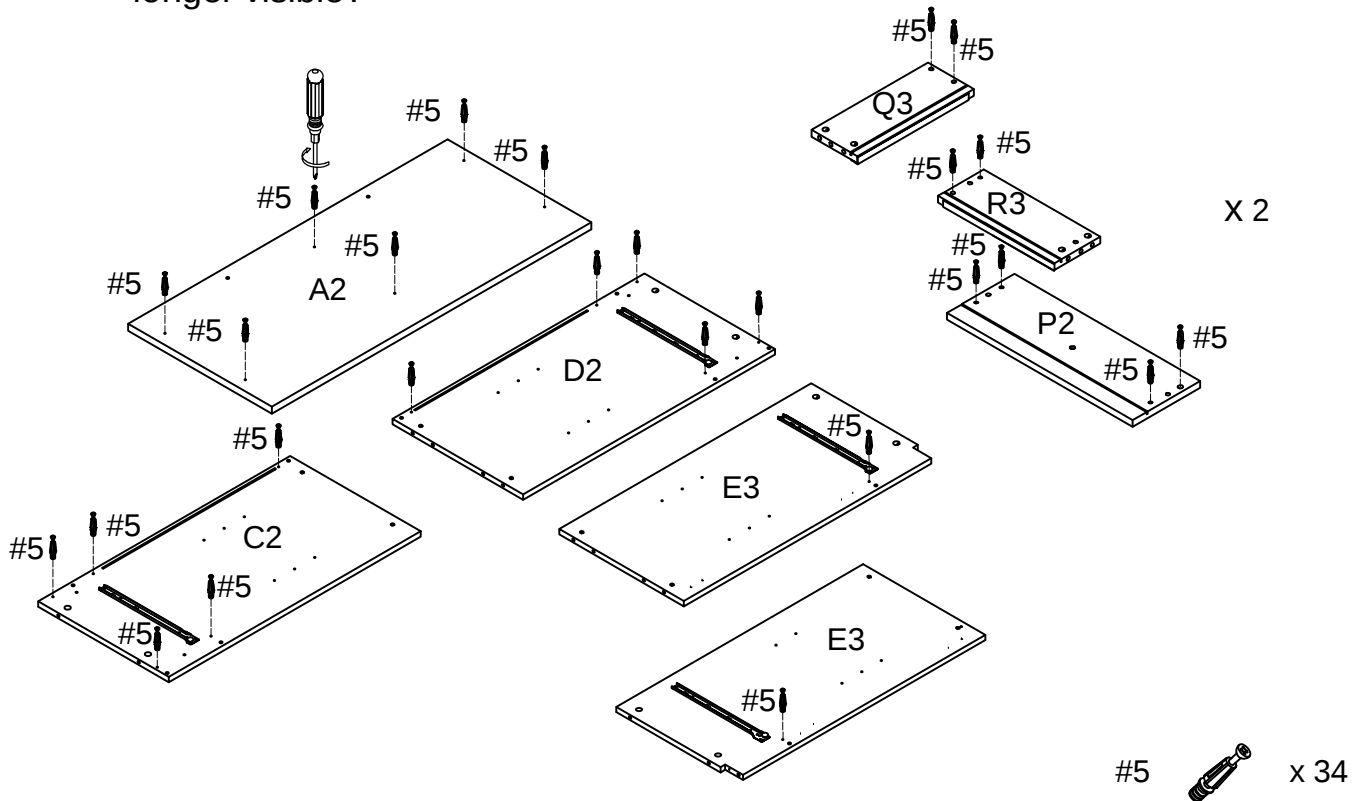Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.




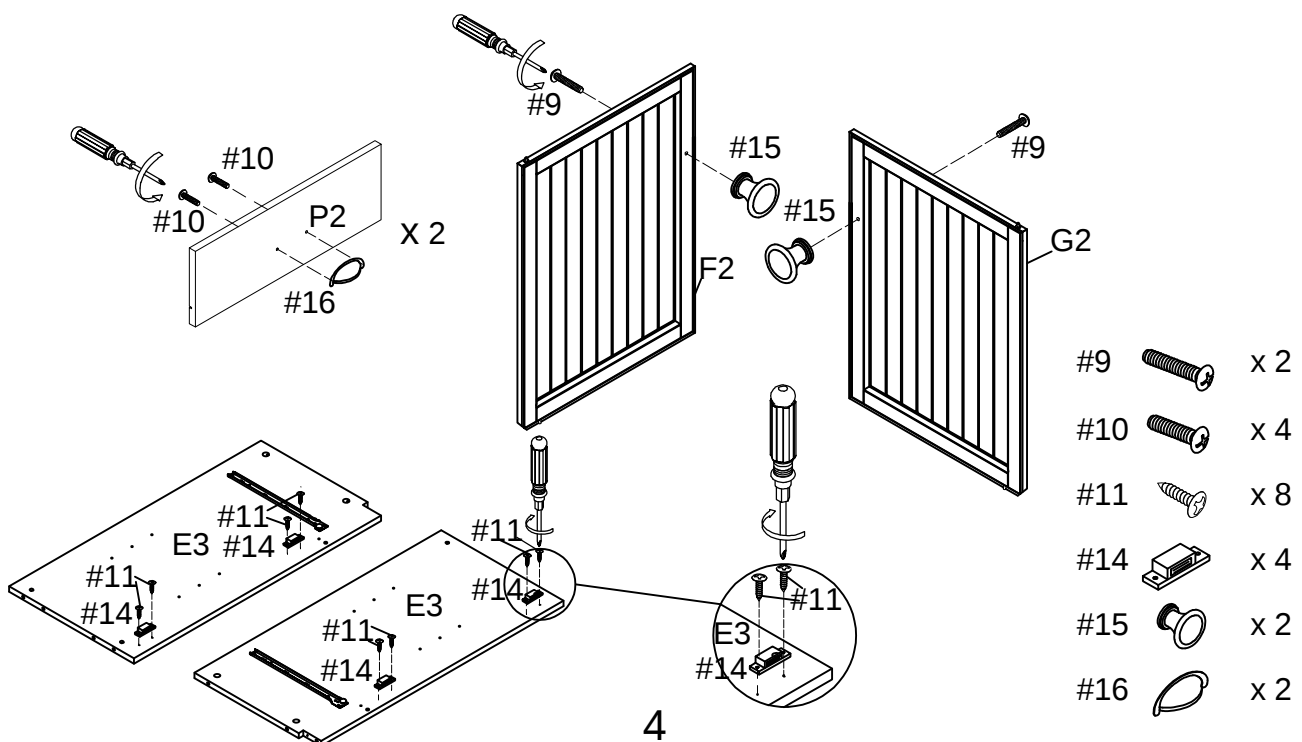Step 2. Attach knobs (part #15) to doors (parts F2 & G2) using long round head bolts (part #9) and phillips head screwdriver. Attach handles (part #16) to drawer front panels (part P2) using short round head bolts (part #10) and phillips head screwdriver. Attach magnets (part #14) to middle partition panel (part E3) using round head screws (part #11) and phillips head screwdriver.




Step 3. Attach drawer panels (parts Q3 & R3) to drawer back panel (part S3) using wood dowels (part #3), cam locks (part #4) and phillips head screwdriver. Slide drawer bottom panel (part T3) into grooves of assembled unit (parts Q3, R3 & S3). Attach drawer front panel (part P2) to assembled unit (parts Q3, R3 & T3) using wood dowels (part #3), cam locks (part #4) and phillips head screwdriver.

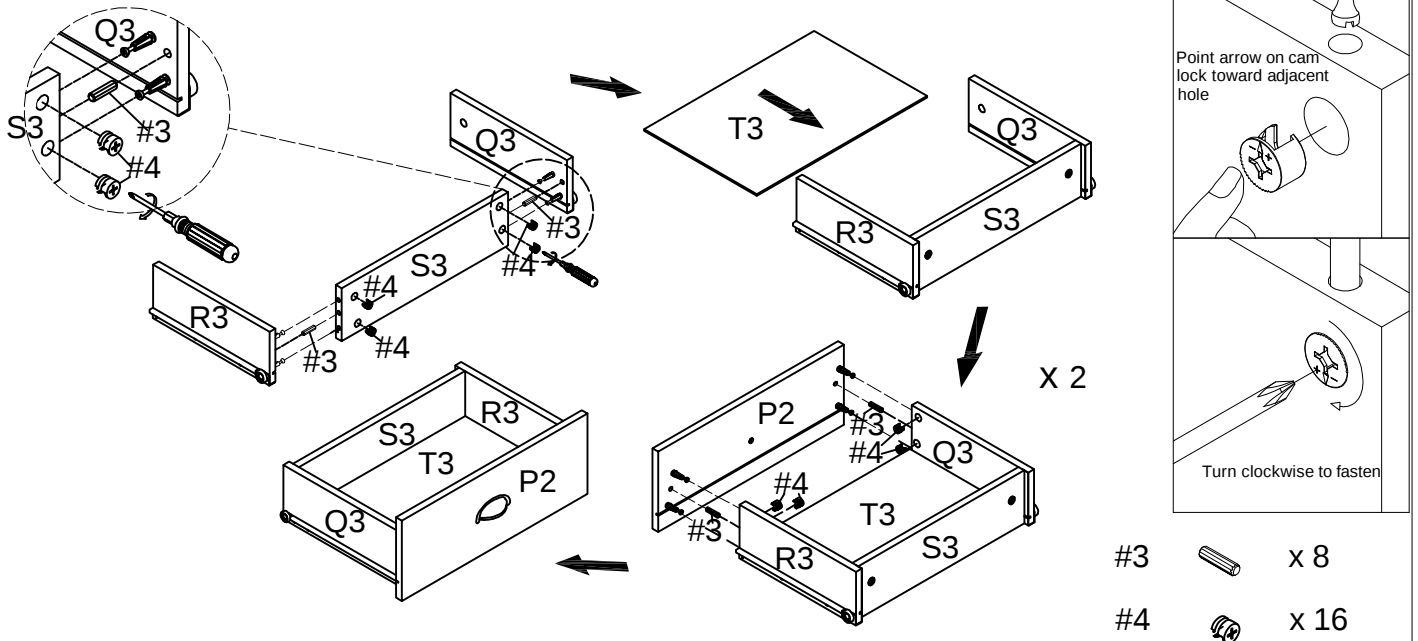Note: Cam locks must rotate a full 180°. See pictured insert.




Step 4. Attach front top rail (part J2) to middle partition panel (part E3) using flat head screw (part #12) and phillips head screwdriver. Attach cross rails (parts H2 & I2) to middle partition panel (part E3) using long wood dowel (part #2), cam locks (part #4) and phillips head screwdriver.

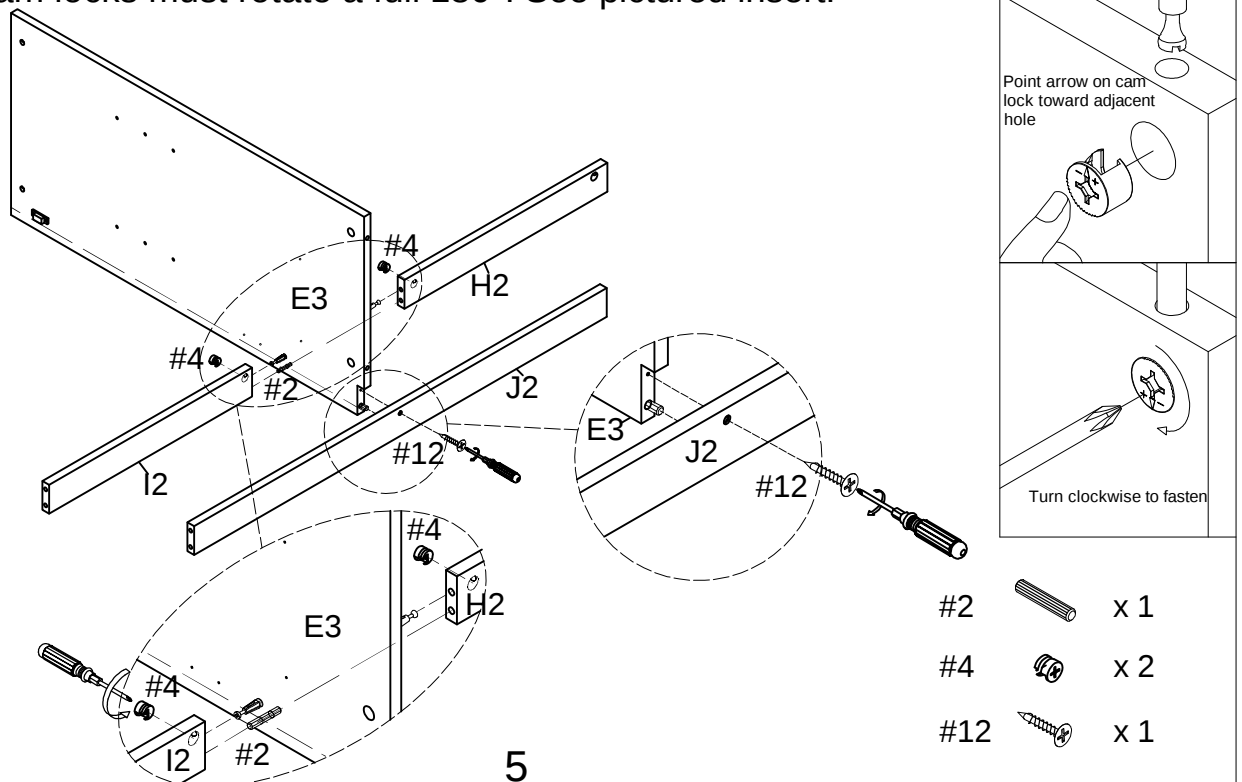Note: Cam locks must rotate a full 180°. See pictured insert.




Step 5. Attach back top panel (part K3) to left panel (part C2) using short wood dowel (part #1), cam locks (part #4) and phillips head screwdriver. Attach back partition rails (part M2) to back top panel (part K3) using short wood dowels (part #1). Slide back panels (part N3) into grooves of assembled unit (parts C2, K3 & M2).

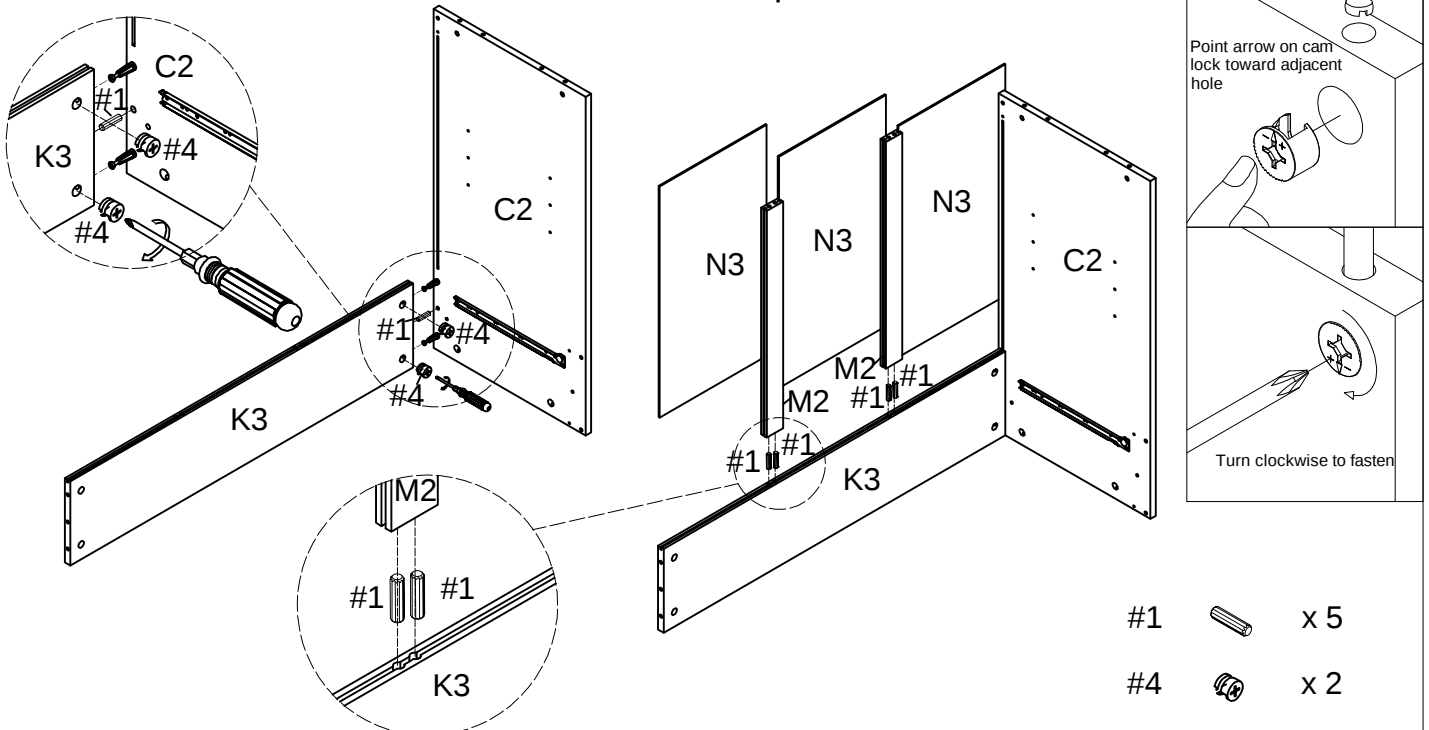Note: Cam locks must rotate a full 180°. See pictured insert.





Step 6. Attach back bottom rail (part L2) to assembled unit (parts C2, M2 & N3) using short wood dowels (part #1), cam lock (part #4) and phillips head screwdriver. Attach assembled unit (parts E2, H2 & J2) to left panel (part C2) using short wood dowels (part #1), cam locks (part #4) and phillips head screwdriver.

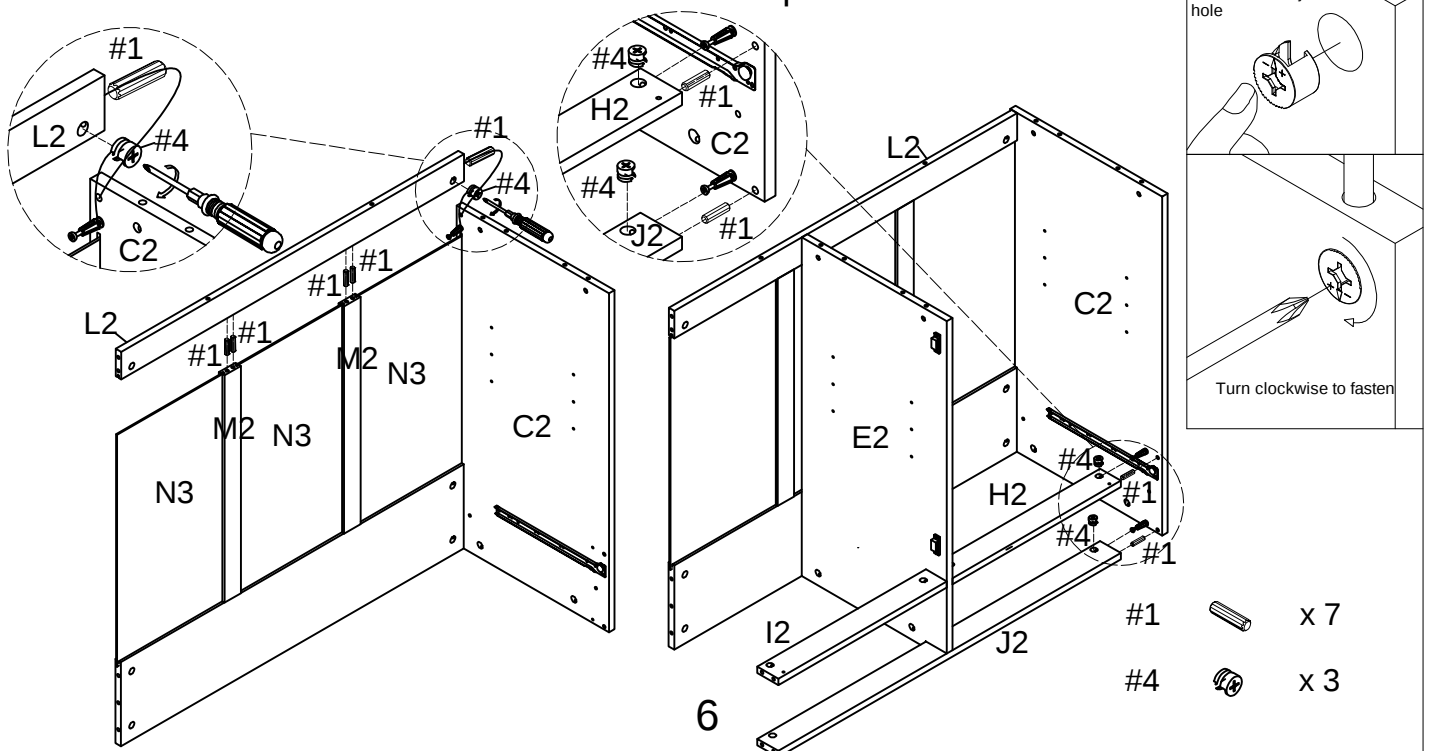Note: Cam locks must rotate a full 180°. See pictured insert.



Step 7. Attach right panel (part D2) to assembled unit (parts I2, J2, K3, L2 & N3) using short wood dowels (part #1), cam locks (part #4) and phillips head screwdriver.

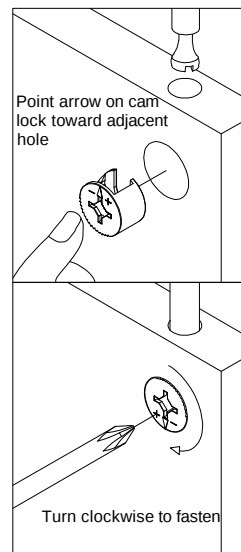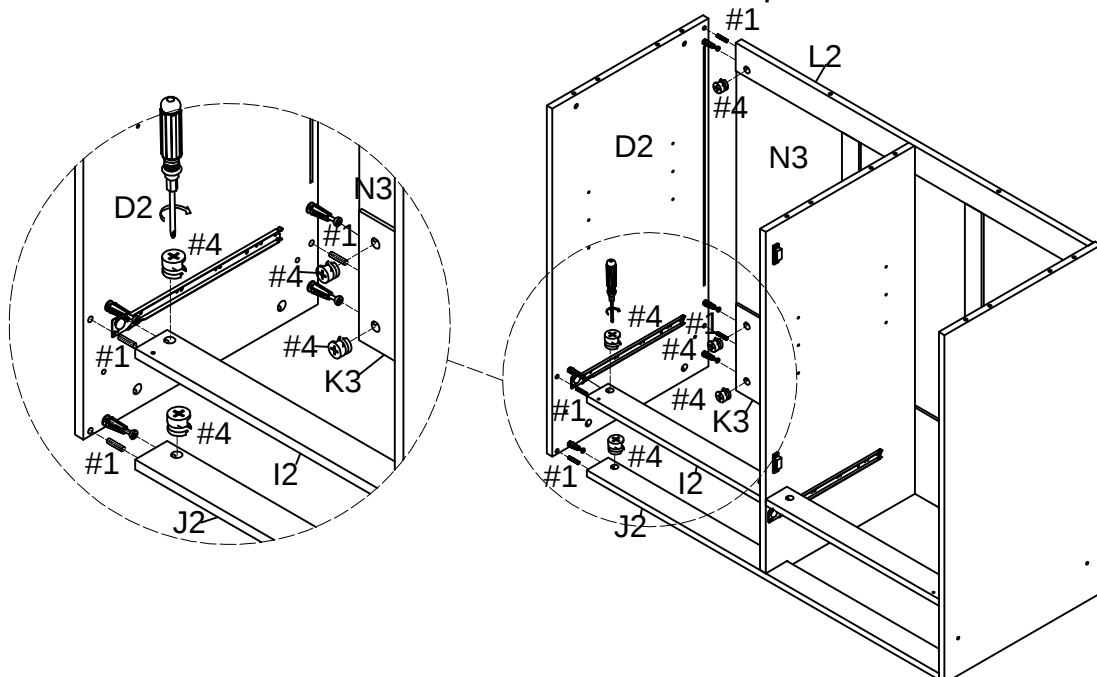
Note: Cam locks must rotate a full 180°. See pictured insert.



#1  x 4

#4  x 5

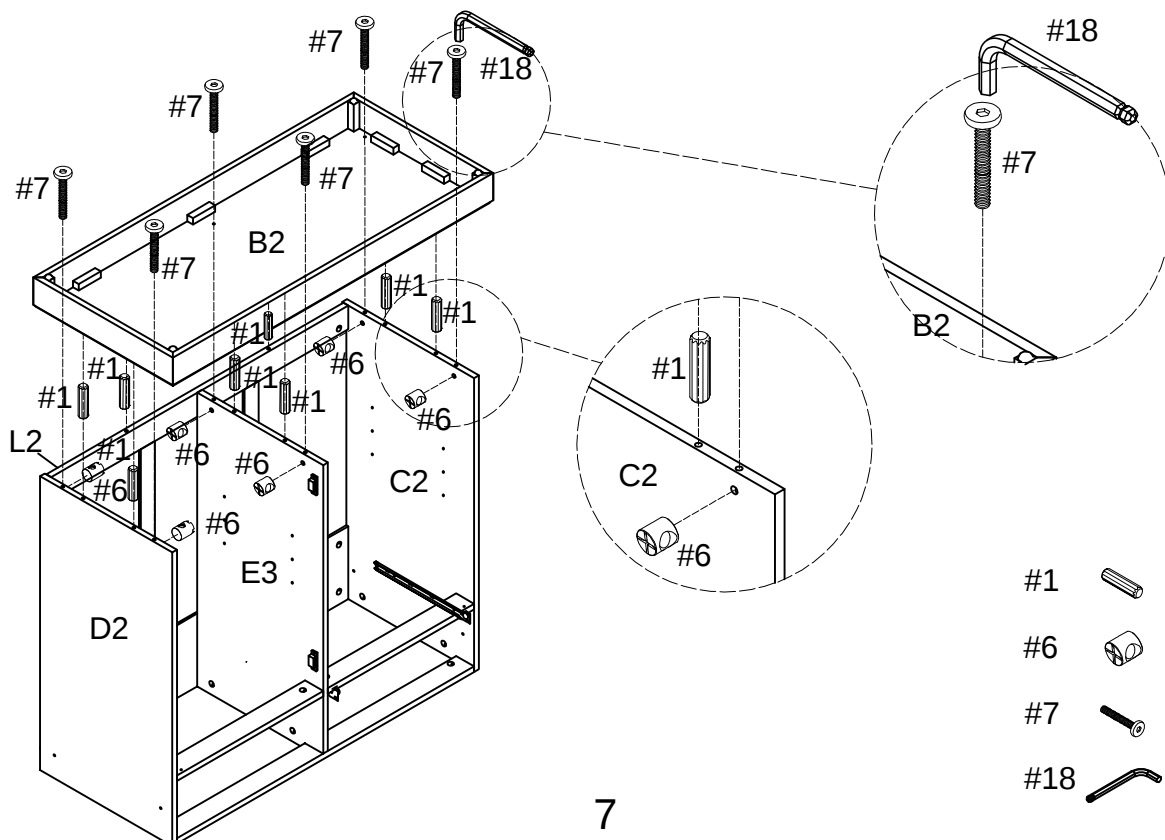Step 8. Attach bottom panel (part B2) to assembled unit (parts C2, D2, E3 & L2) using short wood dowels (part #1), barrel nuts (part #6), long bolts (part #7) and allen wrench (part #18).




#1  x 8

#6  x 6

#7  x 6

#18  x 1


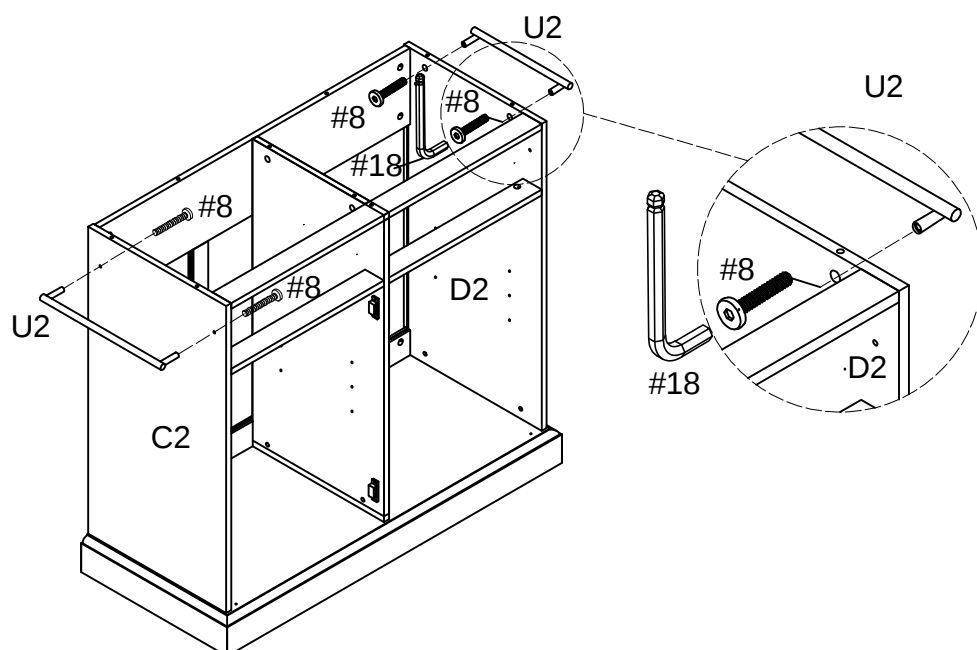
Step 9. Carefully turn unit upright. Attach towel bars (part U2) to panels (parts C2 & D2) using short bolts (part #8) and allen wrench (part #18).



#8  x 4
#18  x 1


Step 10. Attach top panel (part A2) to assembled unit (parts C2, D2, E3 & K3) using short wood dowels (part #1), cam locks (part #4) and phillips head screwdriver.

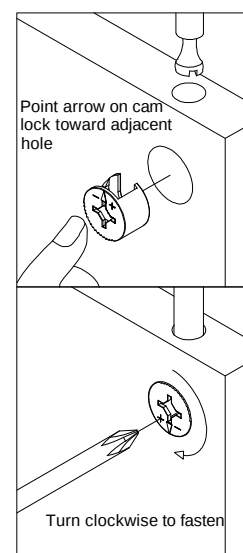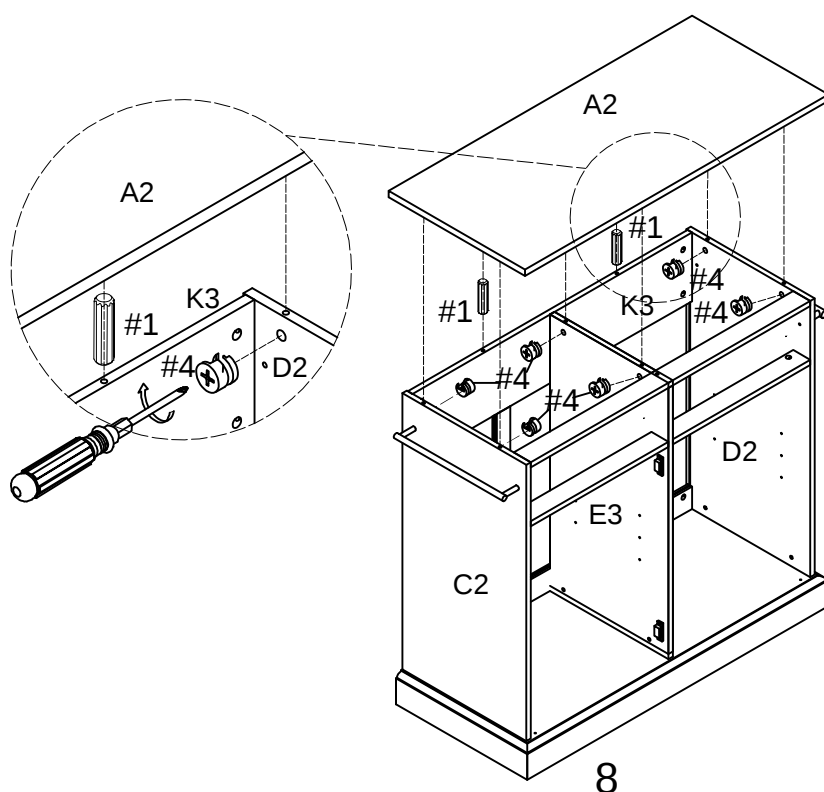Note: Cam locks must rotate a full 180°. See pictured insert.




#1  x 2
#4  x 6

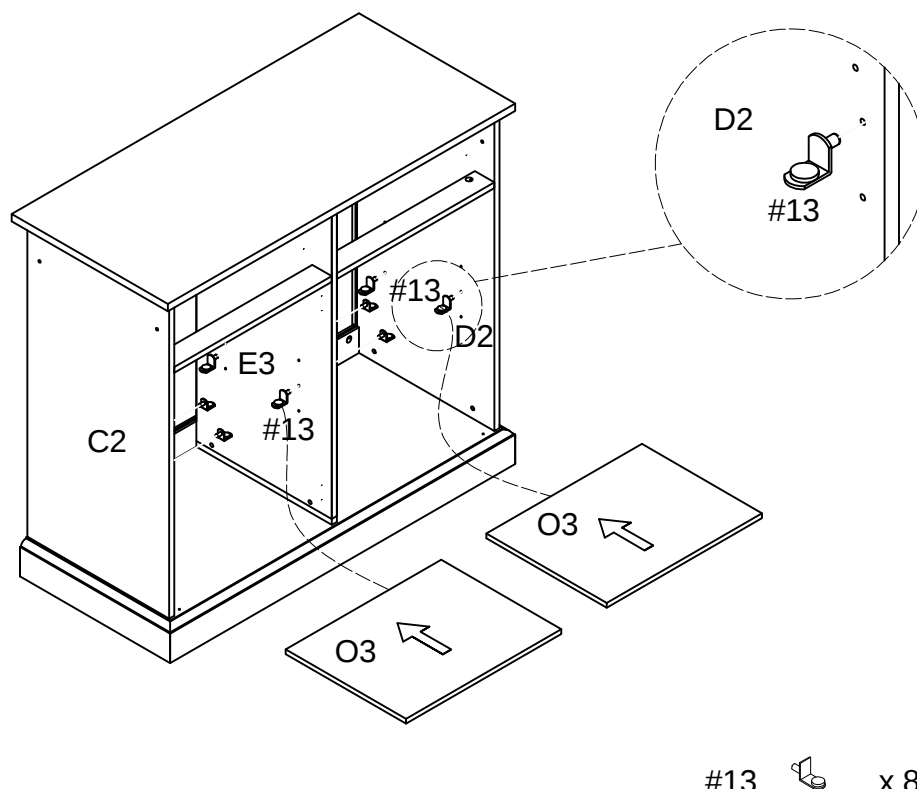Step 11. Place shelf holders (part #13) into desired position and then slide adjustable shelves (part O3) into place.





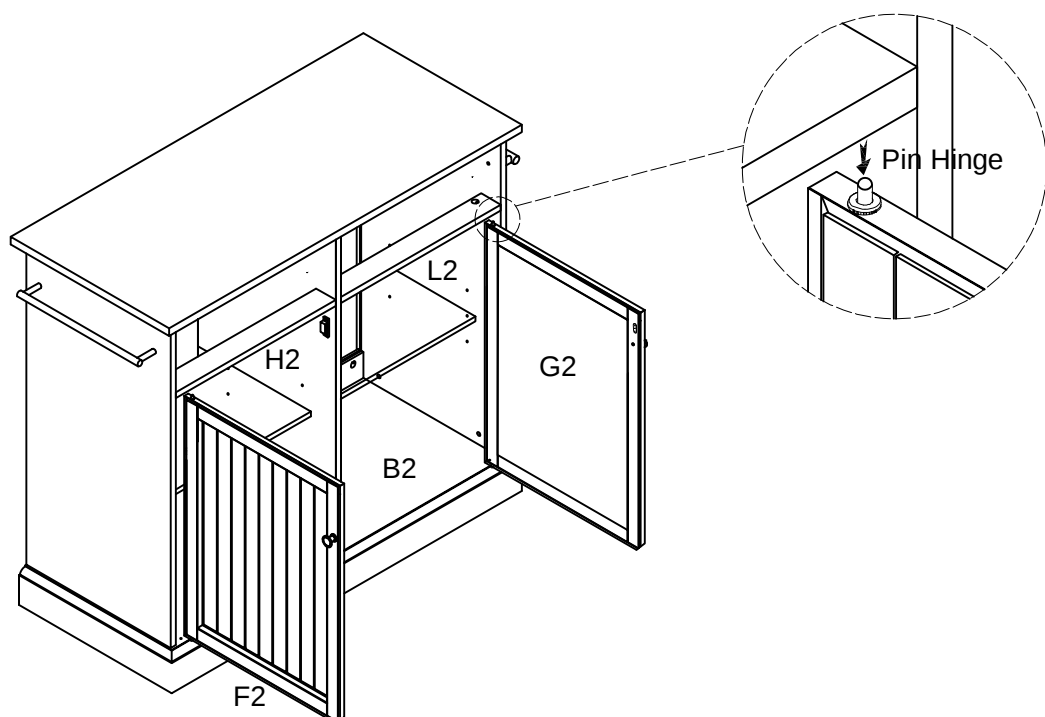Step 12. Attach doors (parts F2 & G2) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part B2). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of cross rails (parts H2 & I2).



Step 13. Slide assembled drawers into place. Using cam stickers (part #17) cover all cam locks (part #4).

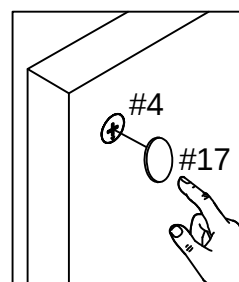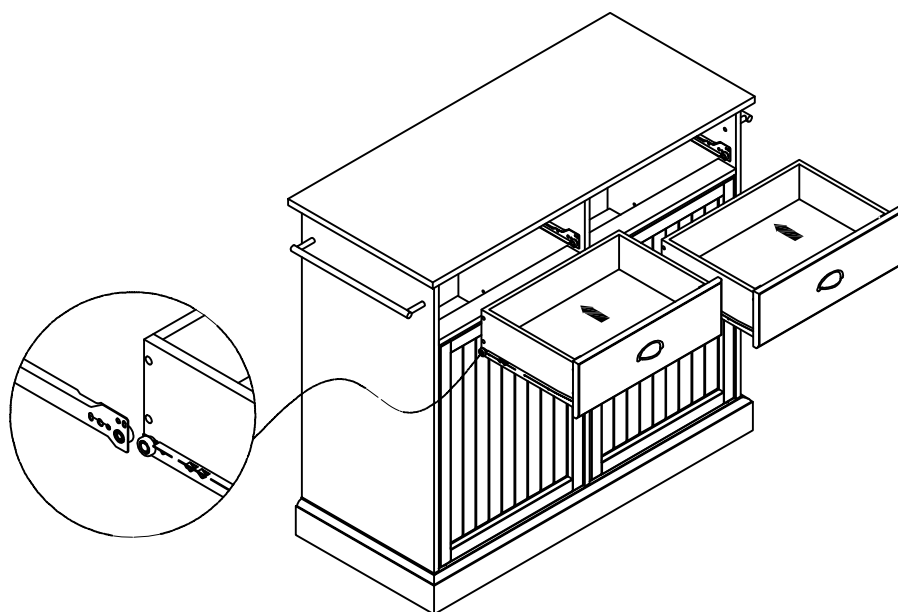NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



#17  x 34

