









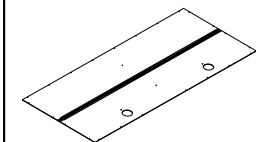
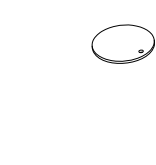


CROSLEY
FURNITURE

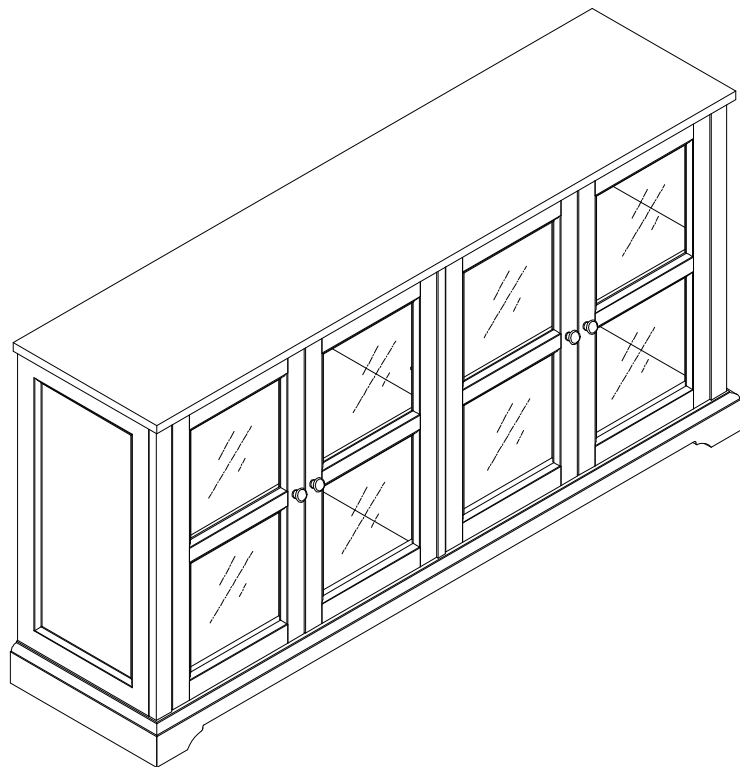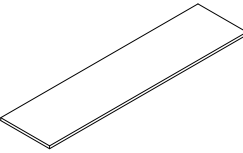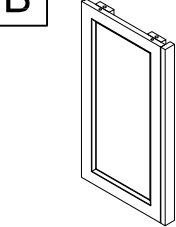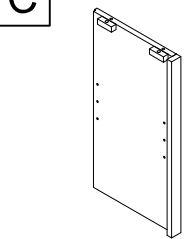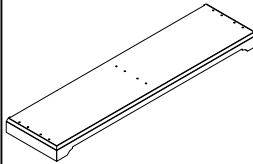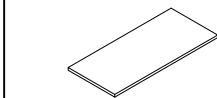

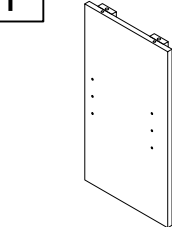

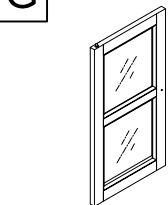

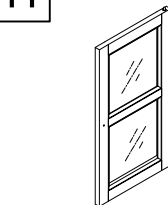





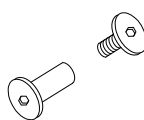

Glass Door Sideboard
CF4221



PART LIST

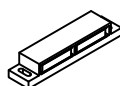
<div data-bbox="148 136 188 185">A</div> 	<div data-bbox="408 136 448 185">B</div> 	<div data-bbox="668 136 708 185">C</div> 	<div data-bbox="928 136 968 185">D</div> 	<div data-bbox="1189 136 1228 185">E</div> 
<div data-bbox="193 421 341 456">Top Panel</div> <div data-bbox="229 495 304 530">1 PC</div>	<div data-bbox="456 421 604 456">Left Panel</div> <div data-bbox="494 495 569 530">1 PC</div>	<div data-bbox="708 421 879 456">Right Panel</div> <div data-bbox="746 495 821 530">1 PC</div>	<div data-bbox="960 421 1155 456">Bottom Panel</div> <div data-bbox="1023 495 1098 530">1 PC</div>	<div data-bbox="1203 421 1437 456">Adjustable Shelf</div> <div data-bbox="1272 495 1370 530">2 PCS</div>
<div data-bbox="148 539 188 589">F</div> 	<div data-bbox="408 539 448 589">G</div> 	<div data-bbox="668 539 708 589">H</div> 	<div data-bbox="928 539 968 589">I</div> 	<div data-bbox="1189 539 1228 589">J</div> 
<div data-bbox="169 817 379 853">Partition Panel</div> <div data-bbox="223 891 298 927">1 PC</div>	<div data-bbox="472 817 608 853">Left Door</div> <div data-bbox="488 891 587 927">2 PCS</div>	<div data-bbox="719 817 879 853">Right Door</div> <div data-bbox="743 891 842 927">2 PCS</div>	<div data-bbox="963 817 1142 853">Support Leg</div> <div data-bbox="1018 891 1093 927">1 PC</div>	<div data-bbox="1246 817 1410 853">Back Panel</div> <div data-bbox="1289 891 1364 927">1 PC</div>
<div data-bbox="148 936 188 985">K</div>  <div data-bbox="225 1216 320 1252">Cover</div> <div data-bbox="225 1290 325 1326">2 PCS</div>				

HARDWARE LIST

#1	#2	#3	#4	#5
				
ϕ1/4"x1-1/4"	ϕ1/4"	ϕ1/4"x16mm	ϕ8x30mm	
Bolt	Spring Washer	Flat Washer	Wood Dowel	Knob
12 PCS (Extra 1)	12 PCS (Extra 1)	12 PCS (Extra 1)	12 PCS (Extra 1)	4 PCS
#6	#7	#8	#9	#10
				
ϕ5/32x25mm		ϕ3x14mm		ϕ3x14mm
Round Head Bolt	Double Magnet	Round Head Screw	Shelf Holder	Screw
4 PCS (Extra 1)	2 PCS	4 PCS (Extra 1)	8 PCS (Extra 1)	26 PCS (Extra 1)
#11	#12	#13	#14	
				
M 4			M2	
Allen Wrench	Safety Strap Kit	Binding Post	Small Allen Wrench	
1 PC	1 SET	2 SET	1 PC	

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach knobs (part #5) to doors (parts G & H) using round head bolts (part #6) and phillips head screwdriver. Attach double magnets (part #7) to top panel (part A) using round head screws (part #8) and phillips head screwdriver.

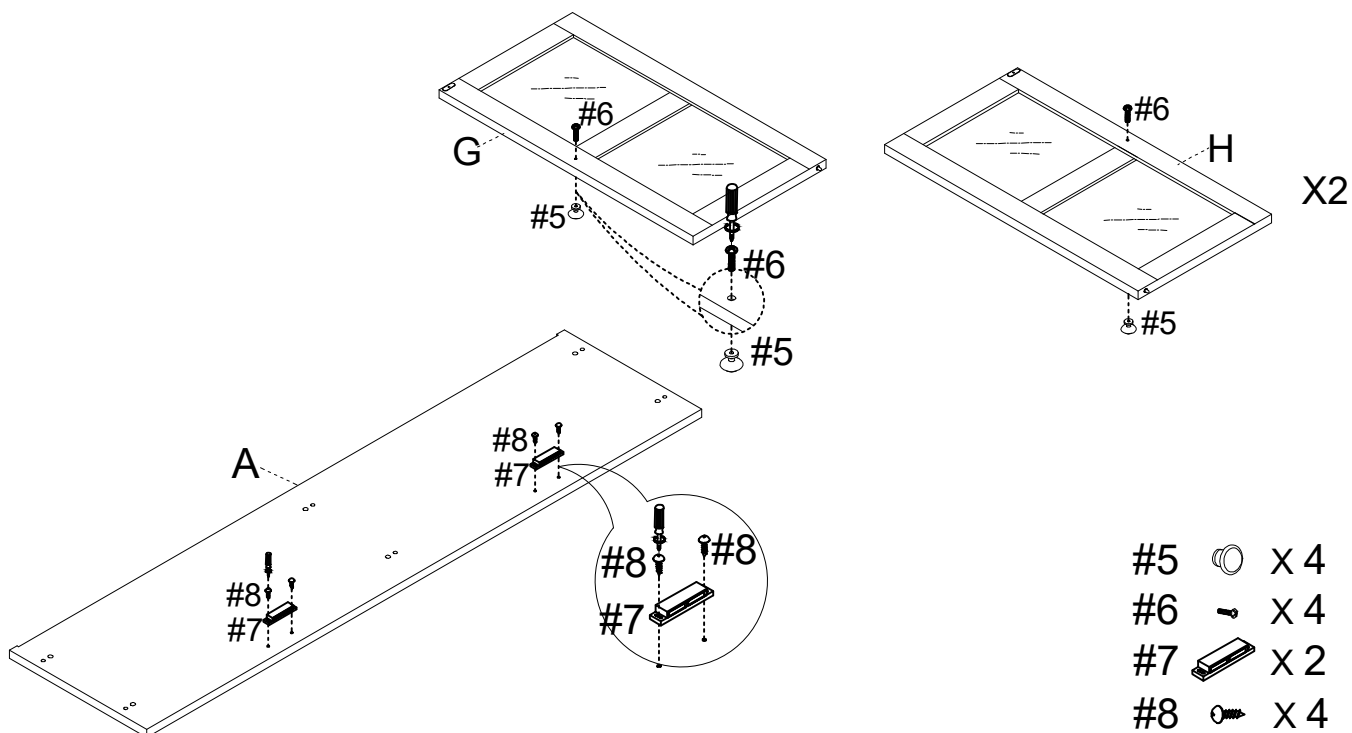


Step 2. Attach support leg (part I) to bottom panel (part D).

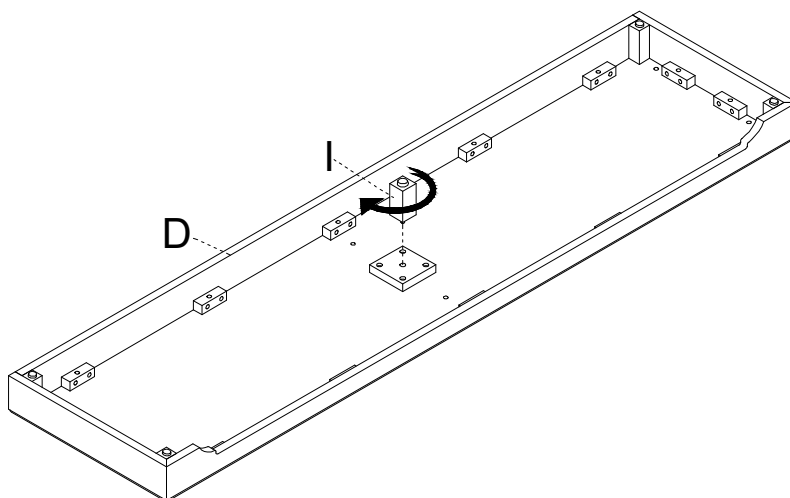


Step 3. Attach bottom panel (part D) to panels (parts B, C & F) using wood dowels (part #4), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #11).

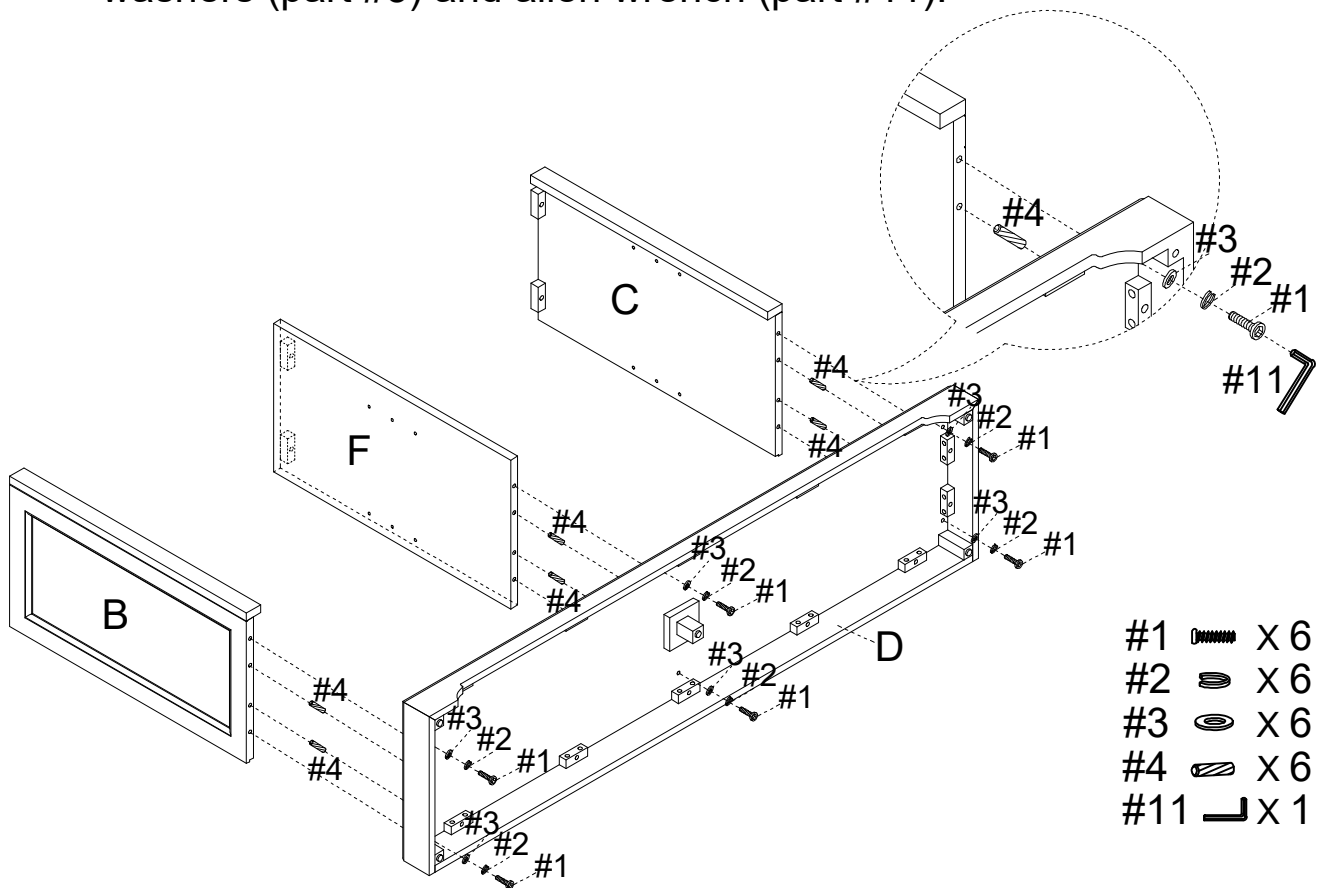


Step 4. Carefully turn unit upright. Attach top panel (part A) to assembled unit (parts B, C & F) using wood dowels (part #4), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #11).

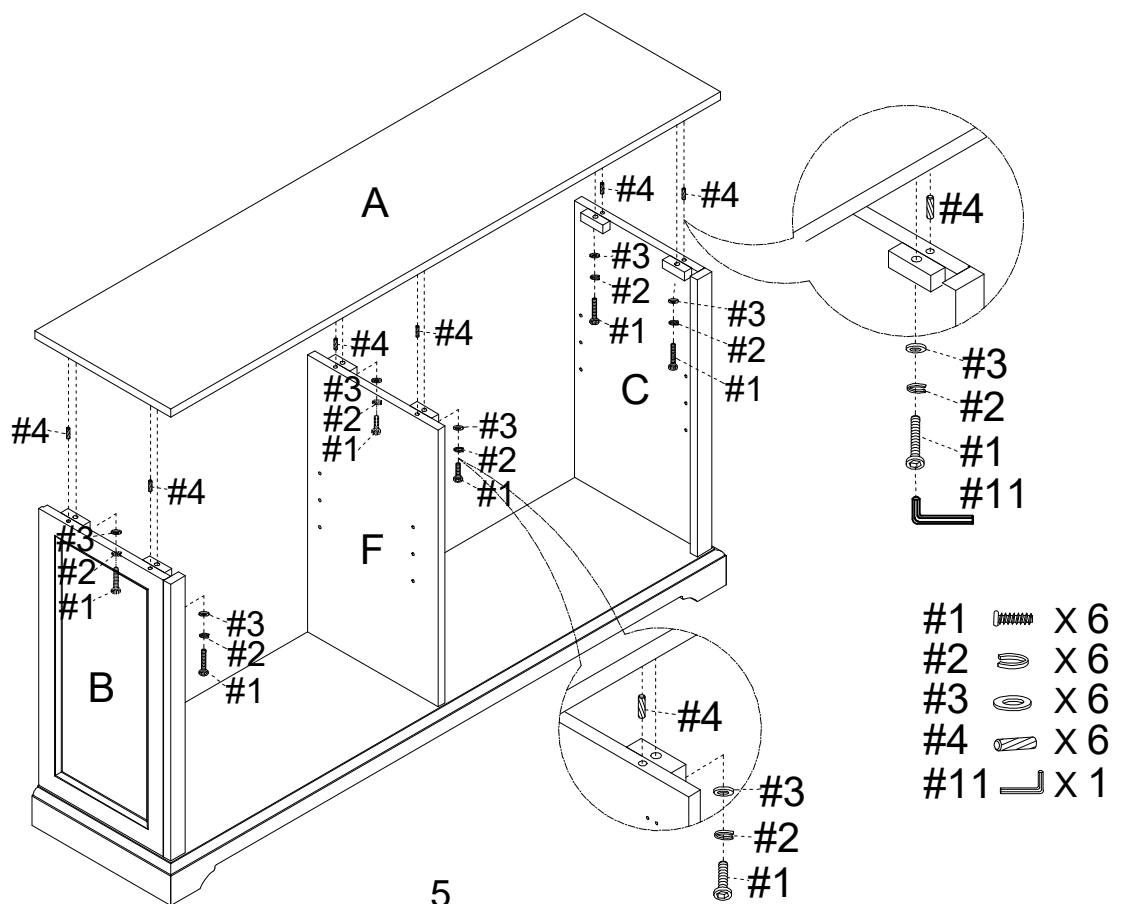

Step 5. Attach covers (part K) to back panel (part J) using binding posts (part #13) and small allen wrench (part #14).
Attach back panel (part J) to assembled unit (parts A, B, C, D & F) using screws (part #10) and phillips head screwdriver.

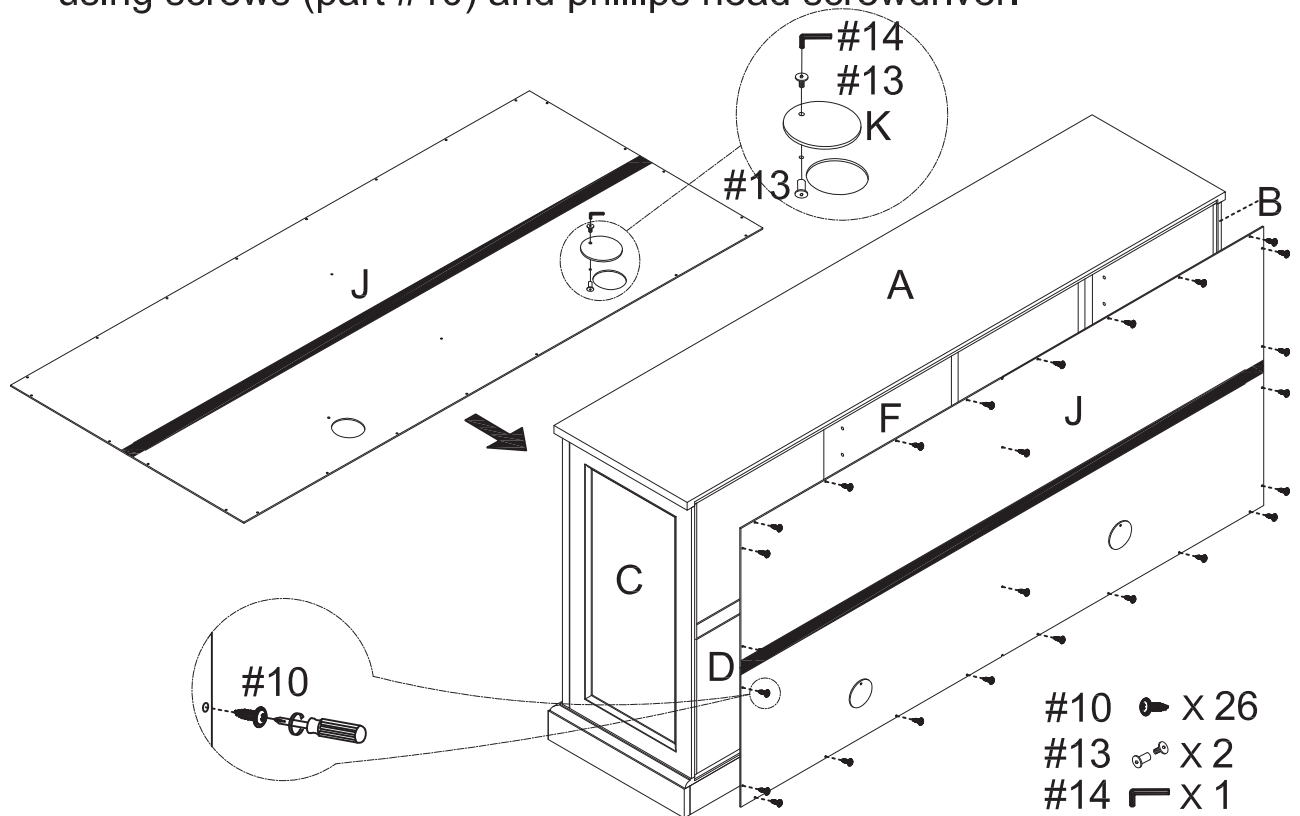

Step 6. Place shelf holders (part #9) into desired position and slide adjustable shelves (part E) into place.

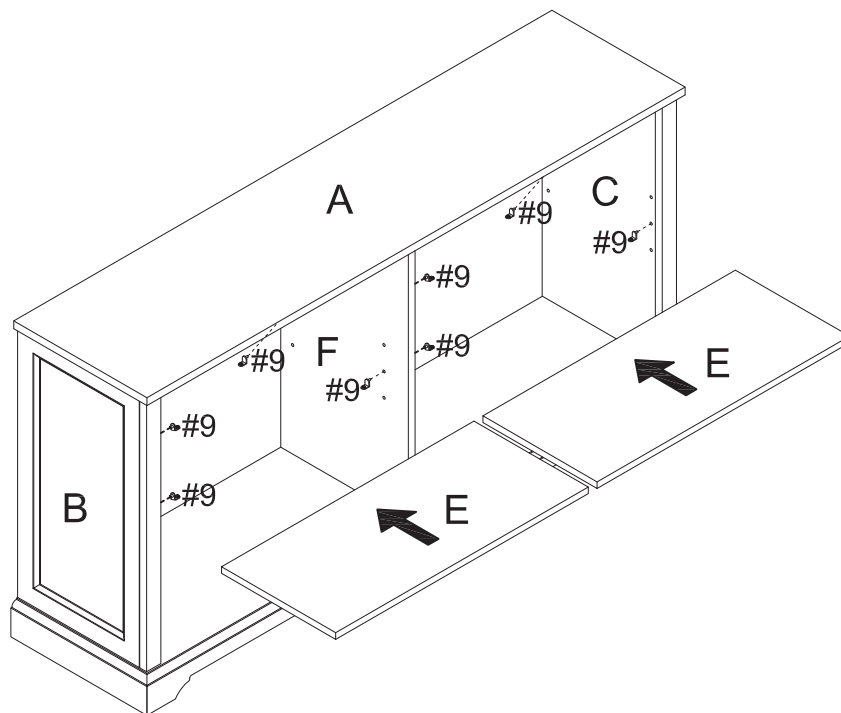


#9 X 8







Step 7. Attach doors (parts G & H) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).

Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

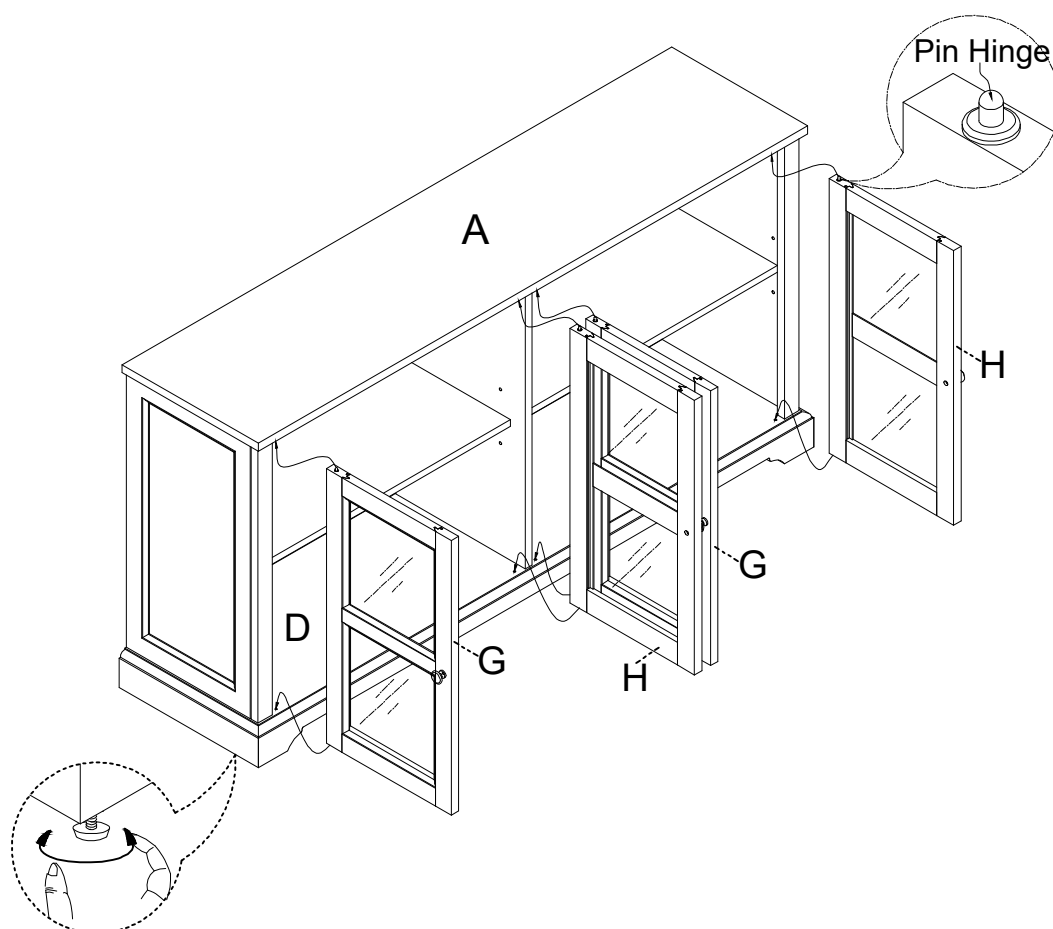Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #12) must be installed to prevent tipping, damage and/or injury.




#12	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	5/8"x ϕ 3xD8 Short Screw 1 PC	1-1/2"x ϕ 4xD8 Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

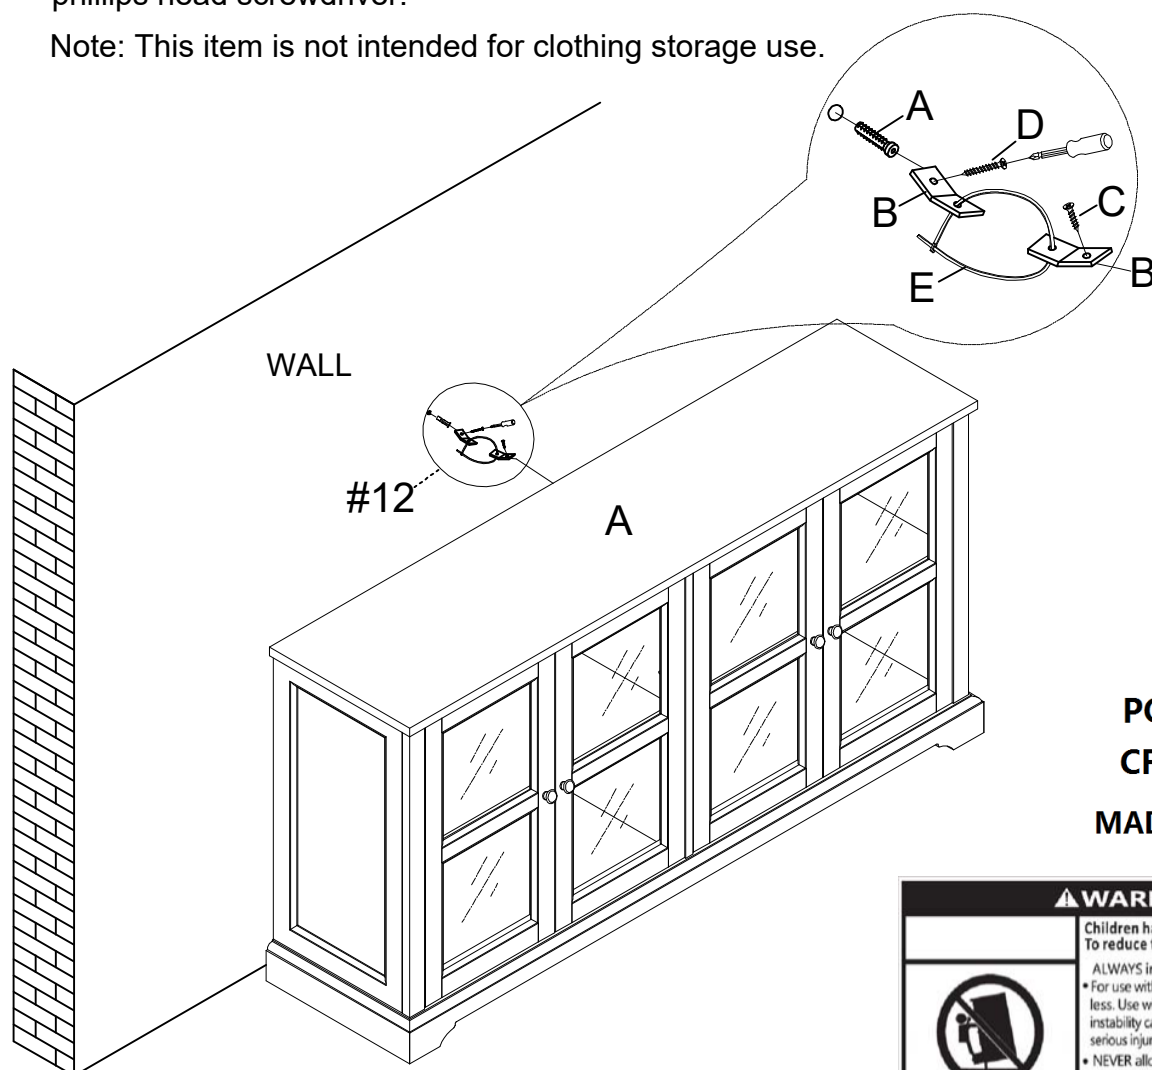

PO#68310

CF4221-BL

MADE IN CHINA

