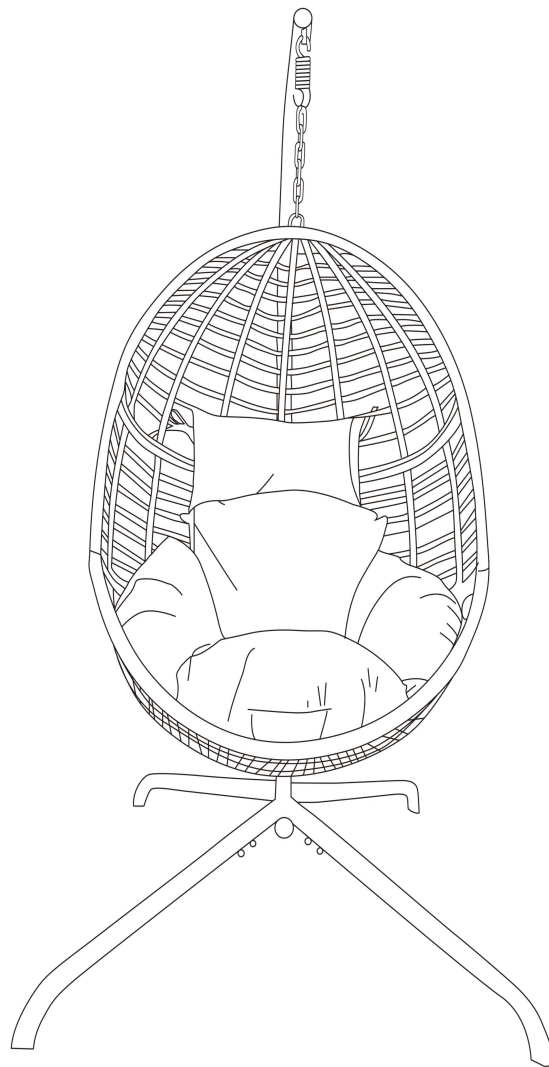


CROSLEY



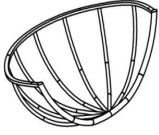

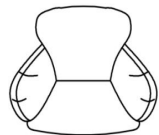



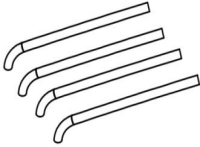






FURNITURE

Indoor Outdoor Wicker Hanging Egg Chair










CO7272/ CO7273/ CO7274



PART LIST

A		B		C		D		E	
Top Panel 1 PC		Middle Panel 1 PC		Bottom Panel 1 PC		Pillow 1 PC		Seat Cushion 1 PC	
F		G		H		I		J	
X Frame 1 PC		Middle Pole 1 PC		Top Pole 1 PC		Steel Leg 4 PCS		Hanging Rod 1 PC	
K		L		M		N		O	
Spring 1 PC		Chain 1 PC		Screw Lock 1 PC		Safety Strap 1 PC		Cover 2 PCS	

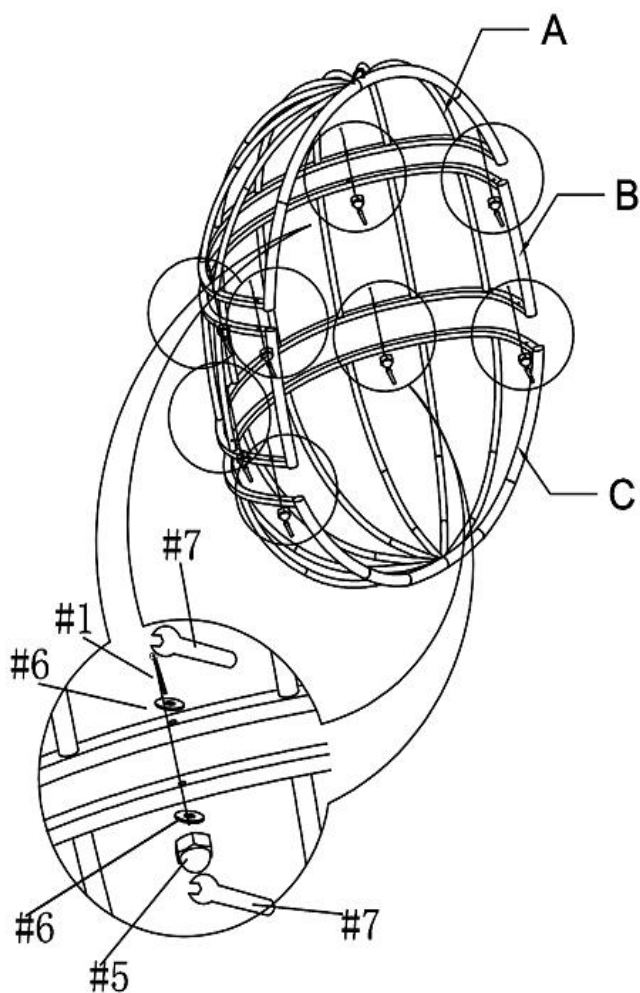
HARDWARE LIST





#1		#2		#3		#4		#5	
M6*35mm		M8*50mm		M8*10mm		M8mm		M6mm	
Bolt 8 PCS (Extra 1)		Long Bolt 4 PCS (Extra 1)		Short Bolt 8 PCS (Extra 1)		Nut 4 PCS (Extra 1)		Bolt Cap 8 PCS (Extra 1)	
#6		#7		#8		#9			
Flat Washer 16 PCS (Extra 1)		M6mm Wrench 2 PCS		M8mm Large Wrench 1 PC		M8mm Allen Wrench 1 PC			

Step 1. 1. Lay bottom panel (part C) down on a soft flat surface, such as carpet, as shown below. Attach middle panel (part B) to bottom panel (part C) using bolts (part #1), flat washers (part #6), bolt caps (part #5) and wrenches (part #7).

2. Attach top panel (part A) to middle panel (part B) using bolts (part #1), flat washers (part #6), bolt caps (part #5) and wrenches (part #7).

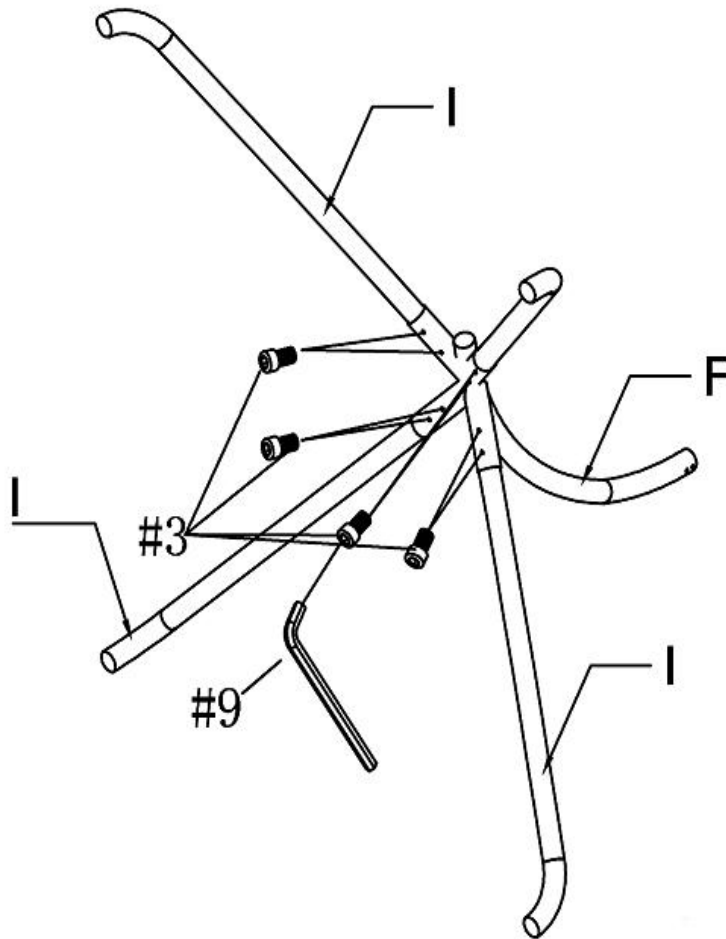
NOTE: Please do not fully tighten bolts until unit is fully assembled.



#1		x 8
#5		x 8
#6		x 16
#7		x 2

Step 2. Connect steel legs (part I) to X-frame (part F) using short bolts (part #3) and allen wrench (part #9).

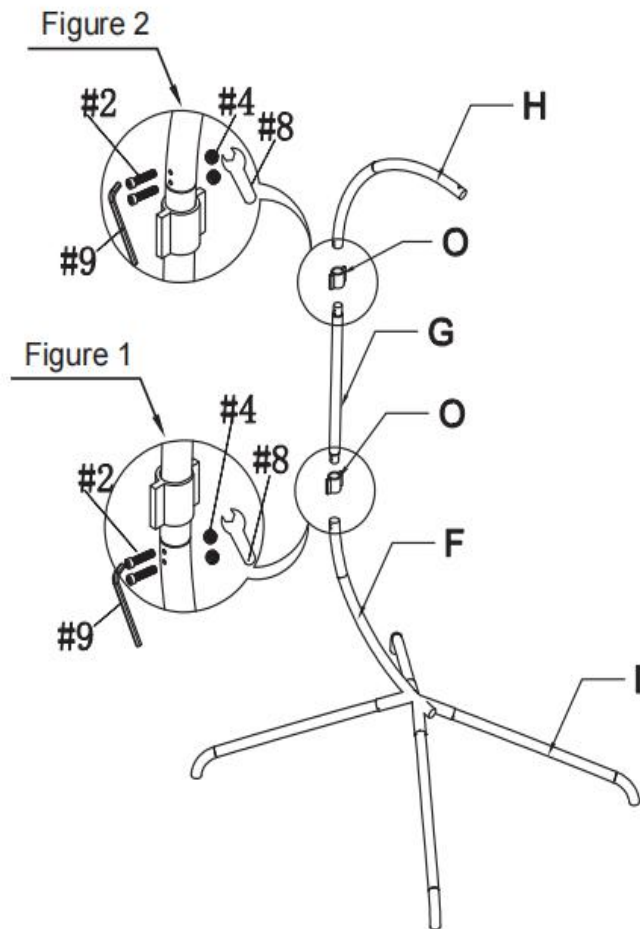
NOTE: Please do not fully tighten bolts until unit is fully assembled.







- | | | |
|----|---|-----|
| #3 |  | x 8 |
| #9 |  | x 1 |

- Step 3. 1. Slide covers (part O) onto middle pole (part G) and top pole (part H) from below until the connection holes are revealed.
2. Connect middle pole (part G) to X-frame (part F). Secure the connection with long bolts (part #2), nuts (part #4), large wrench (part #8) and allen wrench (part #9). See Figure 1
3. Connect the top pole (part H) to middle pole (part G). Secure the connection with long bolts (part #2), nuts (part #4), large wrench (part #8) and allen wrench (part #9). See Figure 2

NOTE: Please do not fully tighten bolts until unit is fully assembled.



- | | | |
|----|---|-----|
| #2 |  | x 4 |
| #4 |  | x 4 |
| #8 |  | x 1 |
| #9 |  | x 1 |

- Step 4. 1. Insert hanging rod (part J) into the connection hole at the top of the top pole (part H). Attach spring (part K) to hanging rod (part J). See Figure 1
2. Attach screw lock (part M) to chain (part L). Attach assembled unit (parts A, B & C) to screw lock (part M). Secure the connection by closing screw lock (part M).
3. Attach chain (part L) to spring (part K).
4. Attach ends of the safety strap (part N) to middle pole (part G) and assembled unit (parts A, B & C). See Figure 2
5. Place seat cushion (part E) and pillow (part D) into assembled unit (parts A, B & C) and secure pillow (part D) by tying strings.

NOTE: Please fully tighten all bolts at this time.

