


INSTALLATION GUIDELINES FOR PREP WALLCOVERING (ACOUSTICORD)

installation on walls

Prep can be installed as an acoustic wall covering on any clean, dry, smooth surface such as concrete, dry wall, plaster, particle board, metal, plastic, laminate, or plywood (min thickness 12mm or 1/2"). Do not install over wallpaper or vinyl wall coverings. Avoid locating horizontal seams at eye level. When installing **Prep** walls, we recommend a high-tack adhesive such as Parabond 4099.

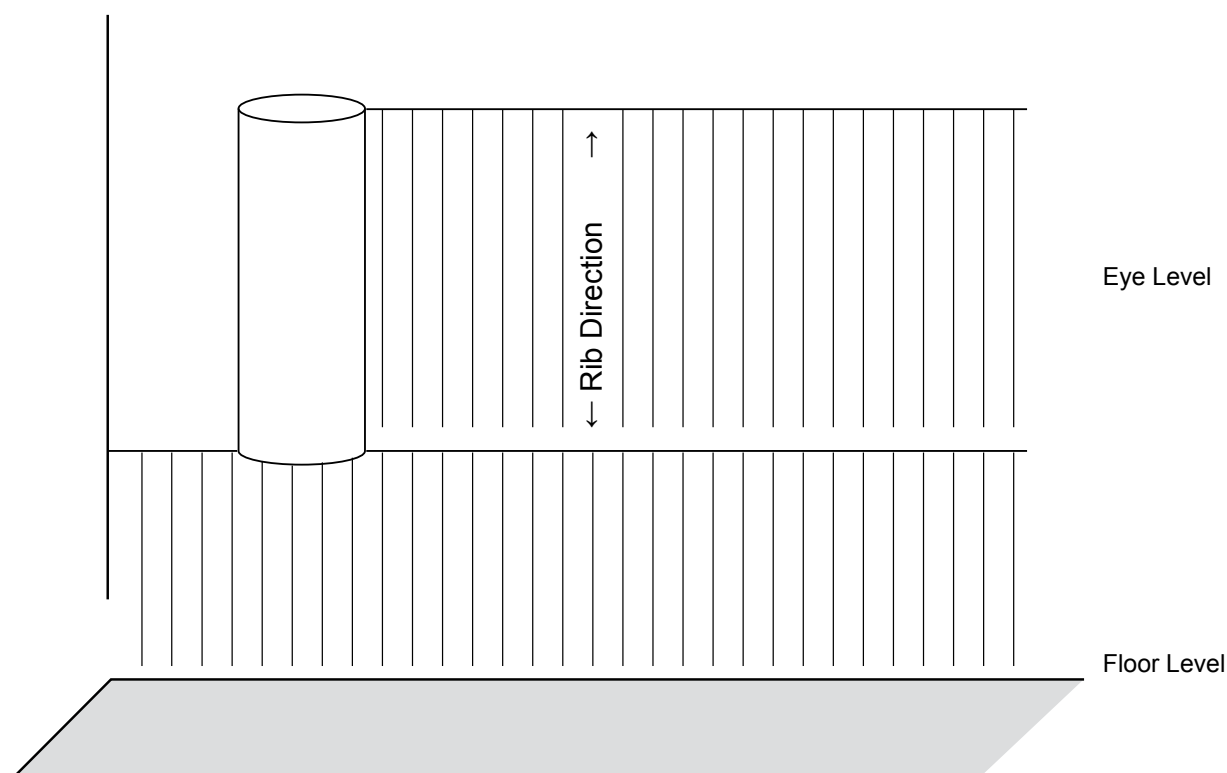

When installing **Prep** on walls with ribs running vertically, run full roll along ceiling line to keep seam below eye level.