



INSTALLATION GUIDE

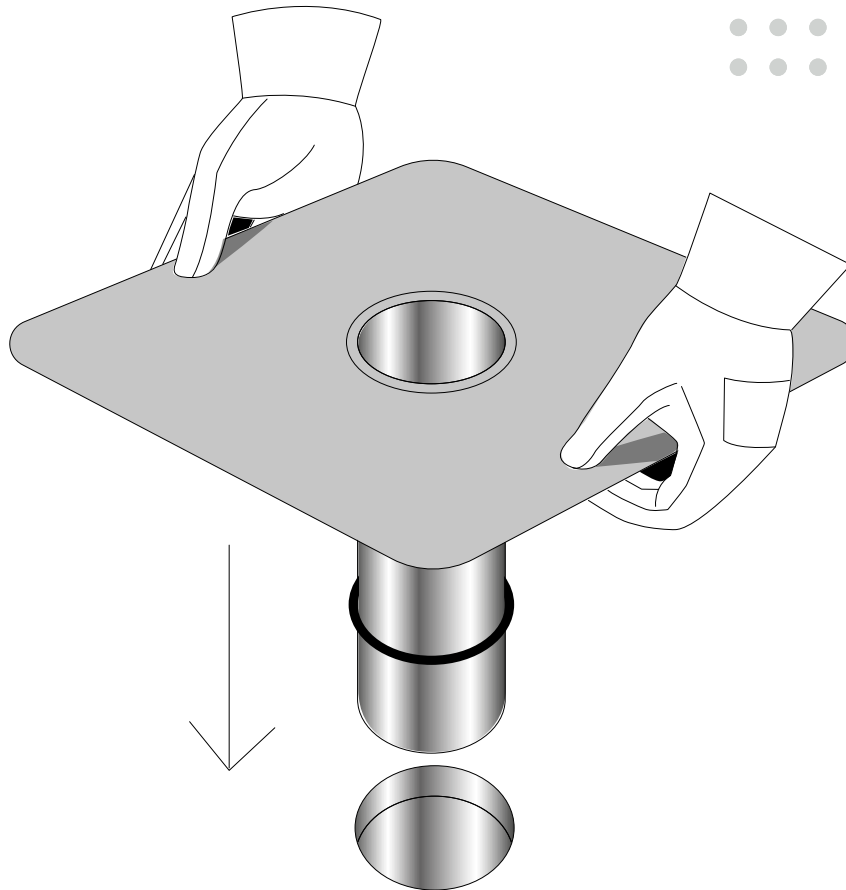

FO-FLO-PVC INSTALLATION GUIDE

**FarBo Roof Outlet - for flat roofs with a
PVC membrane**


FarBo FloDrain for roofs with single ply polymeric membrane

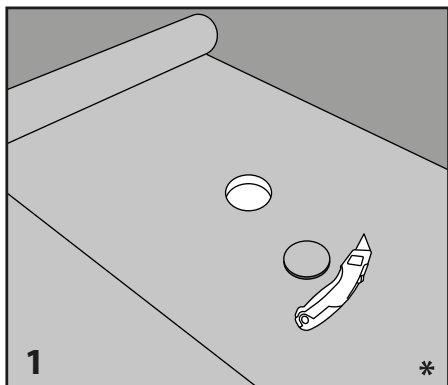

Step 1


Cut a hole slightly larger than the diameter of the outlet spigot through the PVC membrane, insulation and structural deck.

If the outlet is to be sumped refer to our Skills Hub article (follow the QR code).

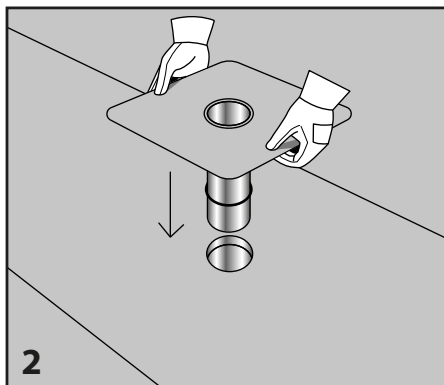


Step 2

Insert outlet spigot into the hole.

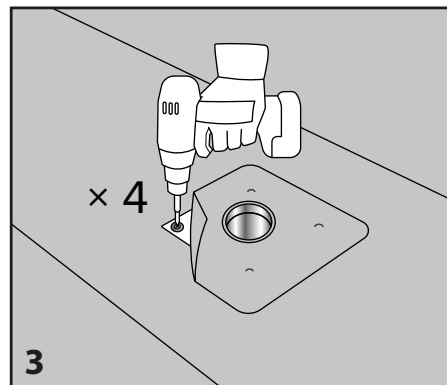


Step 3

Fix the metal flange of the outlet through the build-up into the structural deck with an SF-RS fixing or in combination with an SF-T-50 tube washer to suit the build-up and structural deck.

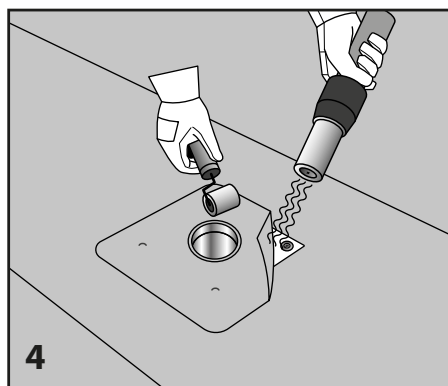

Step 4

Heat weld the underside of the PVC outlet flange to the top of the PVC roof membrane with a heat welder and seam roller in the same way that the overlaps of the membrane have been sealed.

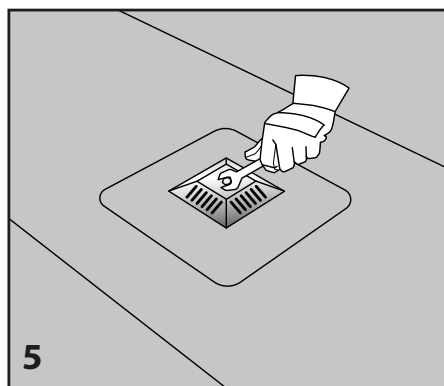

Step 5

Install suitable Leafguard.




Skills hub article

What is a sump and how does it work?

Assembly Instructions

Connecting FarBo roof outlet to downpipe – New build


Install the outlet as shown above. The roof outlet selected should be the same size as the OD of rainwater pipe that will be used. The plumber will then connect the downpipe to the outlet.

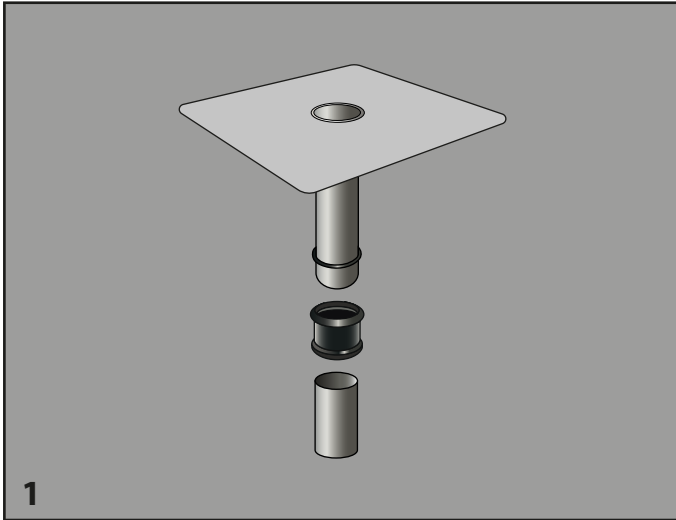

Double Socket Pipe Connector

Lubricate the outlet spigot and the double socket pipe connector and push the connector over the outlet spigot until it reaches the stop in the connector. Then repeat this for the pipe.

(Image shows the outlet and pipe connection with the roof build-up removed).

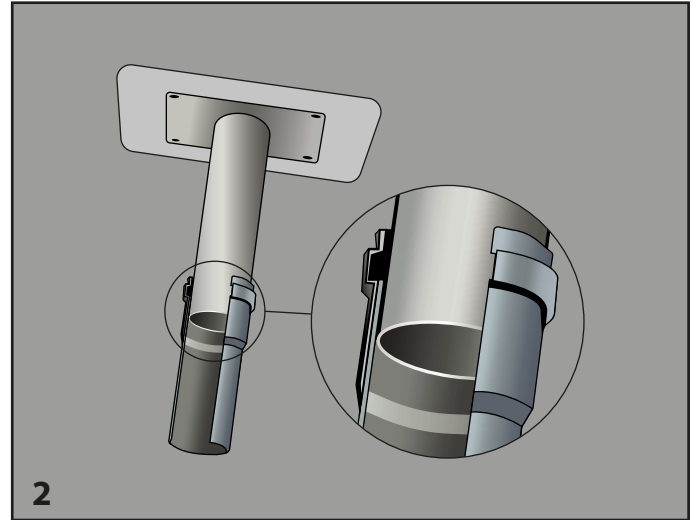


Single Socket Pipe

Lubricate the outlet spigot and the single socket pipe and push the pipe over the outlet spigot until it is firmly connected.

Connecting FarBo Roof Outlet to downpipe – Refurbishment

Remove the existing outlet and leaf guard before overlaying the roof. The new FarBo outlet must sleeve inside the existing downpipe, and the correct size must be selected. The outlet is supplied with a rubber 'O' ring to ensure a watertight seal is achieved. The plumber will then connect the downpipe to the outlet.

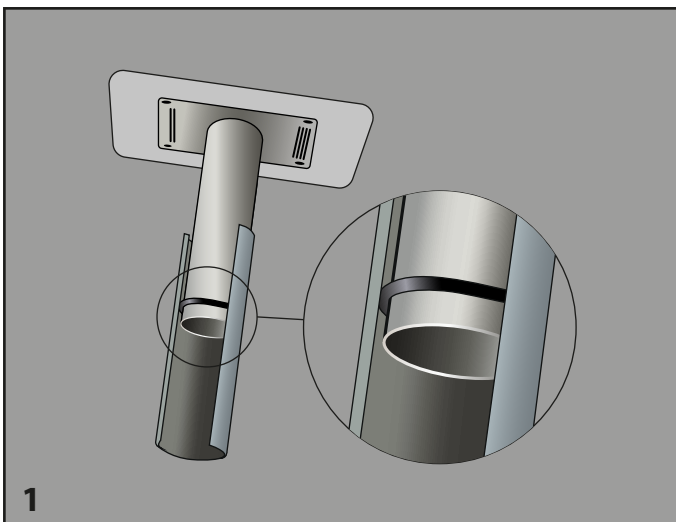

(The above shows the roof build-up removed for clarity).

Still have questions? Contact our technical team on 01732 882 387.