



HOW TO MEASURE FOR A POCKET DOOR




DETERMINING THE DOOR WIDTH FROM A ROUGH OPENING (EXISTING POCKET FRAMING)

Measure from wood framing on the pocket side to wood framing on the closed side. This is your rough opening width (RO width). To determine the door size you want, take the RO width and subtract 1 inch. Take that number and divide it by 2. This is your door width. For example, if you have a RO width of 61"

$$61 - 1 = 60 \text{ then } 60 / 2 = 30 \text{ The door size will be } 30 \text{''}$$


These calculations allow room for some of the door to be hidden in the pocket to block the view of the interior pocket. It also allows space on the inside of the pocket for a bumper, and some fine-tuning adjustments. See the diagram below for the top view layout of this example.

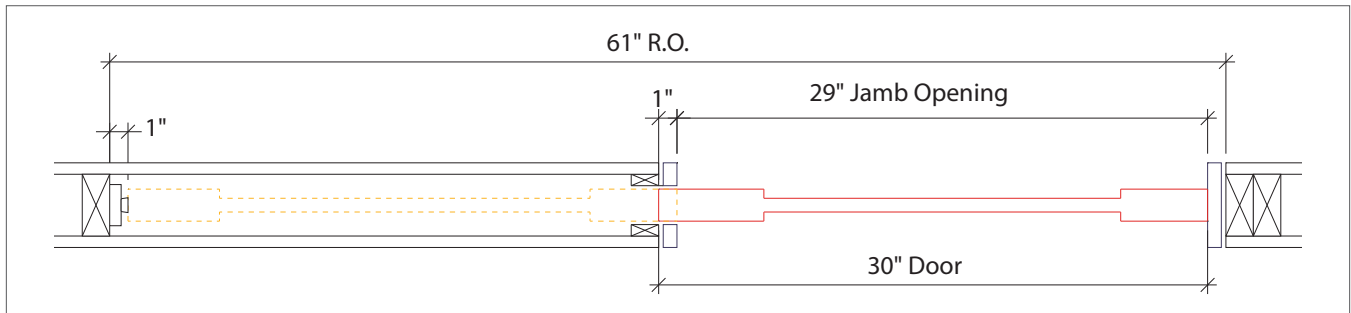

DETERMINE THE DOOR HEIGHT FROM A ROUGH OPENING (EXISTING POCKET FRAMING)

Measure the height from the rough floor to the top header, this is your Rough Opening Height (RO Height). If your door is under 200 lbs, the maximum door height will be the RO Height - 3.5" (assuming $\frac{3}{4}$ " finished floor thickness) or -2.75 if measured from finish floor.

If your door is over 400 lbs your maximum door height will be RO Height - 4.75" (assuming $\frac{3}{4}$ " finished floor thickness) or -4" if measured from finish floor.

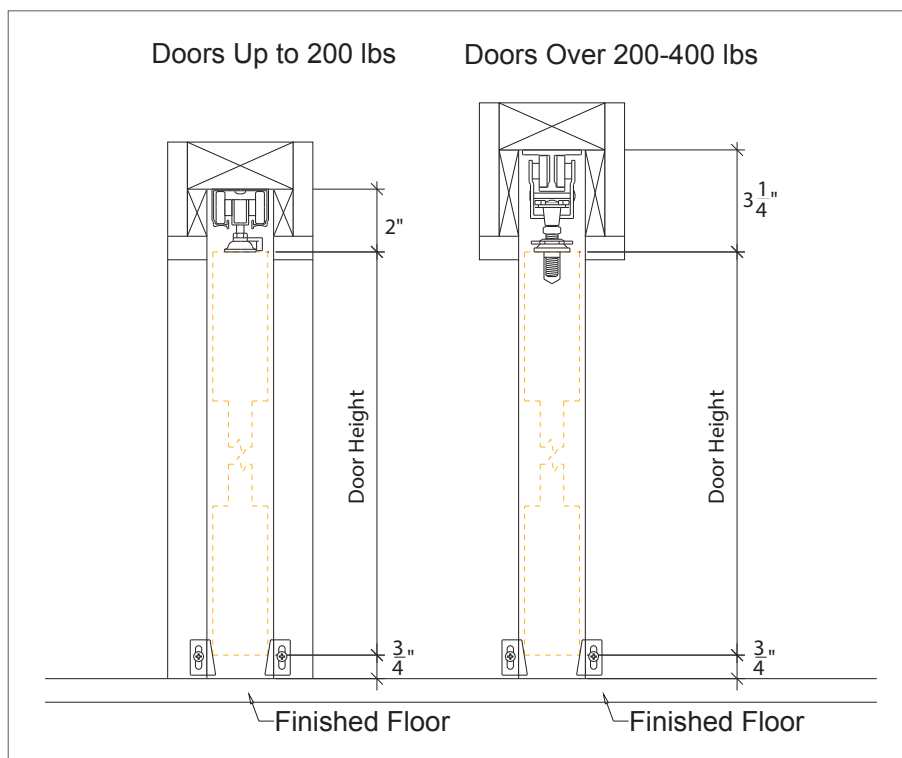

WE LOVE WHAT YOU'RE DOING WITH THE PLACE

CONGRATULATIONS ON YOUR DECISION TO BRING HOME
AN AMERICAN MADE PRODUCT OF THE HIGHEST QUALITY.
WE HOPE YOUR POCKET DOOR BRINGS ART
AND FUNCTION INTO YOUR LIFE.

1-800-891-8312
support@rustica.com
www.Rustica.com

DESIGNED AND CRAFTED ENTIRELY IN THE
U.S.A.



DON'T BE A STRANGER.
FOLLOW US ON SOCIAL MEDIA.

