

RUSTICA

INSTALLATION
INSTRUCTIONS

DIY PANEL
DOOR



CONGRATULATIONS ON YOUR DECISION TO BRING HOME
AN AMERICAN MADE PRODUCT OF THE HIGHEST QUALITY

1-800-891-8312
support@rustica.com
www.Rustica.com

DESIGNED AND CRAFTED ENTIRELY IN THE

U.S.A.




DON'T BE A STRANGER
FOLLOW US ON SOCIAL MEDIA




DIY PANEL DOOR Parts and Recommended Tool

Recommended Tool

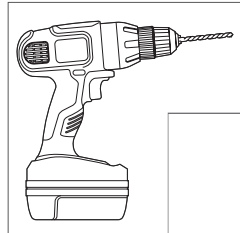




Drill with 1/8" drill bit for pilot hole

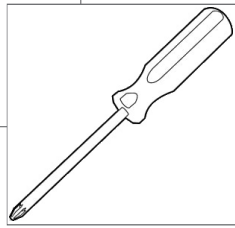




Philips screwdriver for grabber screws

Parts

- 1) Door Top
- 2) Door Bottom
- 3) Side Brackets (qty 2)
- 4) Grabber Screws (qty 16)

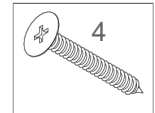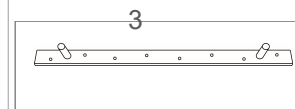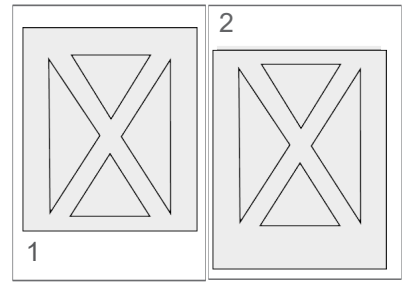

DIY PANEL DOOR Instructions

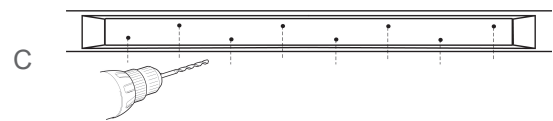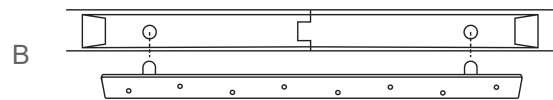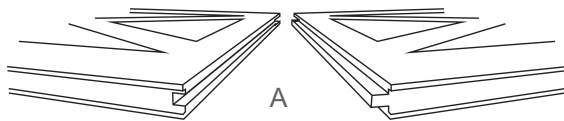

- 1) Laying the door on a flat surface slide the "tongue" of the bottom half of the door into the "groove" of the top half of the door (Figure A).
- 2) Insert the side brackets on each side with the peg into the hole on each side of the door (Figure B).
- 3) Using the drill and the 1/8 inch drill bit make a pilot hole 1 inch deep through every hole (8 per side) of the bracket (Figure C).
- 4) Insert and tighten securely a grabber screw through into each of the pre-dilled holes in the bracket and into the pilot holes in the door. (Figure D).
- 5) Follow instructions for installing track and hangers to finish the project



Side view of the bracket installed into both doors

