
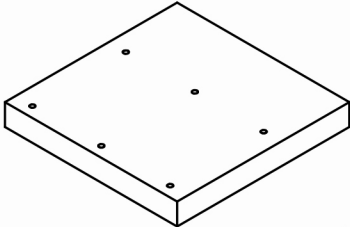
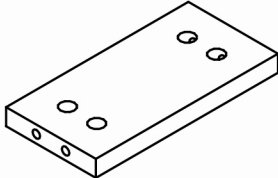
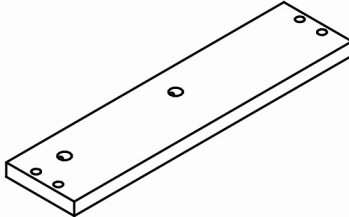
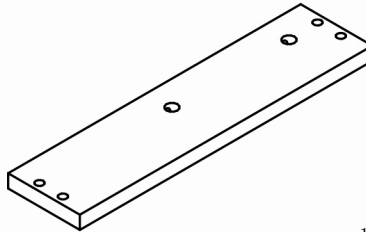



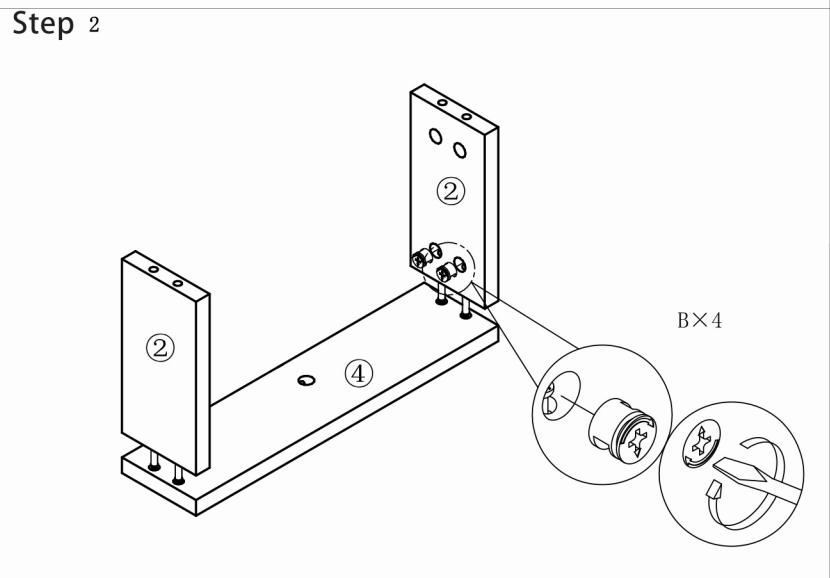
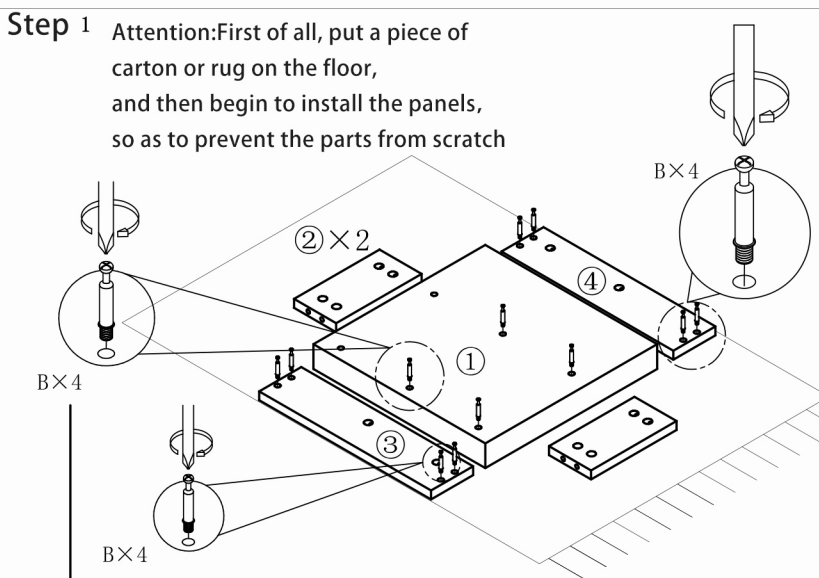
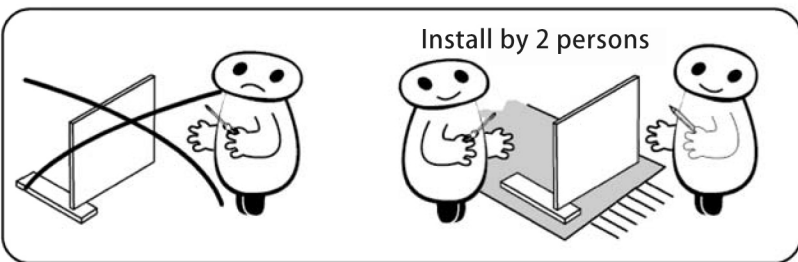
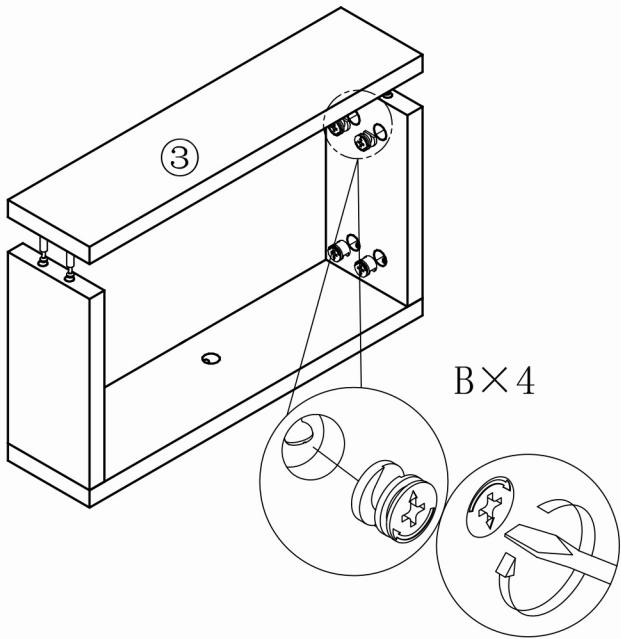


| | | | | | |
|---|---|--|--|--|--|
| ① Bedboard  1× | ② Base frame side panel  2× | ③ Base frame back panel  1× | ④ Base frame front panel  1× | A. Cam Pin  12+1× | B. Cam Lock  12+1× |
| | | | | C. Cam Cover  12× | D. Telescopic screwdriver  |




| | |
|-------|----------------|
| Model | GF089-CT0404 |
| Size | 400W*400D*153H |

Step 3




Step 4

Note: The bottom frame and bedboard connection can be installed left and right both.

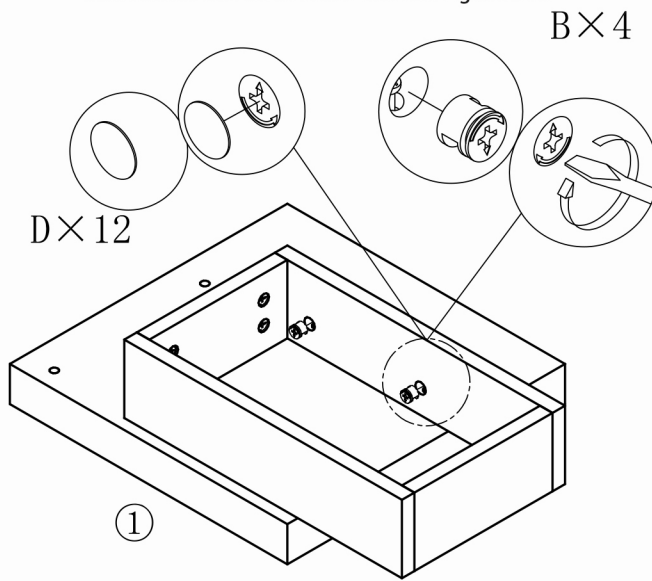

Step 5

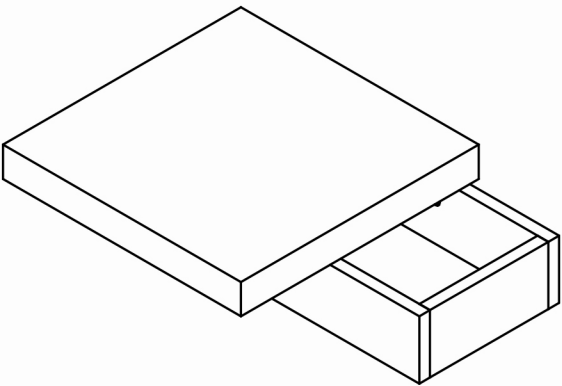

Step 6

Note: The steps of side bedboard and bed connection are as follows, side bedboard can be installed left and right both.

