

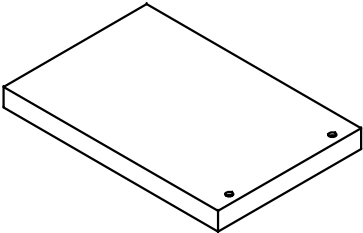
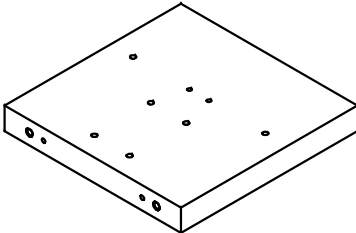
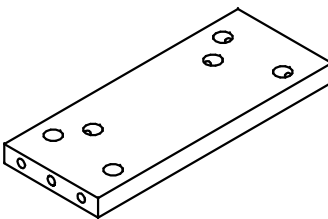
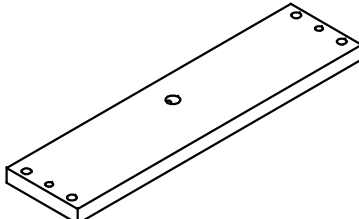








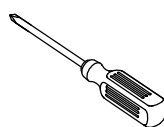
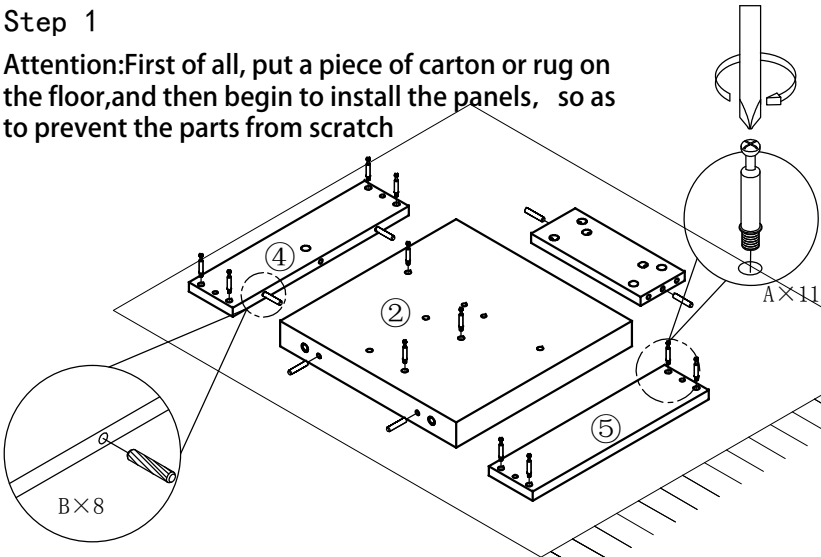
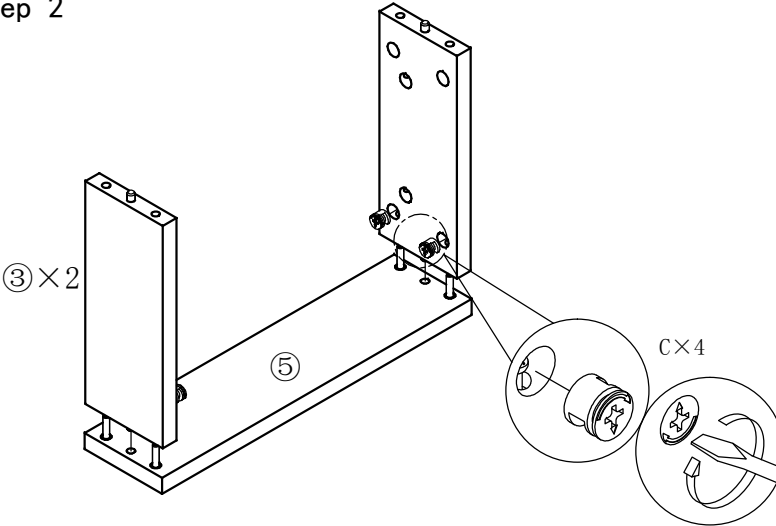
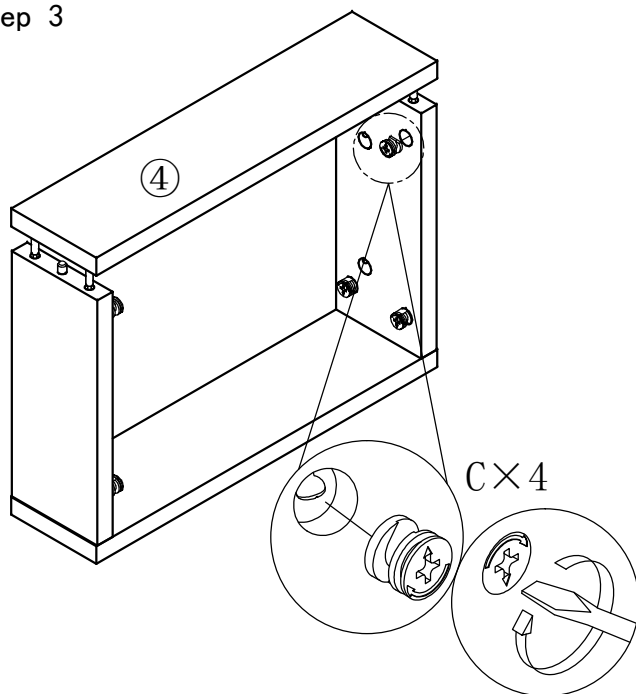



| | | | | | | | | | | | |
|--|---|--|---|--|--|-------|--------------|------|-----------------|------|----------------|
| ①Bedboard  1× | ②Bedboard  1× | ③Base frame side panel  2× | ④Base frame front panel  1× | A. Cam pin  11+1× | B. Dowel  8× | | | | | | |
| ⑤Base frame back panel  1× | | | | C. Cam lock  11+1× | D. Chamfered hexagonal machine wire  2× | | | | | | |
| <div>Install by 2 persons</div>  | | | | E. 6N spanner  1× | F. Cam cover  11× | | | | | | |
| | | | | G. Wood screw  18+2× | H. Connection metal piece  3× | | | | | | |
| | | | | I. Telescopic screwdriver  1× | | | | | | | |
| <div>Step 1</div> <div>Attention:First of all, put a piece of carton or rug on the floor,and then begin to install the panels, so as to prevent the parts from scratch</div>  | | <div>Step 2</div>  | | | | | | | | | |
| | | <table><tr><td>Model</td><td>GF095-CP0407</td></tr><tr><td>Name</td><td>Side nightstand</td></tr><tr><td>Size</td><td>400W*450D*705H</td></tr></table> | | | | Model | GF095-CP0407 | Name | Side nightstand | Size | 400W*450D*705H |
| Model | GF095-CP0407 | | | | | | | | | | |
| Name | Side nightstand | | | | | | | | | | |
| Size | 400W*450D*705H | | | | | | | | | | |

Step 3

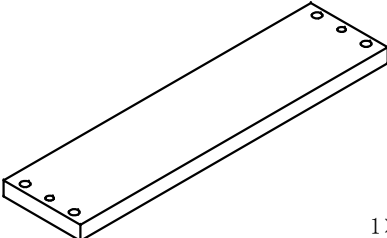


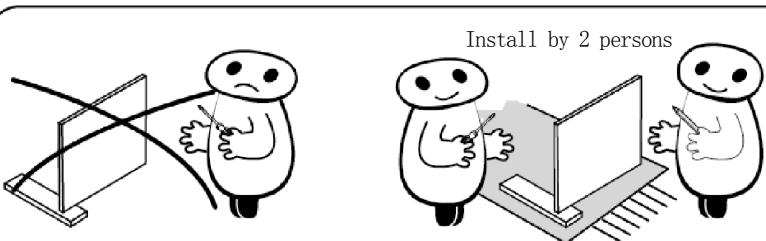Step 4

Note: The bottom frame and bed board connection can be installed left and right.

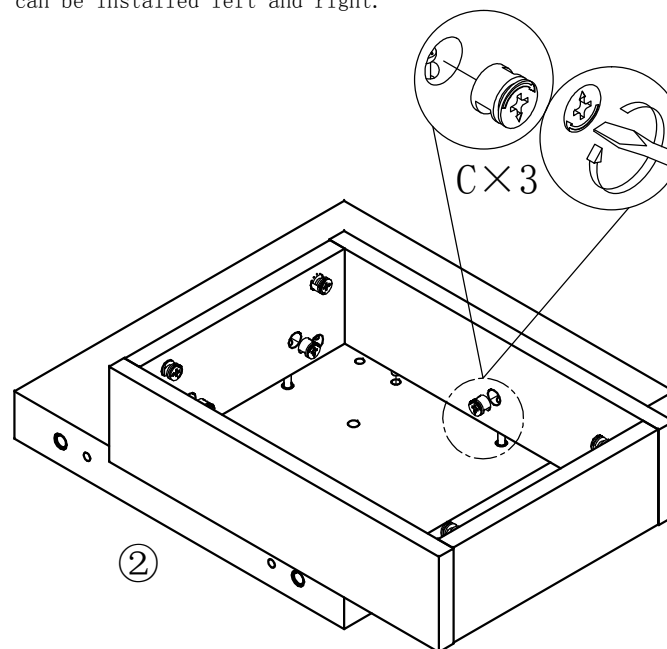


Step 5

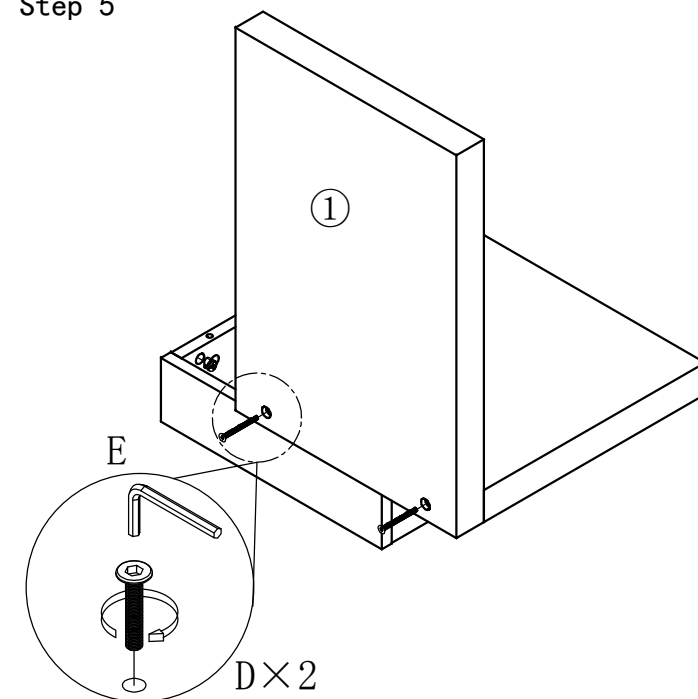

Step 6

Note: The side bed screen and bed connection steps are as follows, the side bed screen can be installed left and right.

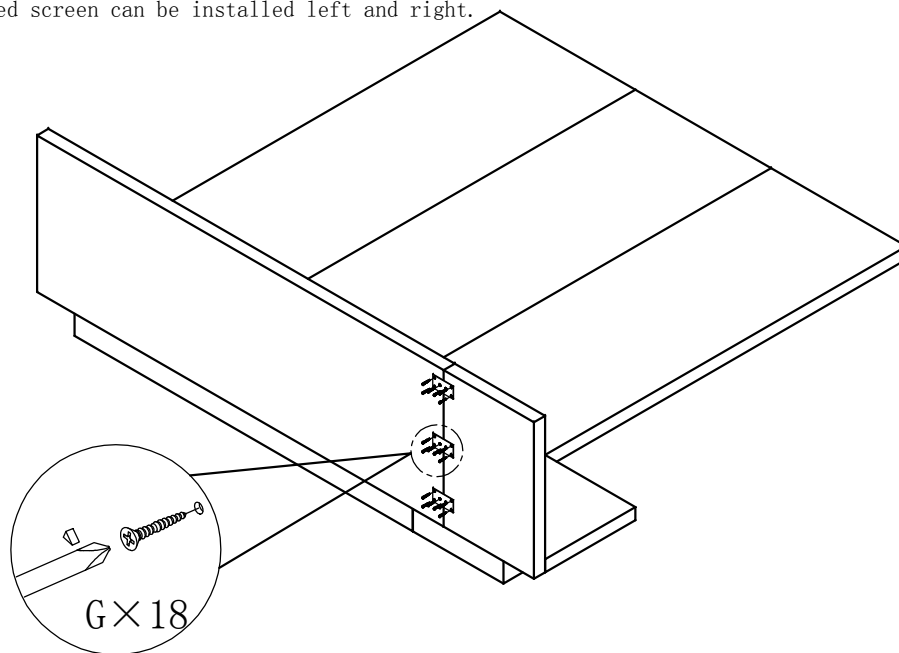

Step 7

