

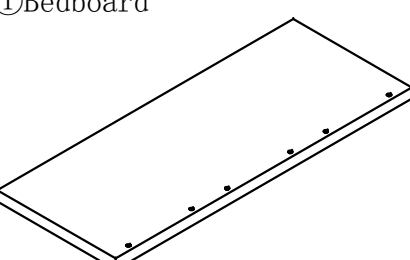
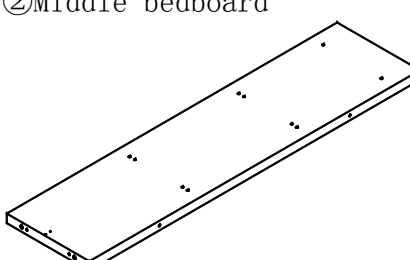
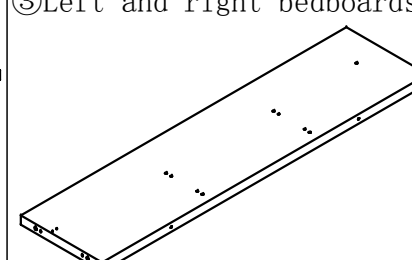
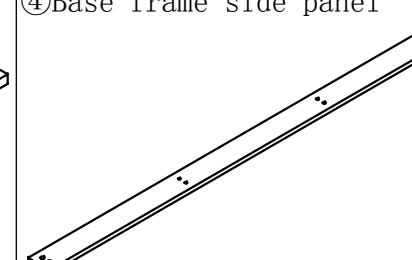
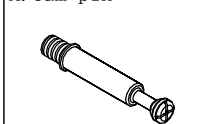
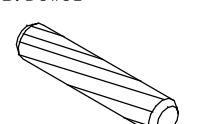
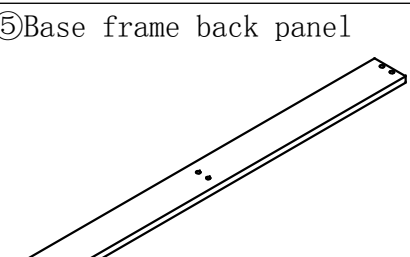
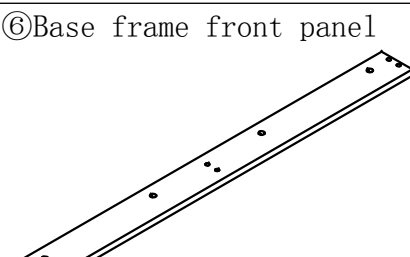
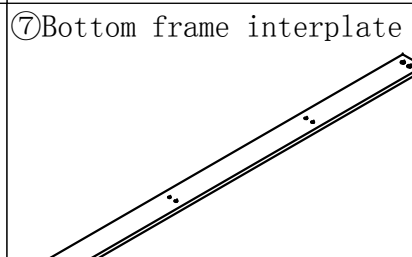
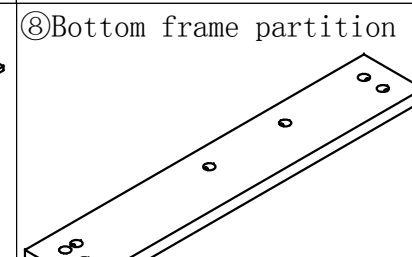
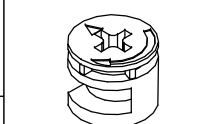
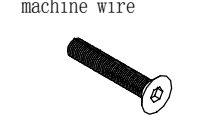
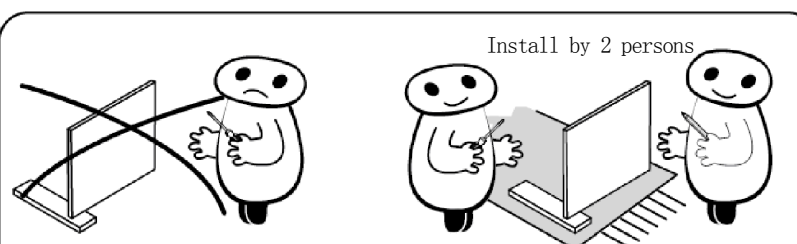
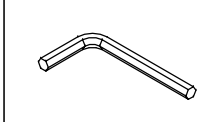
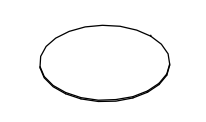
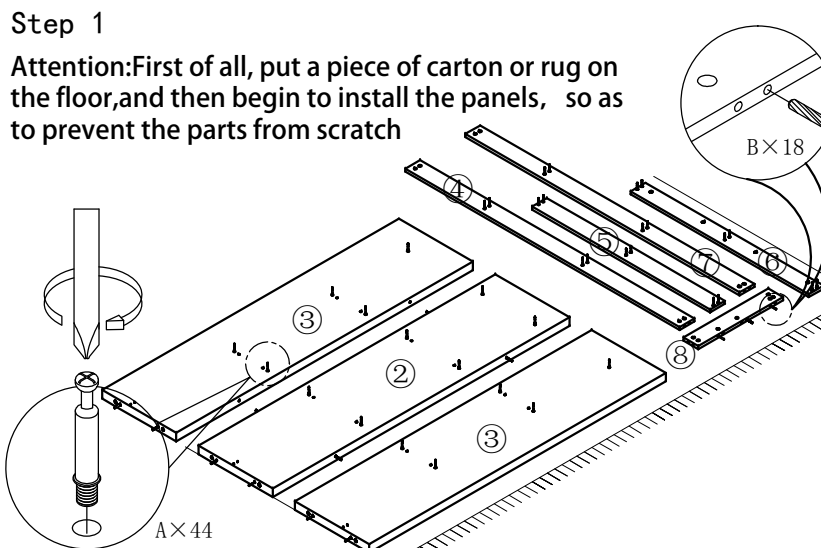
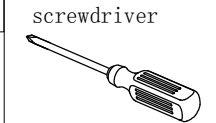
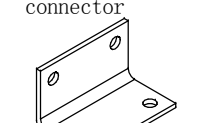
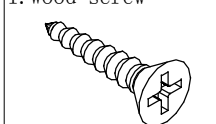
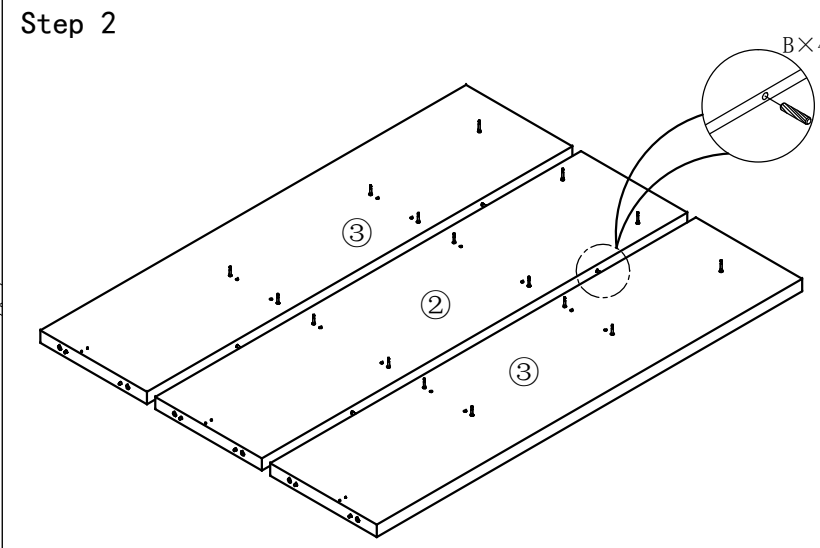


<div>①Bedboard</div> <div></div> <div>1×</div>	<div>②Middle bedboard</div> <div></div> <div>1×</div>	<div>③Left and right bedboards</div> <div></div> <div>2×</div>	<div>④Base frame side panel</div> <div></div> <div>2×</div>	<div>A. Cam pin</div> <div></div> <div>44×</div>	<div>B. Dowel</div> <div></div> <div>22×</div>						
<div>⑤Base frame back panel</div> <div></div> <div>1×</div>	<div>⑥Base frame front panel</div> <div></div> <div>1×</div>	<div>⑦Bottom frame interplate</div> <div></div> <div>1×</div>	<div>⑧Bottom frame partition</div> <div></div> <div>4×</div>	<div>C. Cam lock</div> <div></div> <div>44×</div>	<div>D. Chamfered hexagonal machine wire</div> <div></div> <div>6×</div>						
<div></div> <div>Install by 2 persons</div>				<div>E. 6N spanner</div> <div></div> <div>1×</div>	<div>F. Cam cover</div> <div></div> <div>44×</div>						
<div>Step 1</div> <div>Attention:First of all, put a piece of carton or rug on the floor,and then begin to install the panels, so as to prevent the parts from scratch</div> <div></div>				<div>G. Dual-purpose screwdriver</div> <div></div> <div>1×</div>	<div>H. Middle corner connector</div> <div></div> <div>3×</div>						
				<div>I. Wood screw</div> <div></div> <div>12×</div>							
<div>Step 2</div> <div></div>				<table><tr><td>Model</td><td>GF095-15</td></tr><tr><td>Name</td><td>Bed</td></tr><tr><td>Size</td><td>1500W*2050D*705H</td></tr></table>		Model	GF095-15	Name	Bed	Size	1500W*2050D*705H
Model	GF095-15										
Name	Bed										
Size	1500W*2050D*705H										


Step 3

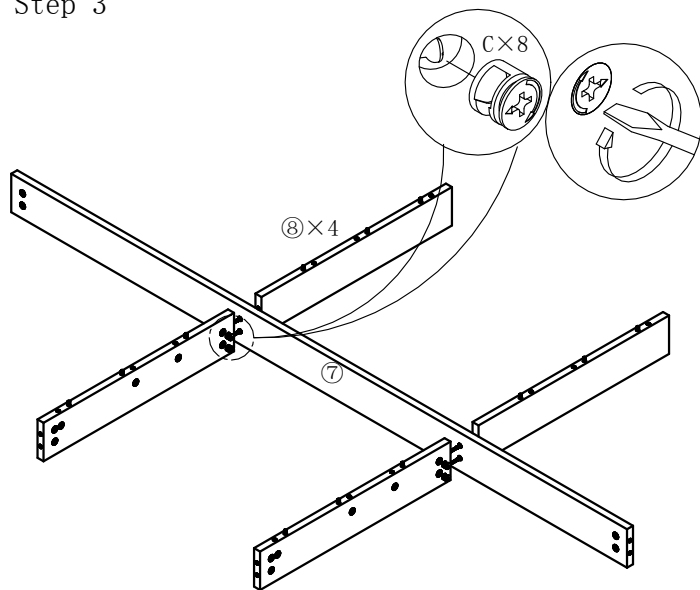


Step 4

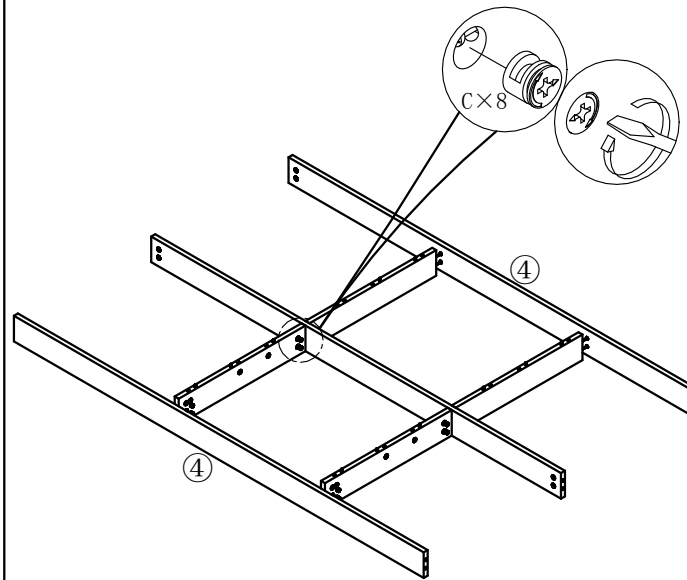


Step 5

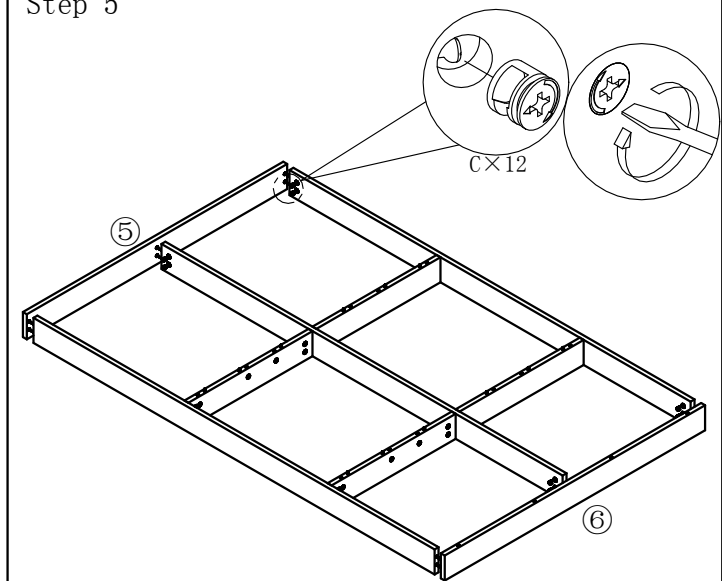

Step 6

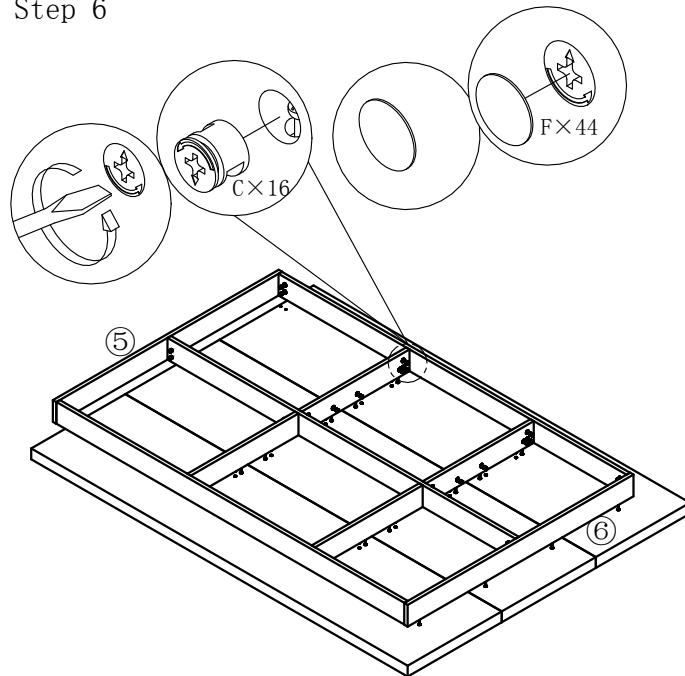

Step 7

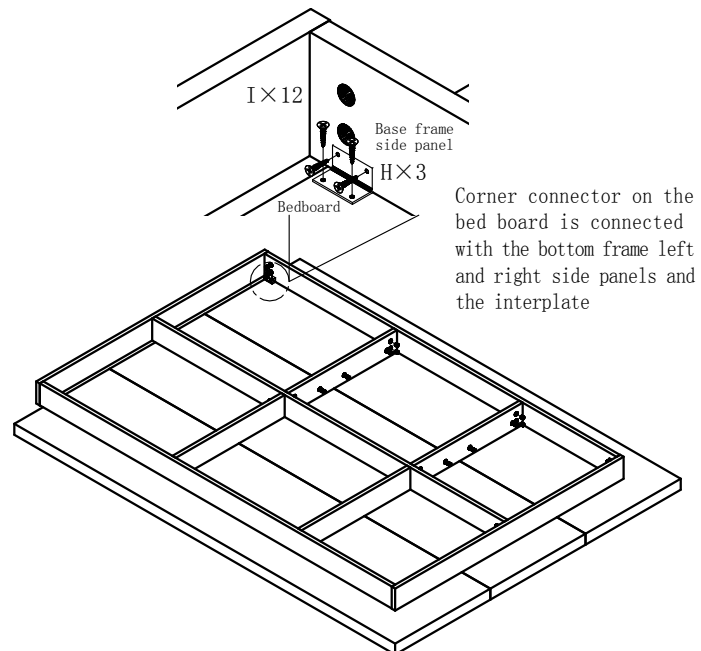

Step 8

