

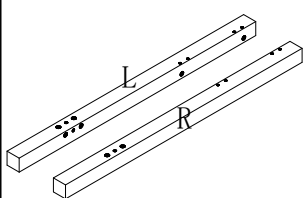
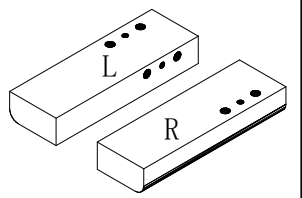
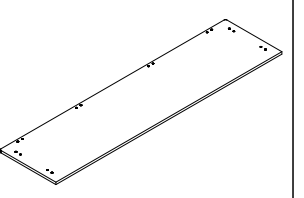
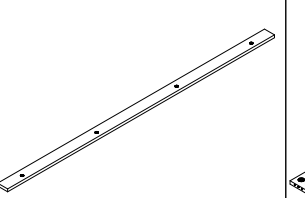
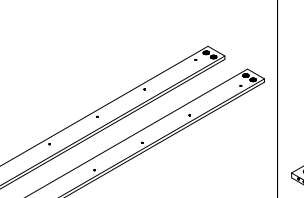
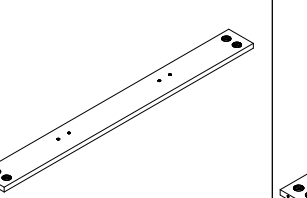
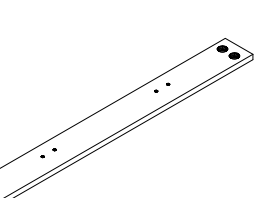
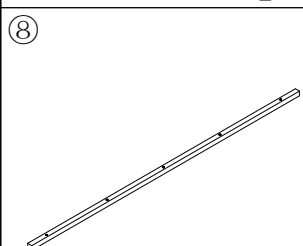
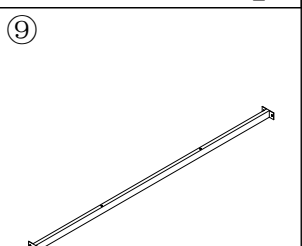
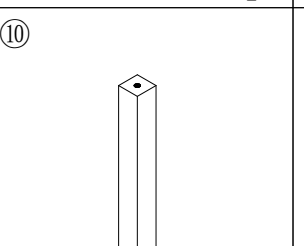
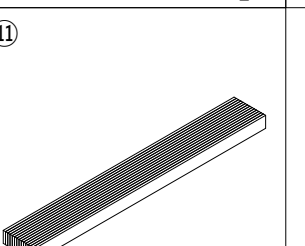


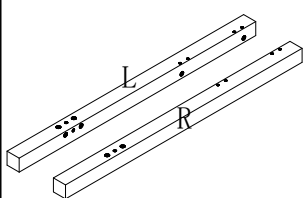
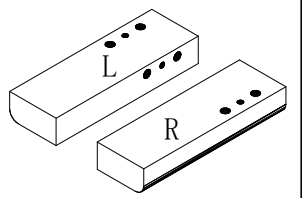
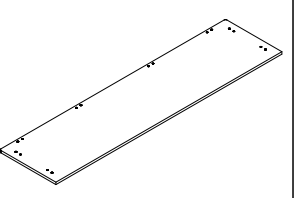
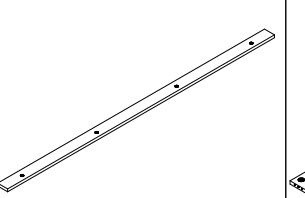
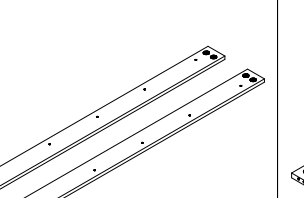
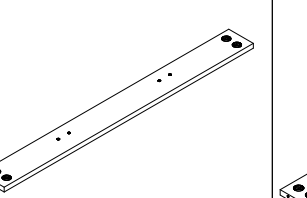
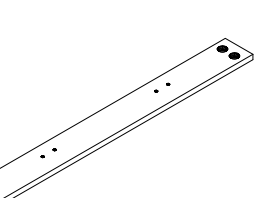
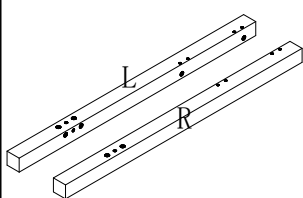
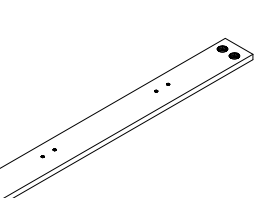
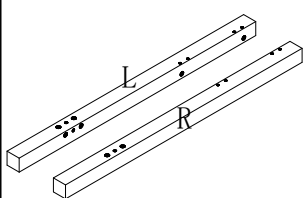
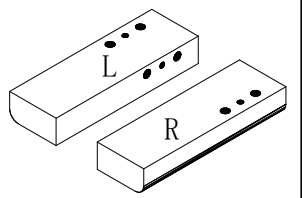
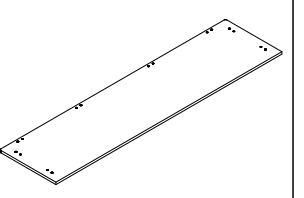
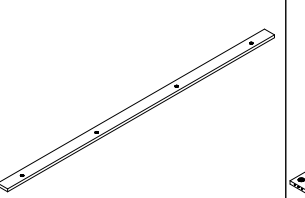
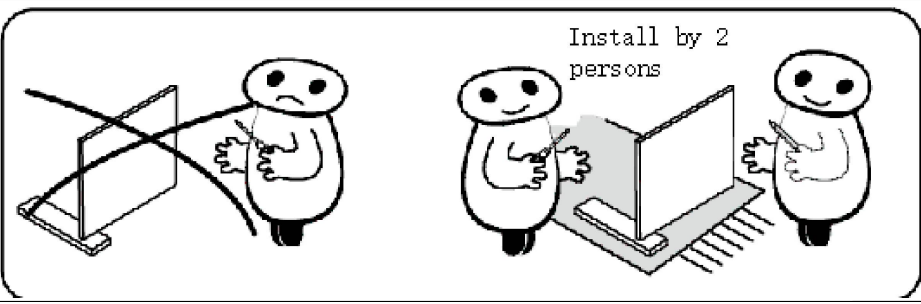
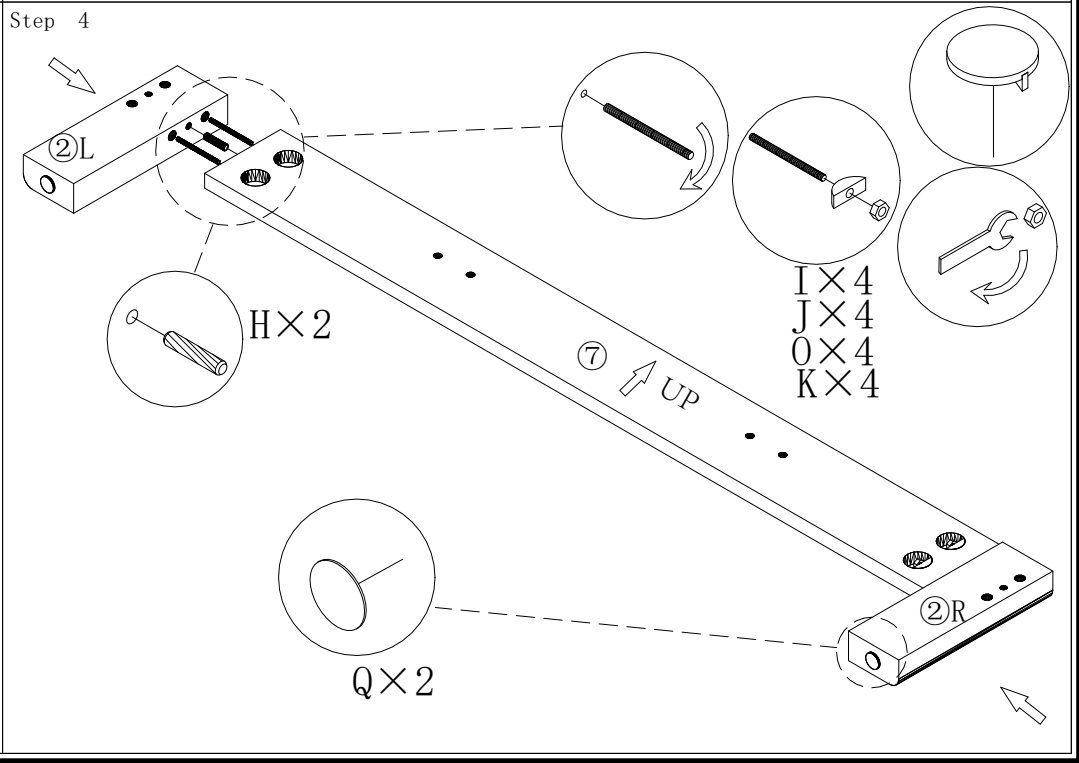
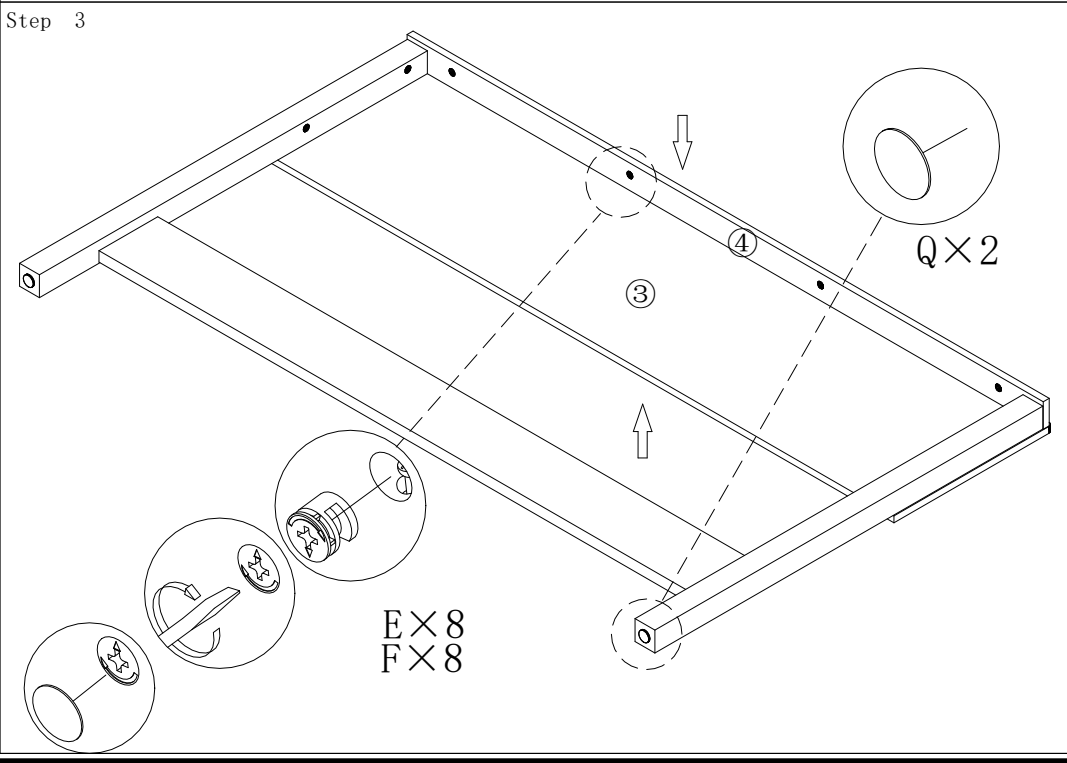



①  2×	②  2×	③  1×	④  1×	⑤  2×	⑥  1×	⑦  1×		
⑧  2×	⑨  2×	⑩  4×	⑪  1×	A. Bolt (M6*16)  8×			B. Bolt (M6*70)  4×	C. Bolt (M6*40)  10×
D. Cam pin  8×	E. Cam Lock  8×	F. Cam cover  8×	G. Dowel (8*40)  12×	H. Dowel (10*40)  8×	I. Whole tooth screw  16×	J. Five-in-one crescent  16×	K. Five-in-one hole cover  16×	O. Nut  16×
P. Wood screw  8+1×	Q. Pad  4×	R. Hexagonal wrench  1×	S. Spanner  1×					
Model: B1086-153								

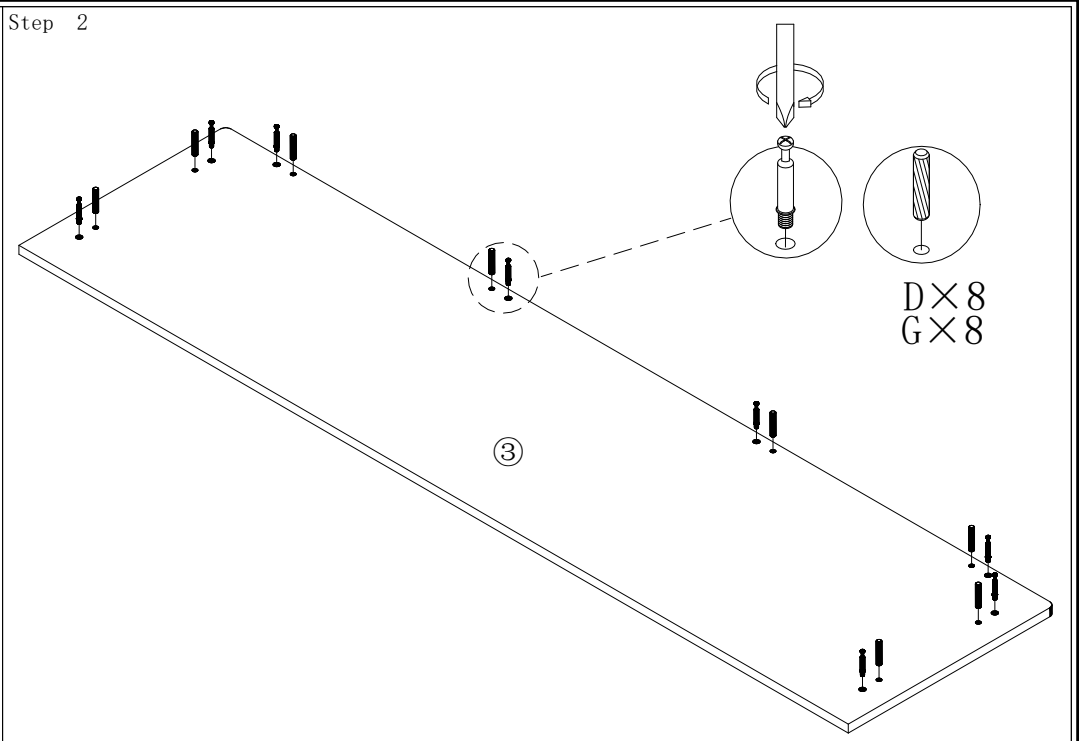


Model: B1086-153
Dimension: 1604*2150*1003H
Attention:First of all, put a piece of carton or rug on the floor, and then begin to install thepanels, so as to prevent the parts from scratch.

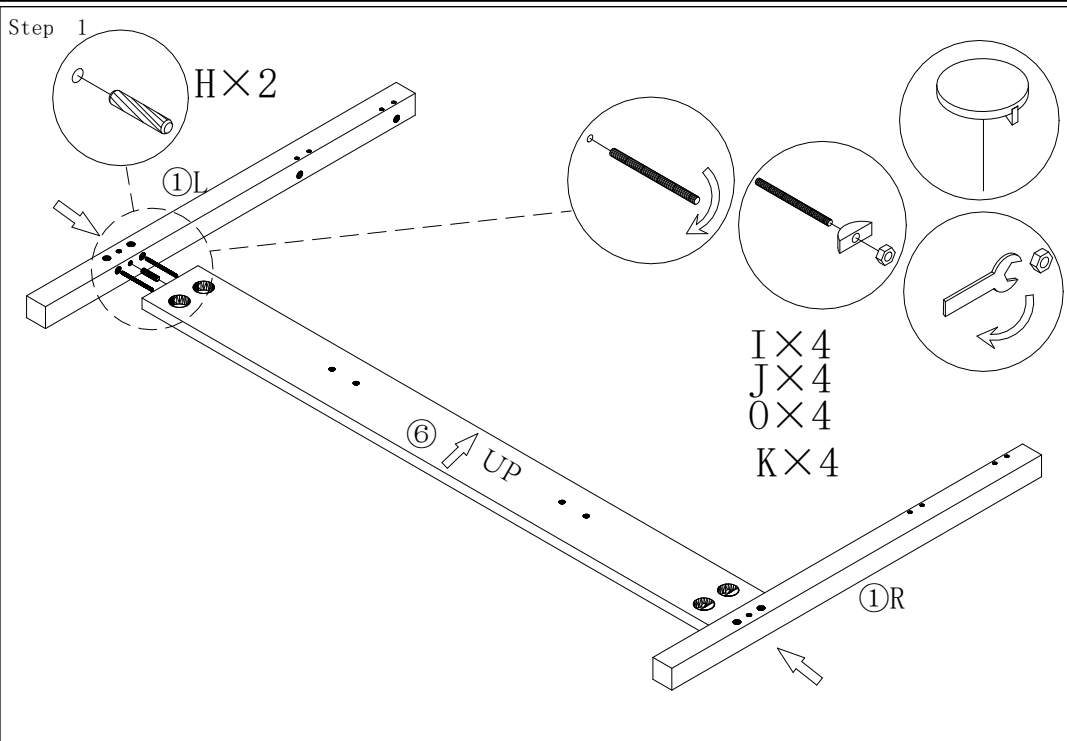


Step 5

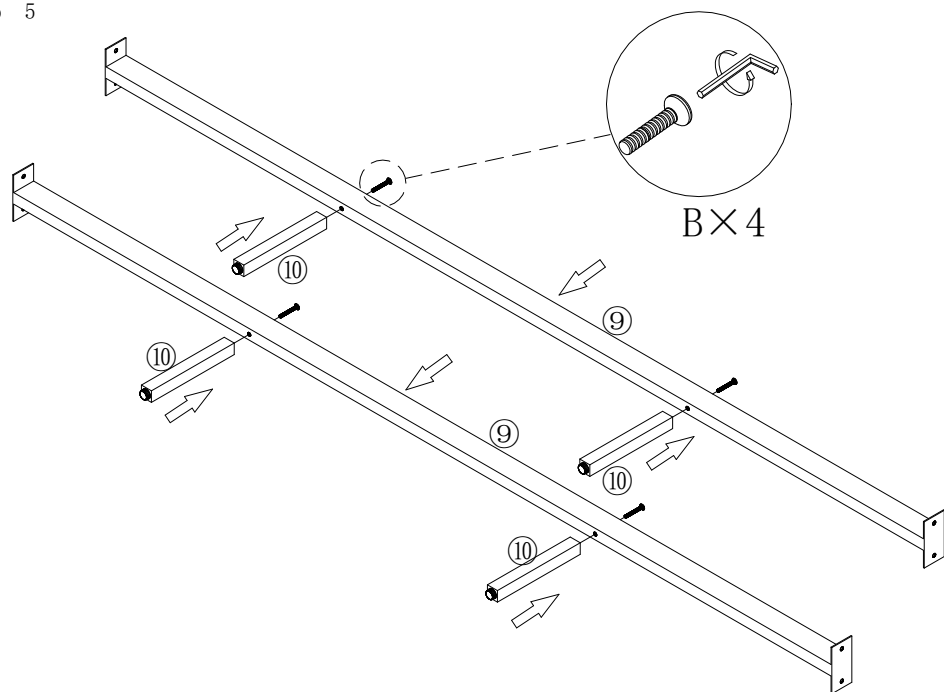

Step 6

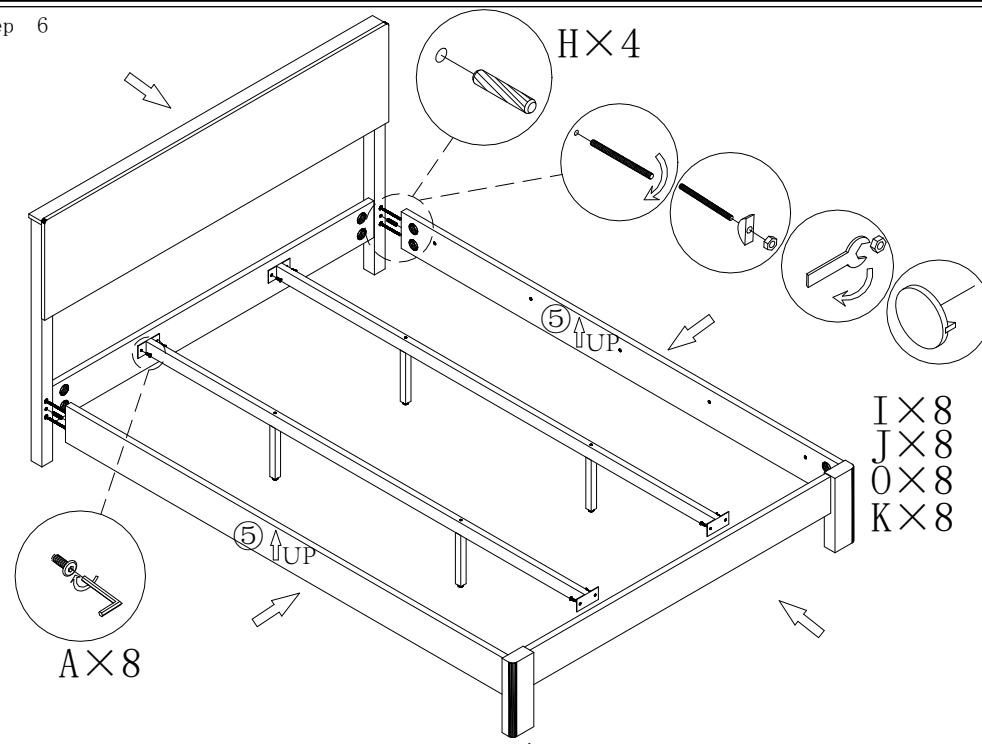

Step 7

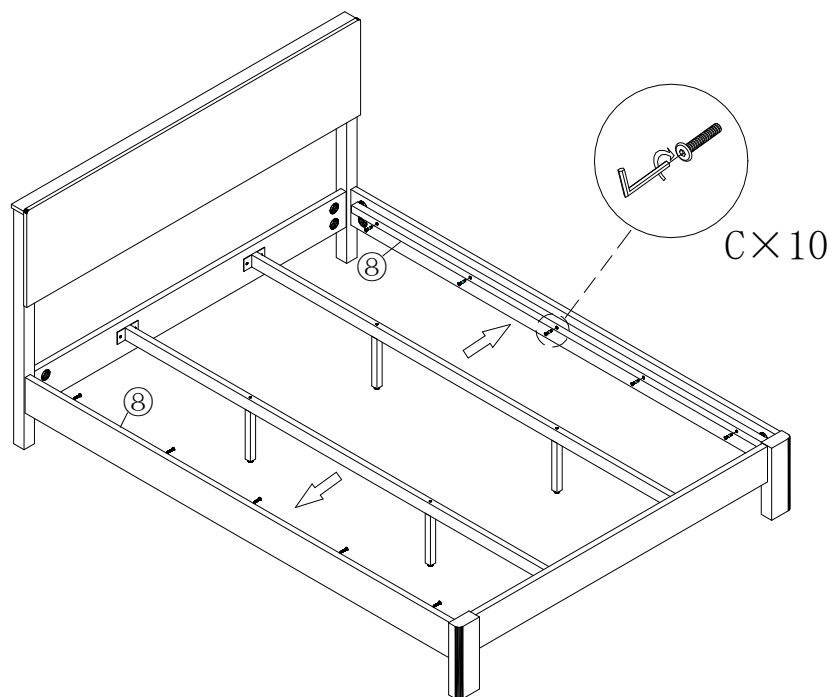

Step 8

