





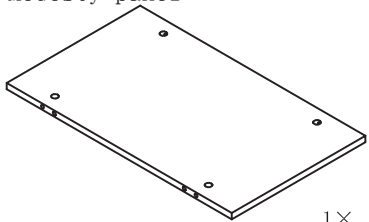
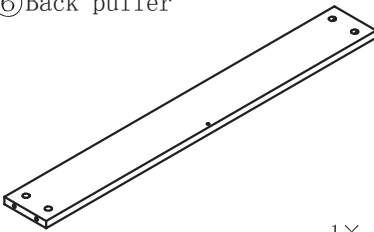
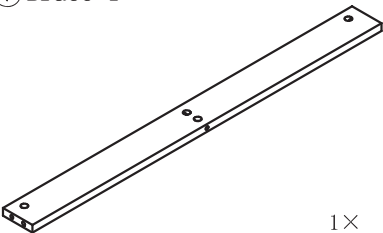
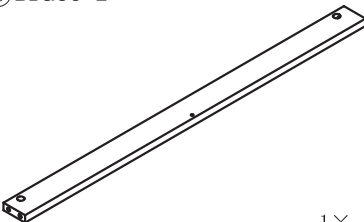


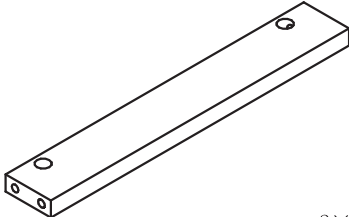
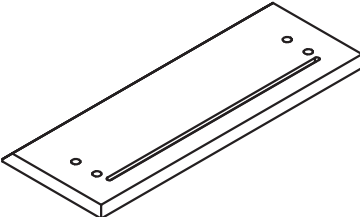
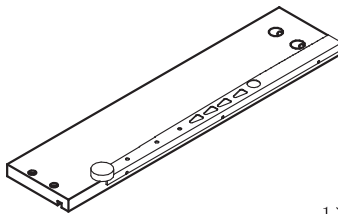
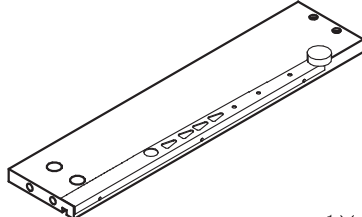

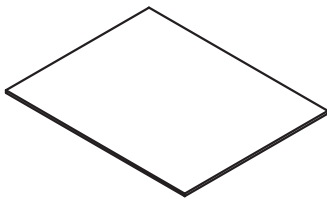
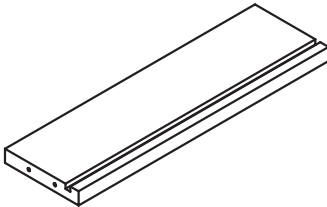
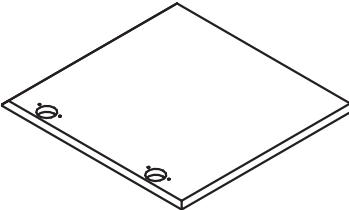
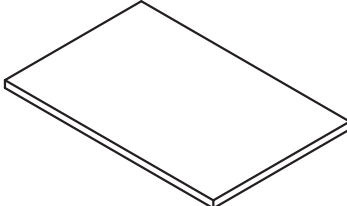
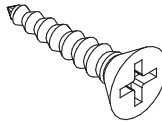

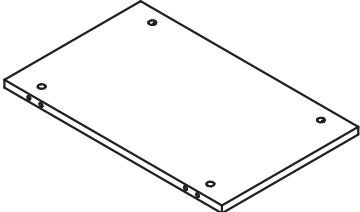
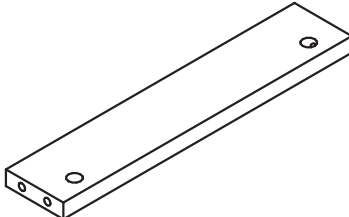




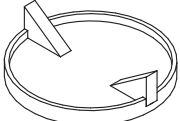





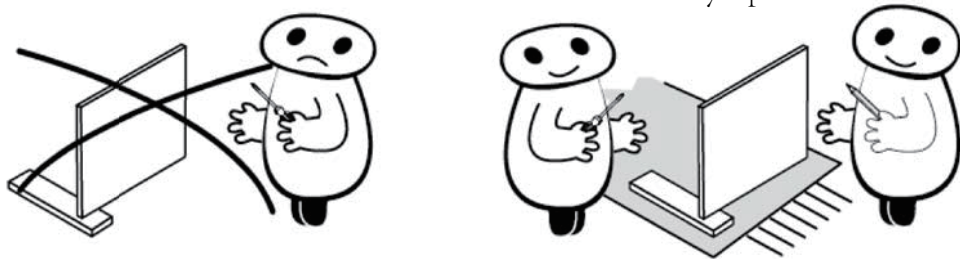



① Desk top panel  1×	② Left footboard  1×	③ Right side panel  1×	④ Divider panel  1×	A.Divider panel (φ8)  26×	B.Cam lock  34+2×
⑤ Modesty panel  1×	⑥ Back puller  1×	⑦ Brace 1  1×	⑧ Brace 2  1×	C. Cam pin (40)  32×	D. Cam cover  34×
⑨ Front rail  2×	⑩ Drawer front panel  1×	⑪ Drawer left side panel  1×	⑫ Drawer left side panel  1×	F.Hinge  2×	
⑬ Drawer bottom panel  1×	⑭ Drawer back panel  1×	⑮ Door panel  1×	⑯ Movable panel  1×	G. Wood screw  12×	H.Board support  4×
⑰ Bottom panel  1×	⑱ Apron board  2×	M. Full crescent screw  2×	N. Half-moon teeth  2×	I. Foot mat (φ16)  6×	J. Foot mat (φ25)  2×
		O. Five-in-one hole cover  2×	P. Nut  2×	K. Wrench  1×	L. Dual-purpose Screwdriver  1×
			Q. Long pitch self-tapping screw  4×	Model GF104-1406	
			R. Cam pin(35)  2×	Name Desk	
				Size 1400W*600D*750H	

Install by 2 persons

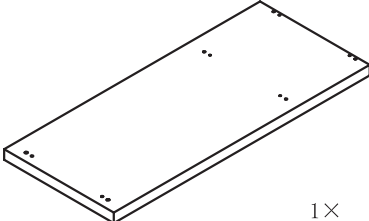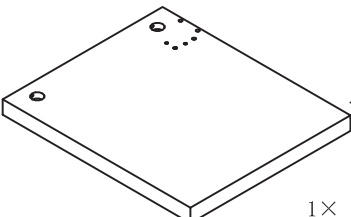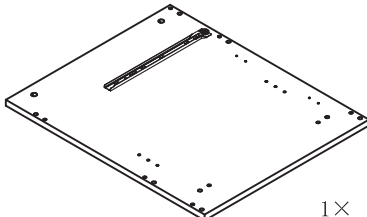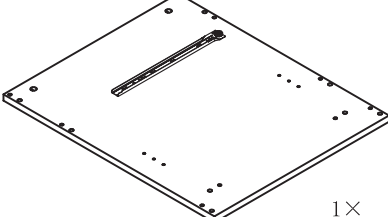


### Step 1


Attention: First of all, put a piece of carton or rug on the floor, and then begin to install the panels, so as to prevent the parts from scratch

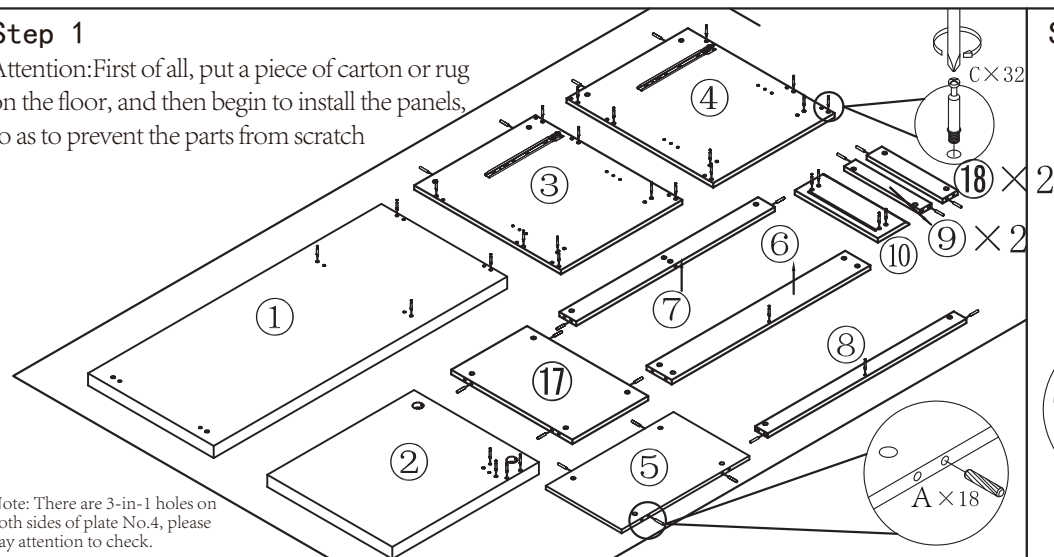


### Step 2

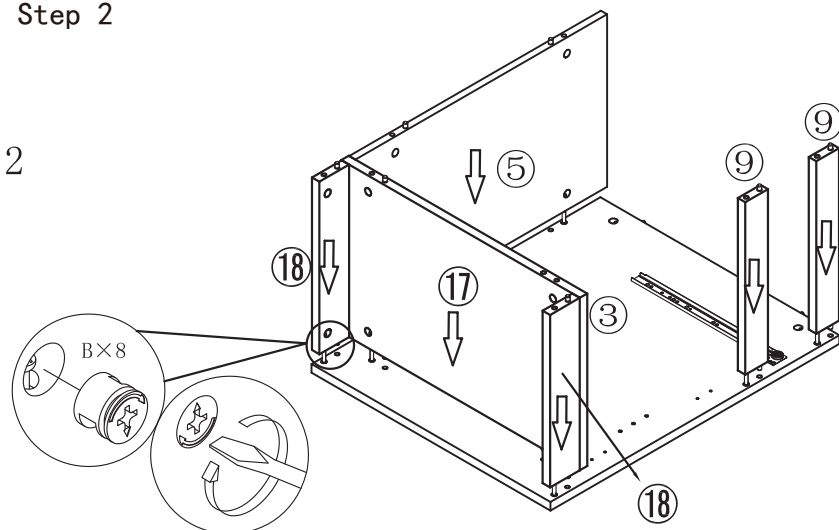


### Step 3

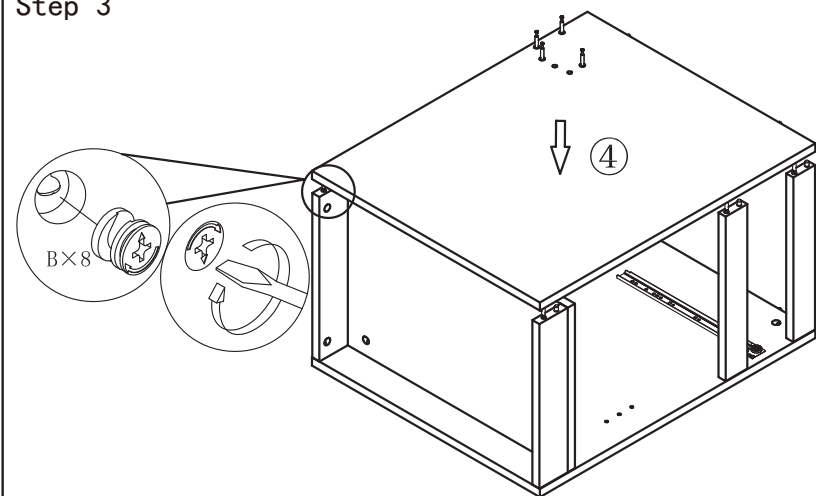


### Step 4

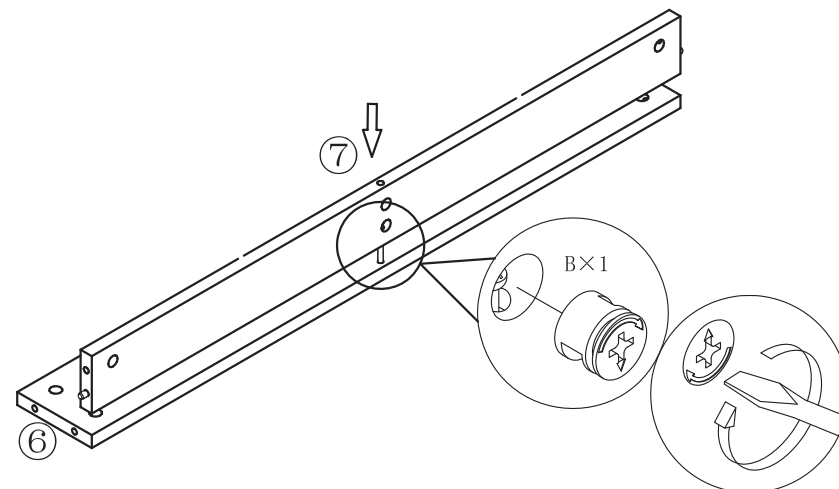


Step 5

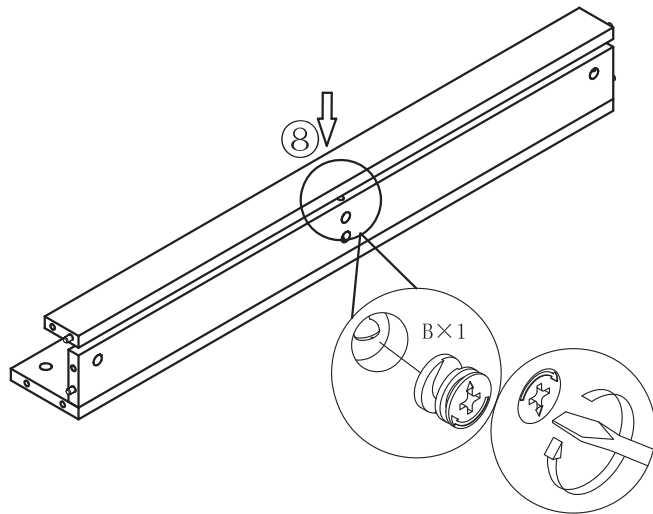


Step 6

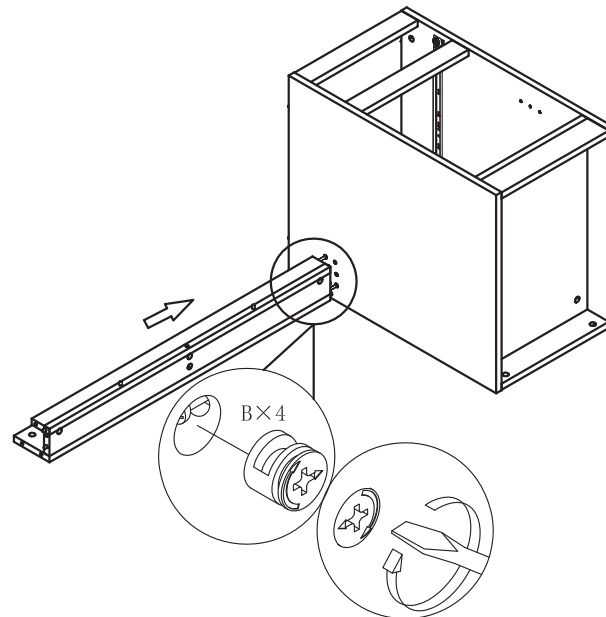


Step 7

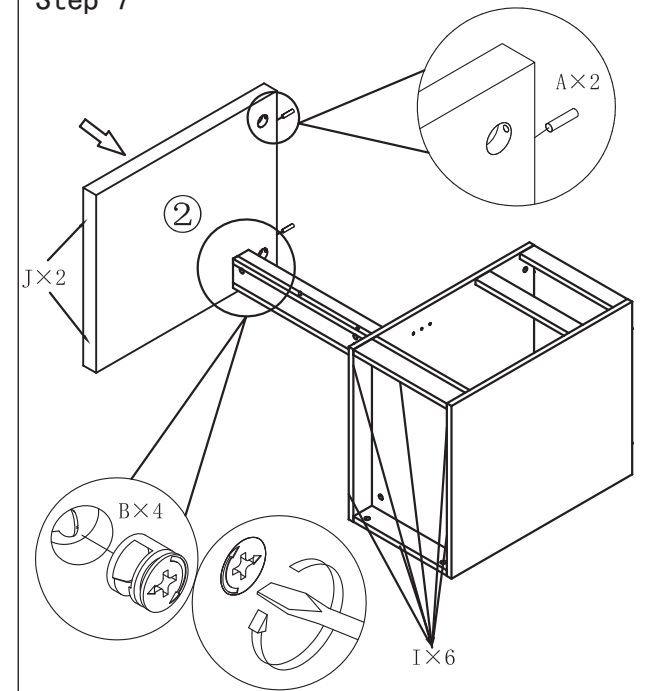


Step 8

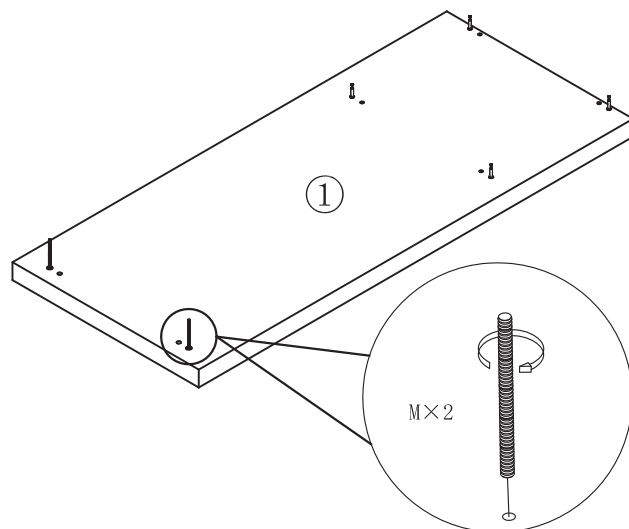


Step 9

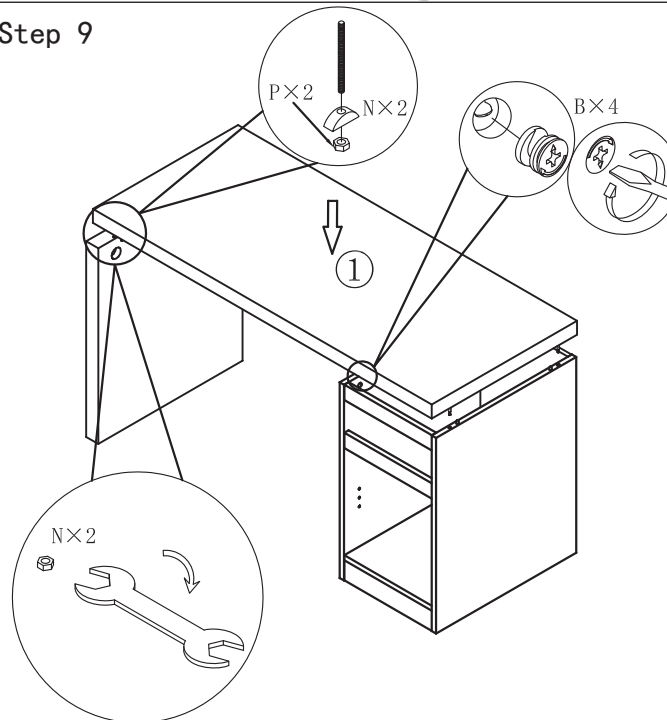


Step 10

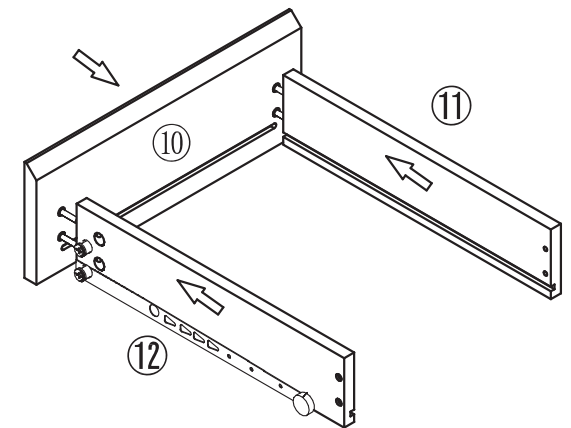


Step 11

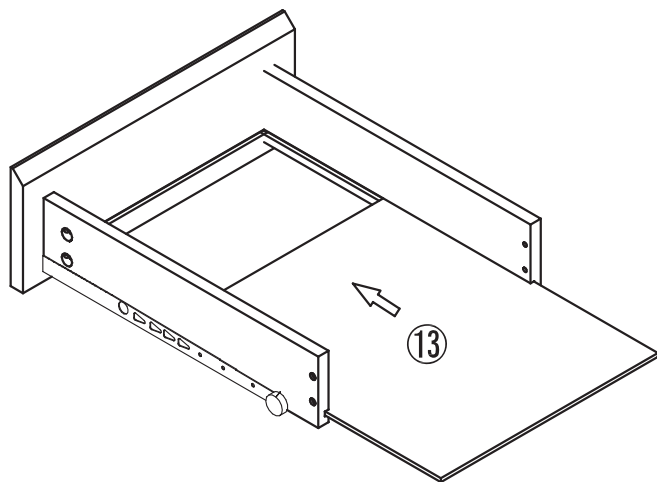


Step 12

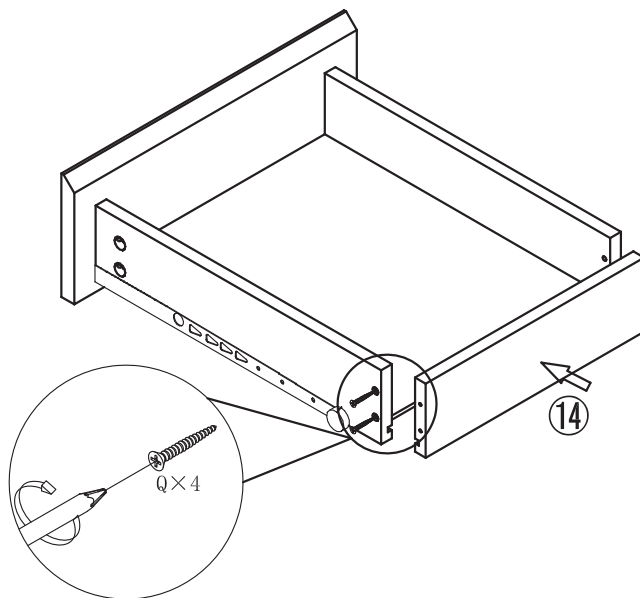


Step 13

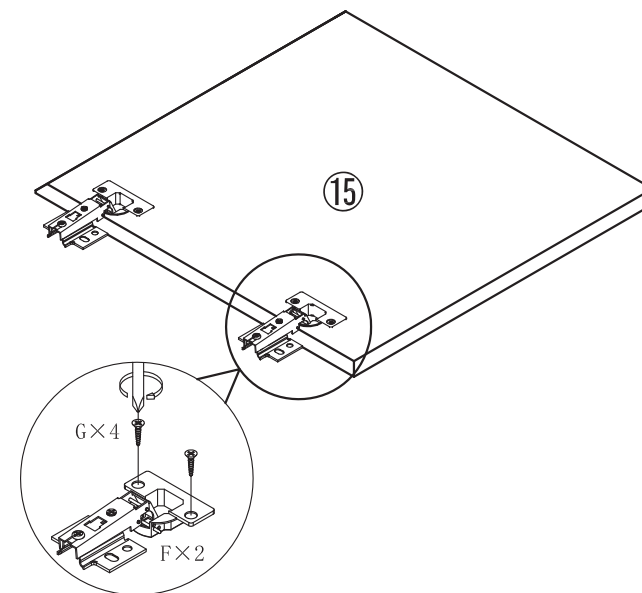

Step 14

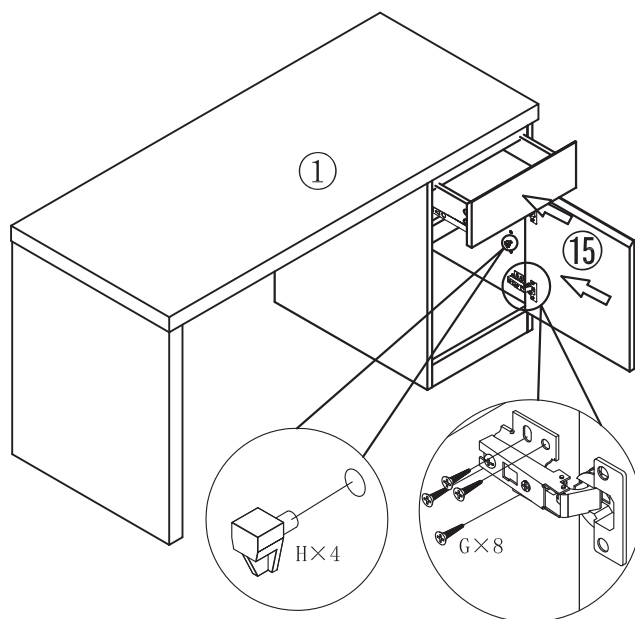

Step 15

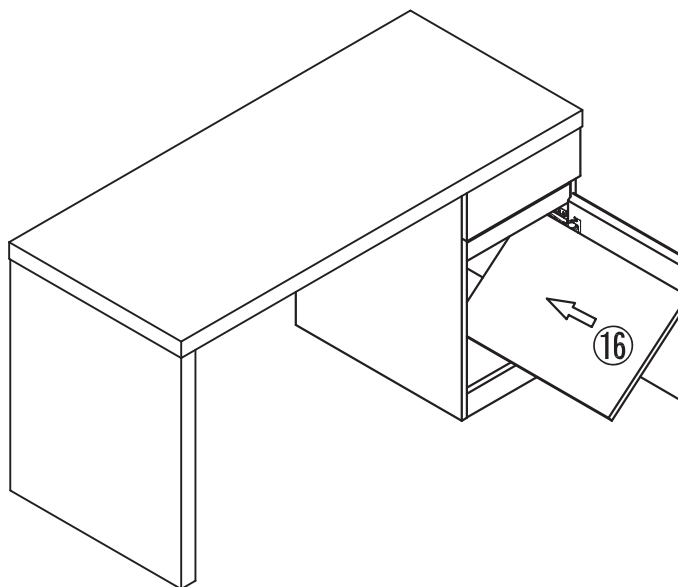

Step 16

