



Assembly Instruction

Product Name: Solidwood Pittsburgh Corner Bookcase



Completed Product Diagram

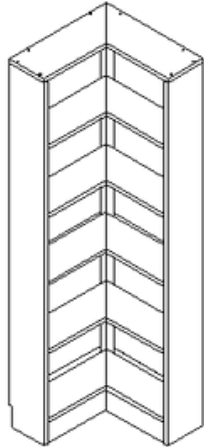





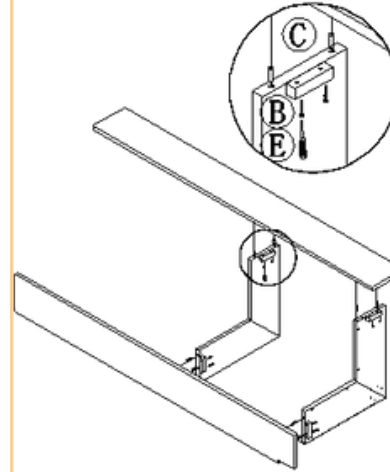
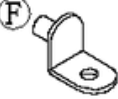
Step 1: Fastening of ⑤clapboards, ⑥bottom panels and ②back panels by "B" and "C"

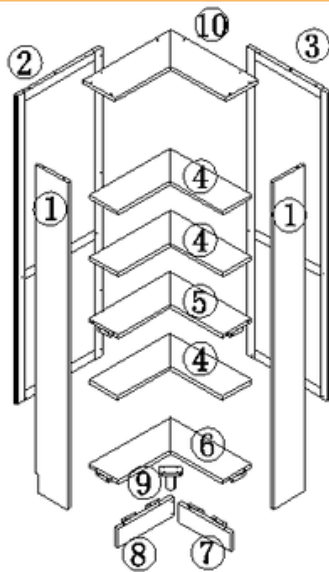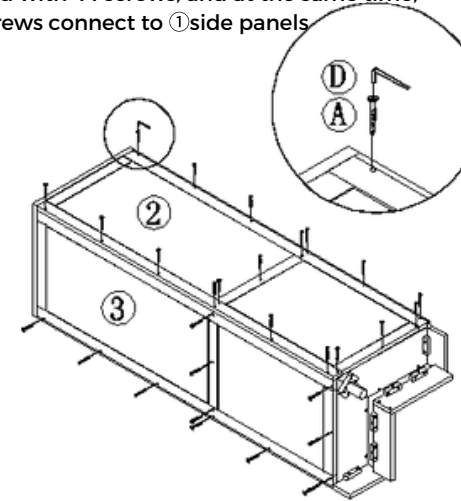


Step 2: ②back panel rests on ③back panel and is fixed with "A"screws, and at the same time, "A"screws connect to ①side panels




Hardware List:

A	B	C	D	E	F
					
Inner Six Angle Screws M3*40=40	M4*25 Tapping Screws=20	M8*30 Disk Dowels=16	L3=1	Bring Your Own Screwdriver	Side Panel Support

Step 3: Use C disk dowels and fix with "A"screws to install the top panel

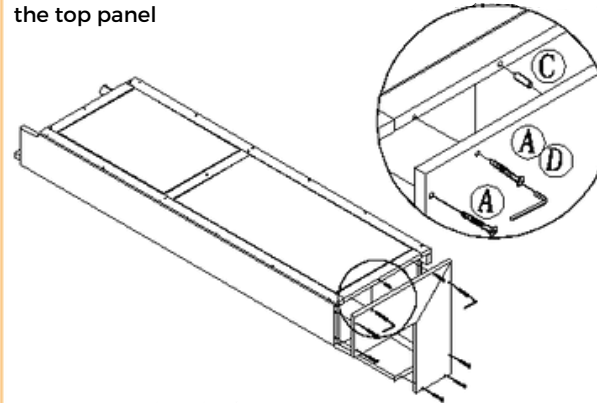

Step 3: Fix ⑦and ⑧bottom side panels with "A"screws and use "B"screws to connect ⑥bottom panel

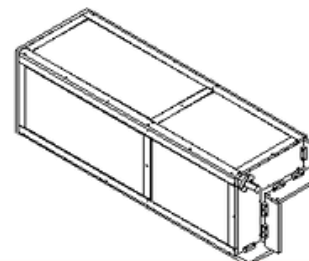

Step 4: Install F-shaped shelf, put it on the shelf supports

