





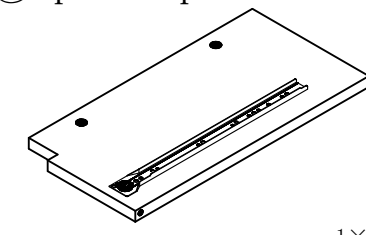
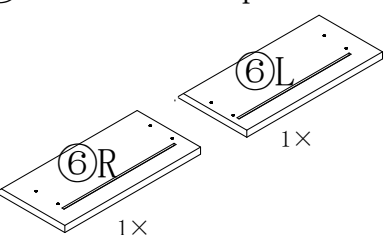
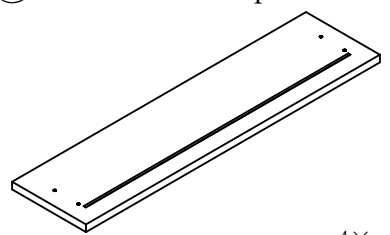
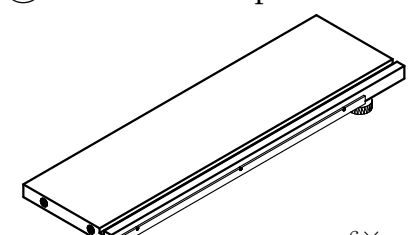


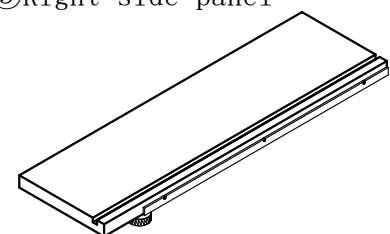
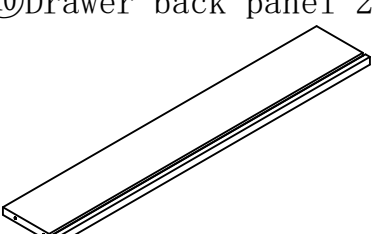
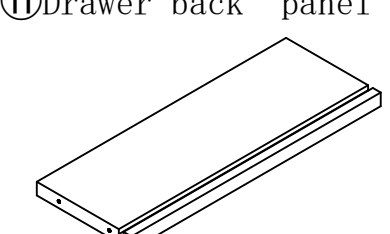
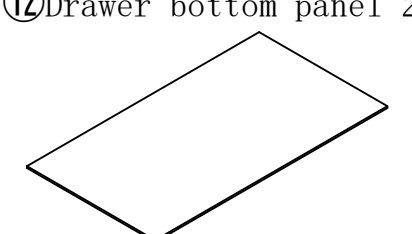


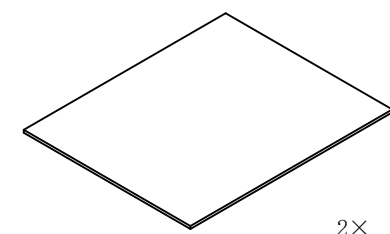
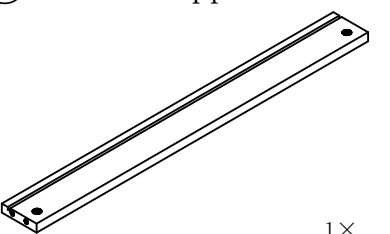
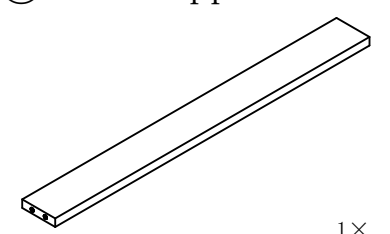
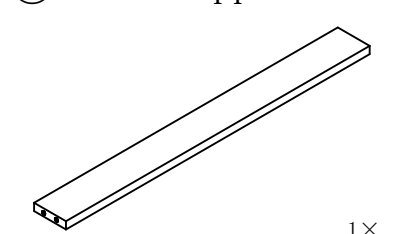




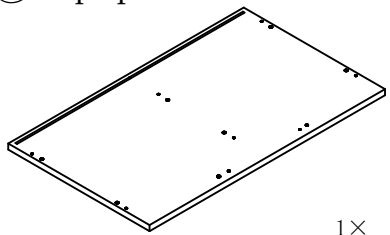
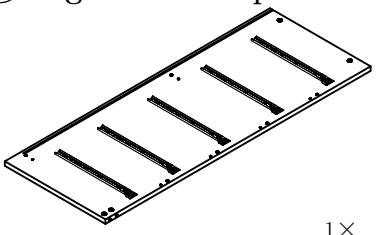
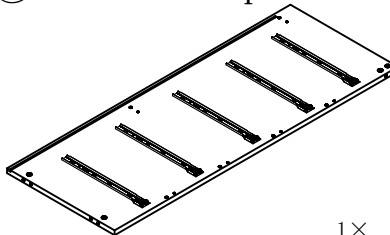
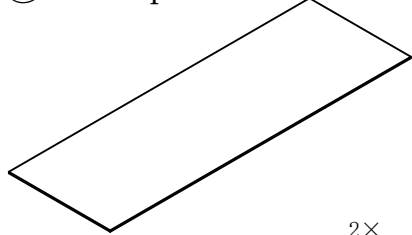



①Top panel  1×	②Right side panel  1×	③Left side panel  1×	④Back panel  2×	A. Wood dowel pins  21×	B. Three-in-one lock  48+2×
⑤Spacer panel  1×	⑥Drawer door panel 1  1×	⑦Drawer door panel 2  4×	⑧Left side panel  6×	C. Three-in-one screw  48+1×	D. Sticker  48×
⑨Right side panel  6×	⑩Drawer back panel 2  4×	⑪Drawer back panel 1  2×	⑫Drawer bottom panel 2  4×	E. Quick tooth self tapping screw  24+1×	F. Back panel support  10×
⑬Drawer bottom panel 2  2×	⑭Bottom support slat  1×	⑮Back support slat  1×	⑯Front support slat1  1×	G. Back panel clipping strip  1×	H. Anti collapse hardware accessories bag  2×
 <p>Two people are required to assist in installation</p>				I. Dual purpose screw driver  1×	⑰Support slat  1×
				⑱Front support slat2  3×	⑲Front support slat3  1×
				Model number:	GF584-0812
				Product size:	800W*480D*1230H

Step 1


Attention: Before install, need place a blanket on the ground or also can use packing carton paper put on the ground then install on blanket/packing carton paper to avoid scratching product accessories



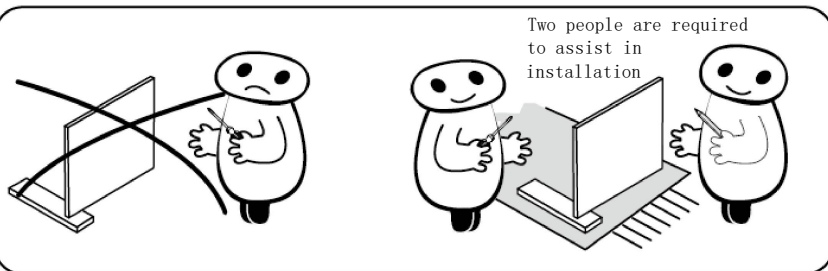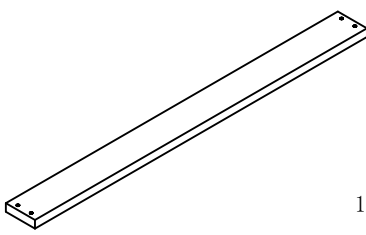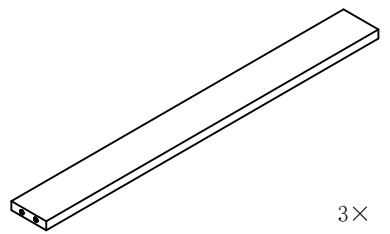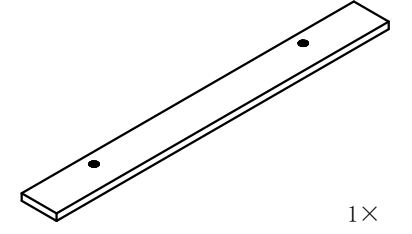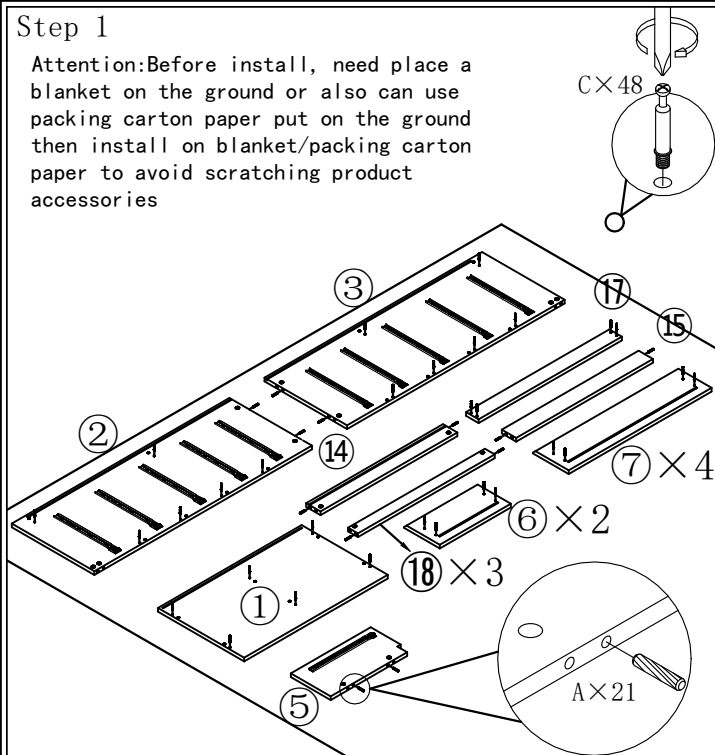Step 2

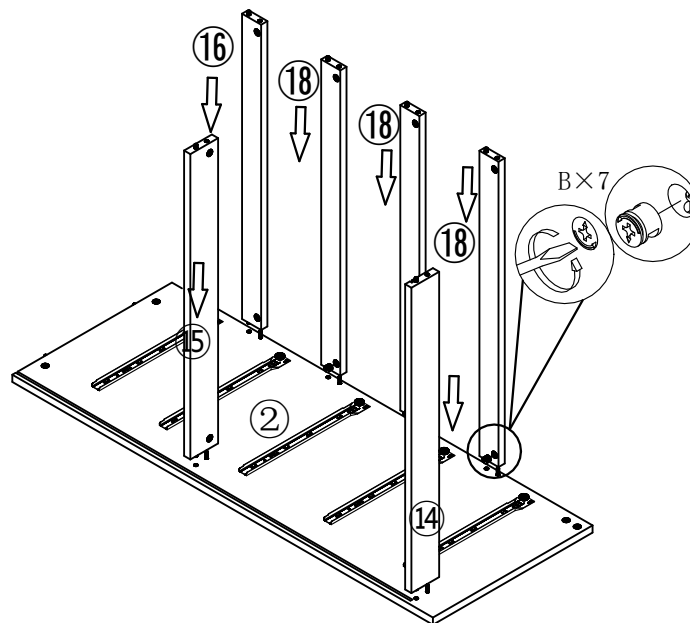


Step 3

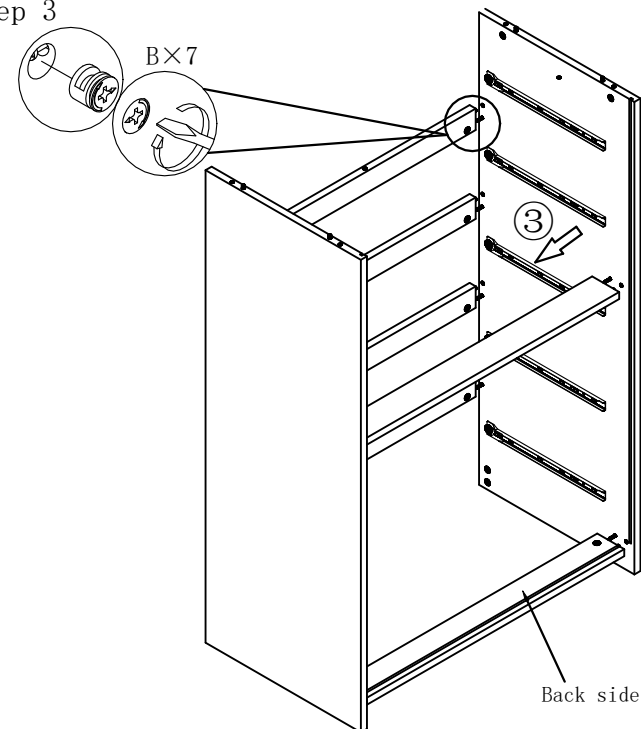


Step 4

Note: when install back panel, two side of back panel need stuck into back panel slot, then press down slowly along the slot, if have deviation, use hand press on two side deviation position till stuck into bottom panel slot

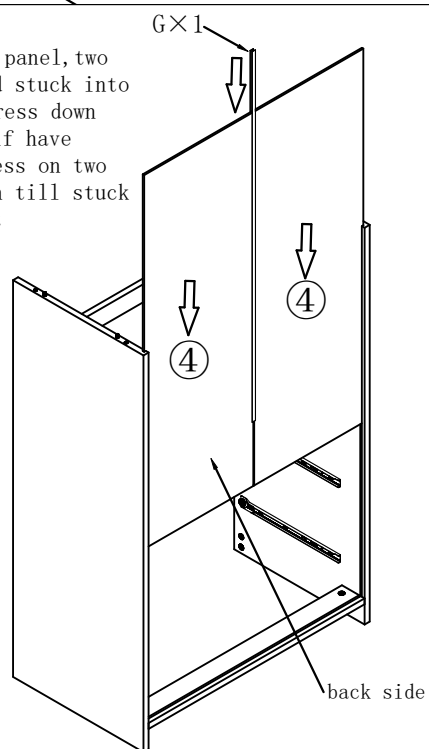


Step 5

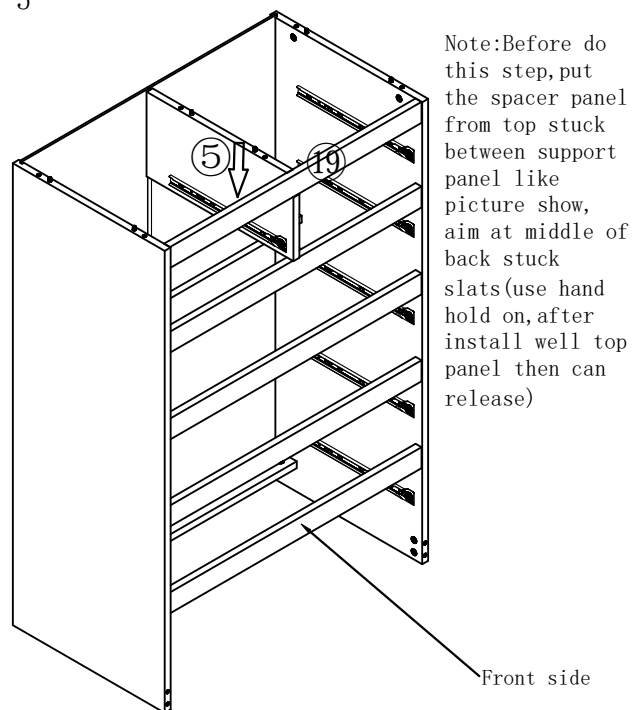


Note: Before do this step, put the spacer panel from top stuck between support panel like picture show, aim at middle of back stuck slats (use hand hold on, after install well top panel then can release)

Step 6

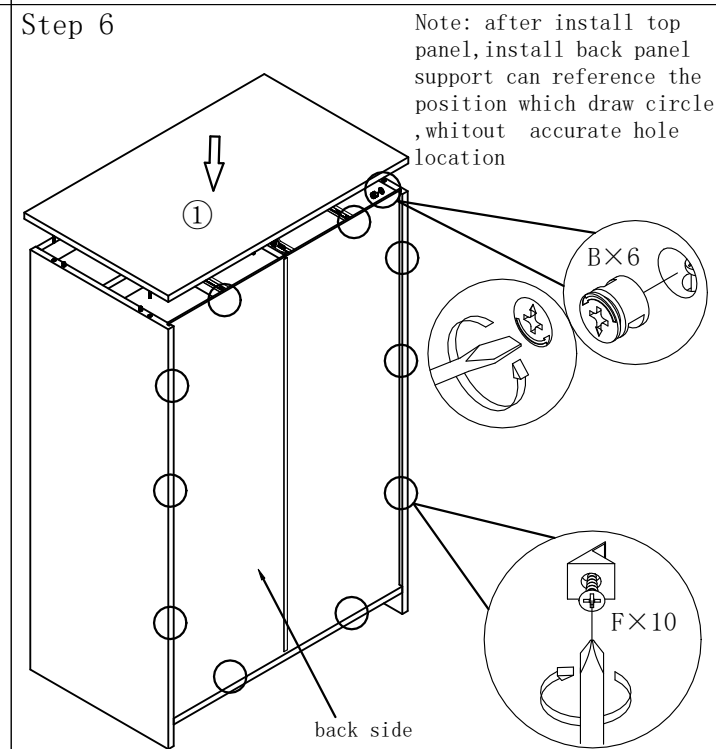


Note: after install top panel, install back panel support can reference the position which draw circle, without accurate hole location


Step 7

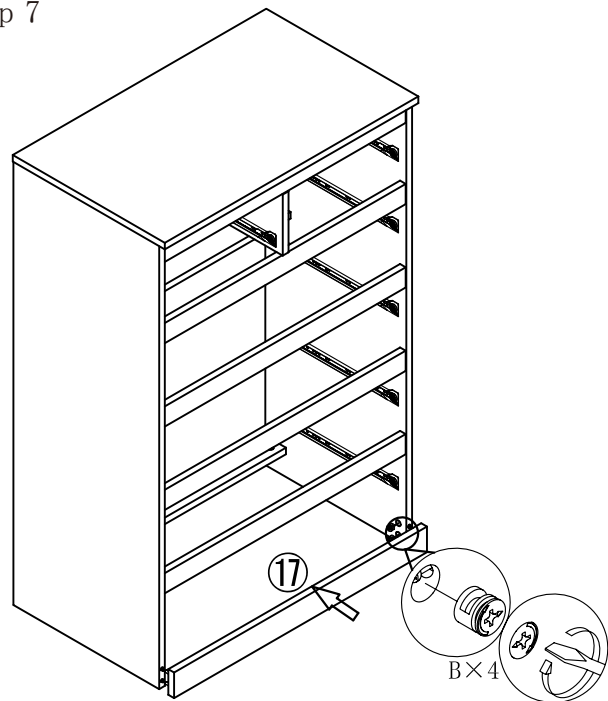


Step 8

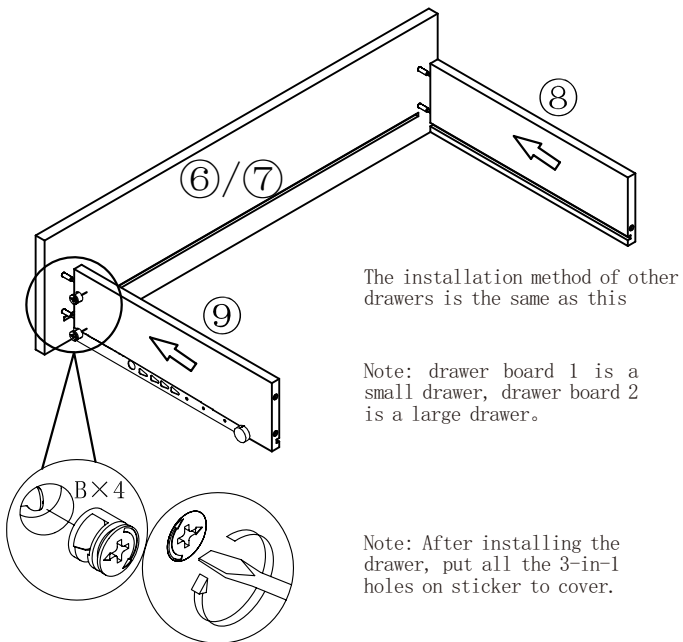


Step 9

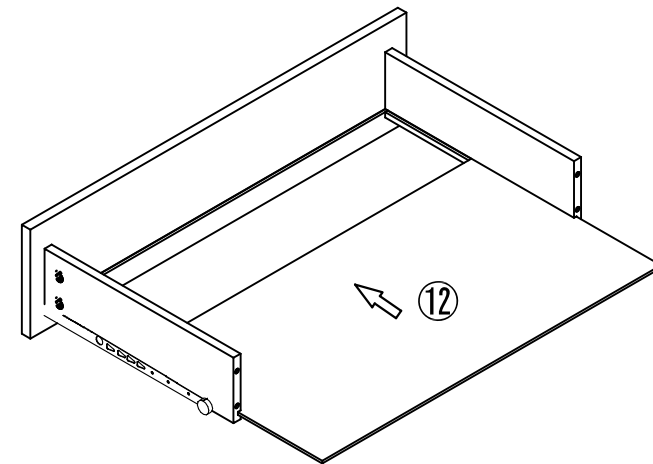

Step 10

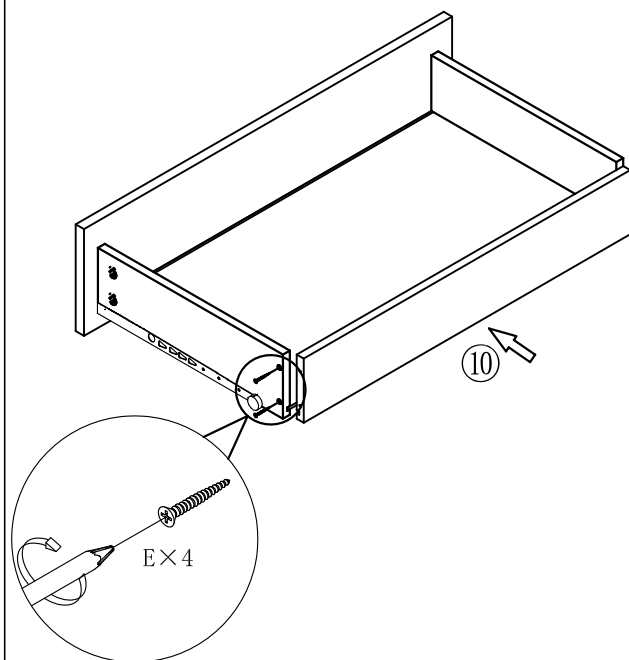


Step 11

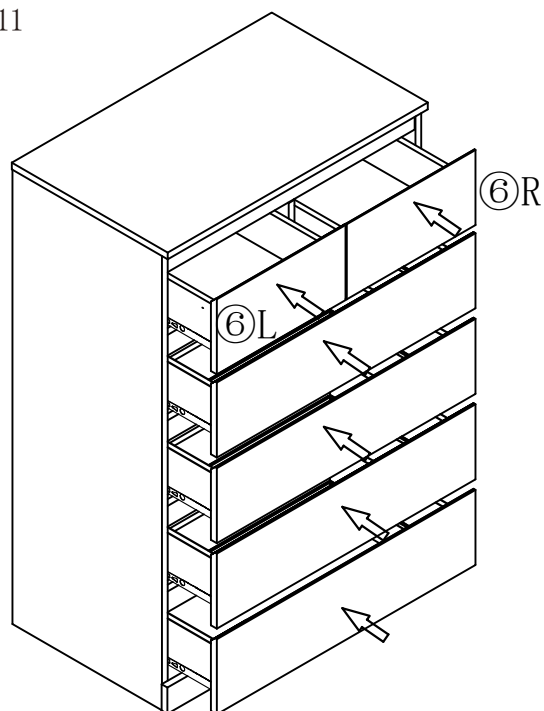


Step 12

Open K (anti-pour hardware package) 2X
(the following is the number of single package)

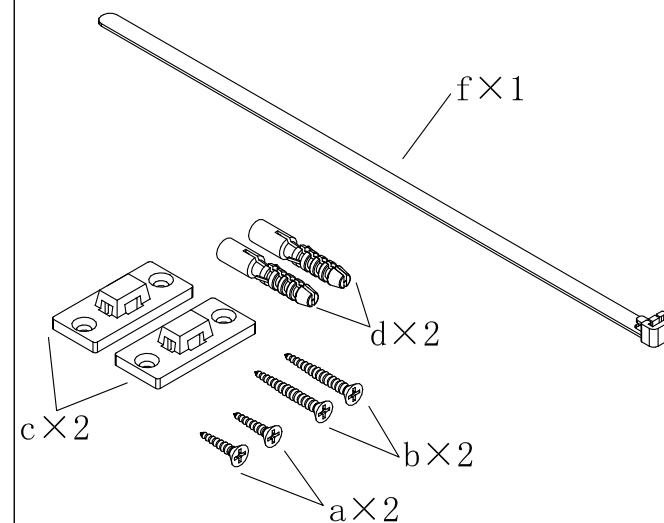


Step 13

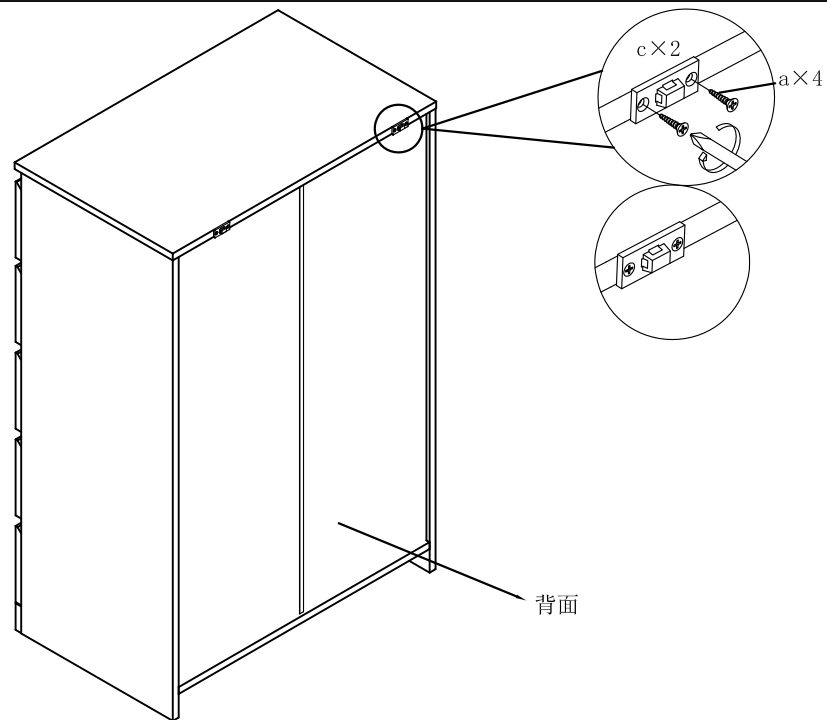

Step 14

Note: According to the installation in the top plate C corresponding to the location of the hole in the wall, and tap into dx4, and then screw into bx4.

Step 15

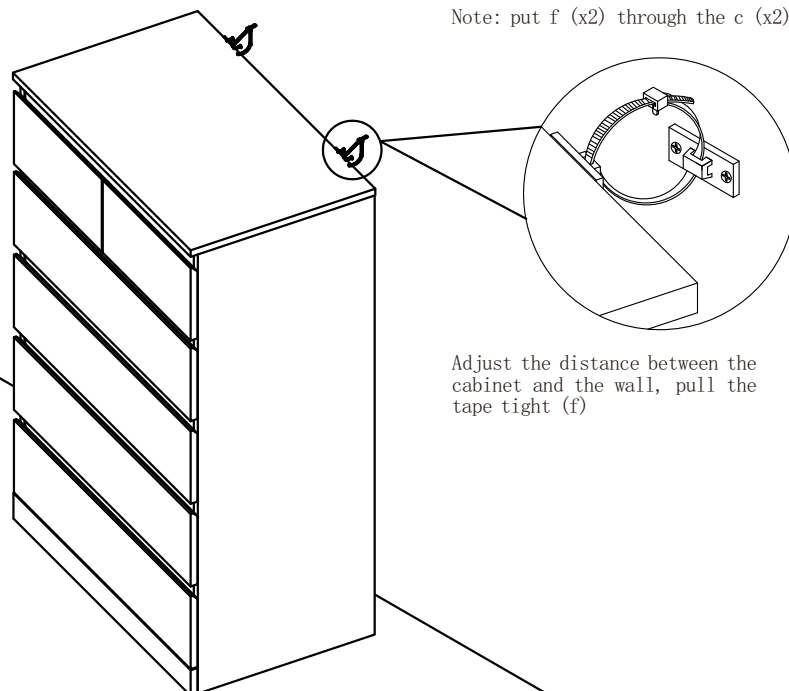

Step 16

