


page: 1/2

LINSY 林氏家居

安装示意图/Assembly Instruction


产品名称 Model NO	BY040-AB电脑椅 (computer chair)	产品规格 Specification	600*600*725-800
安装工具 Tools required	安装人数 No.of people required		
			

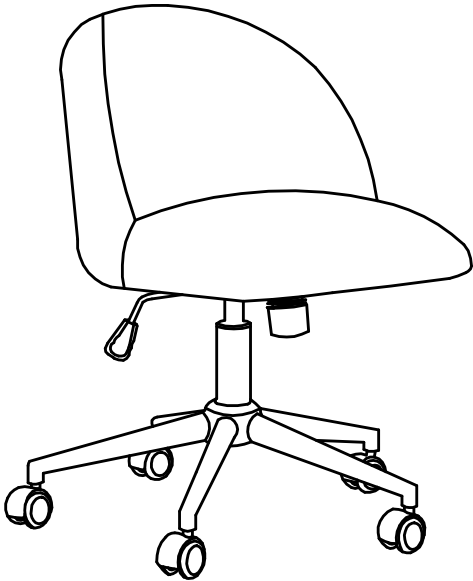

五金表 Hardware list

编号 NO	名称 Name	图示 Diagram	数量 QTY
①	5mm六角扳手Wrench		1
②	大扁头内六角Screw(M6X20)		4
③	80#白色_三级_双缩1.5cm气杆 Air rod		1
④			

部件表 Parts List

编号 NO	名称 Name	图示 Diagram	数量 QTY	材质 Material
①	背座 Back seat frame		1	机压板+铁架+海绵+仿兔毛 Plywood+iron frame+Sponge +Rabbit hair imitation
②	300#脚 Foot		1	白纱纹 White yarn pattern
③	AQ305-0021托盘 Tray		1	黑色铁质 Black iron
④	2.0寸中杯口 PU黑白插轮 wheels		5	PU PU


产品名称 Model NO BY040-AB

安 装 示 意 图

Assembly Instruction


STEP:1

将部件4（2.0寸中杯口PU黑白插轮）分别装在部件2（300#拉伸脚）上Install part 4 (wheels) on part 2 (foot).

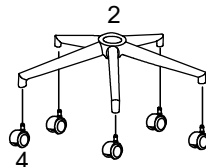


STEP:2

将配件C（80#白色_三级_双缩1.5cm气杆）装入椅脚中心孔
Install accessory C (air rod) into the center hole of the chair foot.

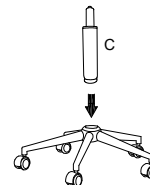

STEP:3


将部件3（托盘）用配件B（M6*20的螺丝）锁在部件1（背座）上
Lock part 3 (tray) on part 1 (seat back frame) with accessory B (M6*20 screws)

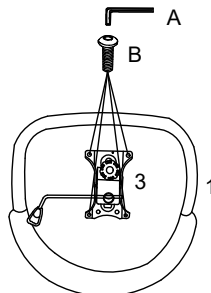

STEP:4

气杆的顶端对准底盘的孔位对接
Align the top of the air rod with the hole in the chassis

Align the top of the air rod with the hole in the chassis

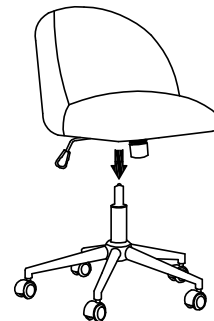

STEP 5

安装完成

The Installation is completed.

