
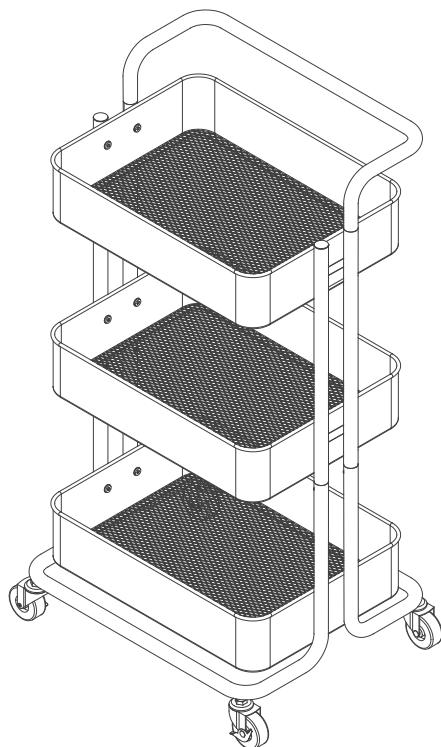


LINSY 林氏家居

安装示意图/Assembly Instruction

产品名称 Model NO.	LH393J2-A/B
产品规格 Specification	435*371*825
安装工具 Tool	安装人数Installer

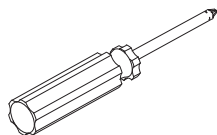

五金表/Hardware list




(A)*6

沉头十字螺杆 M4*10
M4*10 Countersunk cross screw

 $(C)^{*}_4$

塑胶盖
Plastic cover



(E)*1

4厘内六角扳手
4mm internal
hexagonal wrench




(B)*12


平头内六角螺杆M6*10
M6*10 Flat head
hexagonal socket screw

 $(D)^*1$


开口扳手
Open End Wrench


$$(F)^{*4}$$


工业轮
Industrial wheel

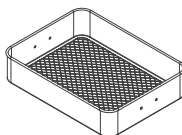


1

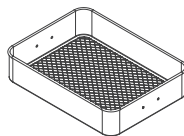


2

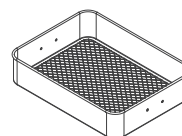


3

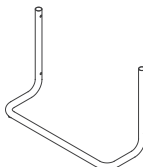

4

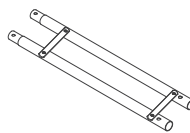

5

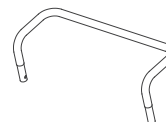

6

部件表/Parts List

[illegible]

安装方法/ Installation method


温馨提示：
请正确使用螺丝，否则将会造成产品严重损坏！

Reminder:
Please use the screws correctly,
or else it will casue serious
product damaged.




(B)*4

2根脚管 (4) 与大网篮 (1) 用内六角螺丝 (B)固定
(注：网篮螺丝先不要拧紧)
Fix the 2 foot tubes (4) and the large net basket (1)
with Allen screws (B)
(Note: Do not tighten the basket screws yet)

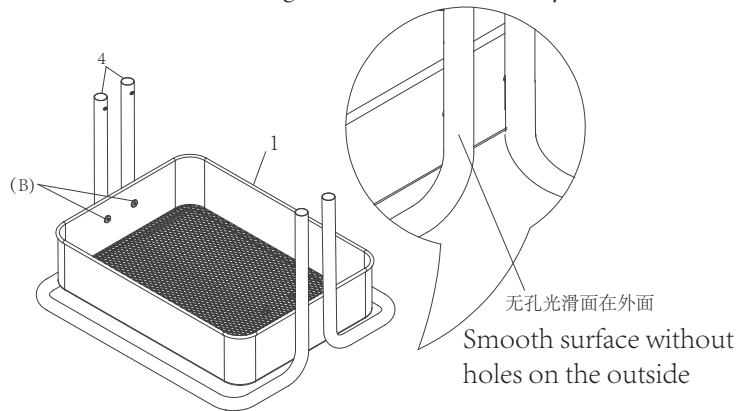

(A)*4

插上2根上管 (5)，用十字螺丝 (A)固定
(注：十字螺丝用十字螺丝刀拧紧)
Insert 2 upper pipes (5) and secure with cross screws (A)
(Note: Tighten the cross screw with a cross screwdriver)

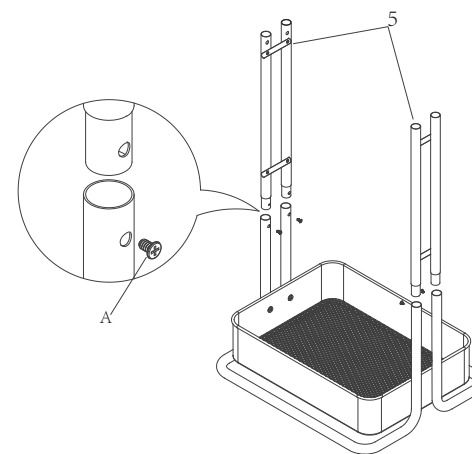


注意：
Be careful:




(B)*4

按照步骤1的方法组装中网篮 (2)
(注：网篮螺丝先不要拧紧)
Assemble the middle net basket (2) according to the
method in step 1 (Note: Do not tighten the basket screws yet)

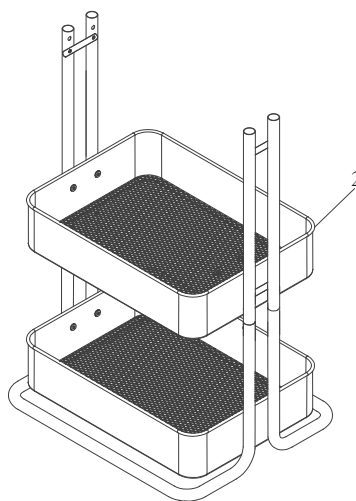

(A)*2

先把扶手管 (6) 插入两上管(5) 对应孔管中，
用十字螺丝 (A)固定 (注：十字螺丝用十字螺丝刀拧紧)
Firstly, insert the armrest tube (6) into the corresponding
hole tubes of the two upper tubes (5), Fix with a cross
head screw (A) (note: tighten the cross head screw
with a cross head screwdriver)

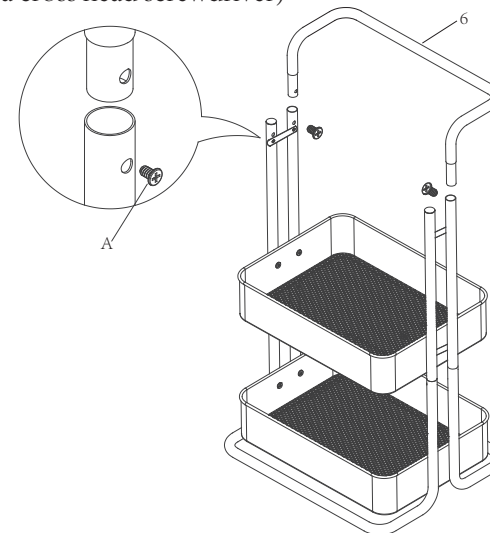

安装方法/ Installation method

温馨提示：
请正确使用螺丝，否则将会造成产品严重损坏！


Reminder:
Please use the screws correctly,
or else it will casue serious
product damaged.



(B)*4

按照步骤1的方法组装小网篮 (3)
(注：网篮螺丝先不要拧紧)
Follow the method in step 1 to assemble the small net
basket (3)(Note: Do not tighten the basket screws yet)


5

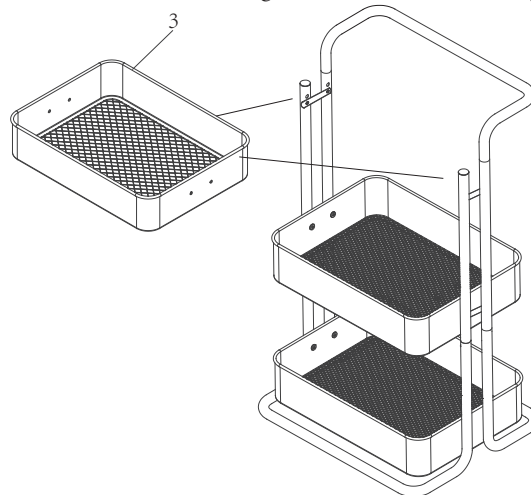

(C)*2

上管 (5) 上端塞入2个塑胶盖 (C) ,
网篮螺丝从下往上依次拧紧
Insert two plastic caps (C) into the upper end of the upper
tube (5),Tighten the basket screws from bottom to
top in sequence.

6

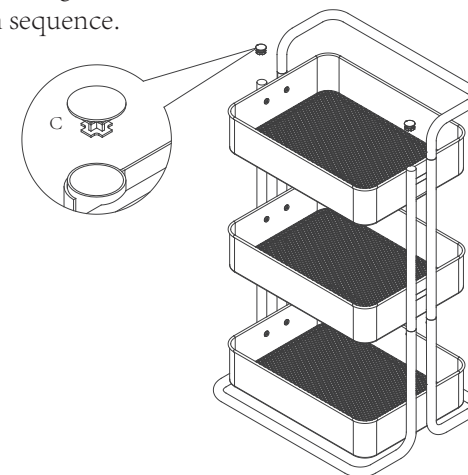

注意：
Be careful:



(F)*4

最后在脚管 (4) 底部旋入4个工业轮 (F) ,
最后用开口扳手 (D) 固定，组装完成
Finally, screw in four industrial wheels (F) at the bottom
of the foot tube (4),Finally, fix with an open-ended
wrench (D) and complete the assembly.

7

