LINSY 林氏家居

安装示意图/Assembly Instruction

产品名称 Model NO.	LH393J2-A/B
产品规格 Specification	435*371*825
安装工具 Tool	安装人数Installer

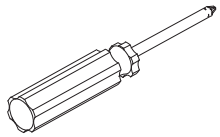

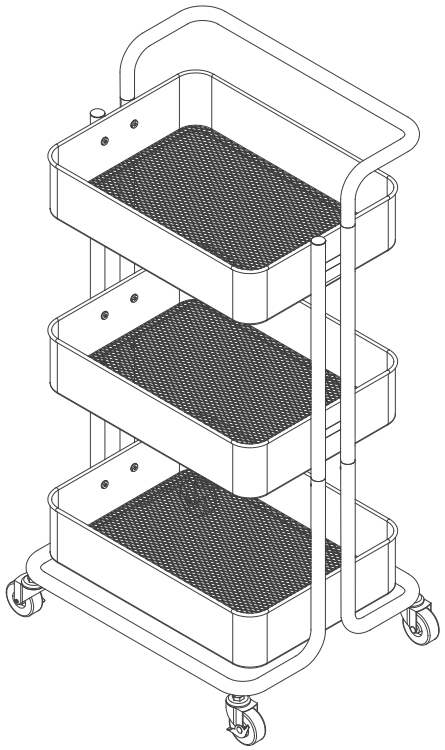

五金表/Hardware list

(A)*6

沉头十字螺杆 M4*10
M4*10 Countersunk cross screw



(B)*12

平头内六角螺杆M6*10
M6*10 Flat head hexagonal socket screw

(C)*4

塑胶盖
Plastic cover



(D)*1

开口扳手
Open End Wrench



(E)*1

4厘内六角扳手
4mm internal hexagonal wrench



(F)*4

工业轮
Industrial wheel

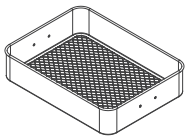

1

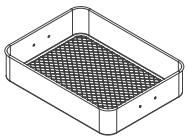

2

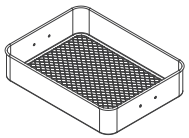

3

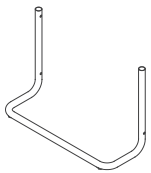

4

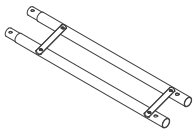

5

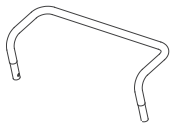

6

部件表/Parts List

编号NO.	名称Name	规格 Specification	数量QTY	材质Material
①	大网篮 Large net basket	396*292*85	1	铁板+网板 Iron plate+mesh plate
②	中网篮 Medium net basket	391*287*85	1	铁板+网板 Iron plate+mesh plate
③	小网篮 Small net basket	386*282*85	1	铁板+网板 Iron plate+mesh plate
④	脚管 Foot tube	435*166*275	2	铁管 Iron pipe
⑤	上管 Upper tube	425*77*21	2	铁管 Iron pipe
⑥	扶手管 Armrest tube	415*168*115	1	铁管 Iron pipe

安装方法/ Installation method

温馨提示：
请正确使用螺丝，否则将会造成产品严重损坏！

Reminder:
Please use the screws correctly, or esle it will casue serious product damaged.

注意：
Be careful:

1

(B)*4

2根脚管（4）与大网篮（1）用内六角螺丝（B)固定
（注：网篮螺丝先不要拧紧）
Fix the 2 foot tubes (4) and the large net basket (1) with Allen screws (B)
(Note: Do not tighten the basket screws yet)

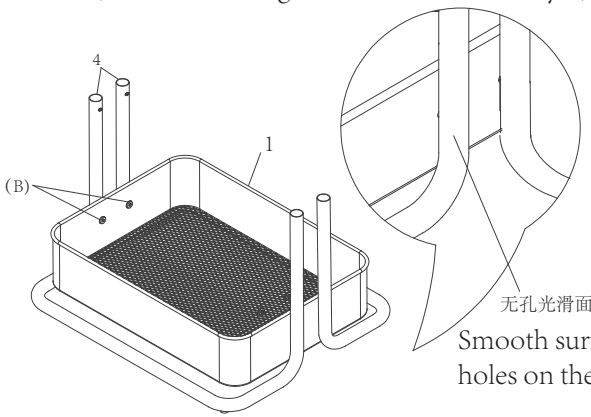

Smooth surface without holes on the outside

2

(A)*4

插上2根上管（5），用十字螺丝（A)固定
（注：十字螺丝用十字螺丝刀拧紧）
Insert 2 upper pipes (5) and secure with cross screws (A)
(Note: Tighten the cross screw with a cross screwdriver)

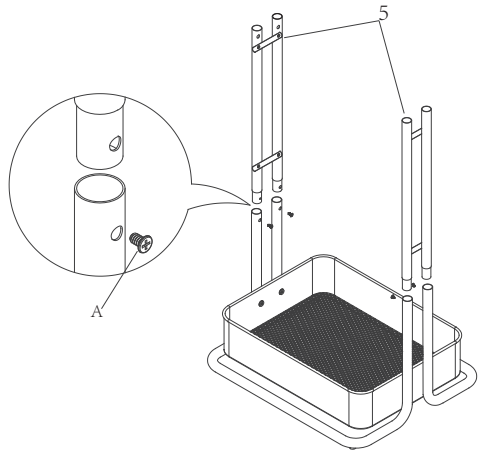

3

(B)*4

按照步骤1的方法组装中网篮（2）
（注：网篮螺丝先不要拧紧）
Assemble the middle net basket (2) according to the method in step 1(Note: Do not tighten the basket screws yet)

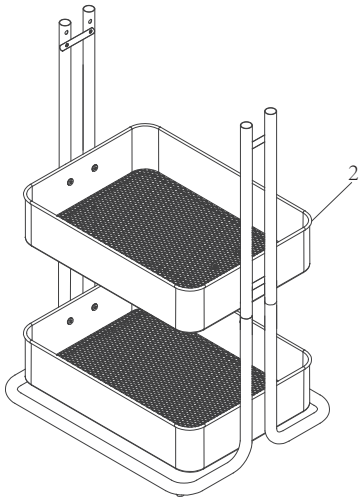

4

(A)*2

先把扶手管（6）插入两上管(5）对应孔管中，
用十字螺丝（A)固定（注：十字螺丝用十字螺丝刀拧紧）
Firstly, insert the armrest tube (6) into the corresponding hole tubes of the two upper tubes (5),Fix with a cross head screw (A) (note: tighten the cross head screw with a cross head screwdriver)

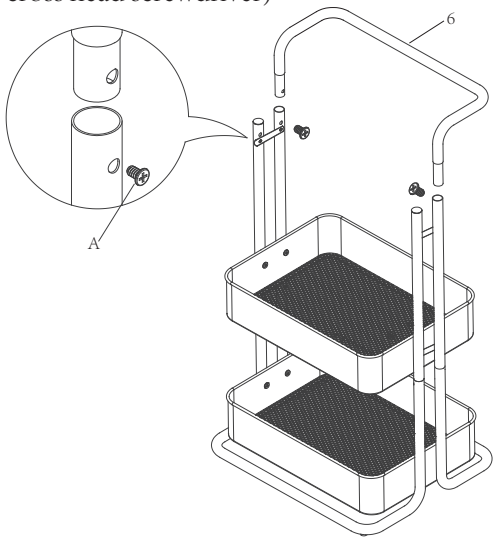

安装方法/ Installation method

温馨提示：
请正确使用螺丝，否则将会造成产品严重损坏！

Reminder:
Please use the screws correctly, or esle it will casue serious product damaged.

注意：
Be careful:

(B)*4

5

按照步骤1的方法组装小网篮（3）
（注：网篮螺丝先不要拧紧）

Follow the method in step 1 to assemble the small net basket (3)(Note: Do not tighten the basket screws yet)

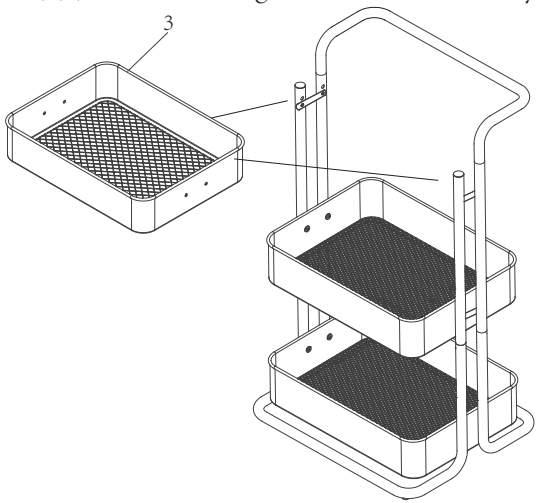

(C)*2

6

上管（5）上端塞入2个塑胶盖（C），
网篮螺丝从下往上依次拧紧

Insert two plastic caps (C) into the upper end of the upper tube (5),Tighten the basket screws from bottom to top in sequence.

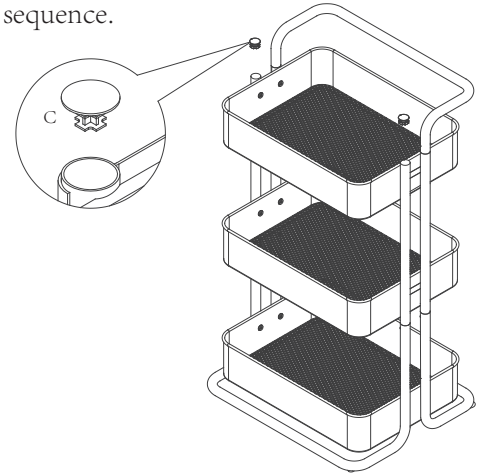

(F)*4

7

最后在脚管（4）底部旋入4个工业轮（F），
最后用开口扳手（D）固定，组装完成
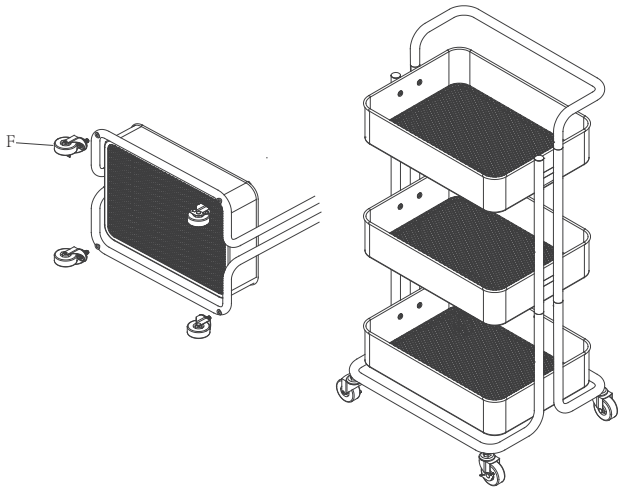
Finally, screw in four industrial wheels (F) at the bottom of the foot tube (4),Finally, fix with an open-ended wrench (D) and complete the assembly.