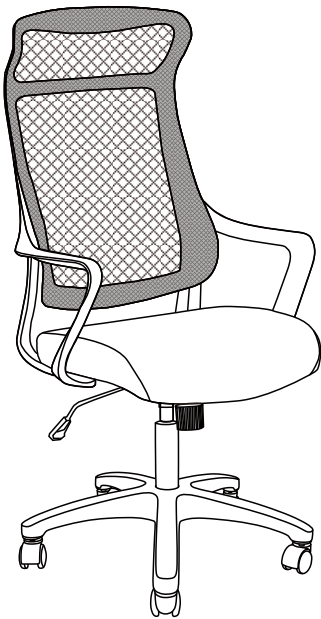



LINSY 林氏家居

安装示意图/Assembly Instruction

产品名称 Model NO.	BY001-A
产品规格 Specification	637*630*1120-1190
安装工具 Tool	安装人数Installer



五金表/Hardware list



(A)*1

内六角扳手
Wrench



(B)*4

内外六角螺丝8*20
Inner and outer
hexagon screws8*20



(C)*4

平头内六角螺丝8*35
Flat head hexagon
socket screw8*35



(D)*4

沉头内六角螺丝6*20(镀锌)
Countersunk head
hexagon socket screw
(Galvanized)6*20



(E)*5

50PA椅轮
50PA Castor



(F)*1

三级气压棒
Three stage
pneumatic rod



第一步：扫码自动跳转林氏公众号页面

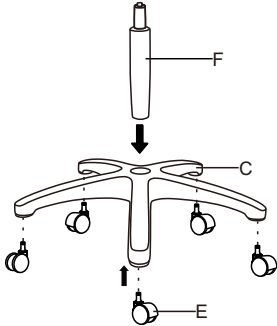
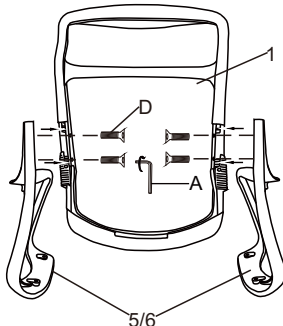
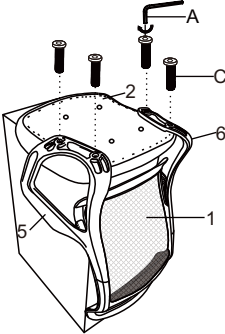
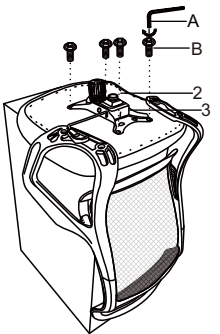
第二步：下拉页面至安装视频位置

Step 1: Scan the code to automatically jump to
Lin's official account page

Step 2: Drop down page to install video location

部件表/Parts List

编号NO.	名称Name	规格 Specification	数量QTY	材质Material
①	靠背 Backrest		1	PP+玻纤 PP+Glass fiber
②	座垫 Cushion		1	海绵 Chair foot
③	托盘 Tray		1	铁 Iron
④	椅脚 Chair foot		1	PA+玻纤 PA+Glass fiber
⑤	右扶手 Armrest (R)		1	PP+玻纤 PP+Glass fiber
⑥	左扶手 Armrest (L)		1	PP+玻纤 PP+Glass fiber

BY001-A	STEP 1	
	安装方法/ Installation method	
		
	把脚轮分别装入椅脚的五个脚孔，再将气压棒装入椅脚的中心孔 Install the casters into the five foot holes of the chair feet, and then install the air pressure rod into the center hole of the chair feet	
	STEP 2	
		
	如图将扶手上端与靠背互相卡入后，依次锁上四颗靠背螺丝D After the upper end of the armrest and the backrest are clamped into each other as shown in the figure, lock four backrest screws D in turn	
	STEP 3	
		
	如图将坐垫倒放在纸箱上或桌上，把组装好的椅背扶手安装到坐垫上并锁上四颗扶手螺丝C As shown in the figure, put the cushion upside down on the carton or table, install the assembled armrest on the cushion and lock the four armrest screws C	
	STEP 4	
		
	如图安装底盘，依次将四颗底盘螺丝B全部锁入后用扳手加固锁紧 Install the chassis as shown in the figure, lock all four chassis screws B in sequence, and then use a wrench to reinforce and lock them	
	STEP 5	
		
	注意：先锁上座后的两颗螺丝，再锁入座前的两颗螺丝，螺丝务必锁紧以防止扶手晃动 Note: lock 2 screws on the rear seat, then lock 2 on the front seat. All screws must be locked tight to prevent the handrail from shaking	
	STEP 6	
		