
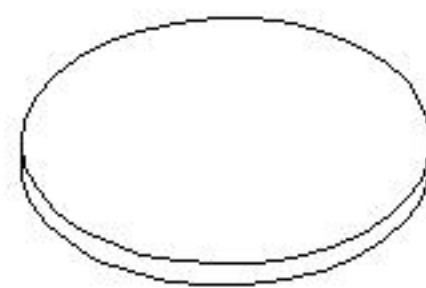
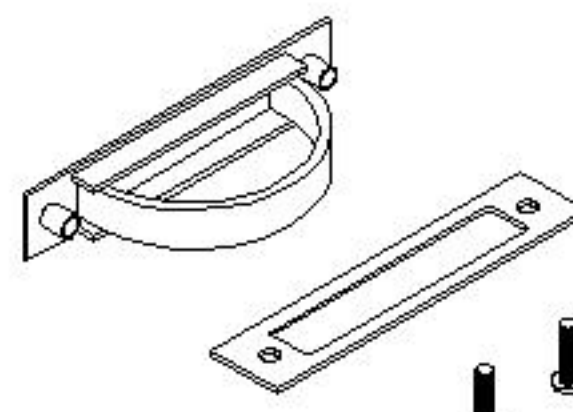
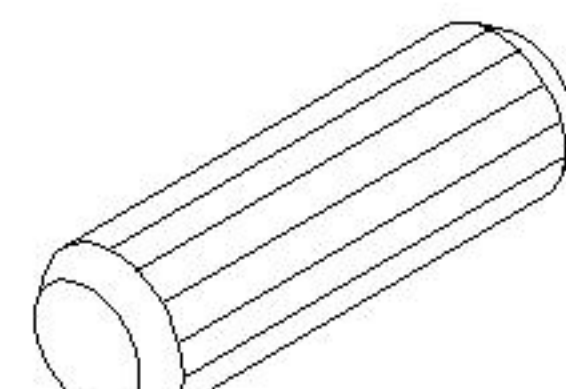
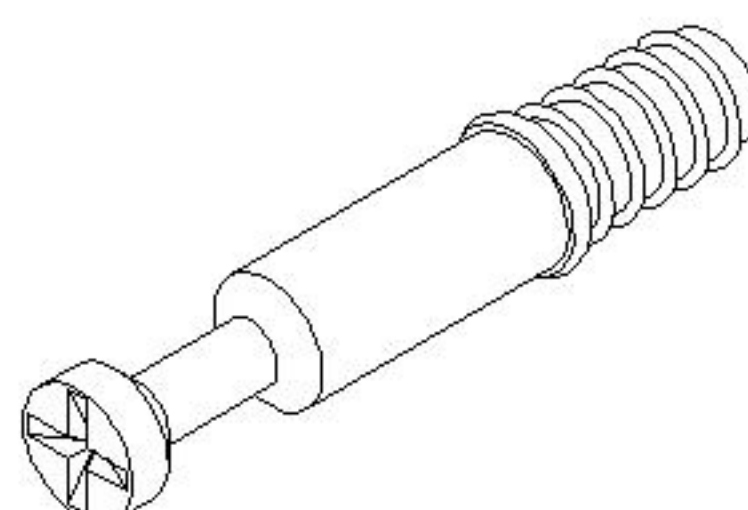
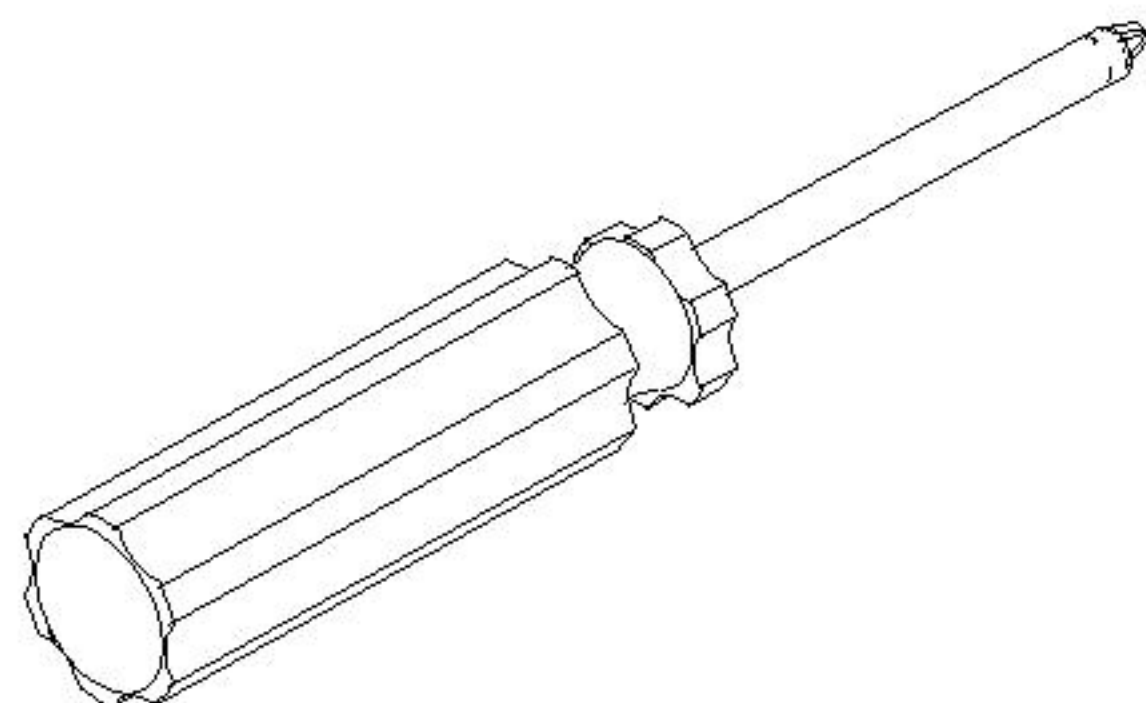
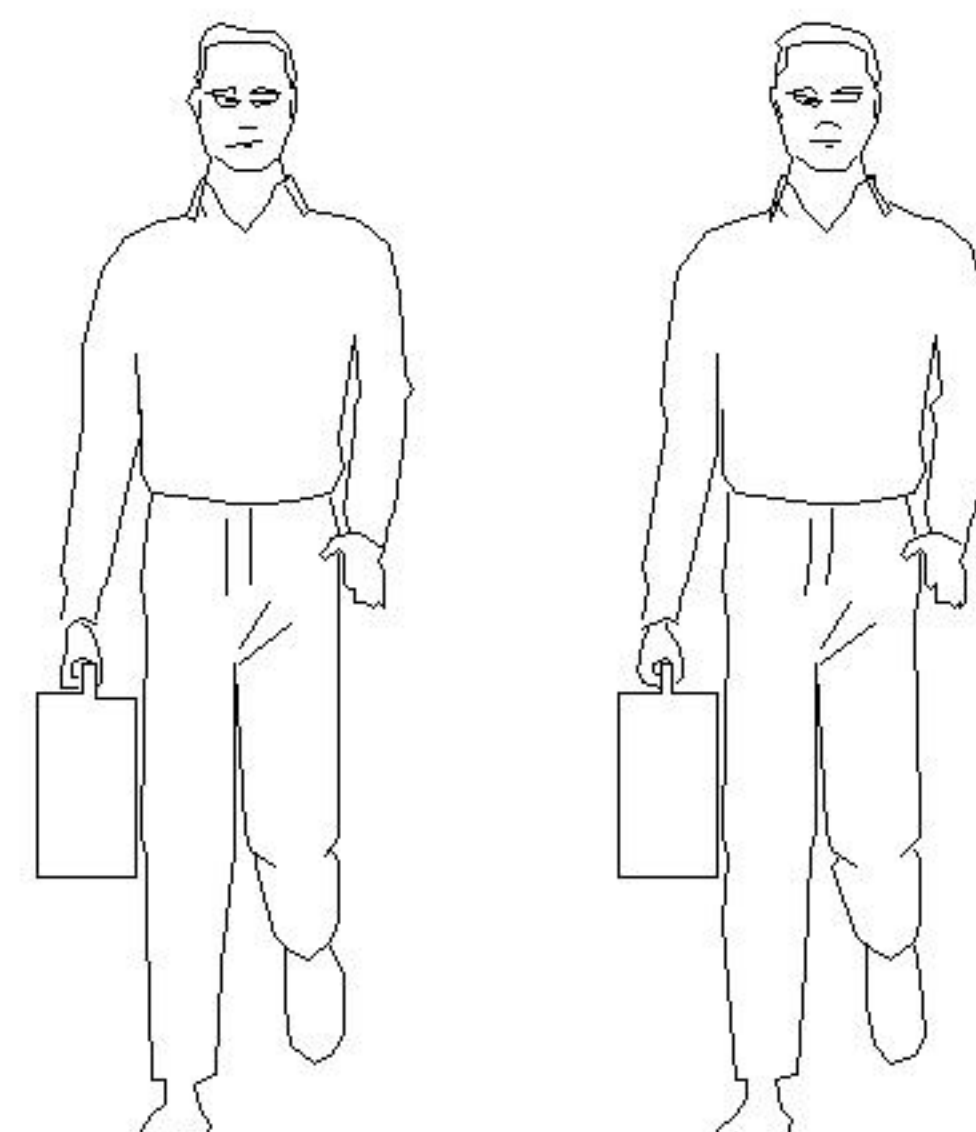
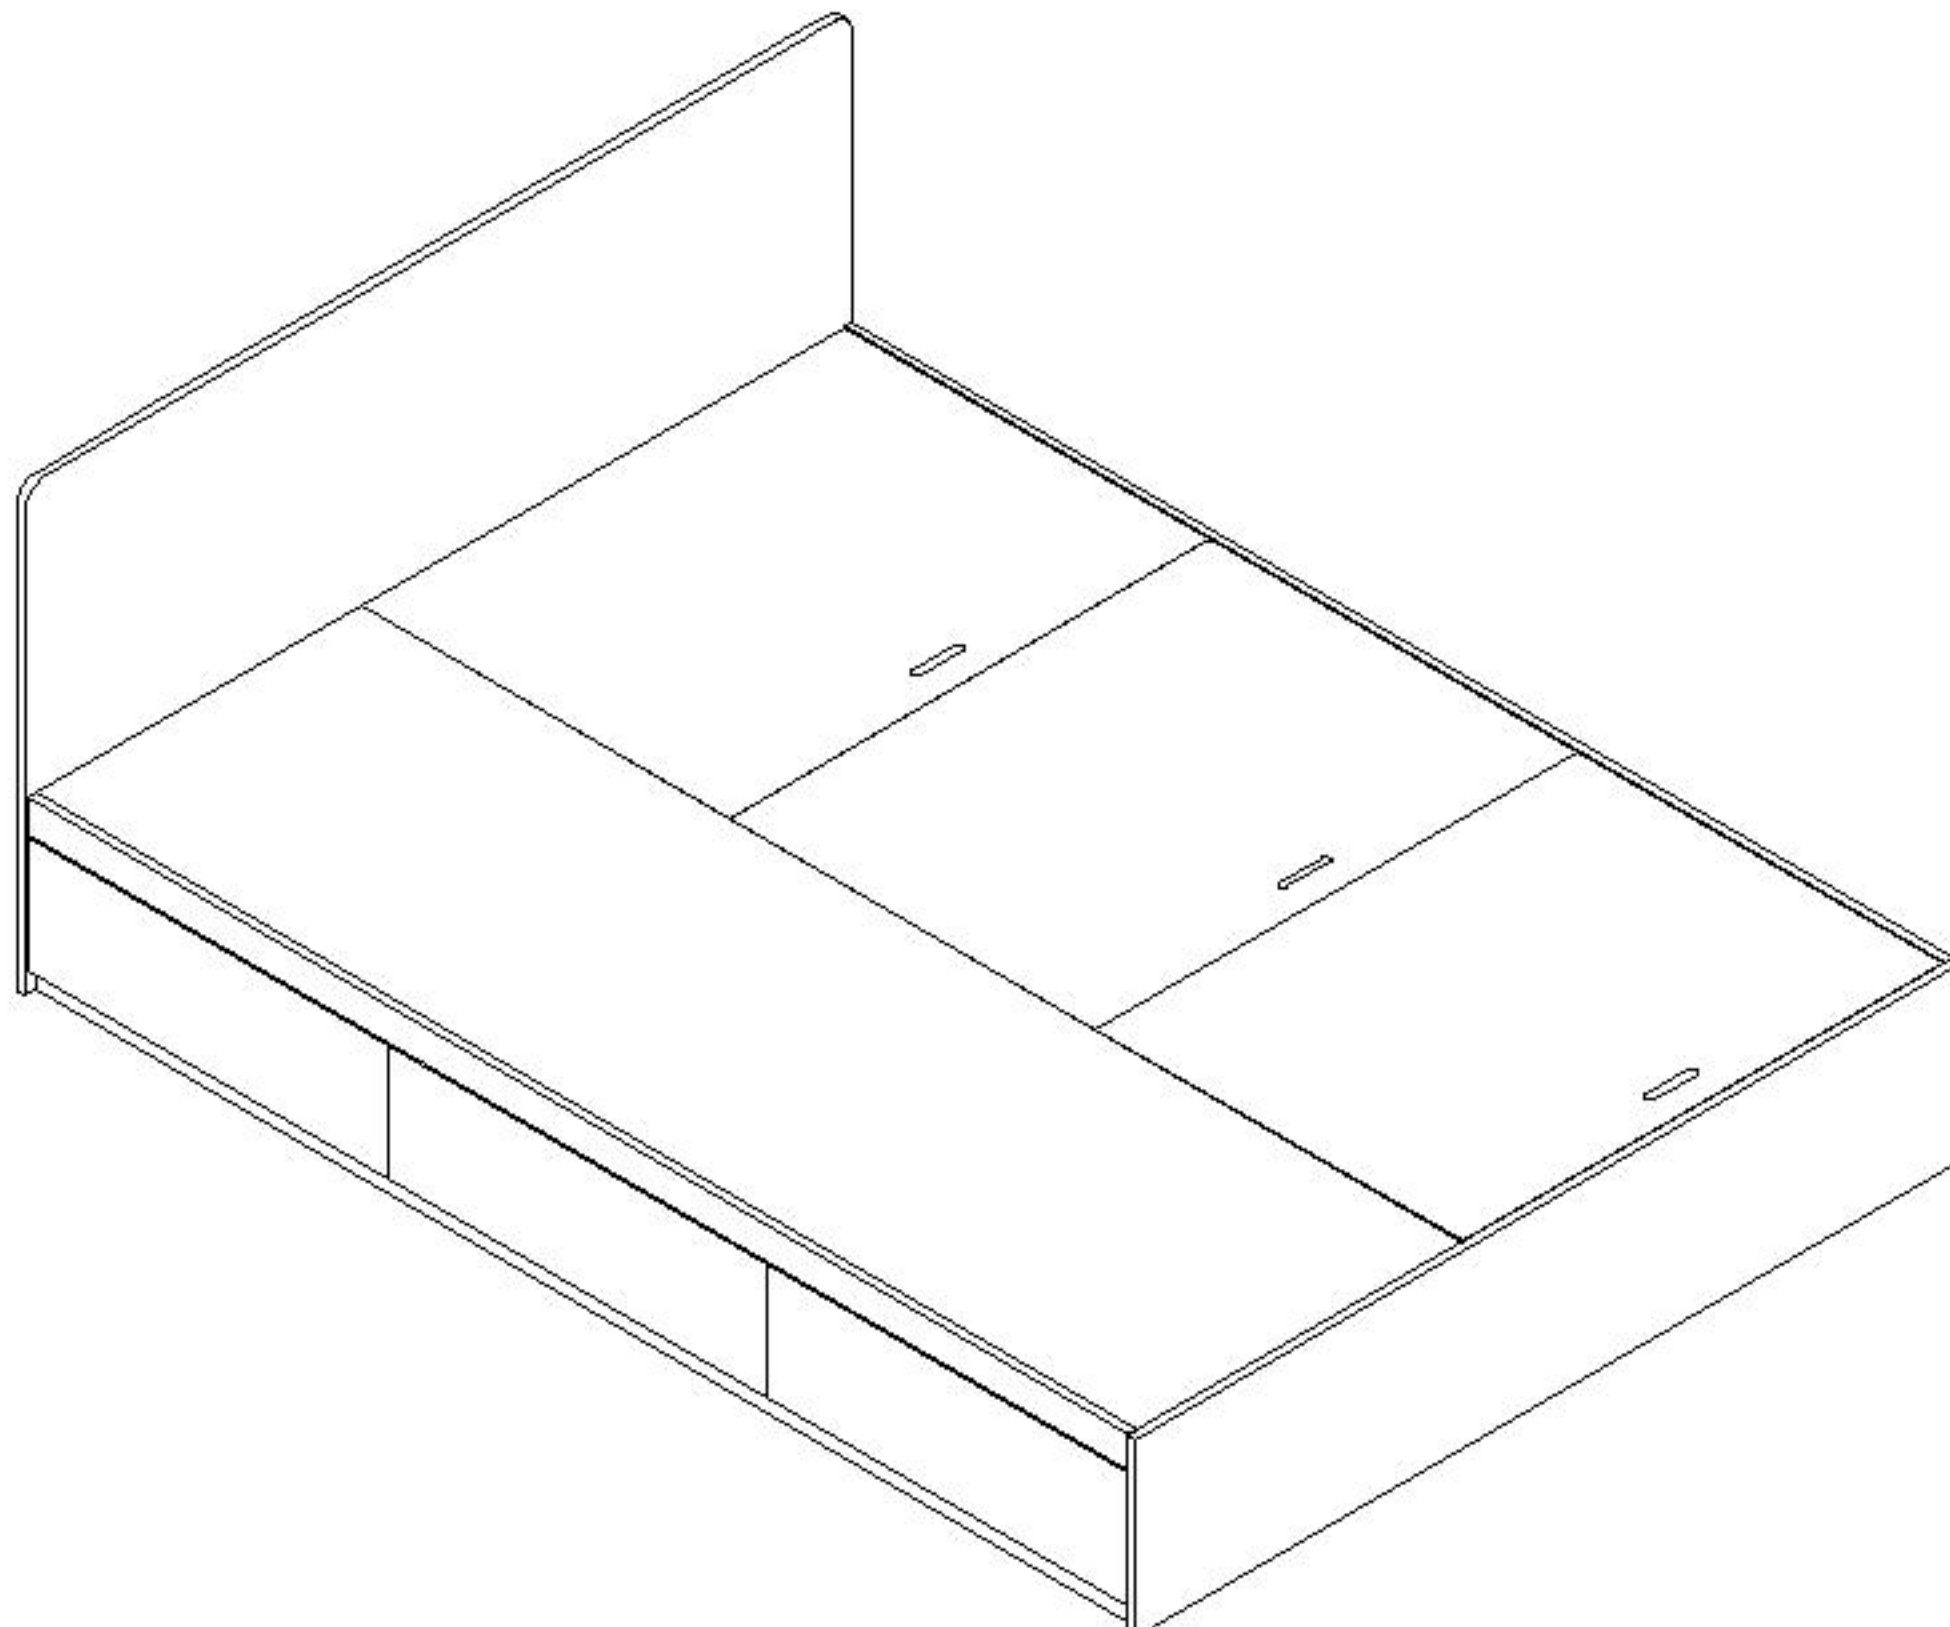
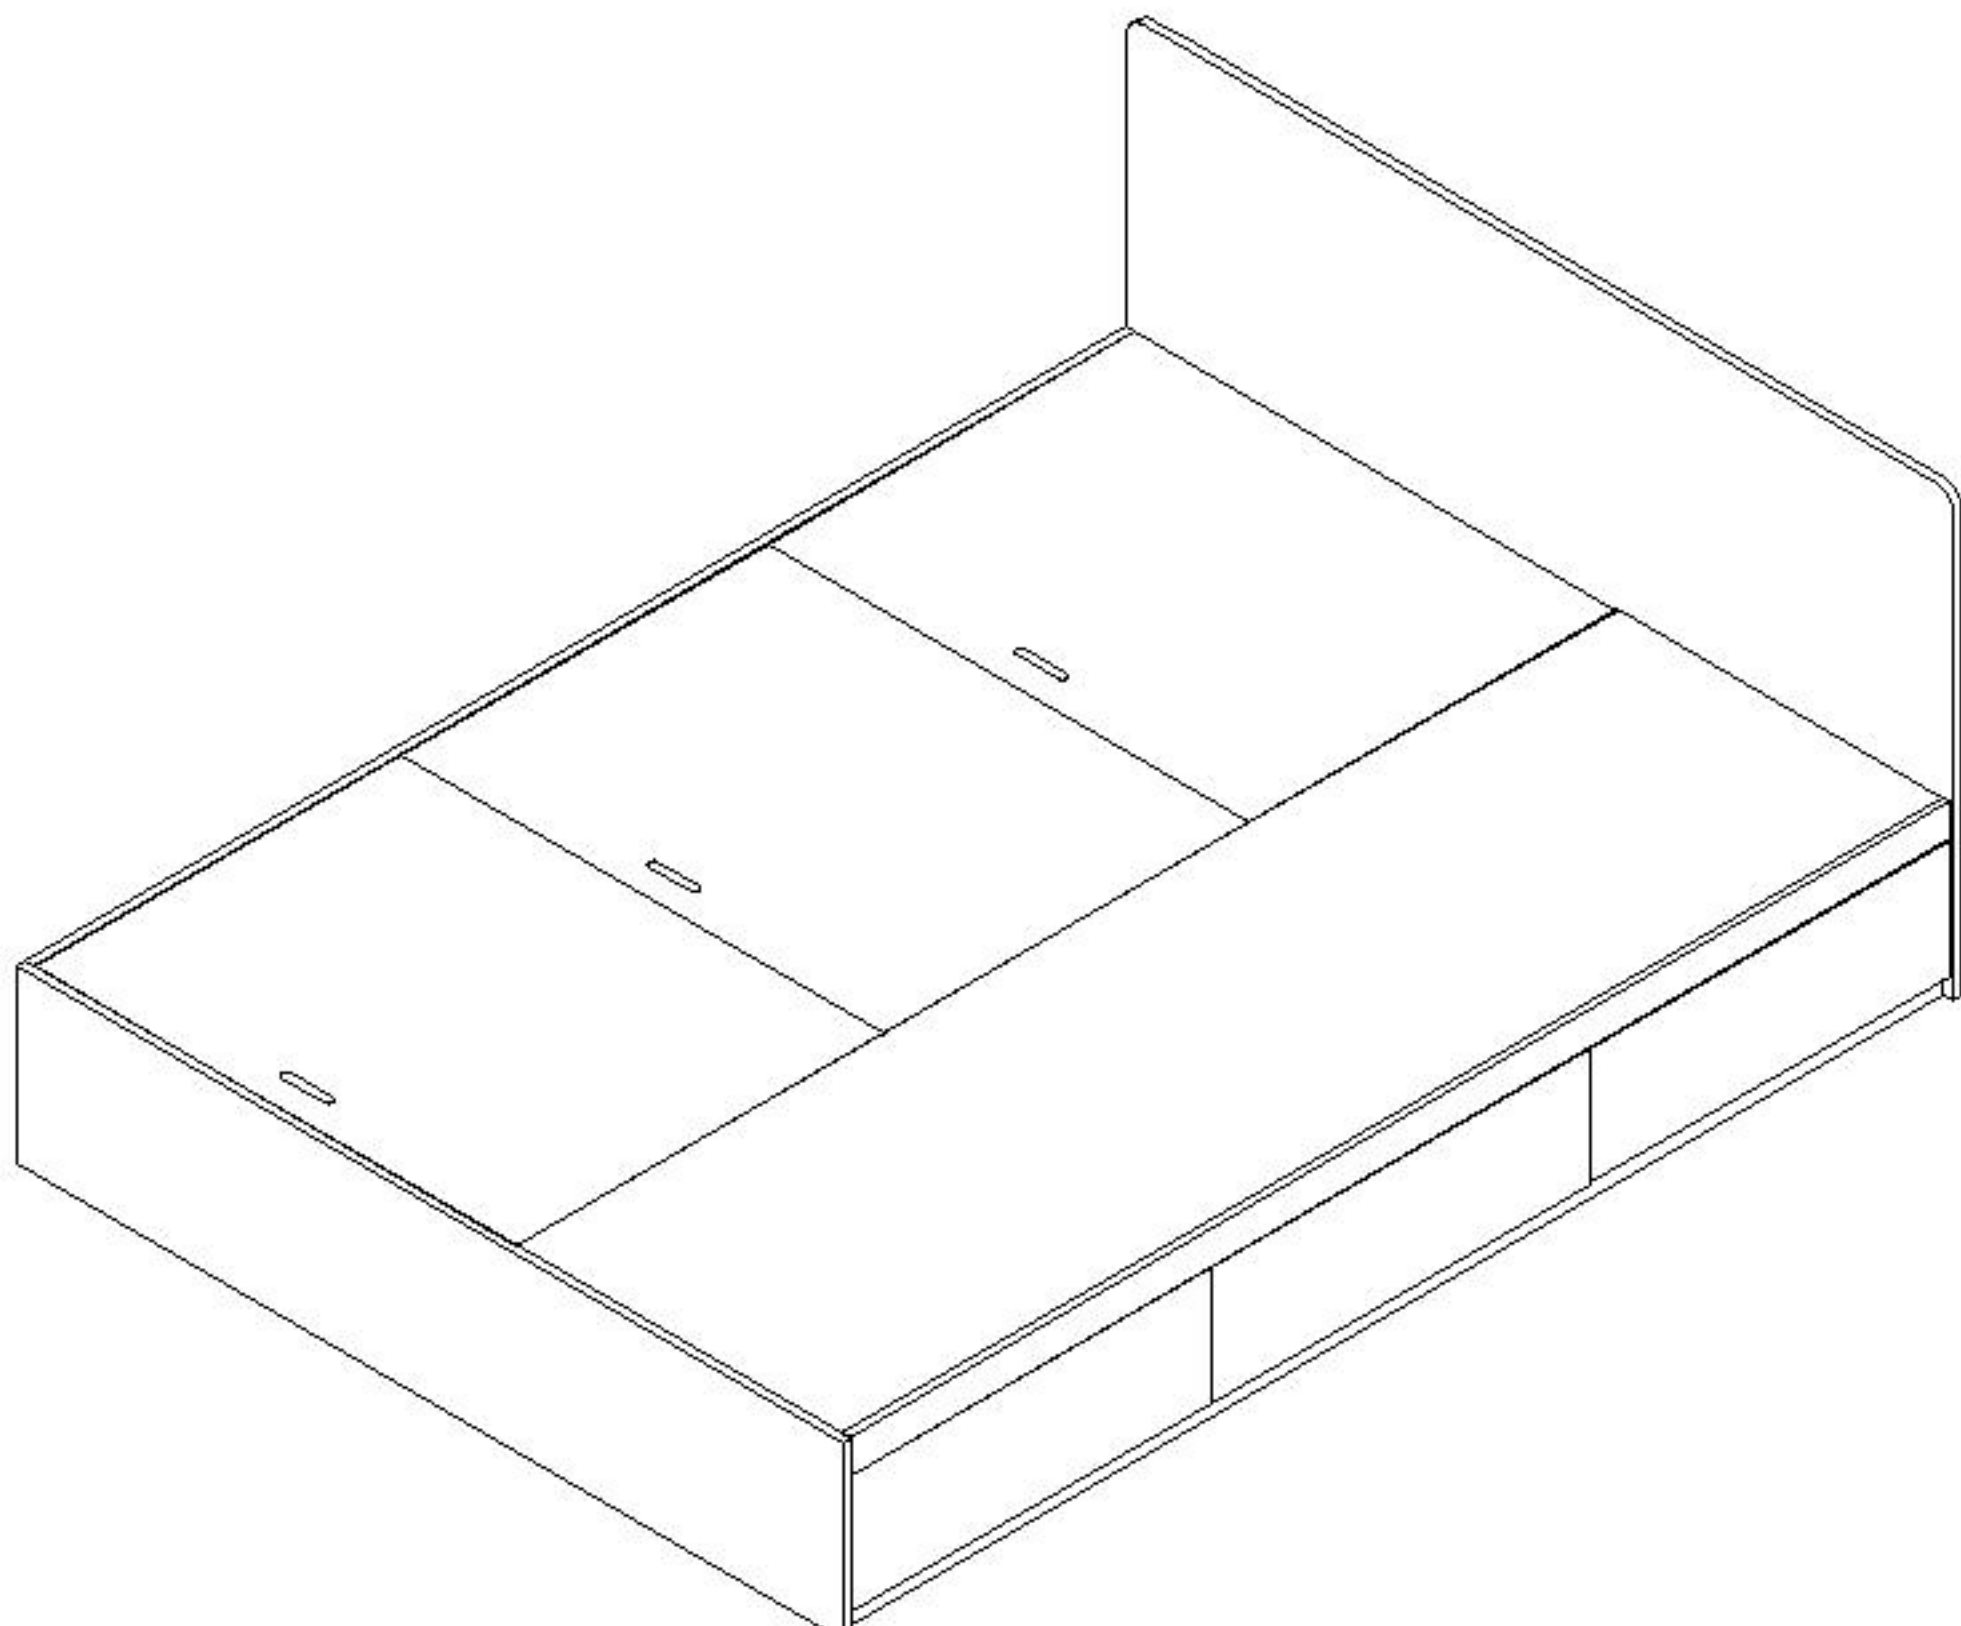
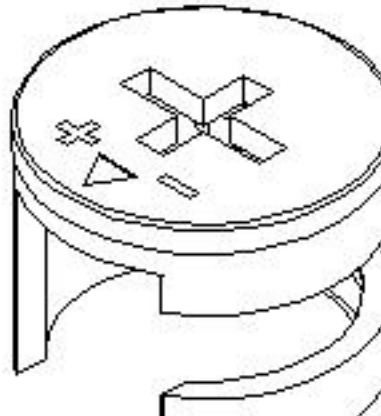
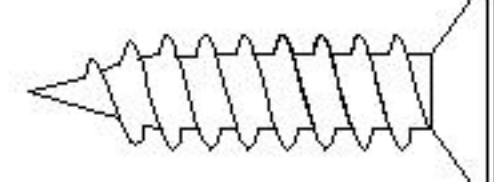
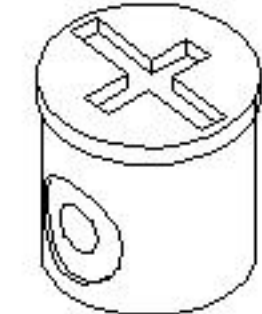
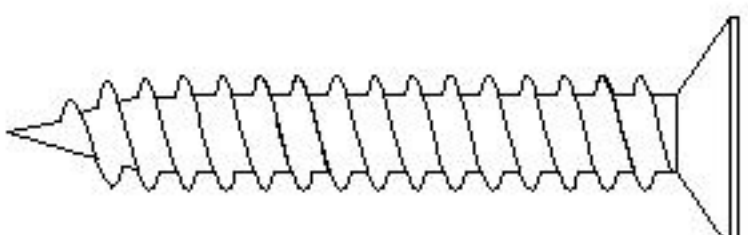


LINSY 林氏家居		五金表/Hardware list				部件表/Parts List				
安装示意图/Assembly Instruction		 (A)* 28 脚垫-灰色 Footrest - Grey	 (B)* 3 拉手 Handle	 (C)* 21 木榫Ø8x30mm wood tenon	 (D)* 46 二合一螺杆 2-in-1-screw	编号NO.	名称Name	规格 (mm) Specification	数量QTY	材质Material
产品名称 Model NO.	OV8A-C 1.5m 床身					1	床侧Bedside	2000*310*15	1	人造板 WBP
产品规格 Specification	2000*1500*313 mm					2	下拉条Bottom brace	2000*58*15	1	人造板 WBP
安装工具 Tool	安装人数 Installer					3	上拉条Top brace	2000*58*15	1	人造板 WBP
    温馨提示：床身可左右互换安装，上图为效果展示 Tips: The bed can be interchangeable installation, the above is the effect display	 (E)* 46 大三合一锁饼 Three-in-one large lock	 (F)* 42 自攻螺丝M3.5x12mm Self-tapping screw	 (G)* 19 塑料螺母 Plastic Nut	 (H)* 19 自攻螺丝M4x40mm Self-tapping screw	4	中侧板Middle side board	2000*294*15	1	人造板 WBP	
					5	内侧板 Medial plate	576*294*15	2	人造板 WBP	
					6	隔板Clapboard	876*294*15	2	人造板 WBP	
					7	床板Bed board	2000*591*15	1	人造板 WBP	
	8	托条Supporting strip	560*58*15	2	人造板 WBP					
	9	小床板Small bed board	874*665*15	3	人造板 WBP					
	10	边抽屉面板 Side drawer panel	653*212*15	2	人造板 WBP					
	11	中抽屉面板Drawer's middle board	686*212*15	1	人造板 WBP					
	12	抽屉左侧板Drawer's side board (L)	395*142*12	3	人造板 WBP					
	13	抽屉右侧板Drawer's side board (R)	395*142*12	3	人造板 WBP					
	14	抽屉后板Drawer's Back board	607*142*12	3	人造板 WBP					
	15	抽屉底托条Drawer's bottom bracket	381*58*12	3	人造板 WBP					
	16	抽屉底板Drawer's Bottom board	617*391*5	3	人造板 WBP					
	17	底板Bottom board	866*647*5	3	人造板 WBP					
	18	托条1 Supporting strip 1	620*58*15	6	人造板 WBP					
	19	托条2 Supporting strip 2	840*58*15	4	人造板 WBP					
	OV9A-C 1.5米高床头 OV9A-C 1.5 m high headboard									
	20	床头 Head bed	1500*798*15	1	人造板 WBP					
	21	床尾Bed tail	1500*310*15	1	人造板 WBP					
	OV10A-C 1.5米床头软包 OV10A-C 1.5m headboard soft bag									
	22	床头软包Upholstered headboard	1500*390*90	1	软包Soft bag					
	OV8A-C 1.5米矮床头 OV8A-C 1.5m low bed head									
	23	床头 Head bed	1500*310*15	2	人造板 WBP					


OV8A-C 1.5m 床身
安装方法/ Installation method

OV9A-C 高床头款1.5米
OV9A-C has a 1.5m high headboard

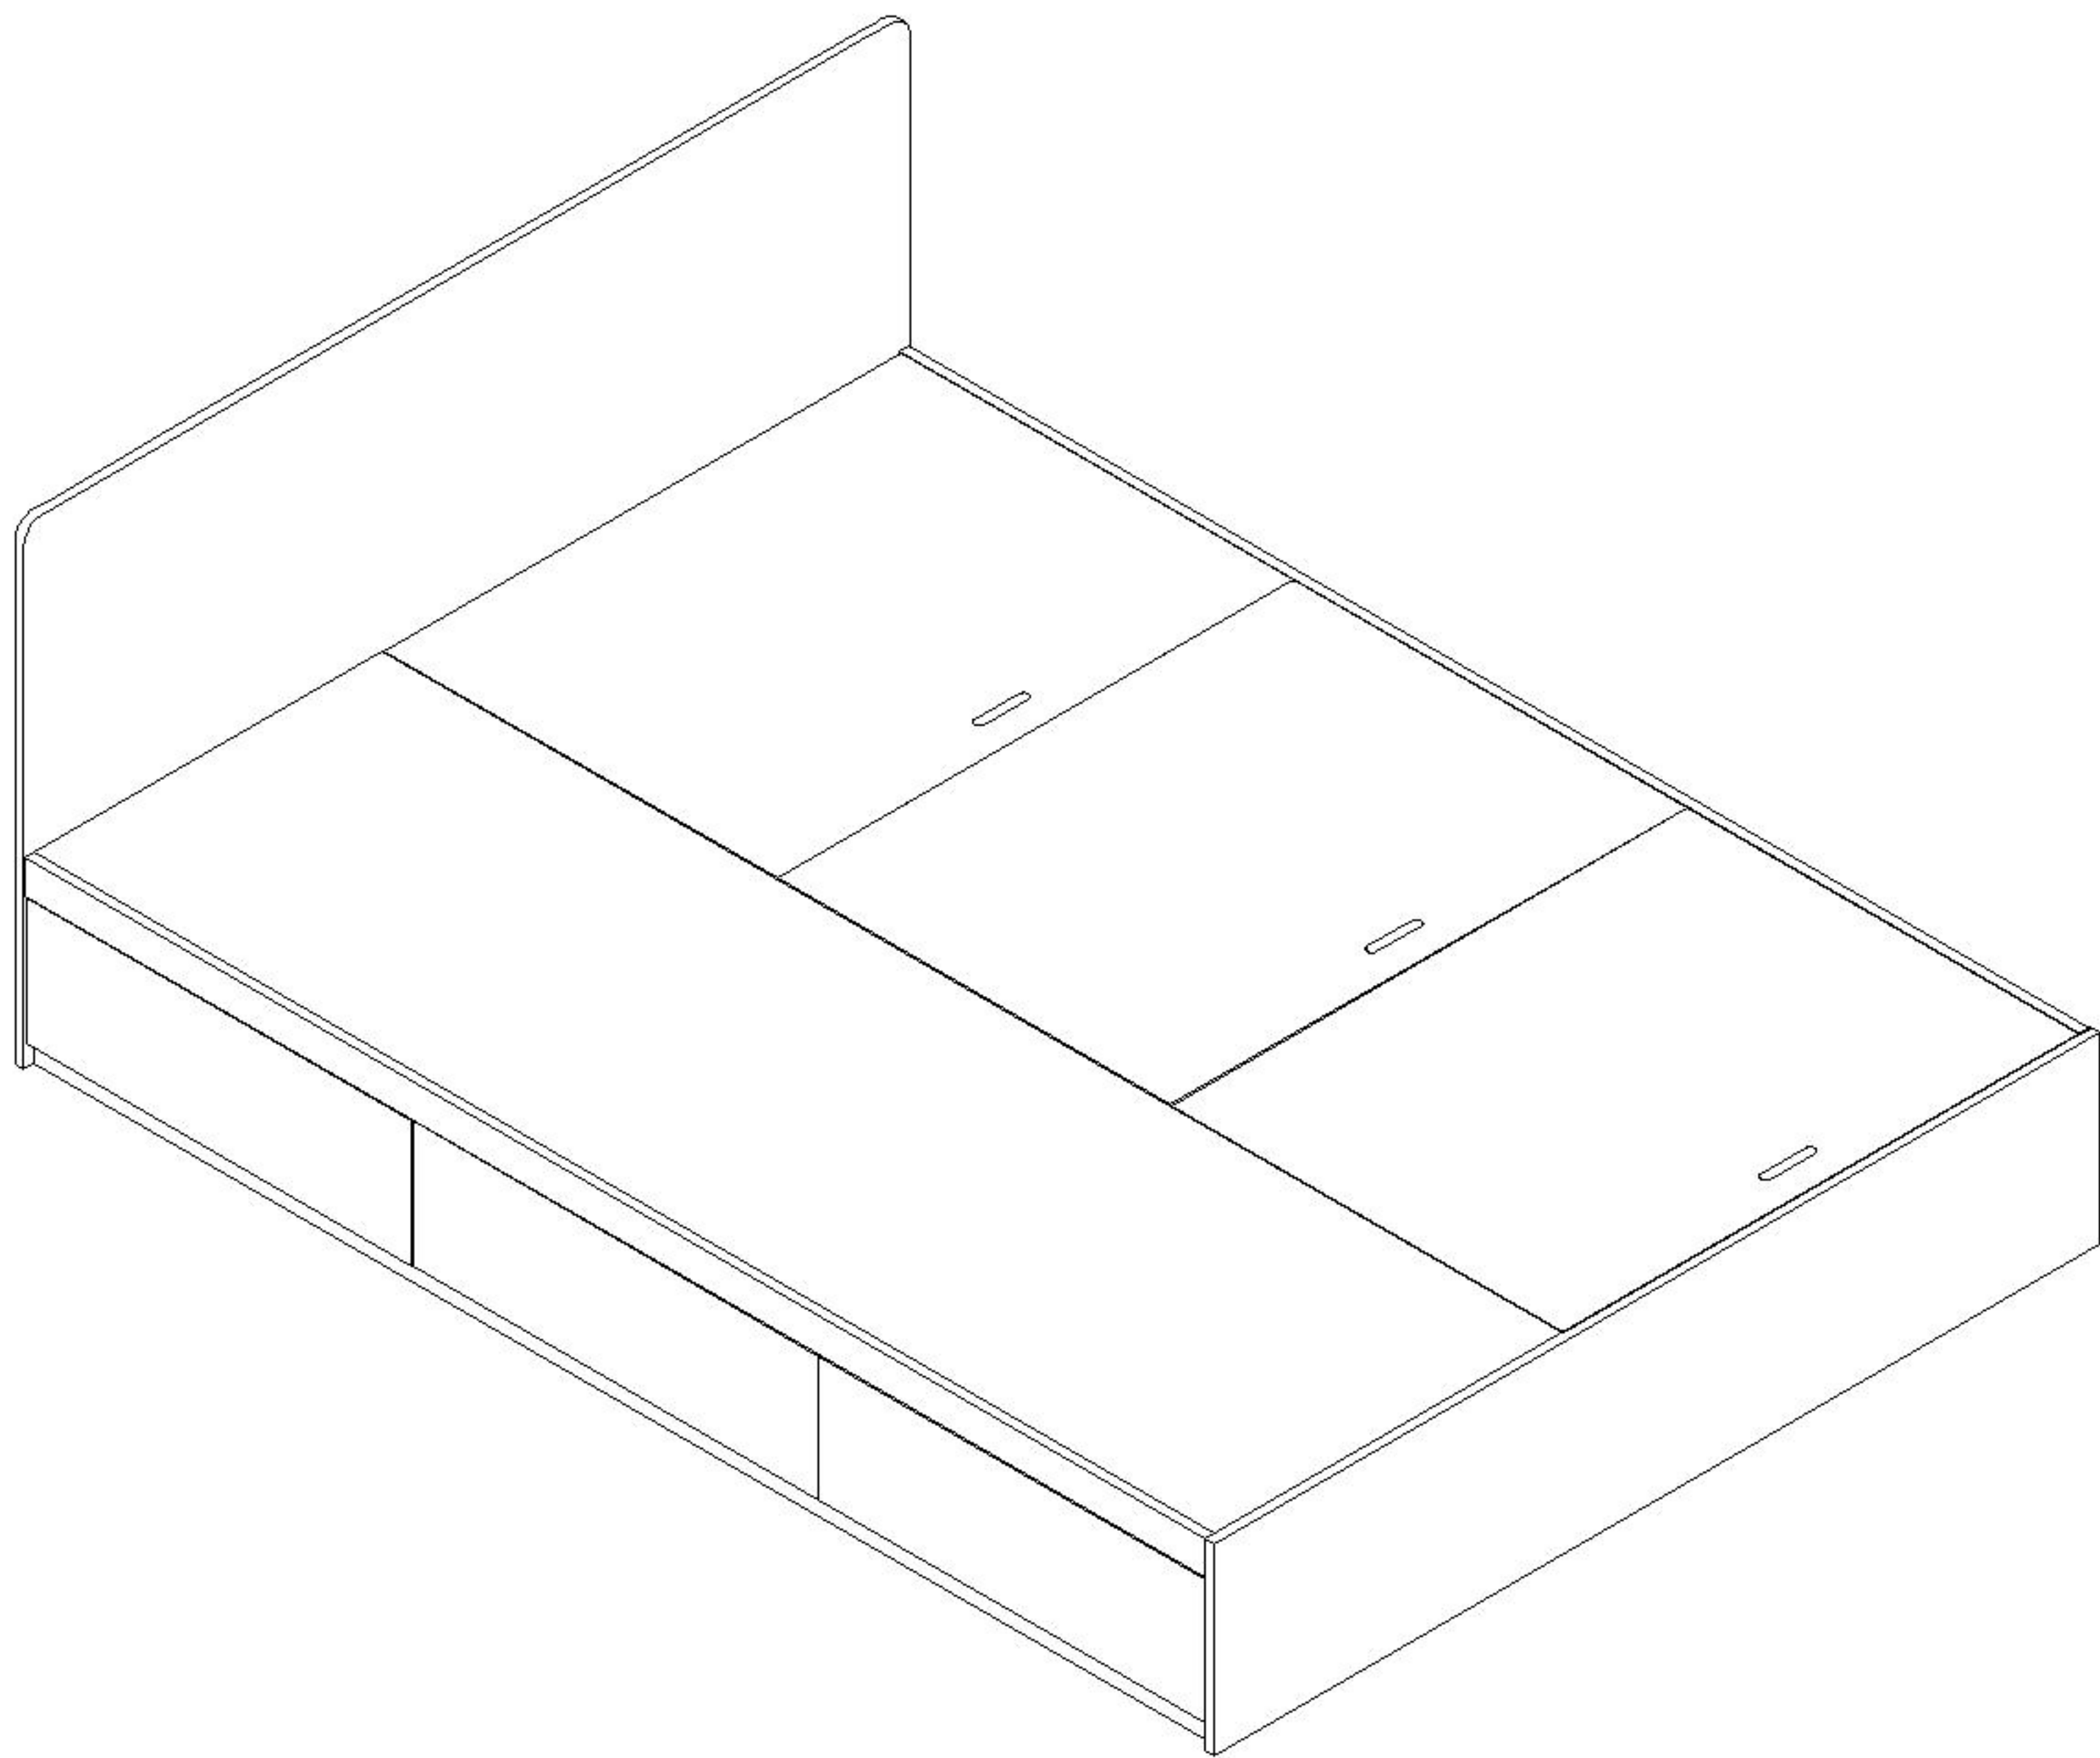


床垫厚度建议： 100mm
产品规格Specification: 2030*1500*801mm

OV10A-C 软包床头款1.5米
OV10A-C soft bag headboard 1.5m

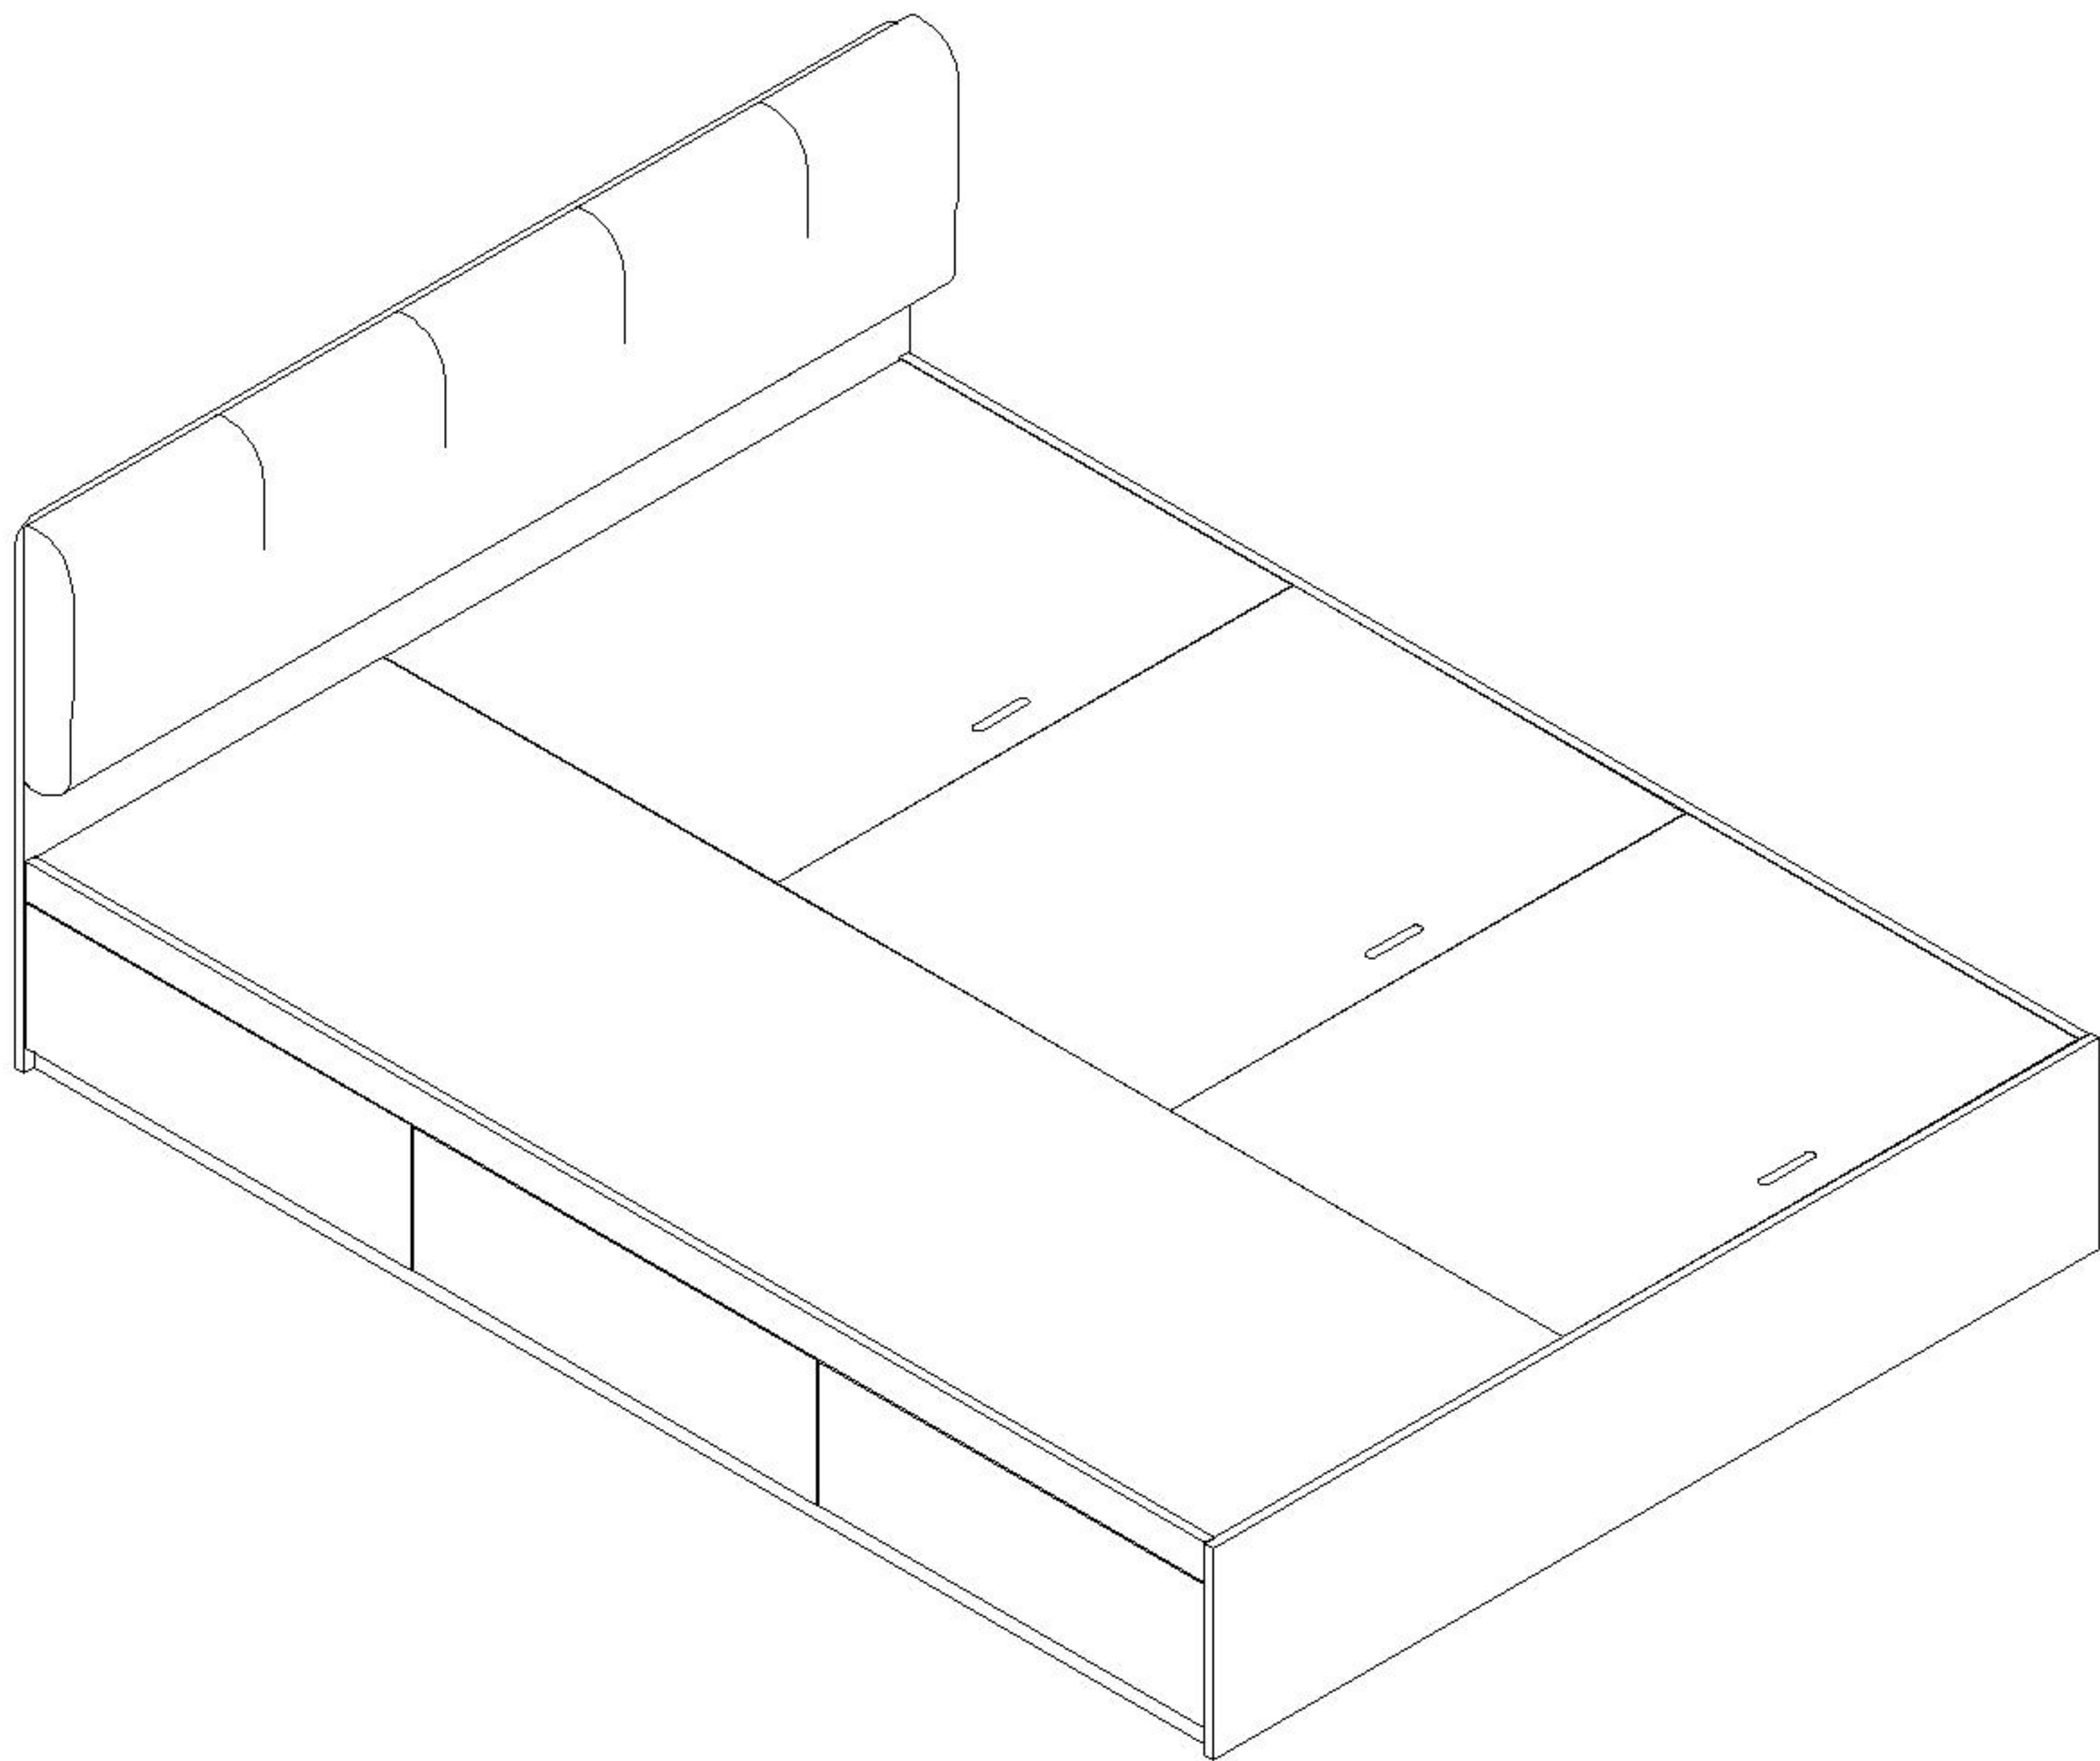

床垫厚度建议： 100mm
产品规格Specification: 2030*1500*801mm





OV8A-C 矮床头款1.5米
OV8A-C low bed is 1.5m

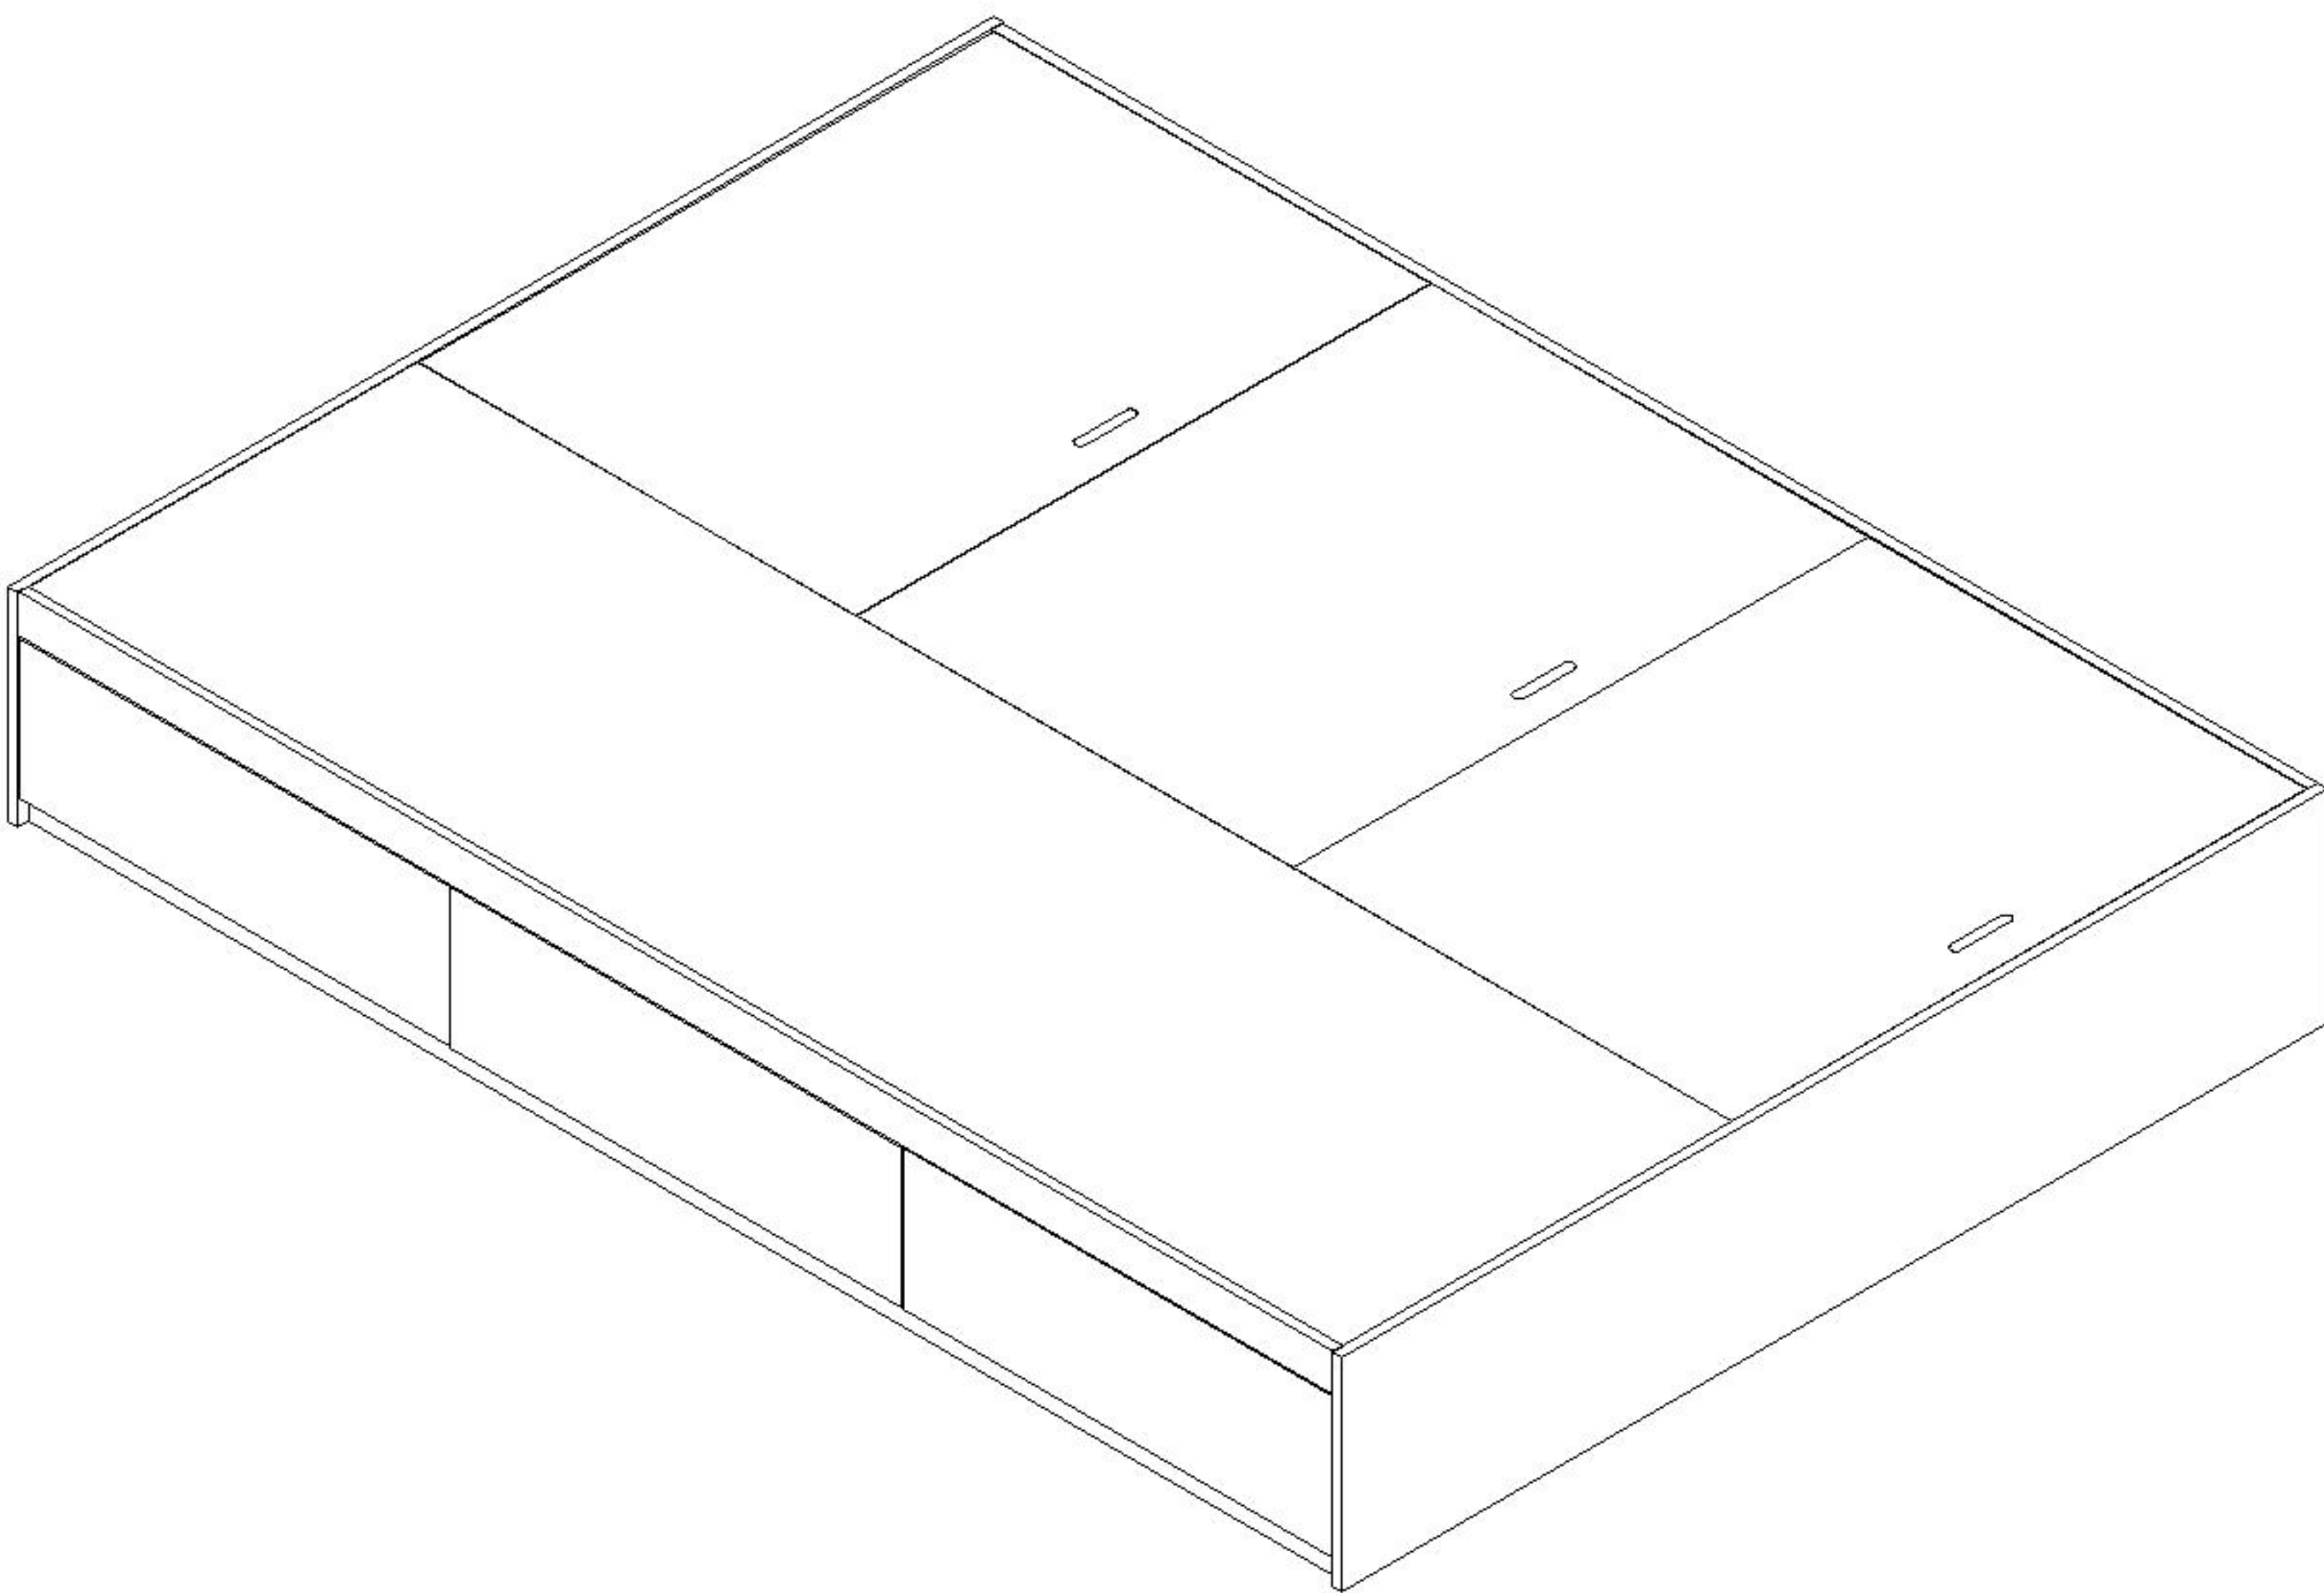


床垫厚度建议： 100mm
产品规格Specification: 2030*1500*313mm

OV8A-C 1.5m 床身

安装方法/
Installation method

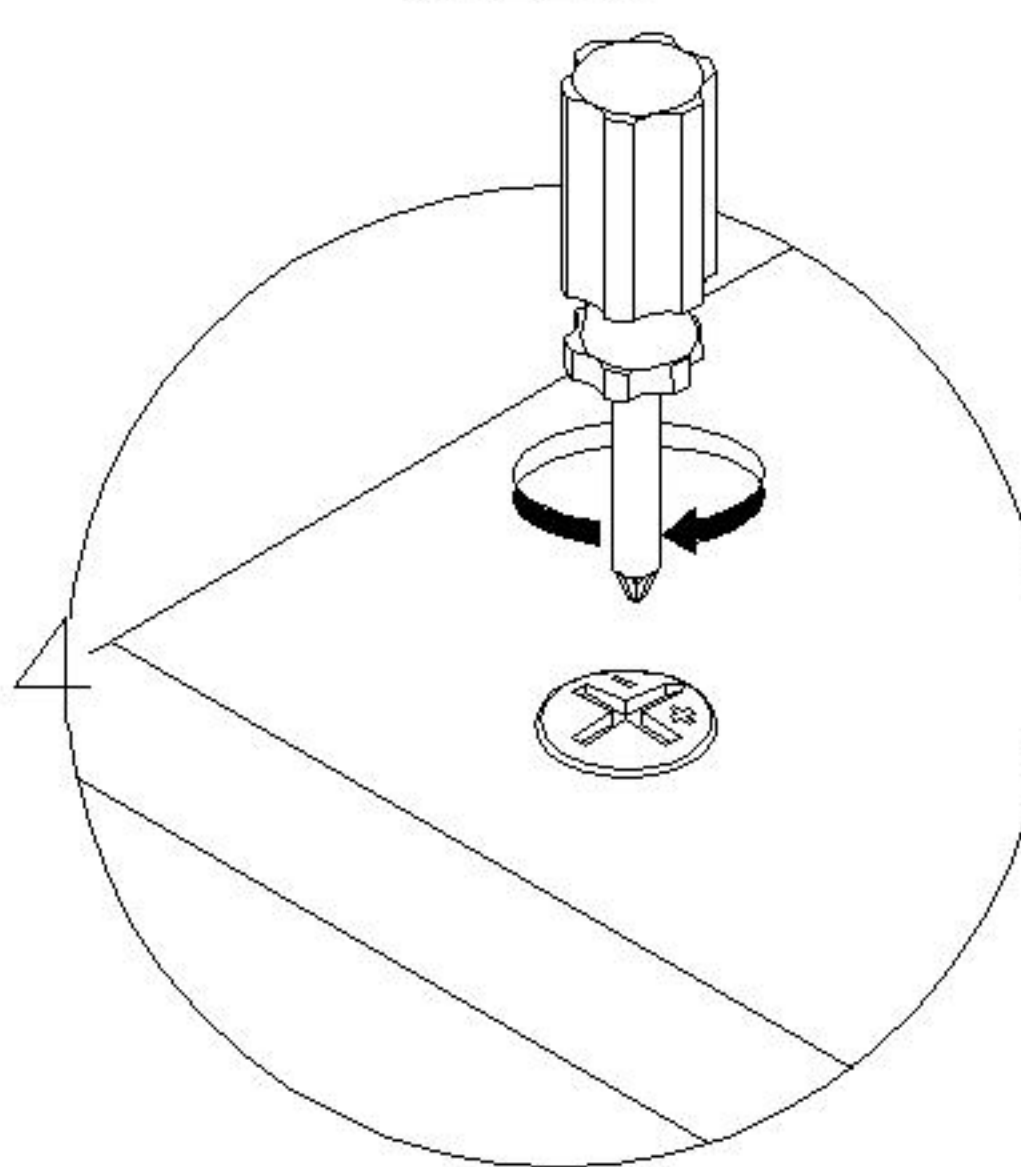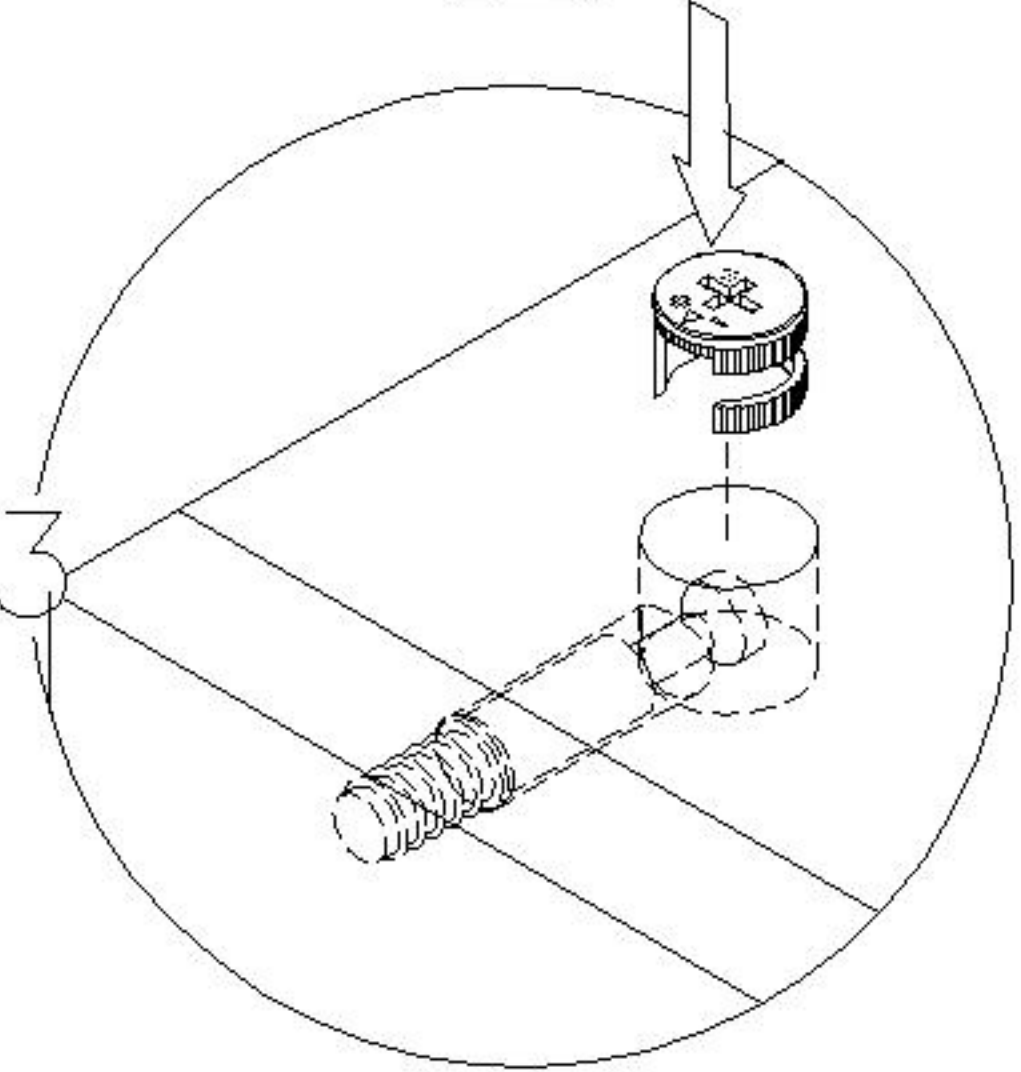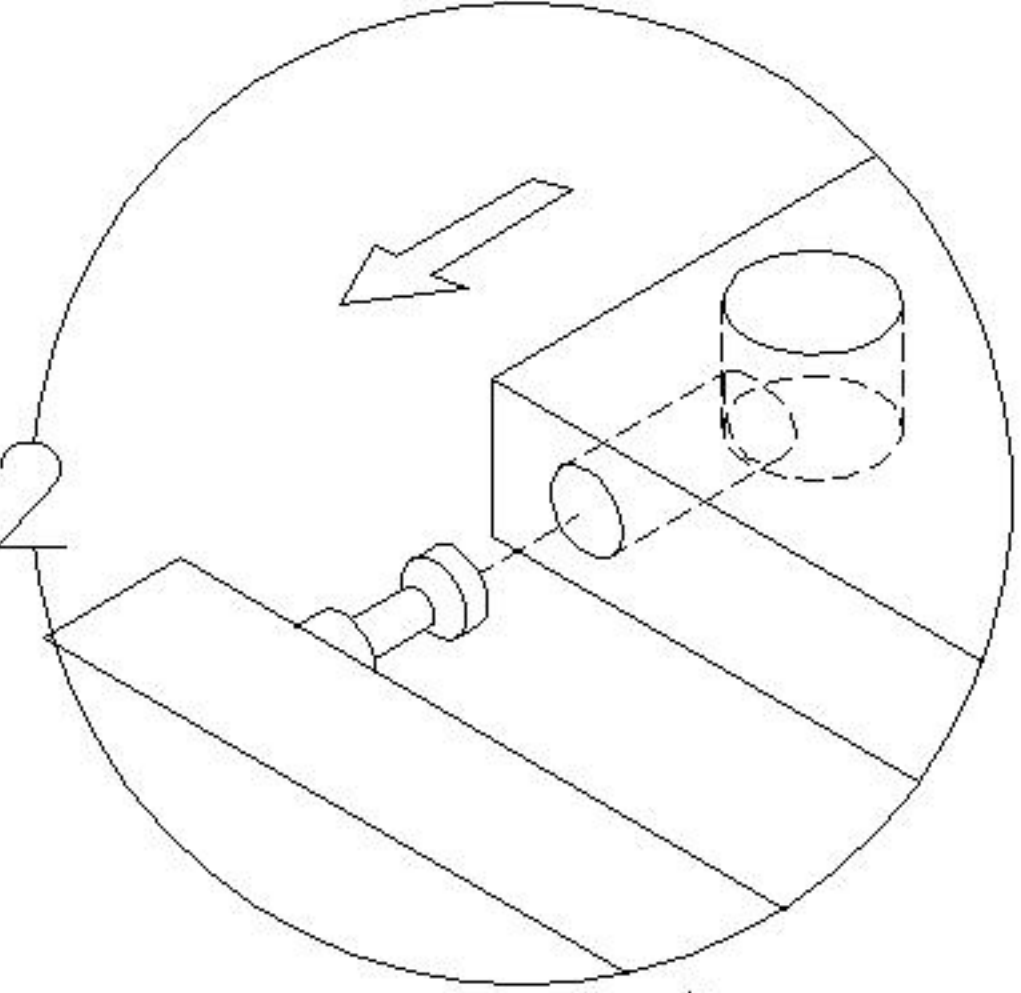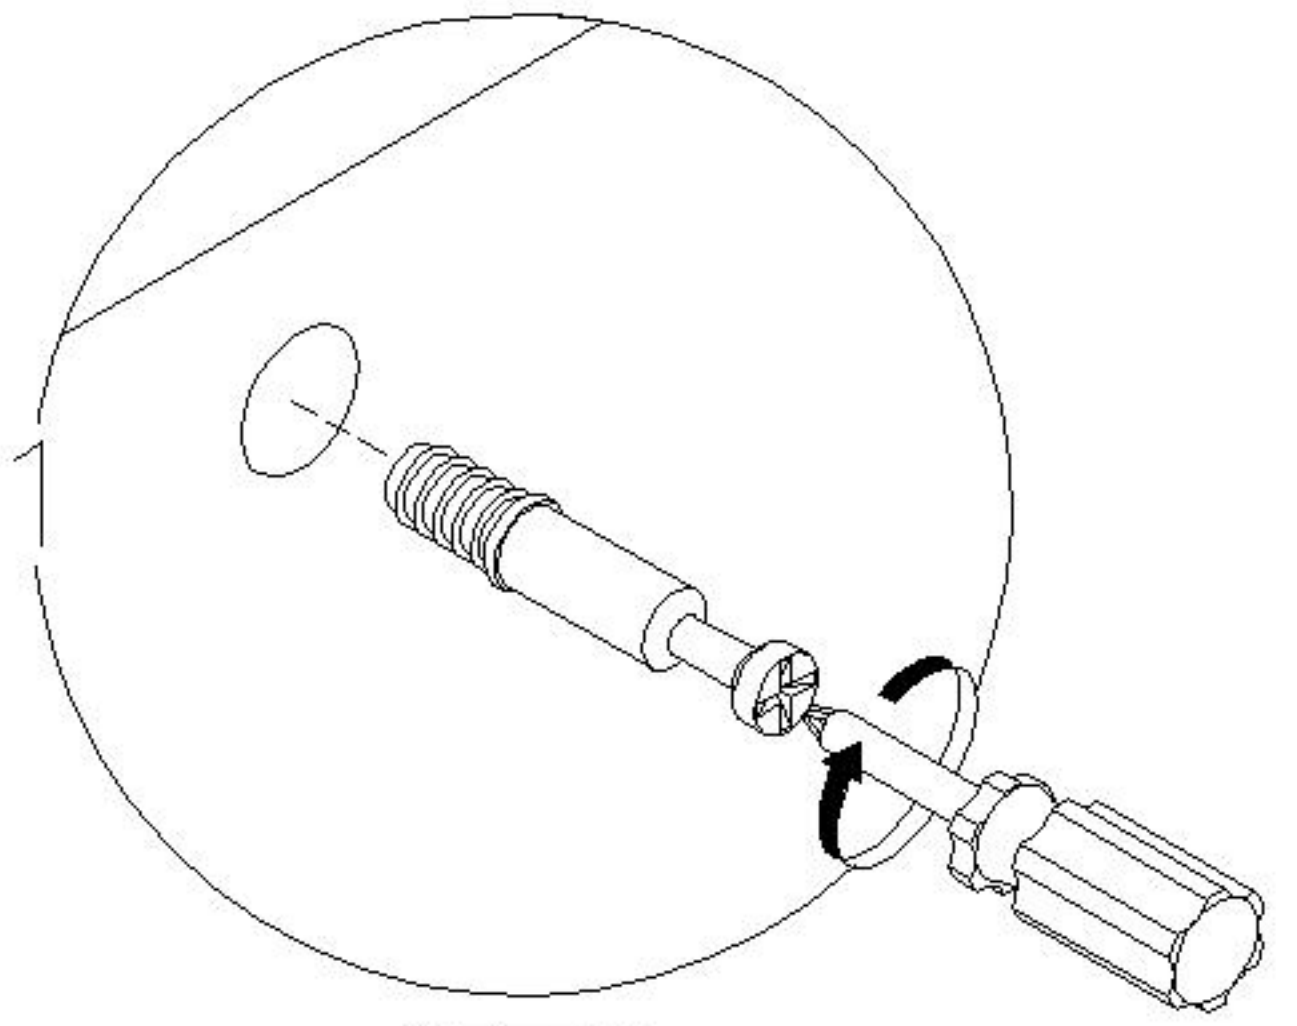


小二合一/two-in-one

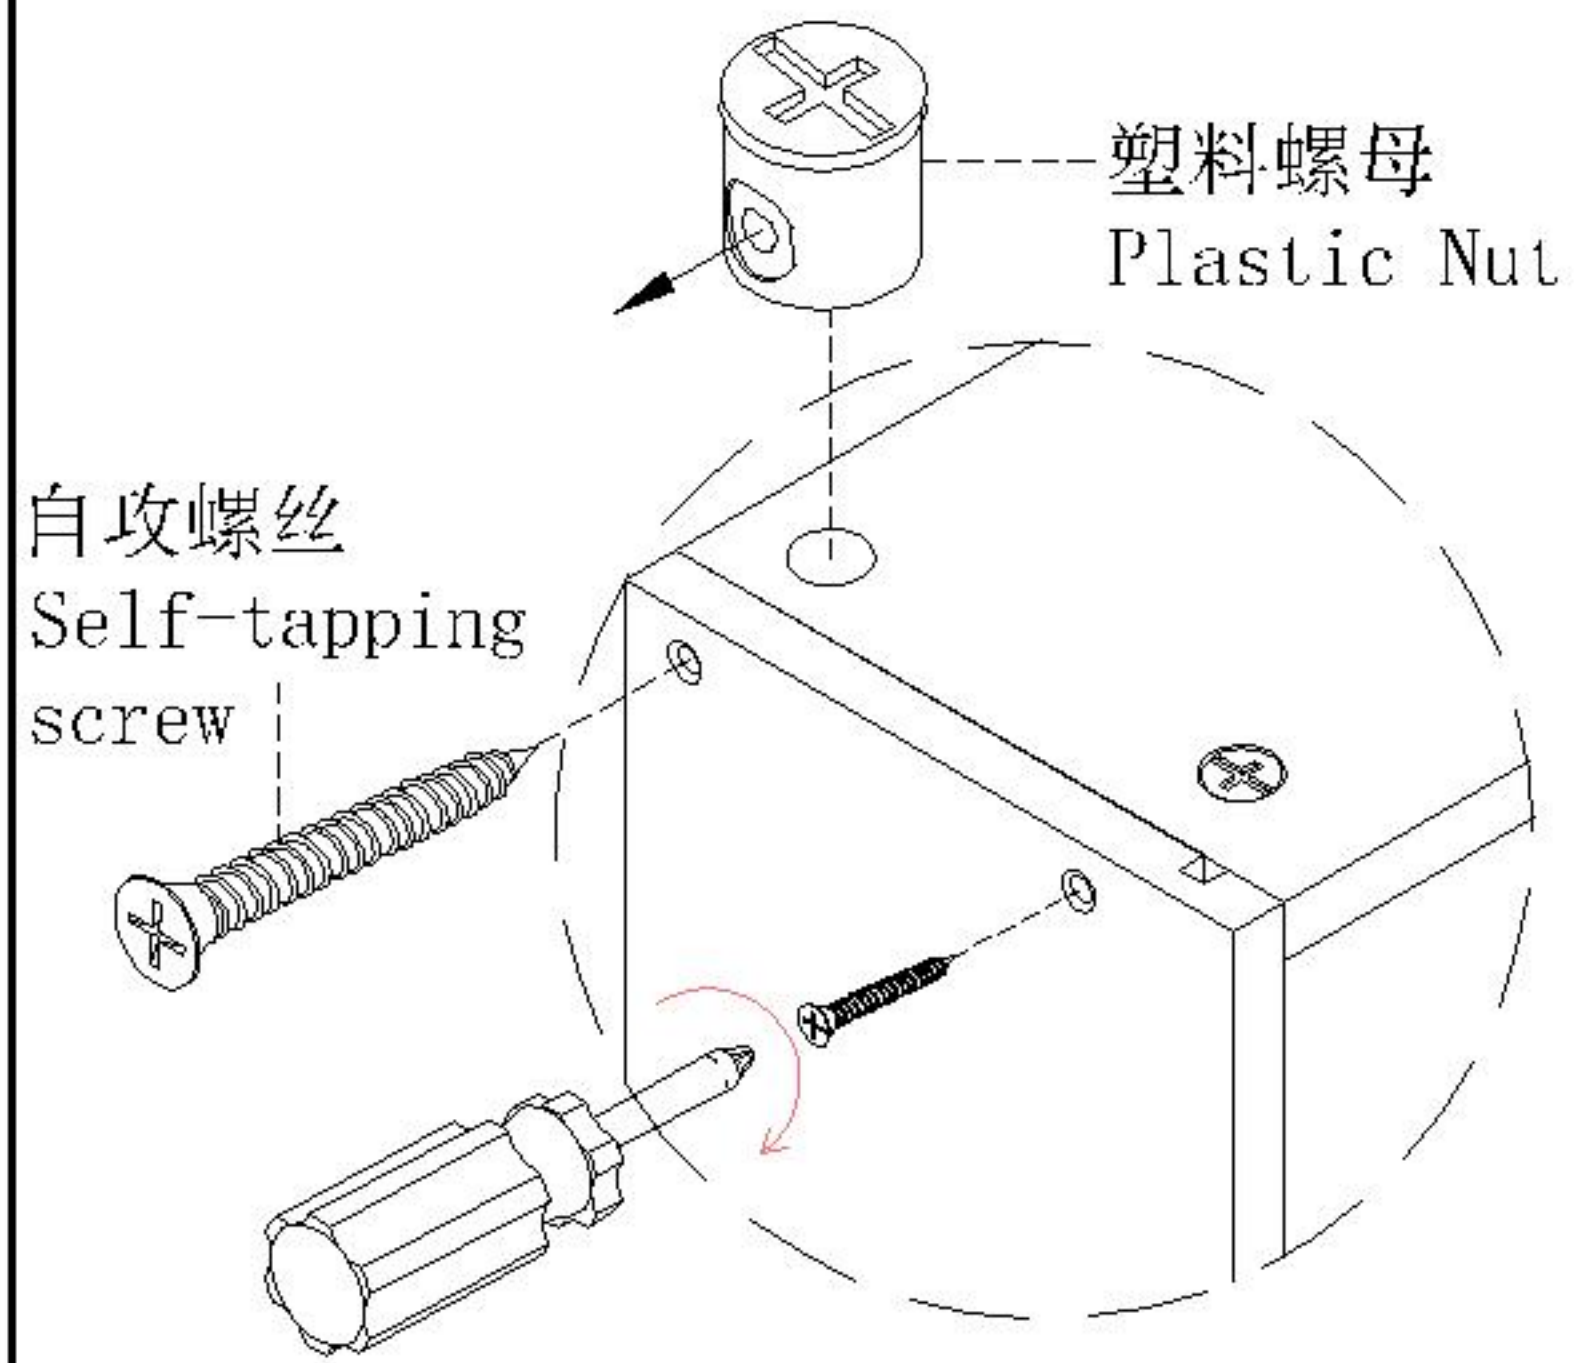

塑料螺母
Plastic Nut



- (G)*12
- (H)*12
- (I)*12
- (J)*12

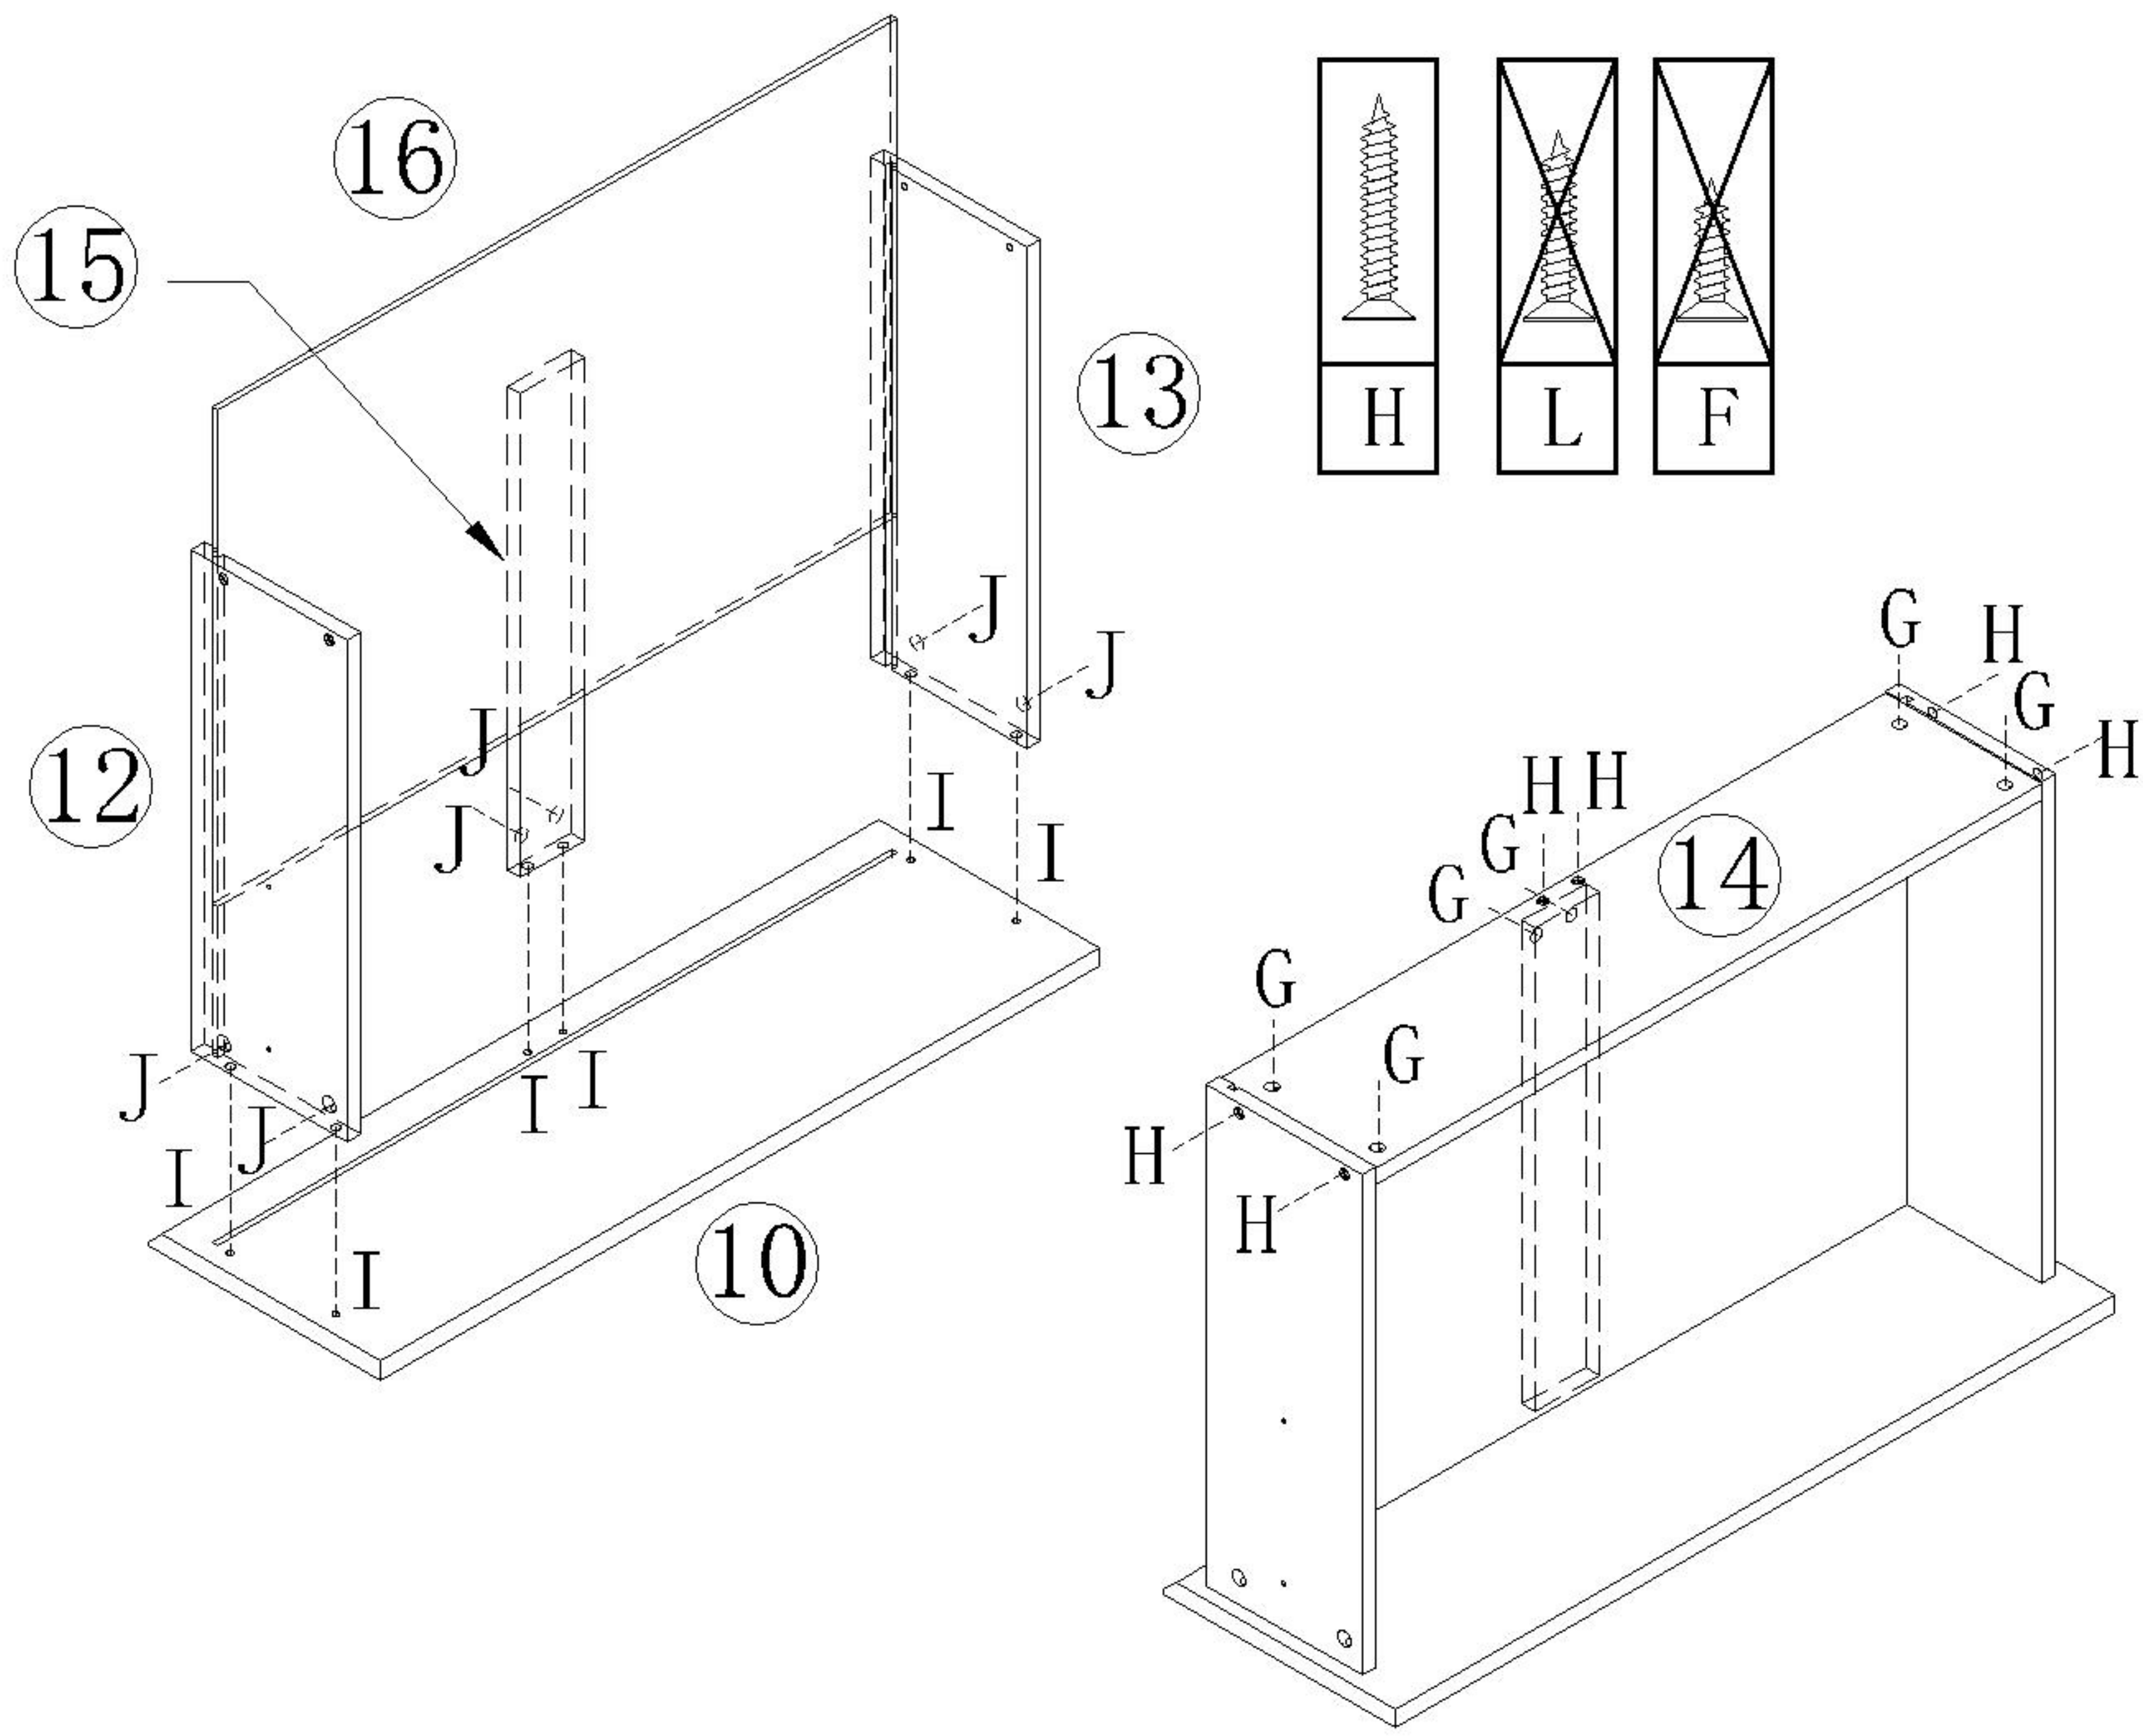

X2

1


- (F)*12
- (P)*2

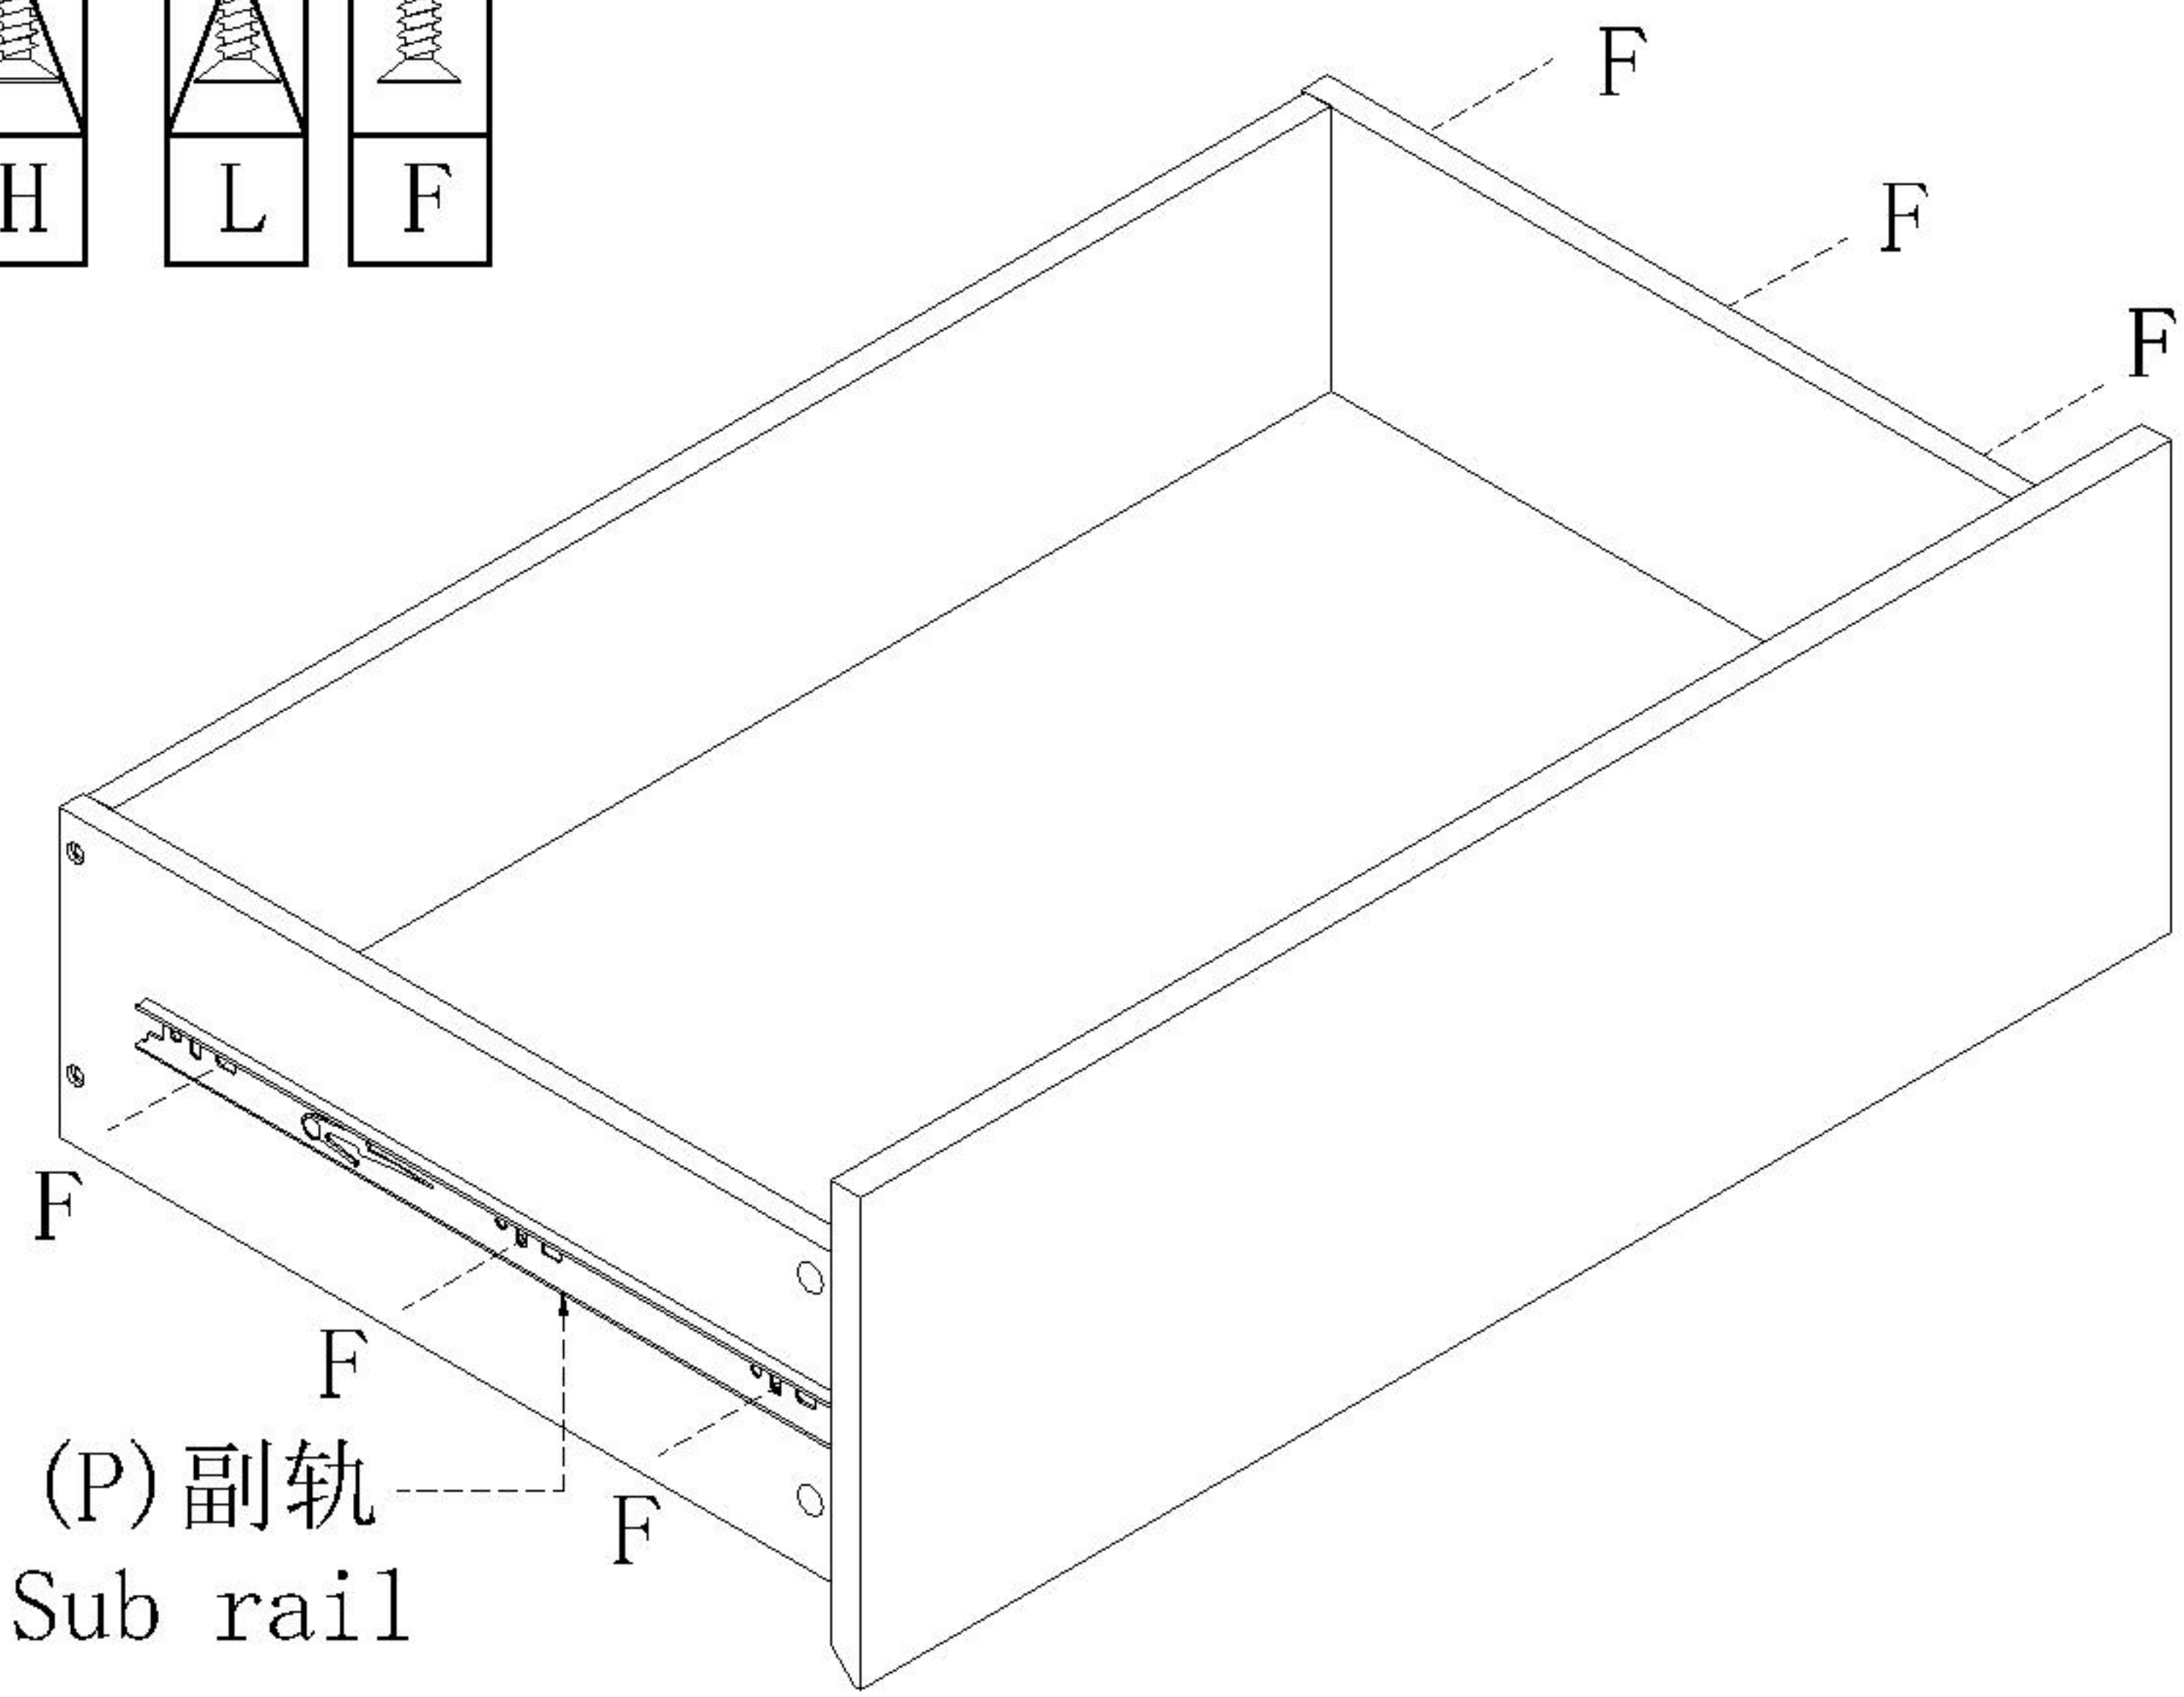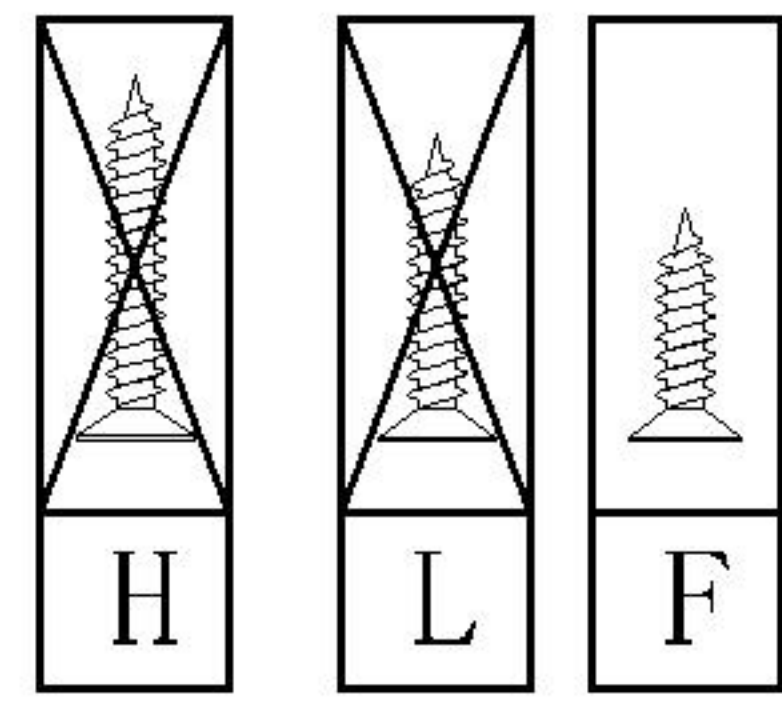

X2



2

- (G)*6
- (H)*6
- (I)*6
- (J)*6

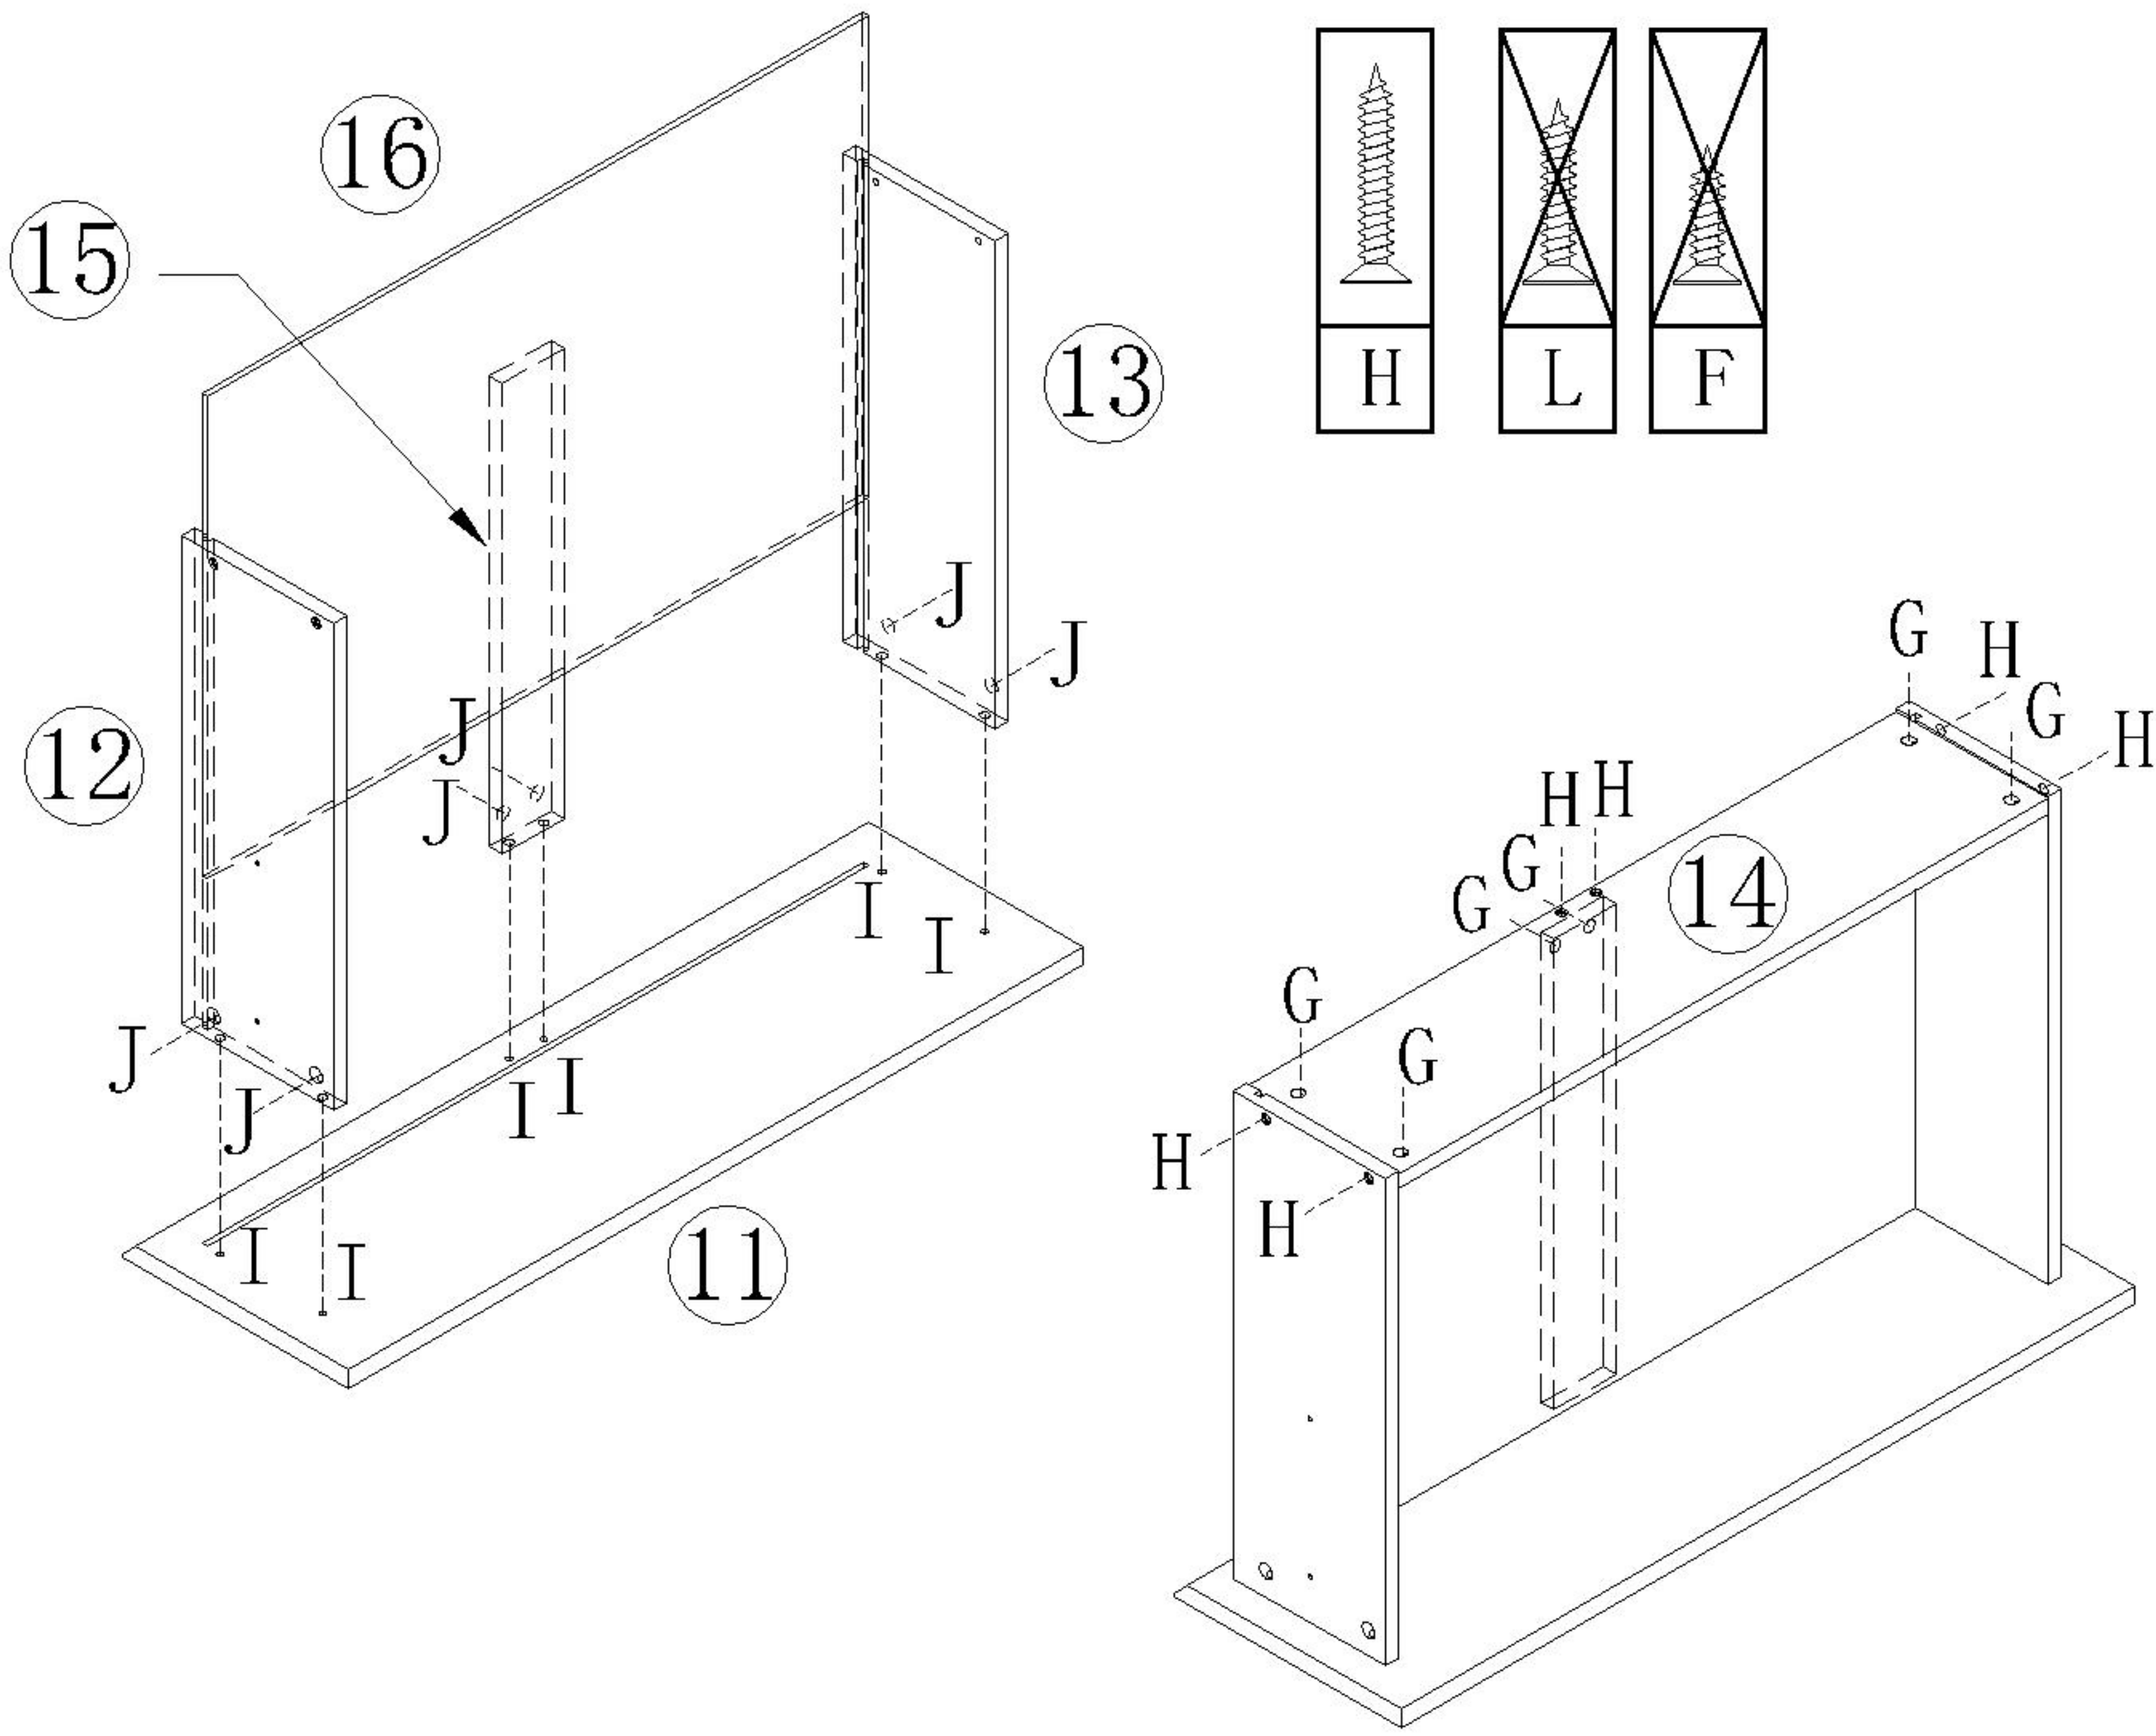

3


- (F)*6
- (P)*1

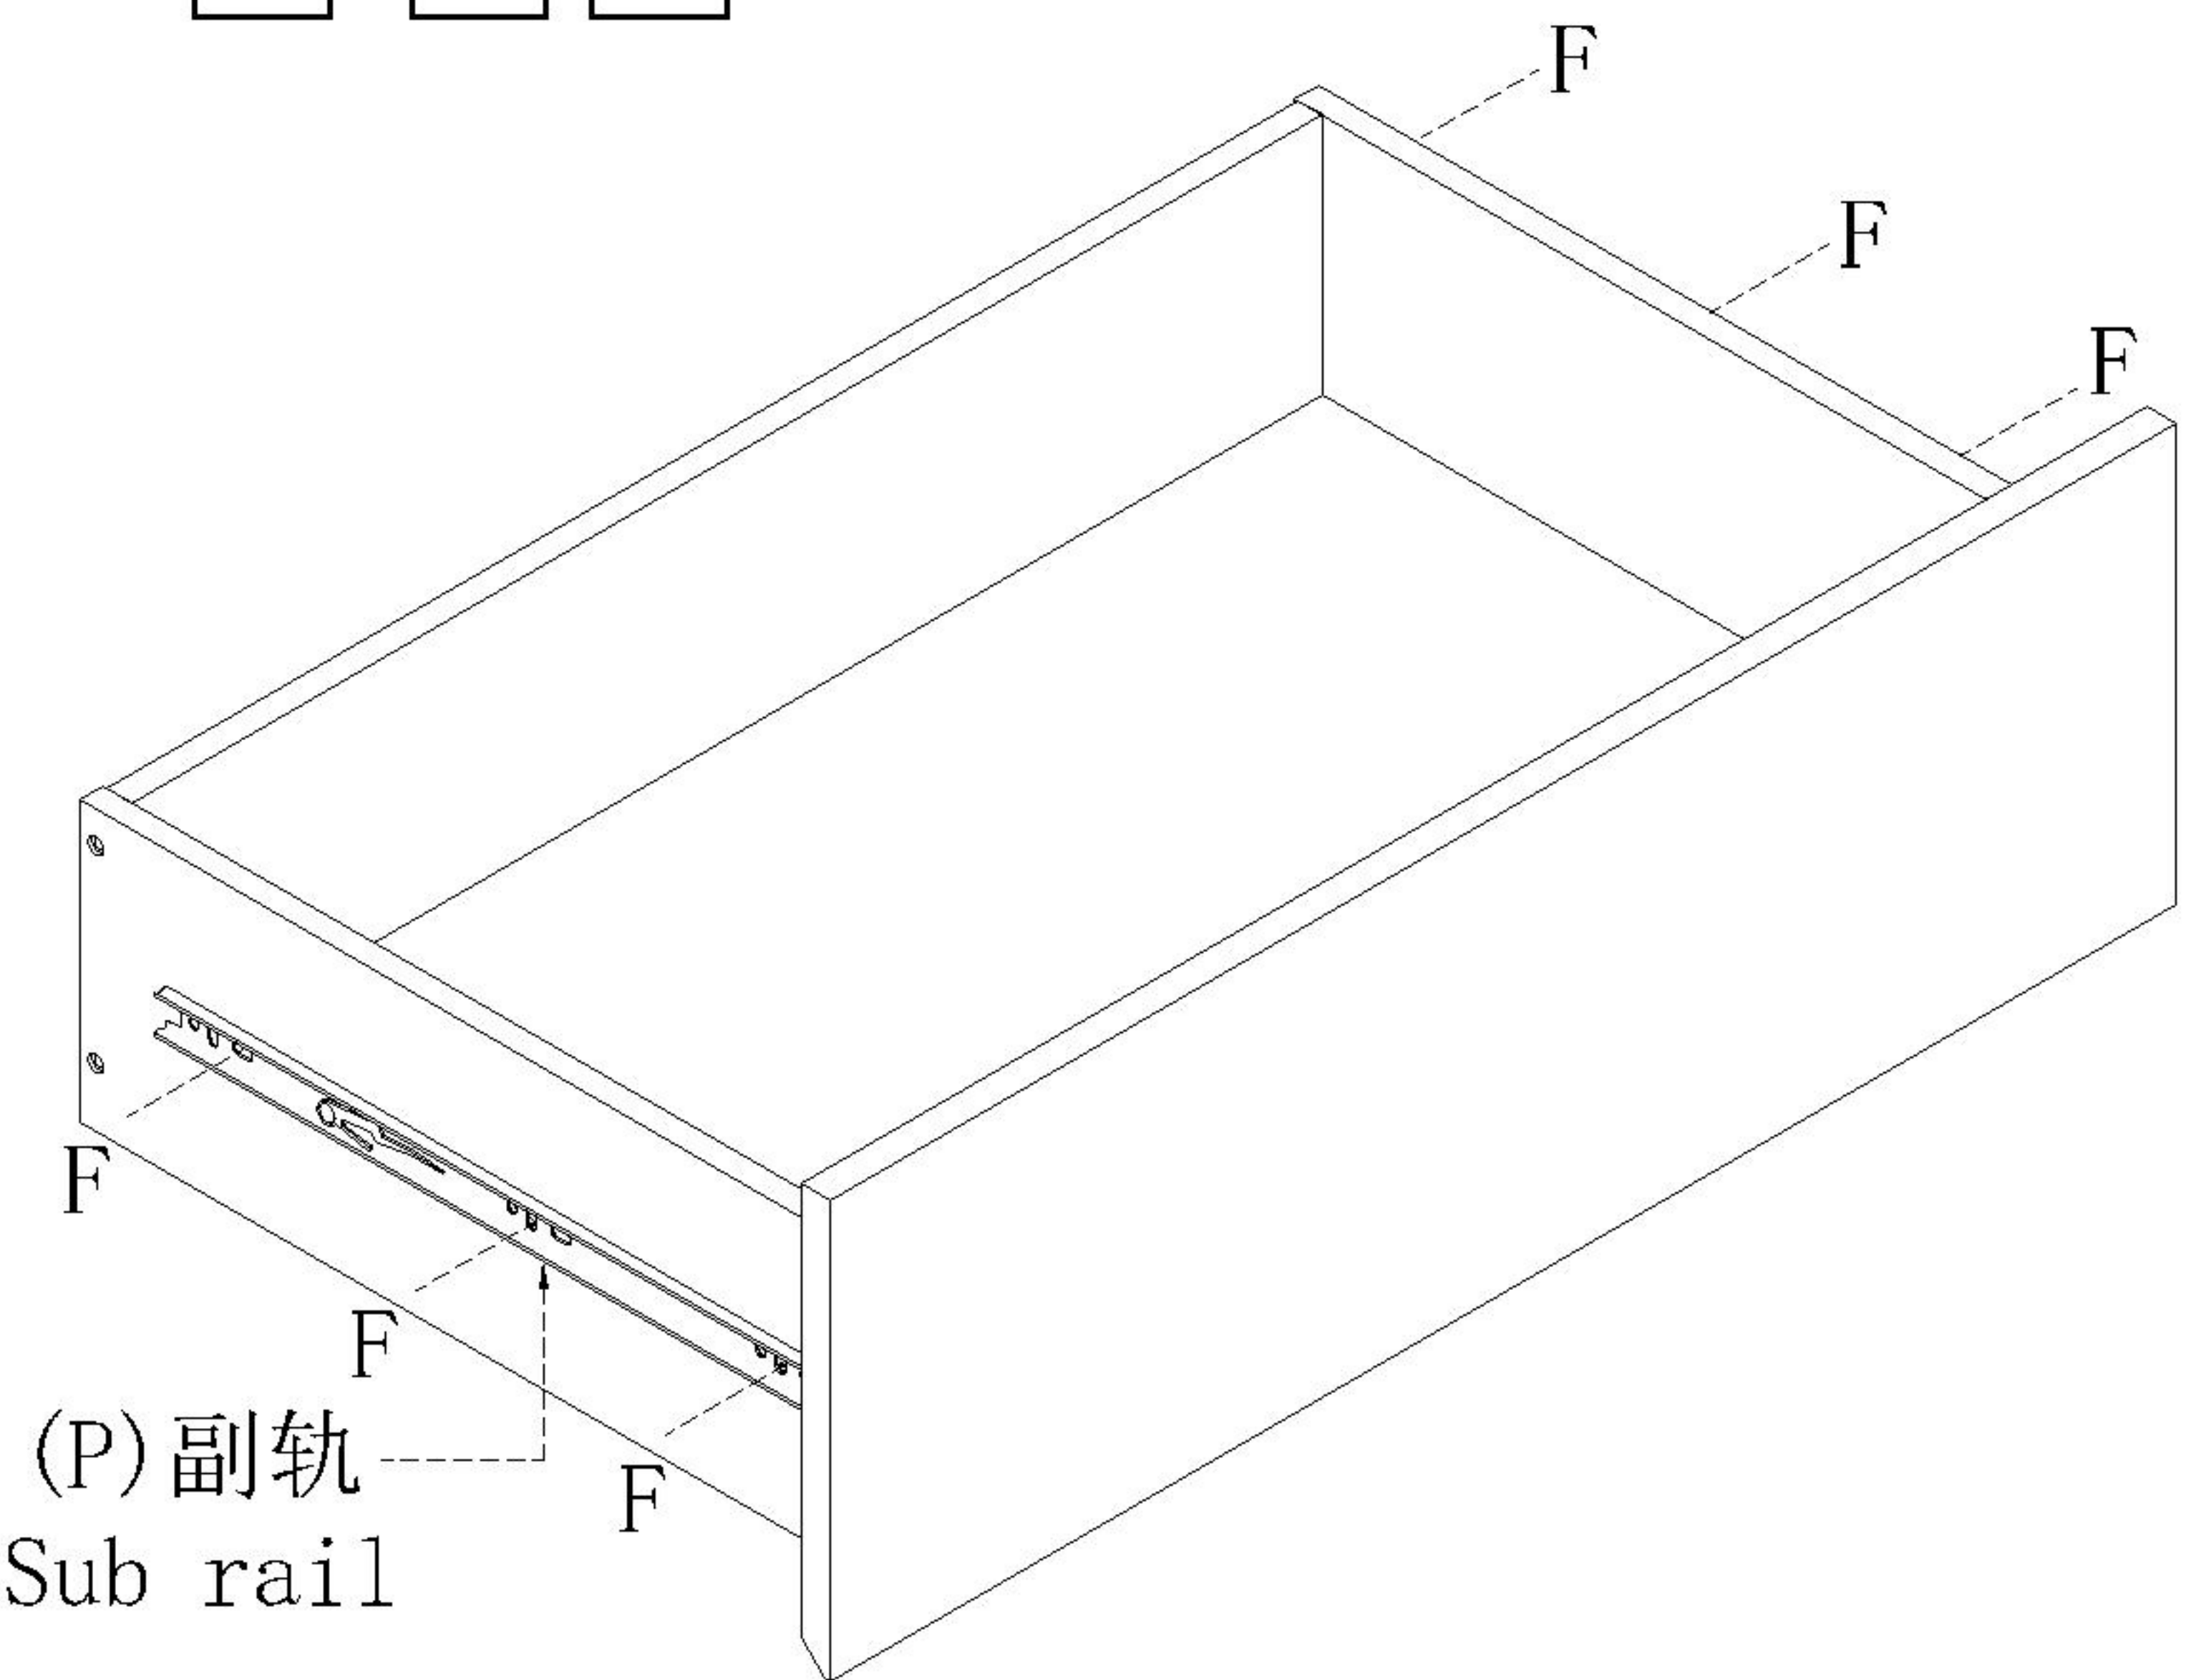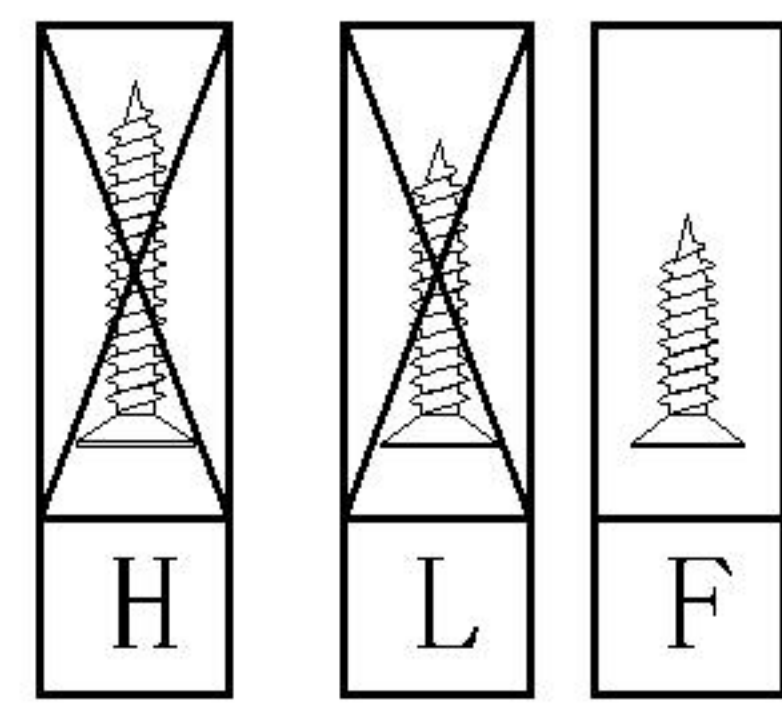

(P) 副轨
Sub rail


4

安装方法/
Installation method

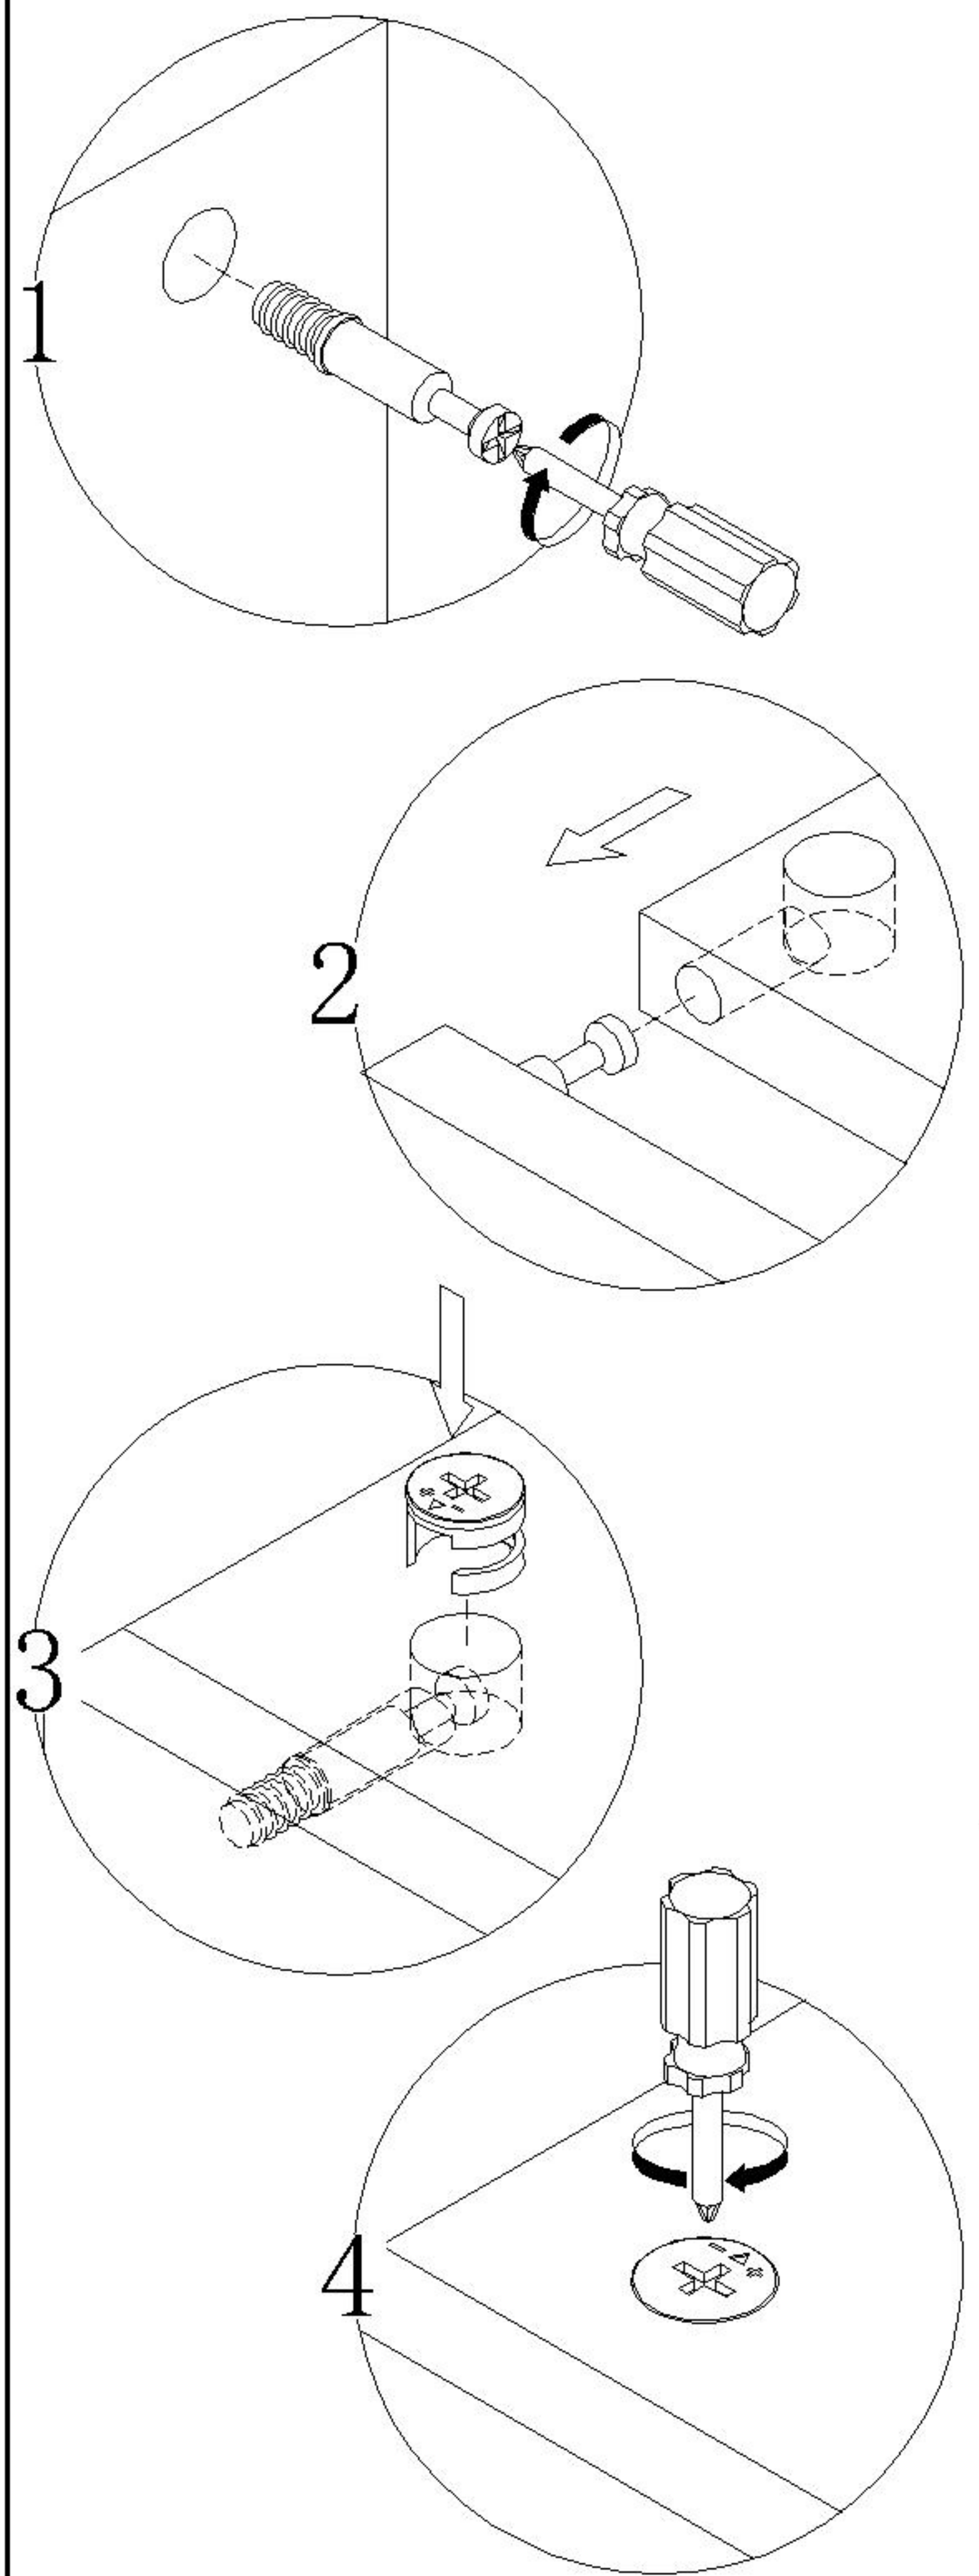


大二合一
two-in-one

- (A)*12
- (C)*4
- (D)*8
- (E)*8

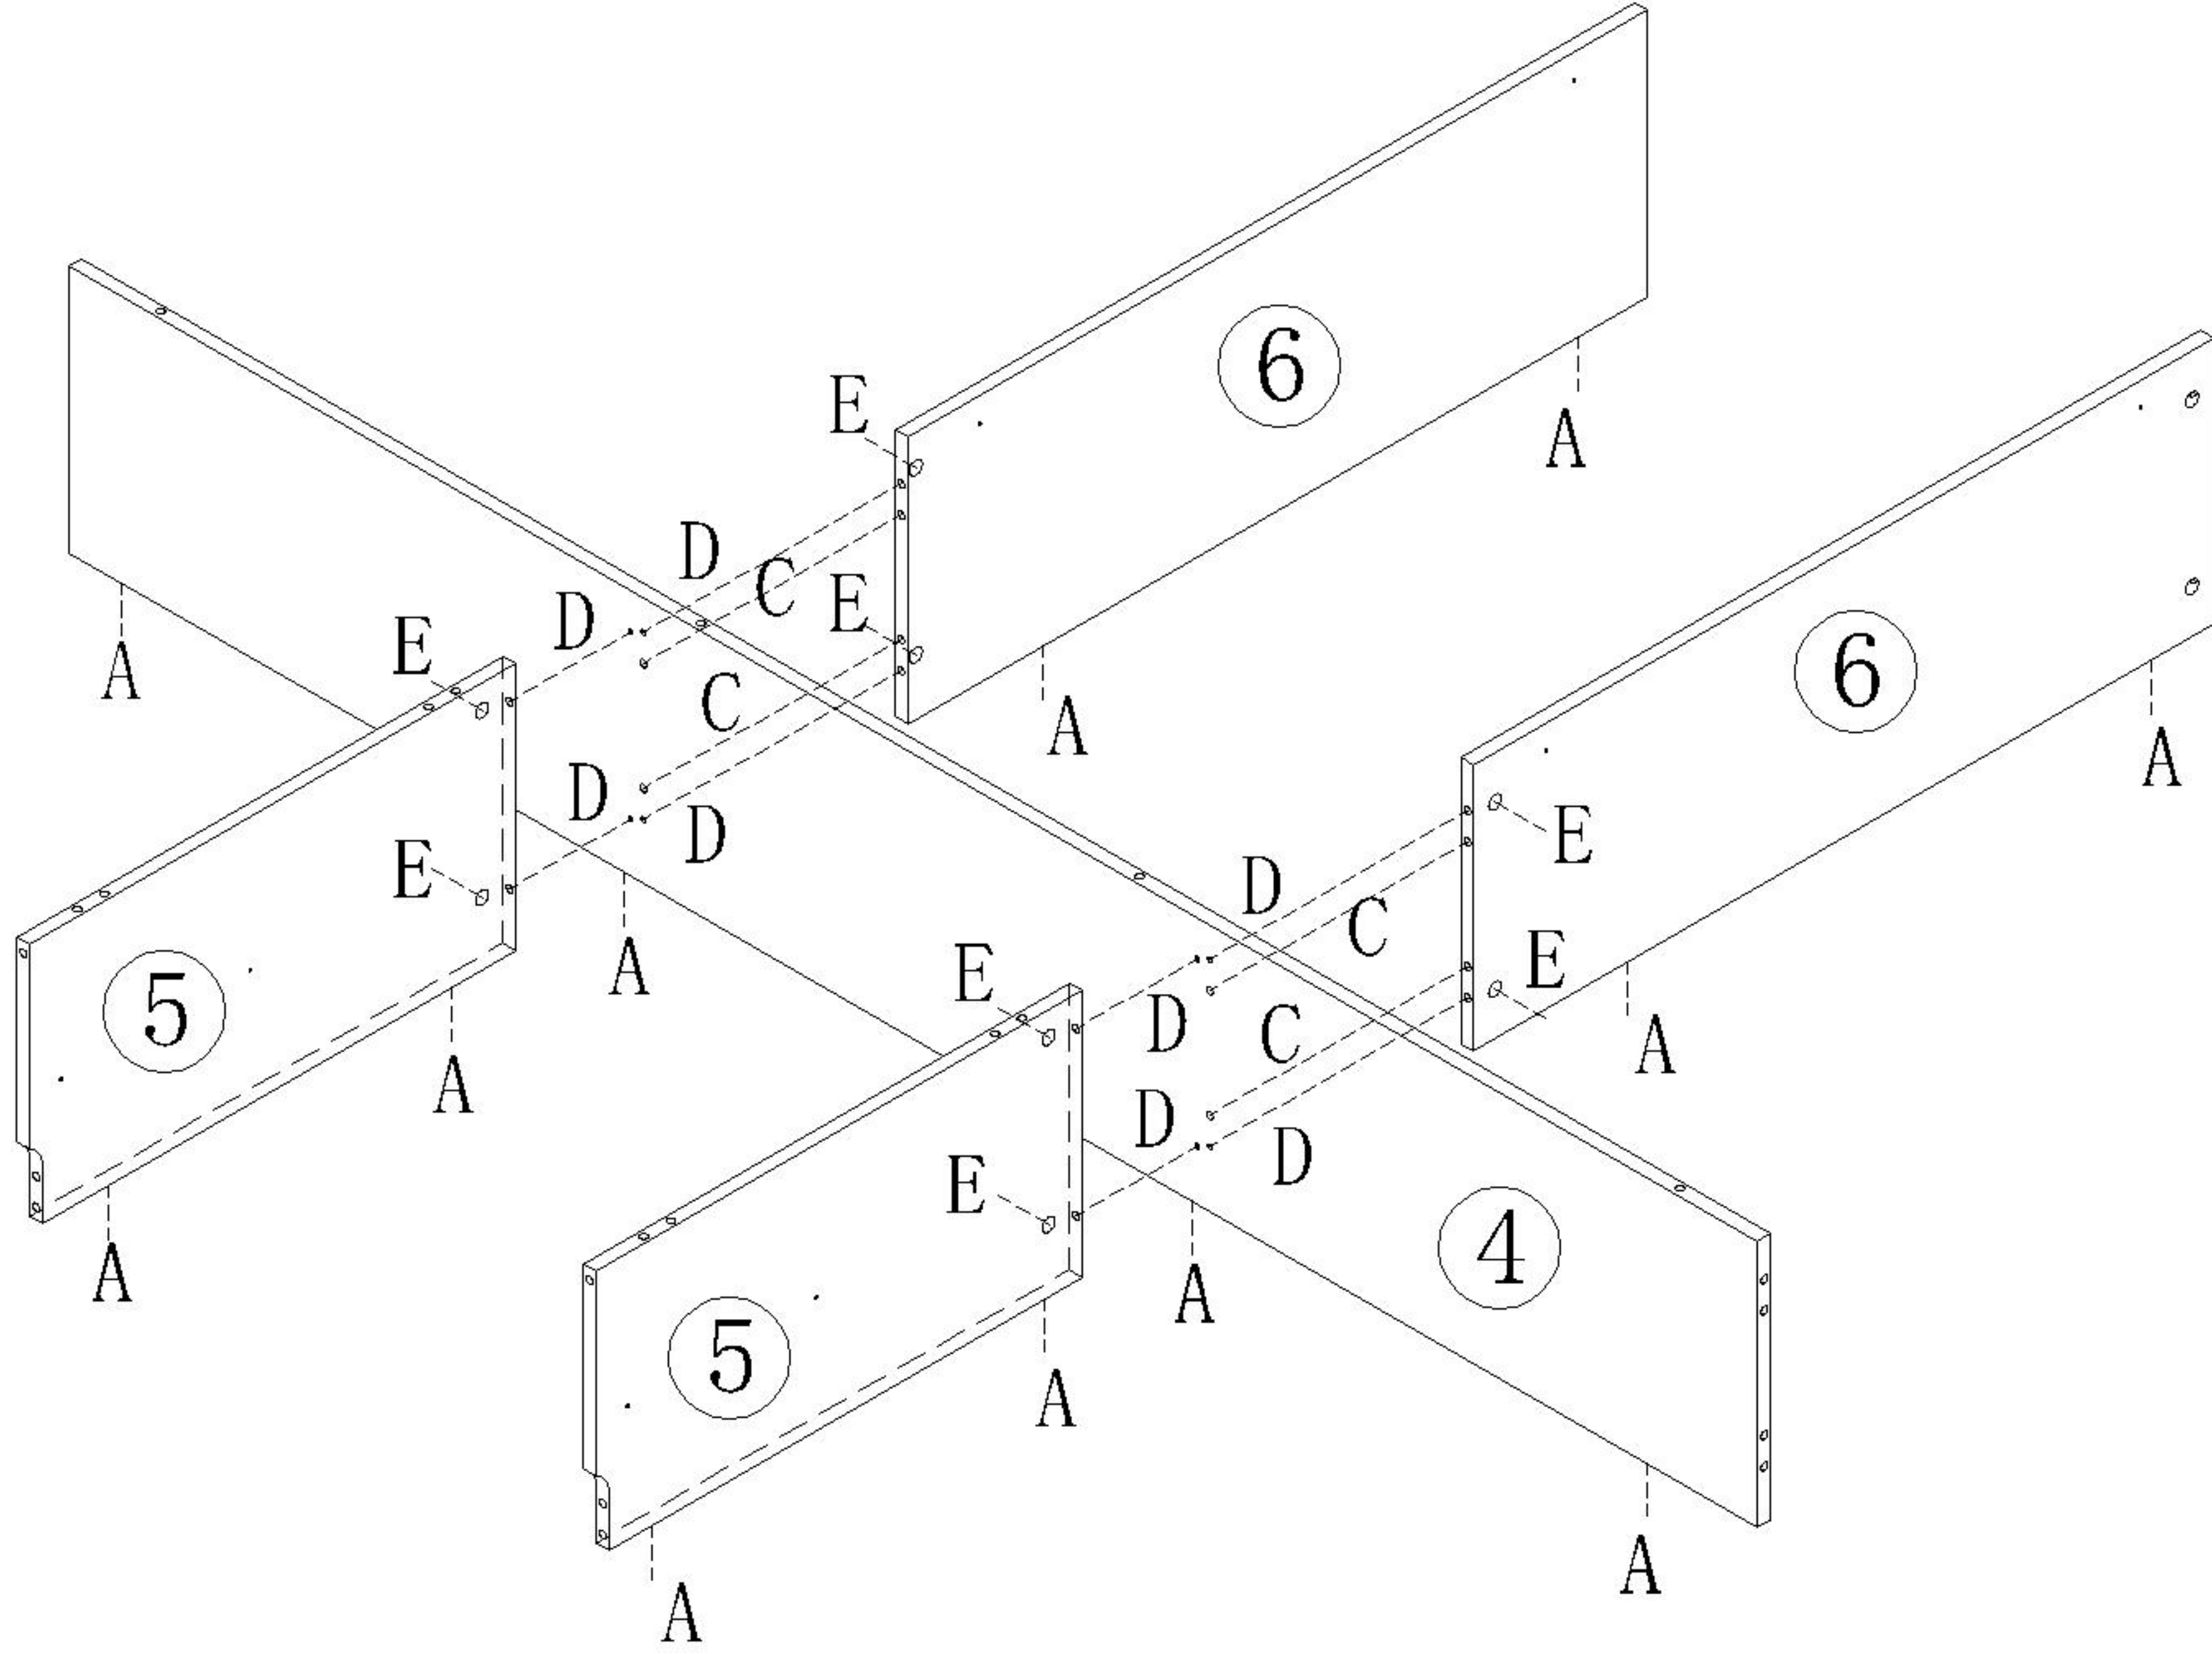


5

- (C)*4
- (D)*8
- (E)*8

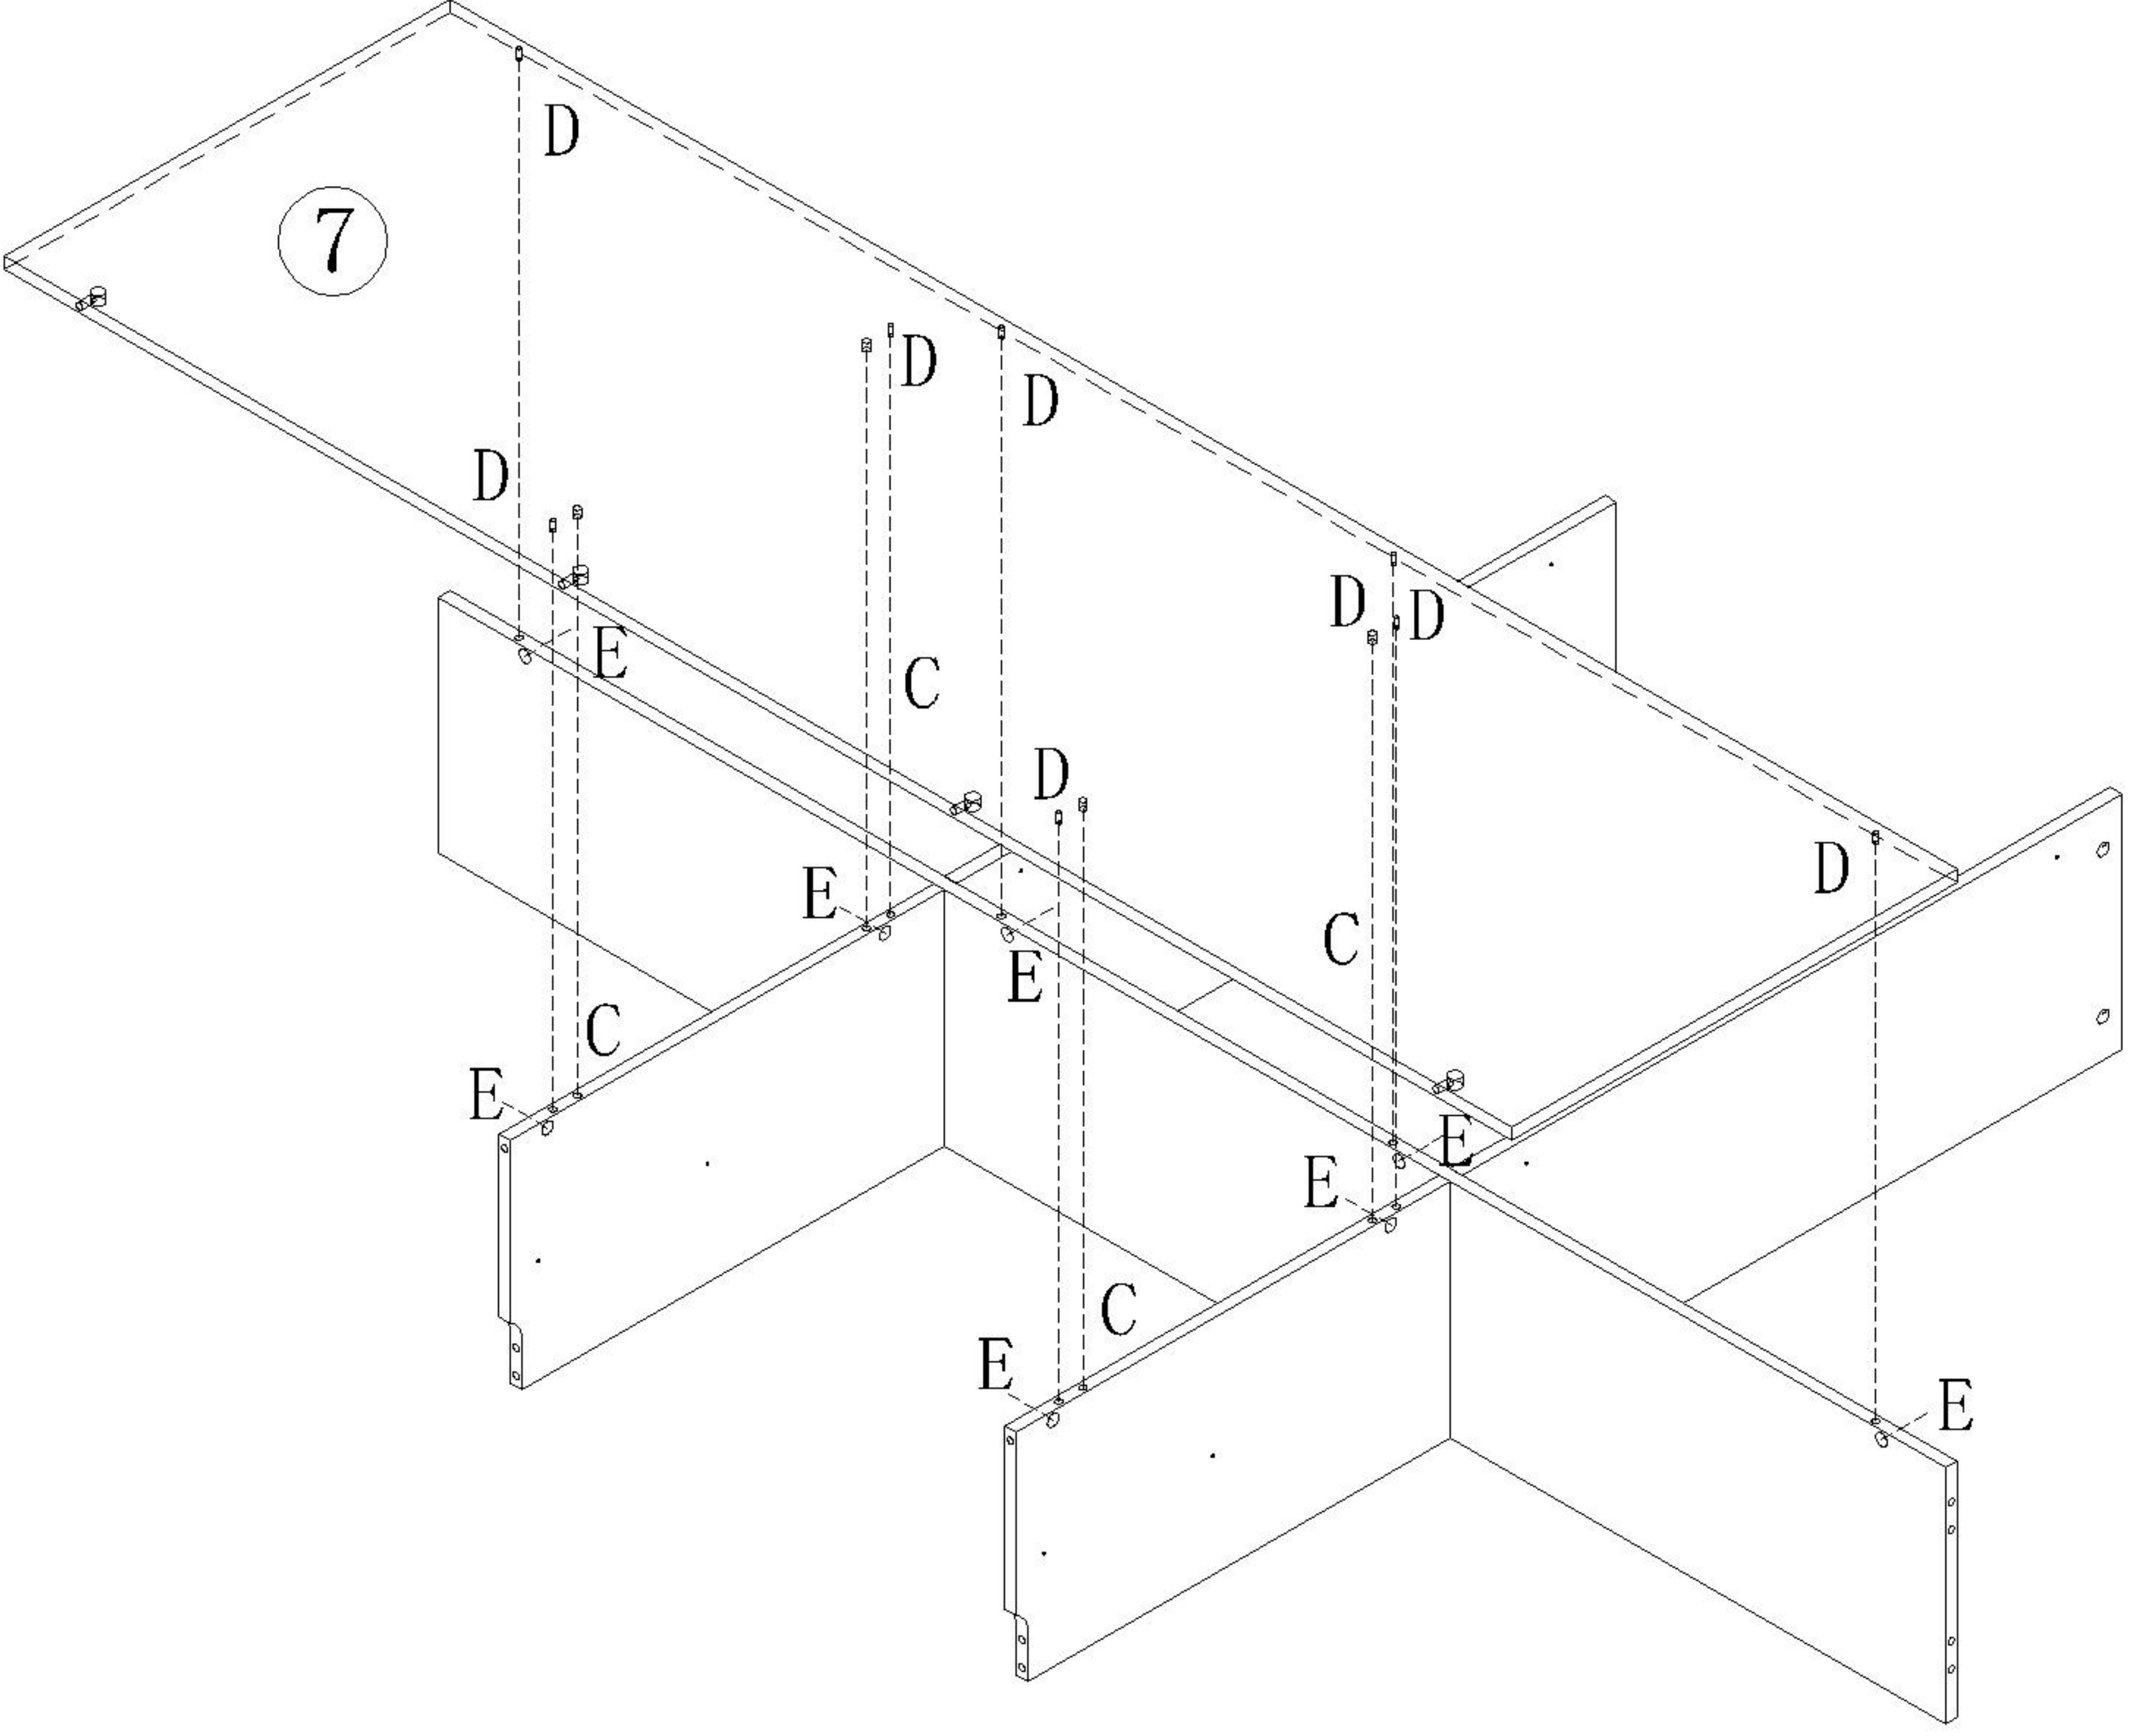


6

- (A)*4
- (D)*10
- (E)*10

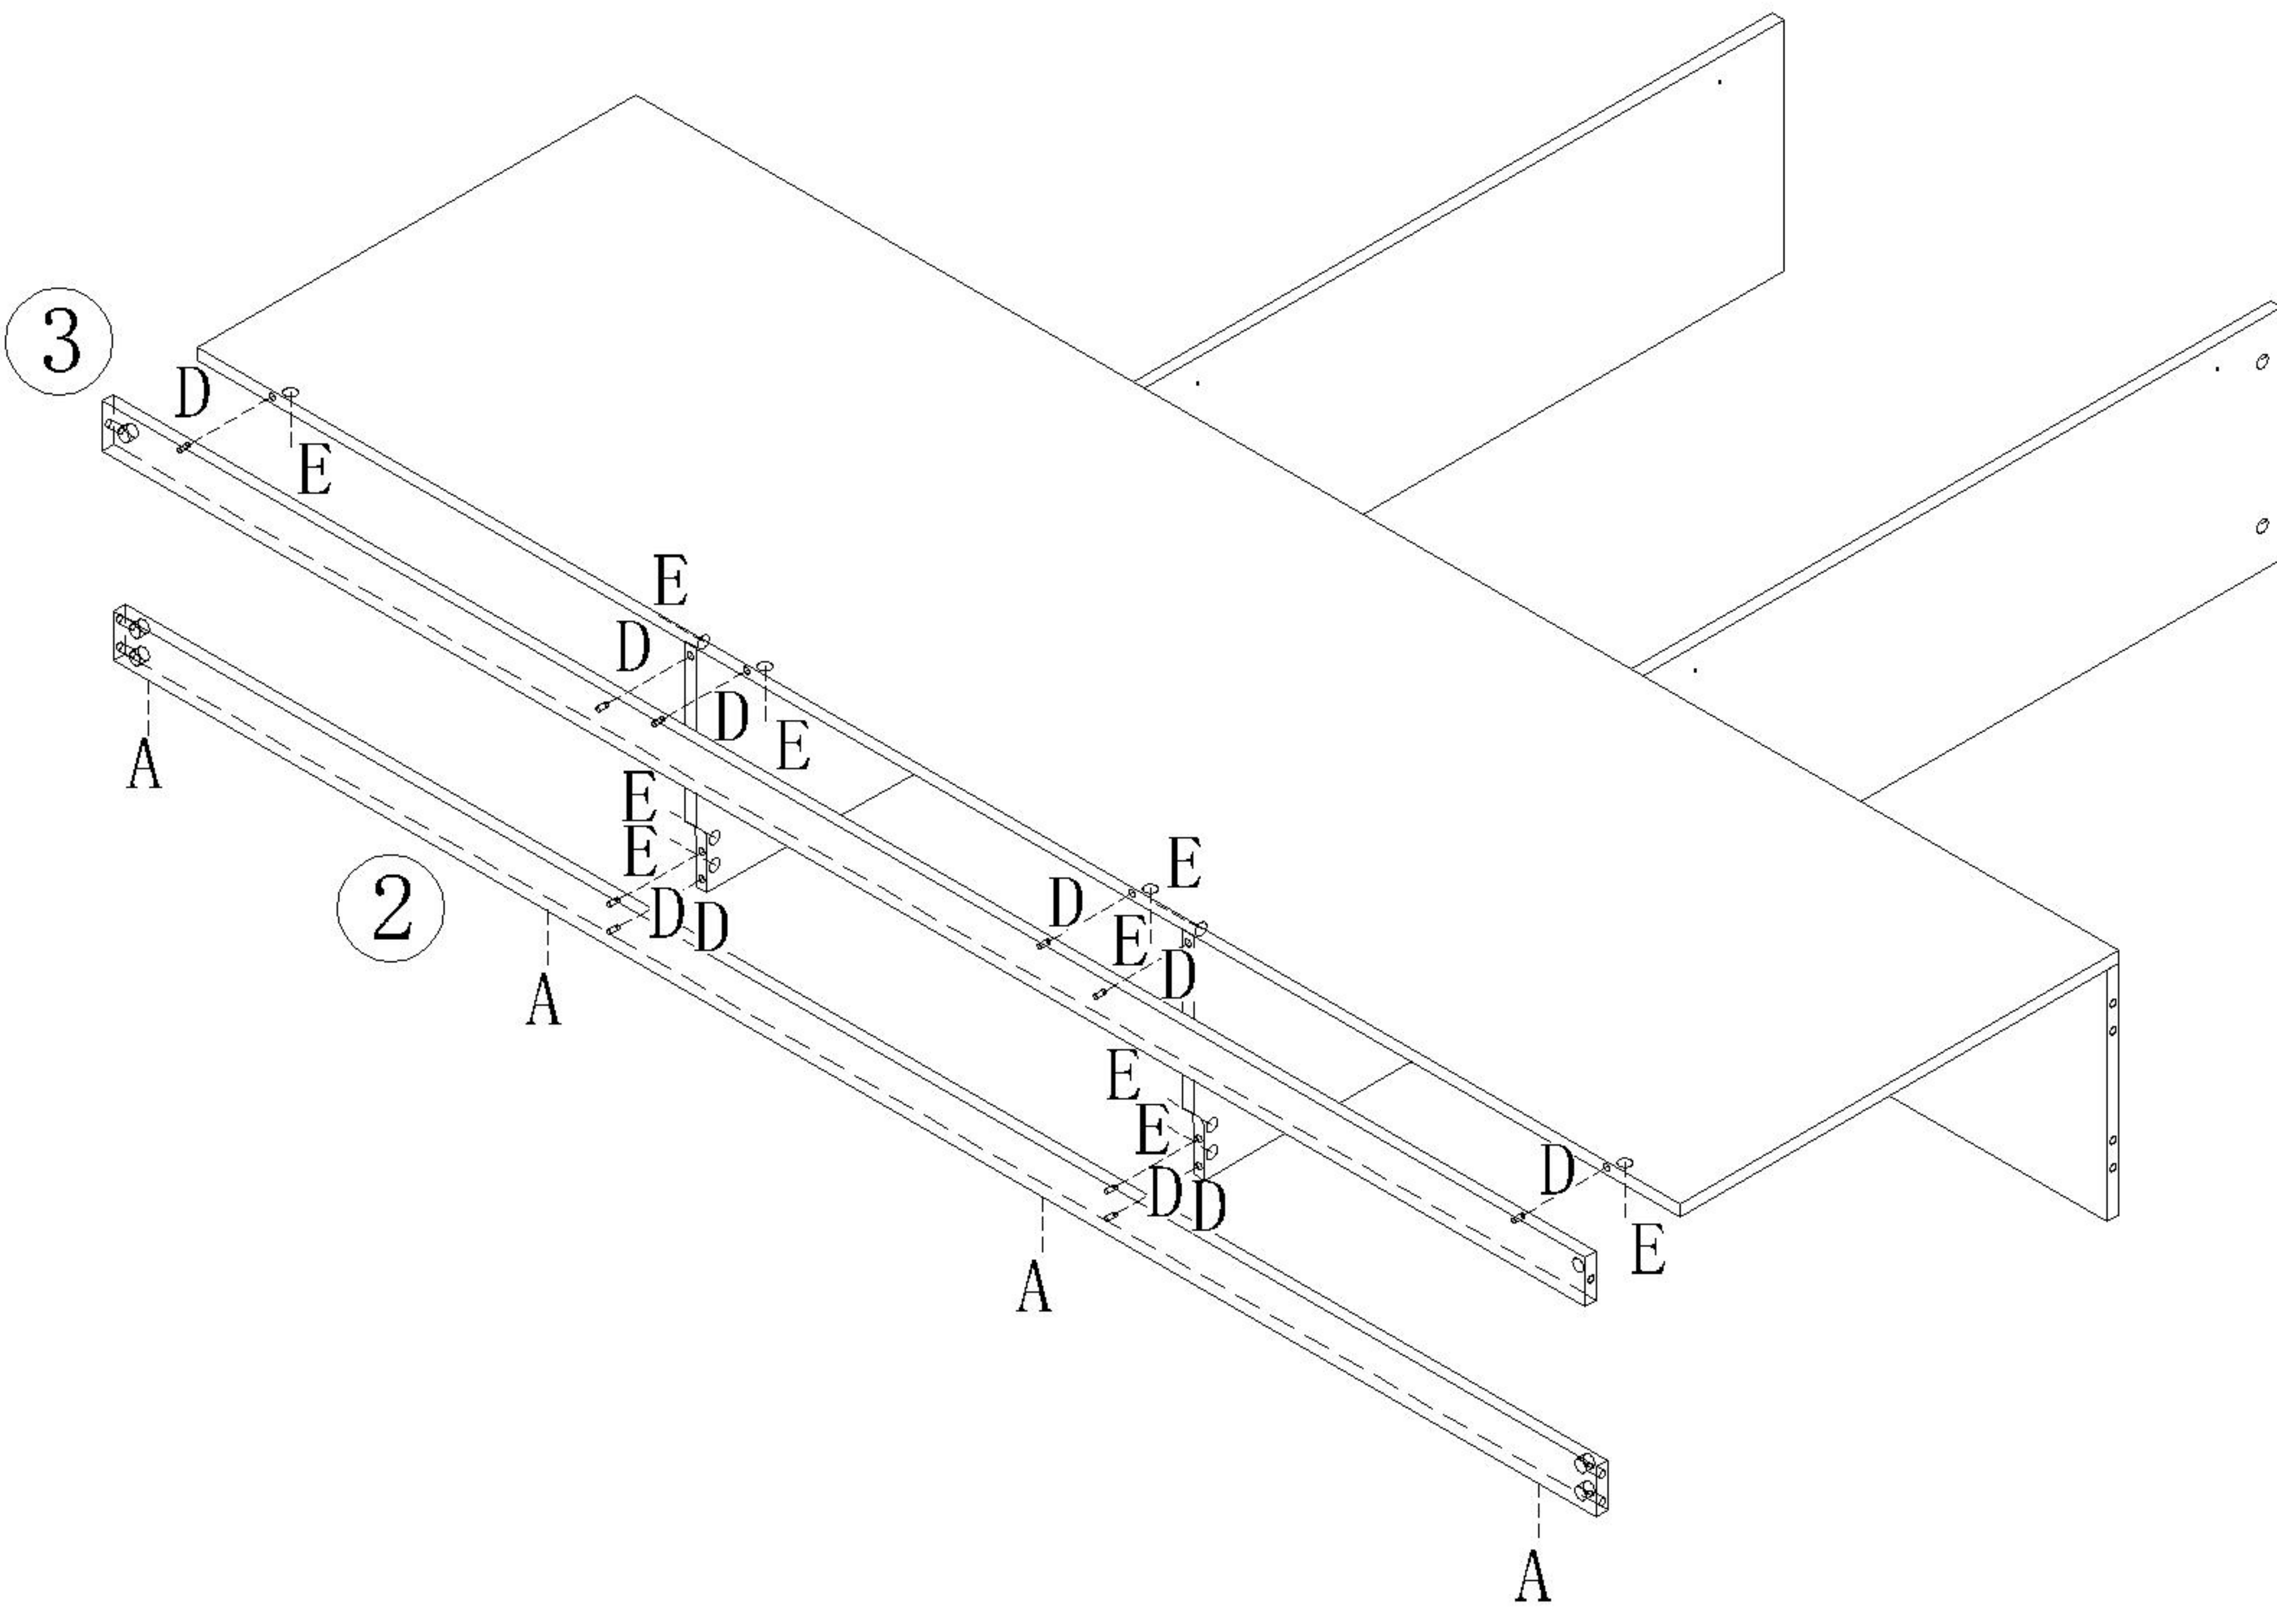

7


- (A)*4
- (C)*4
- (D)*4
- (E)*4

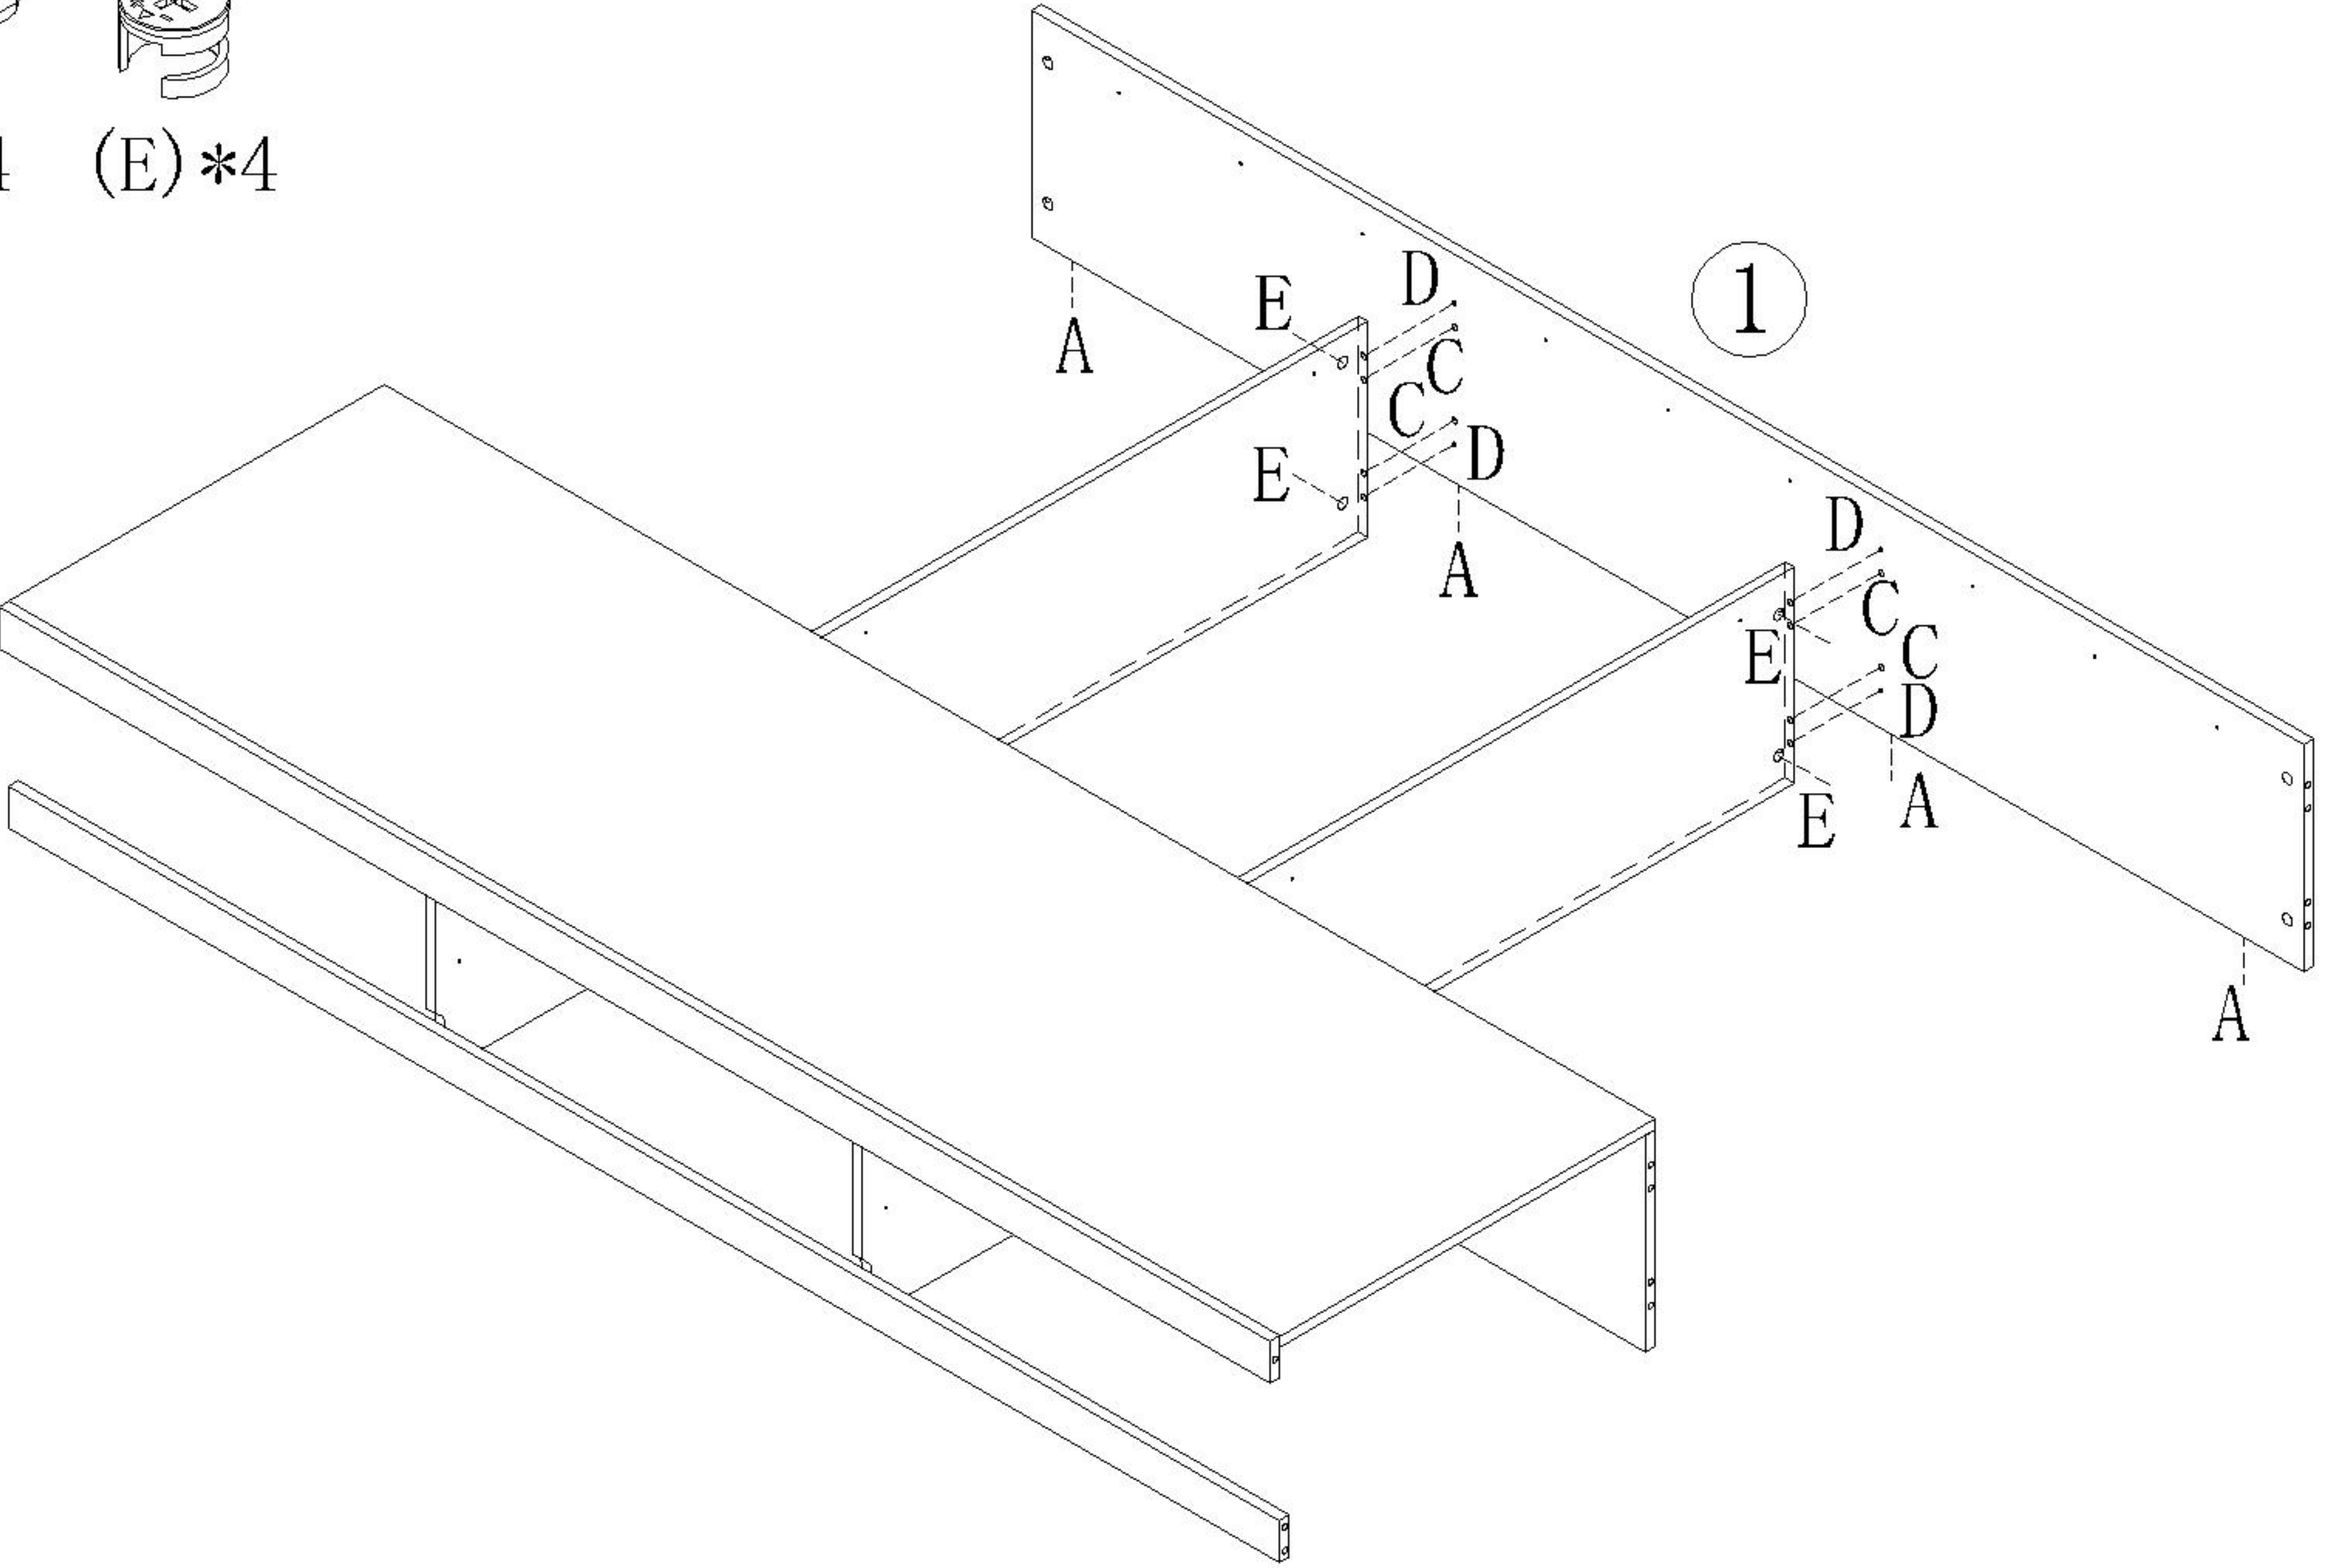




8

OV8A-C 1.5m 床身

安装方法/
Installation method

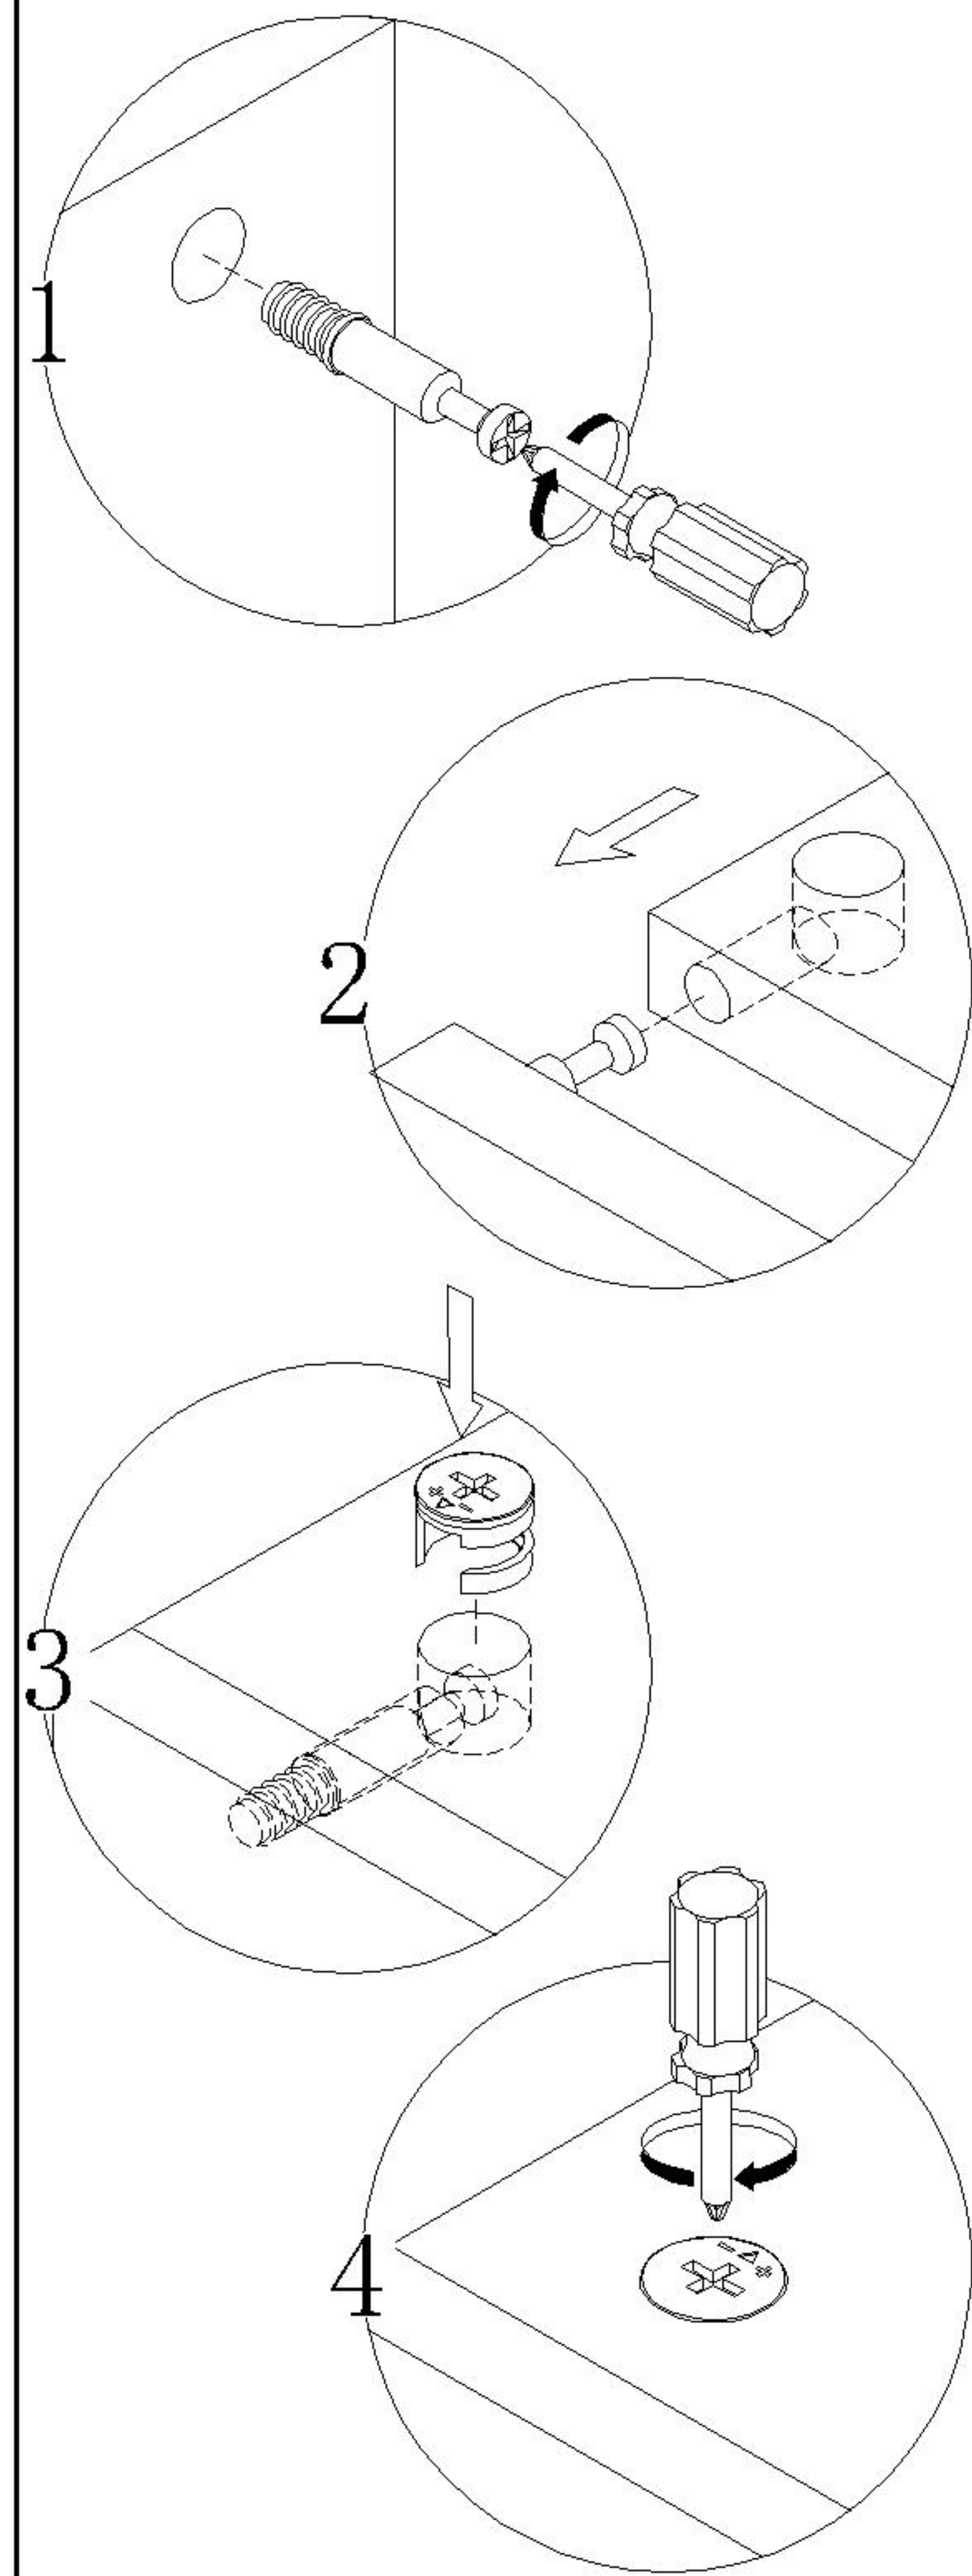


大二合一
two-in-one

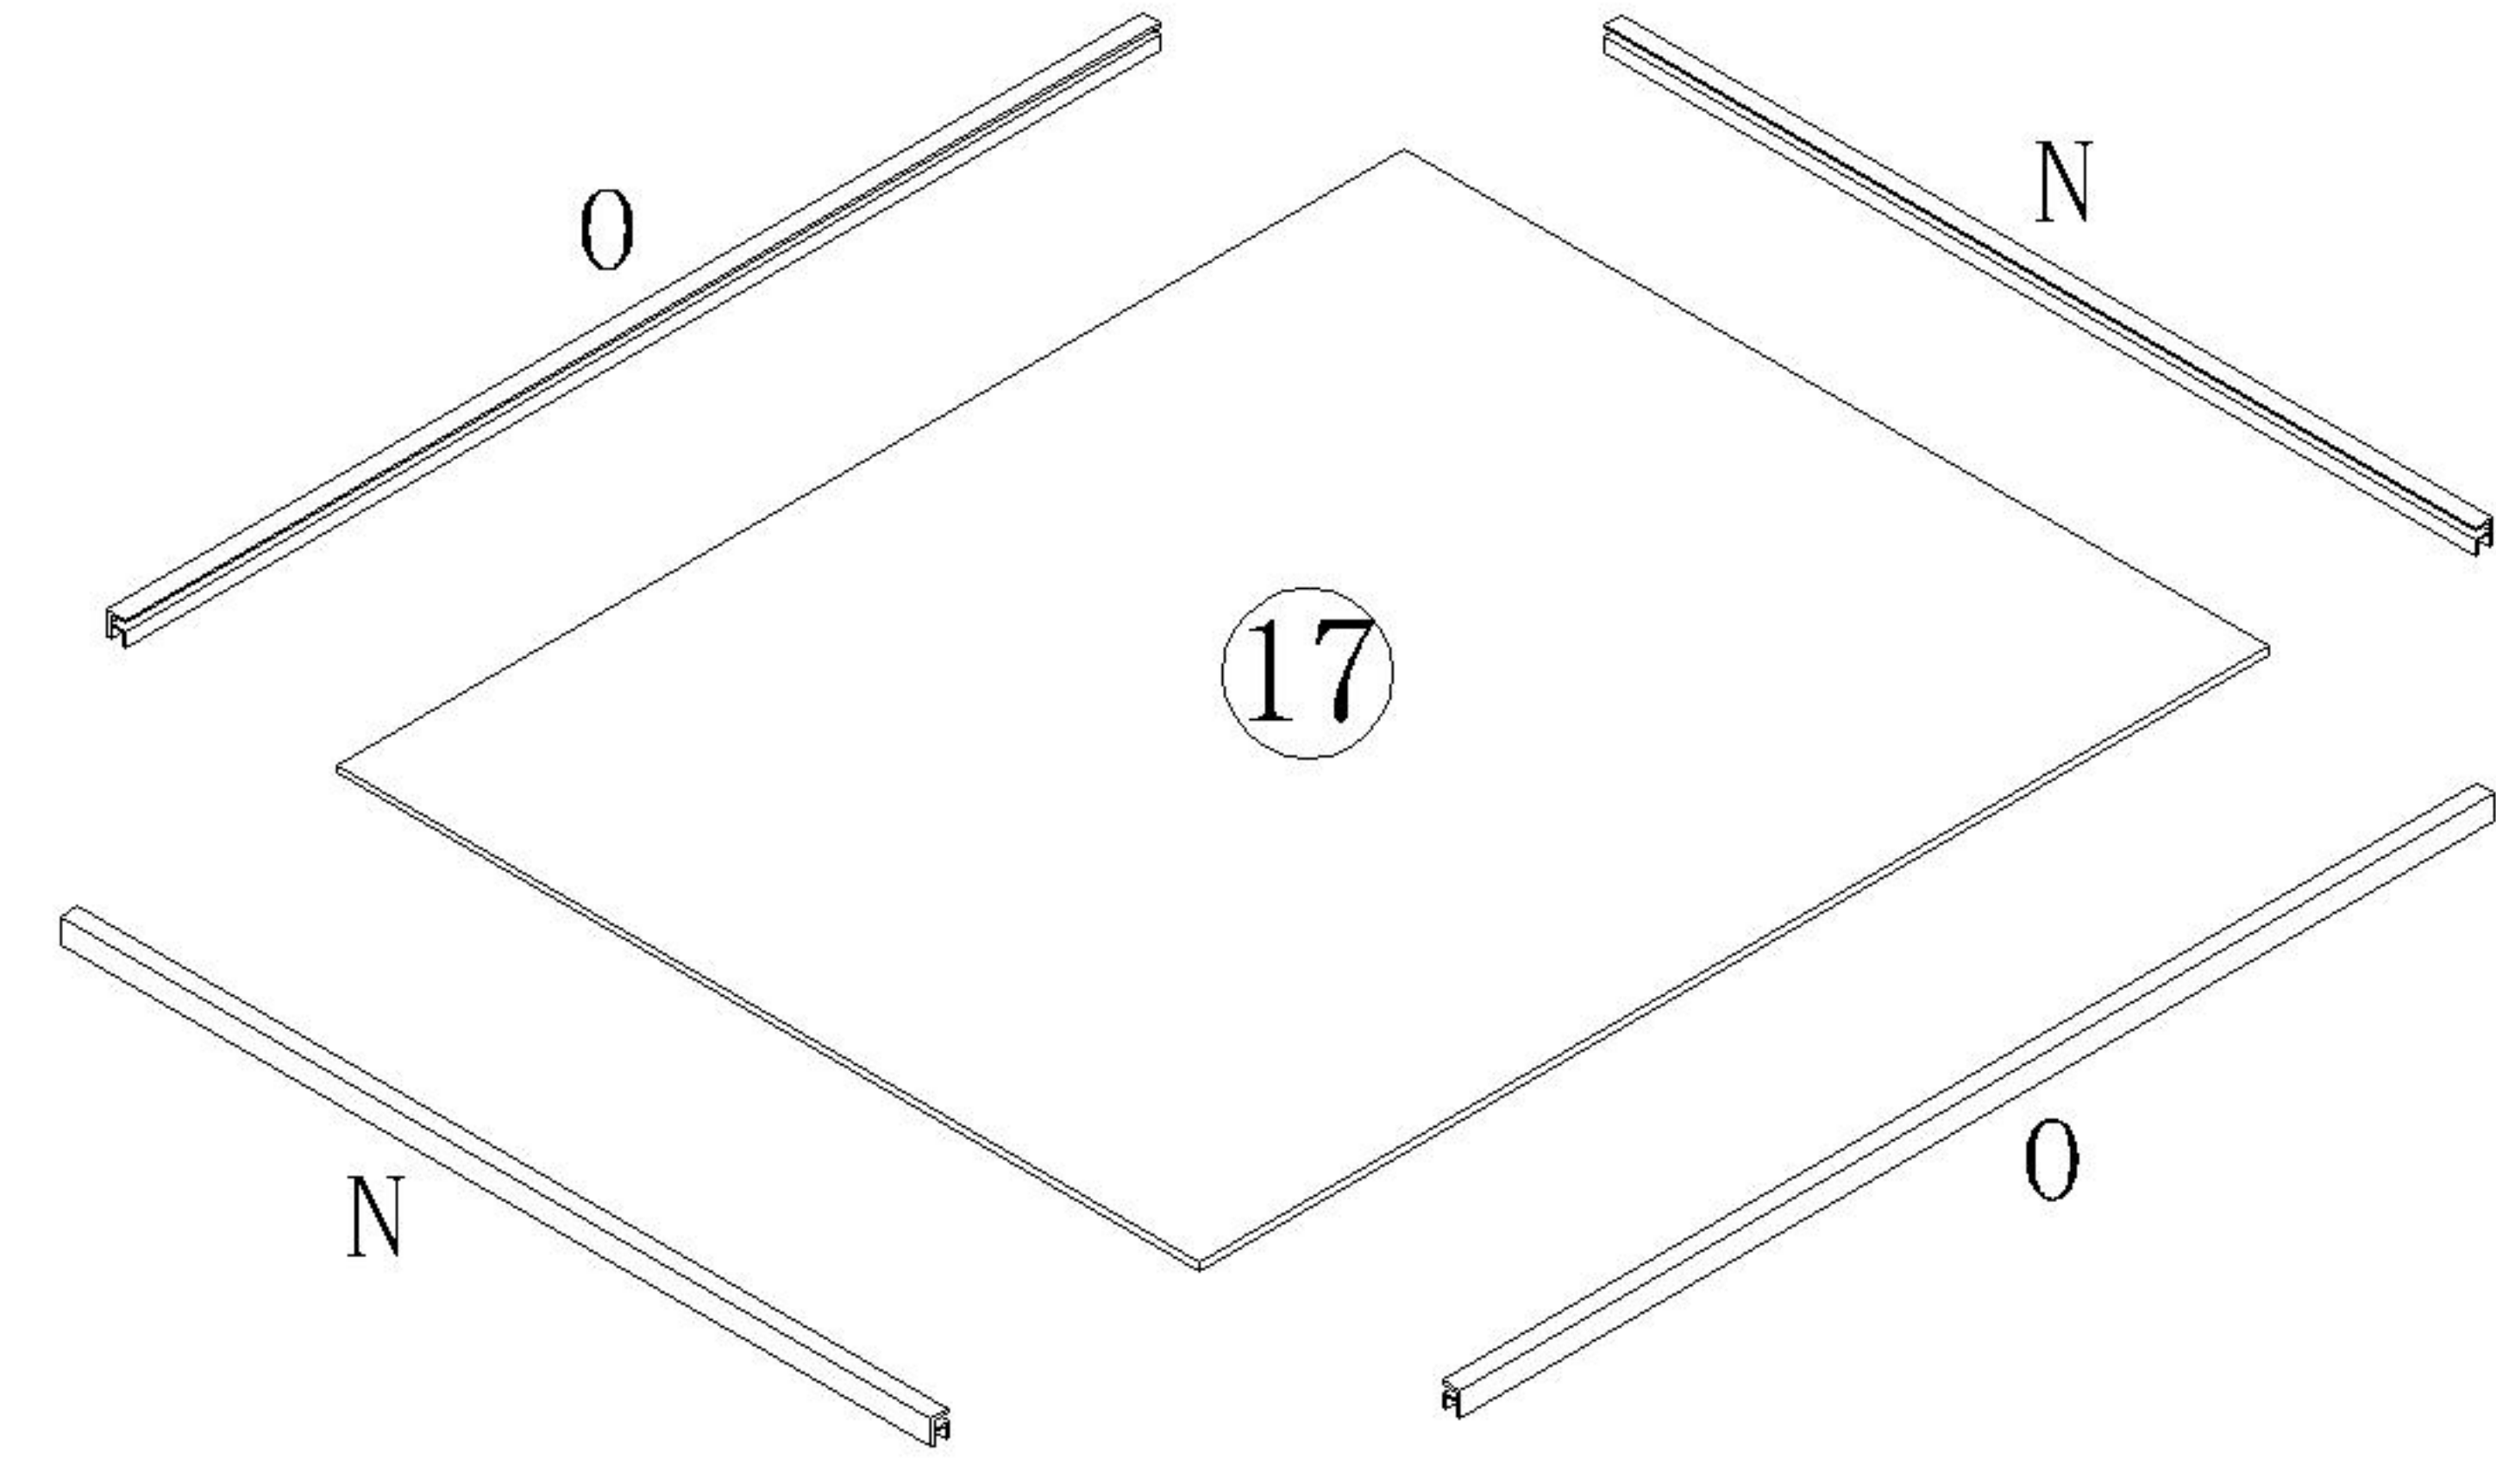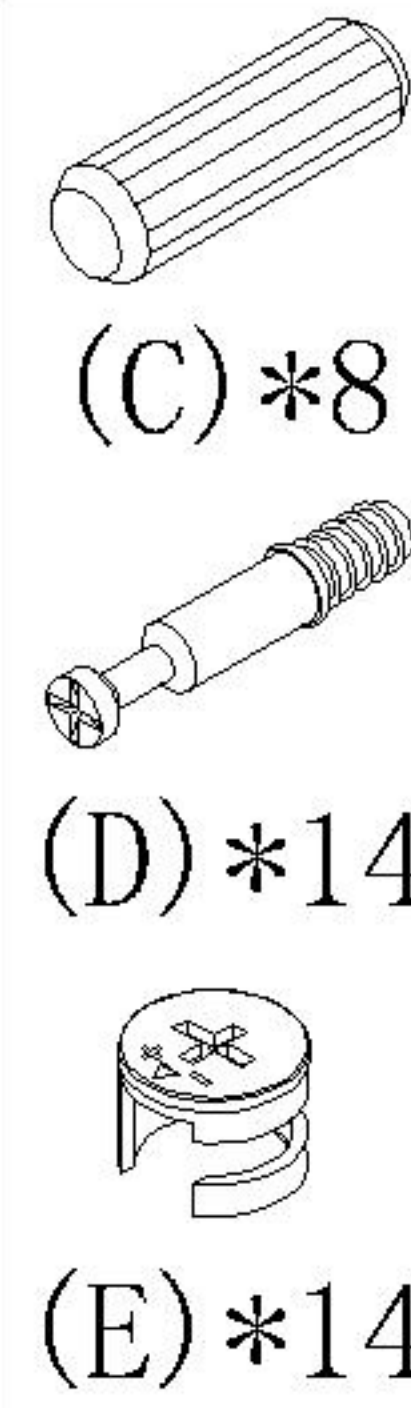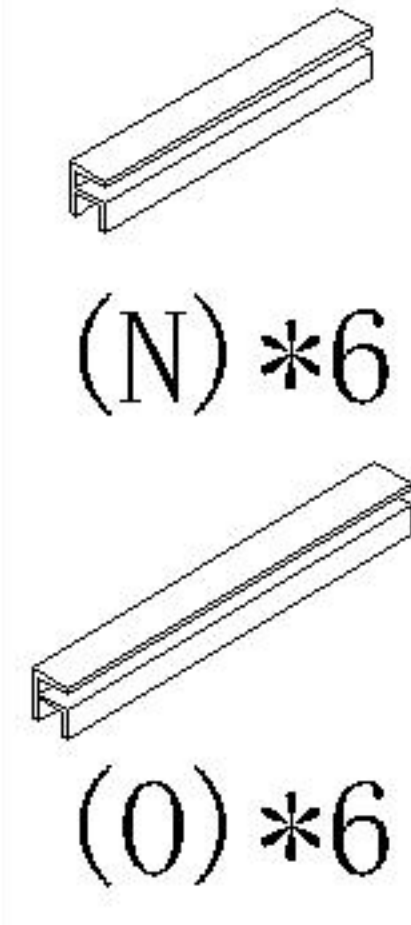


X3


9

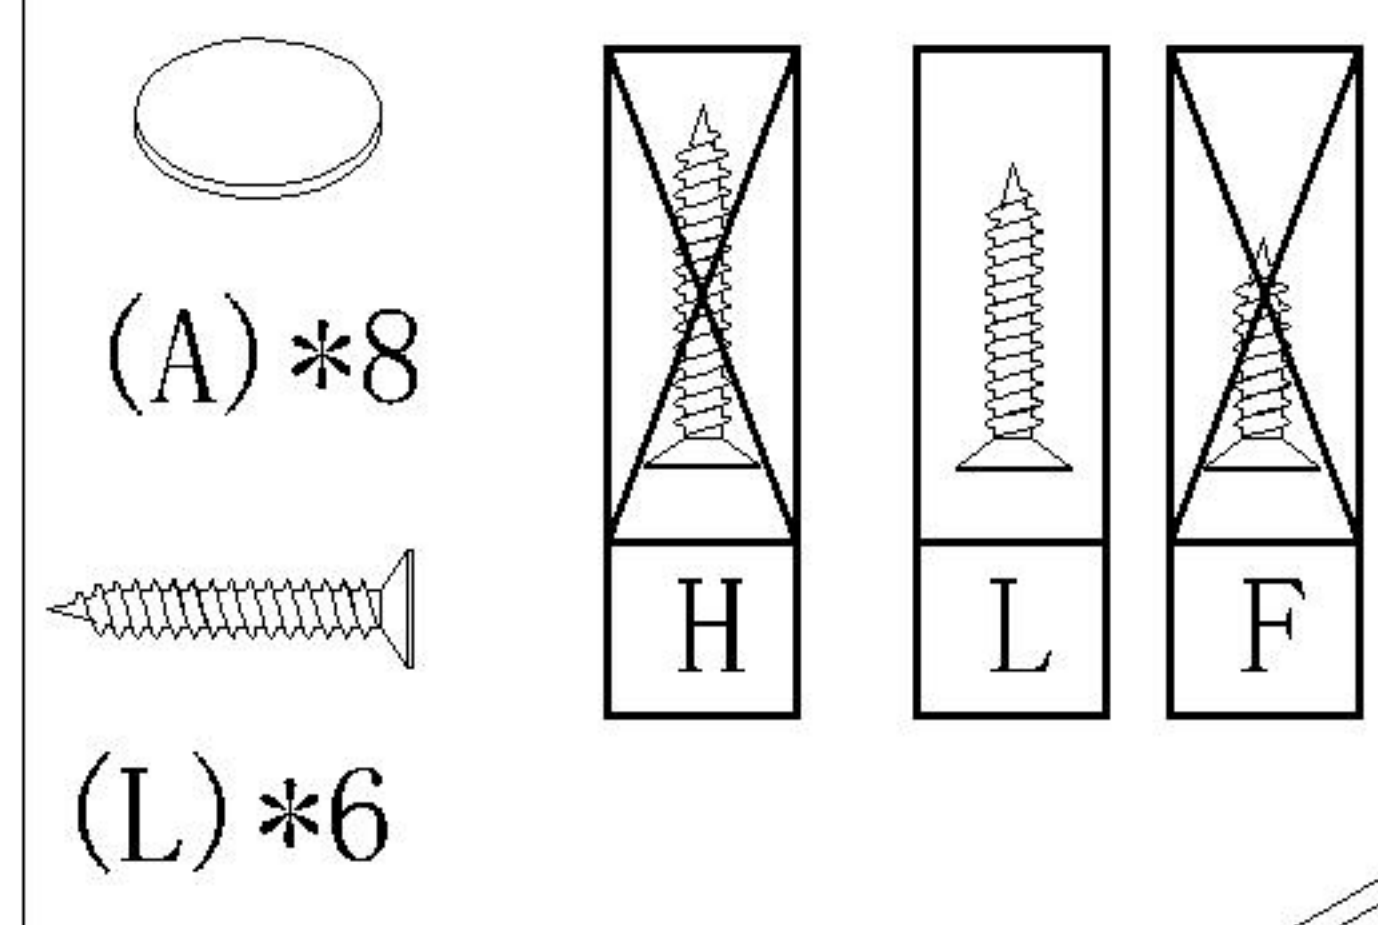

(A)*8
(L)*6

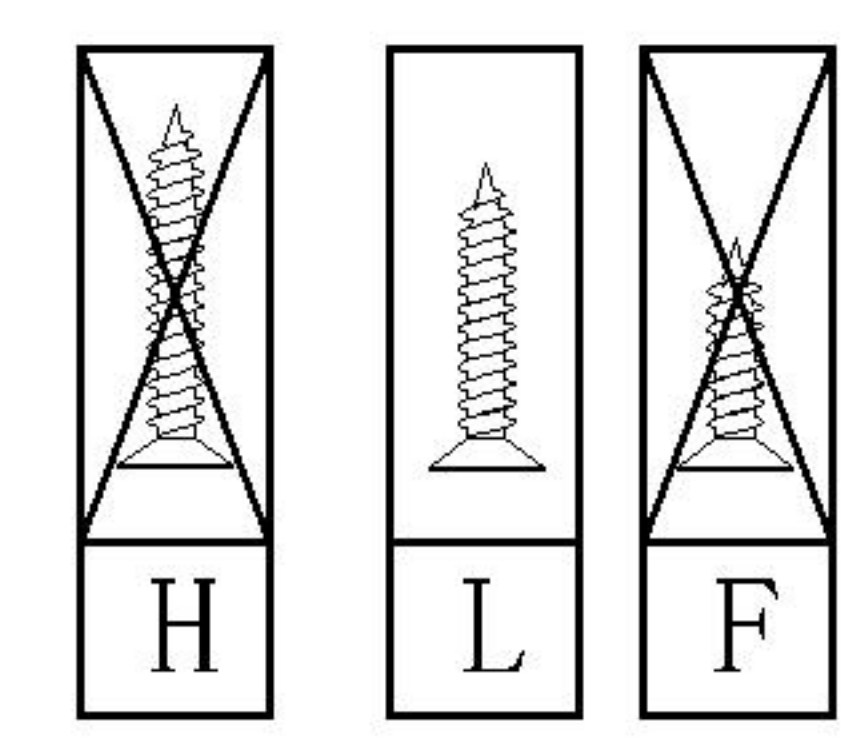


OV9A-C 高床头款1.5米 按以下步骤安装
OV9A-C high headboard 1.5m Follow these steps to install

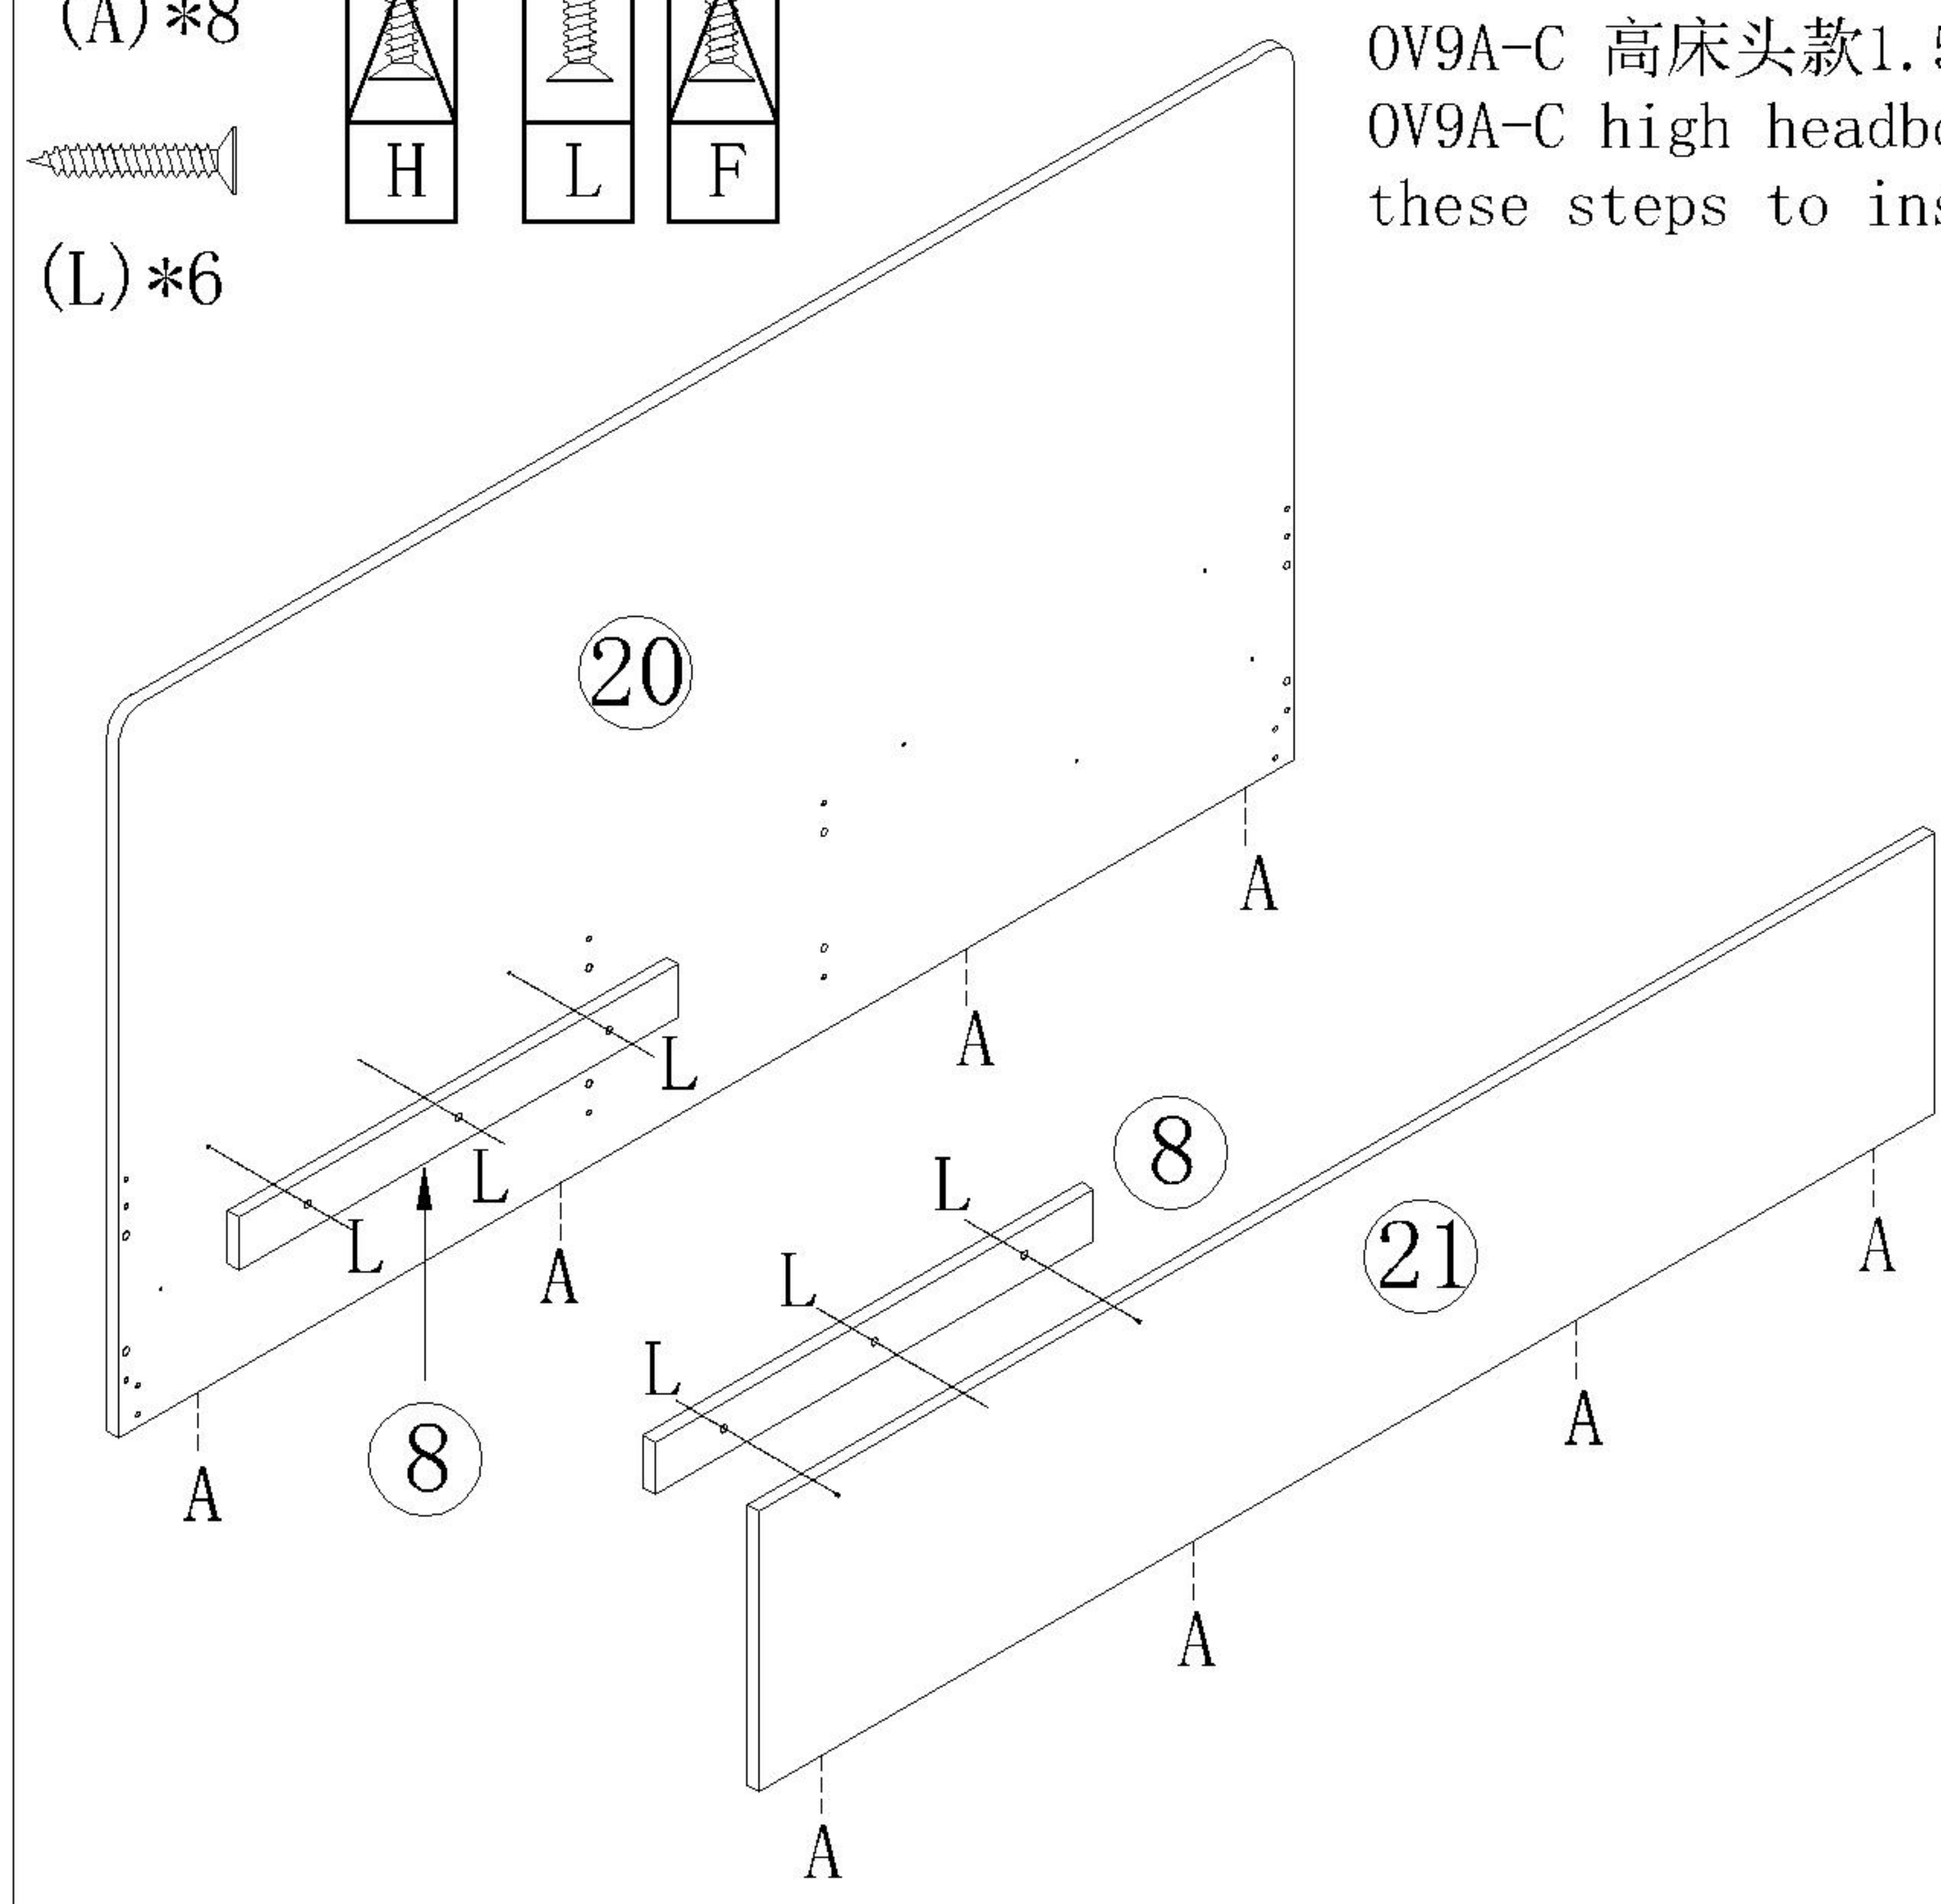


10

11

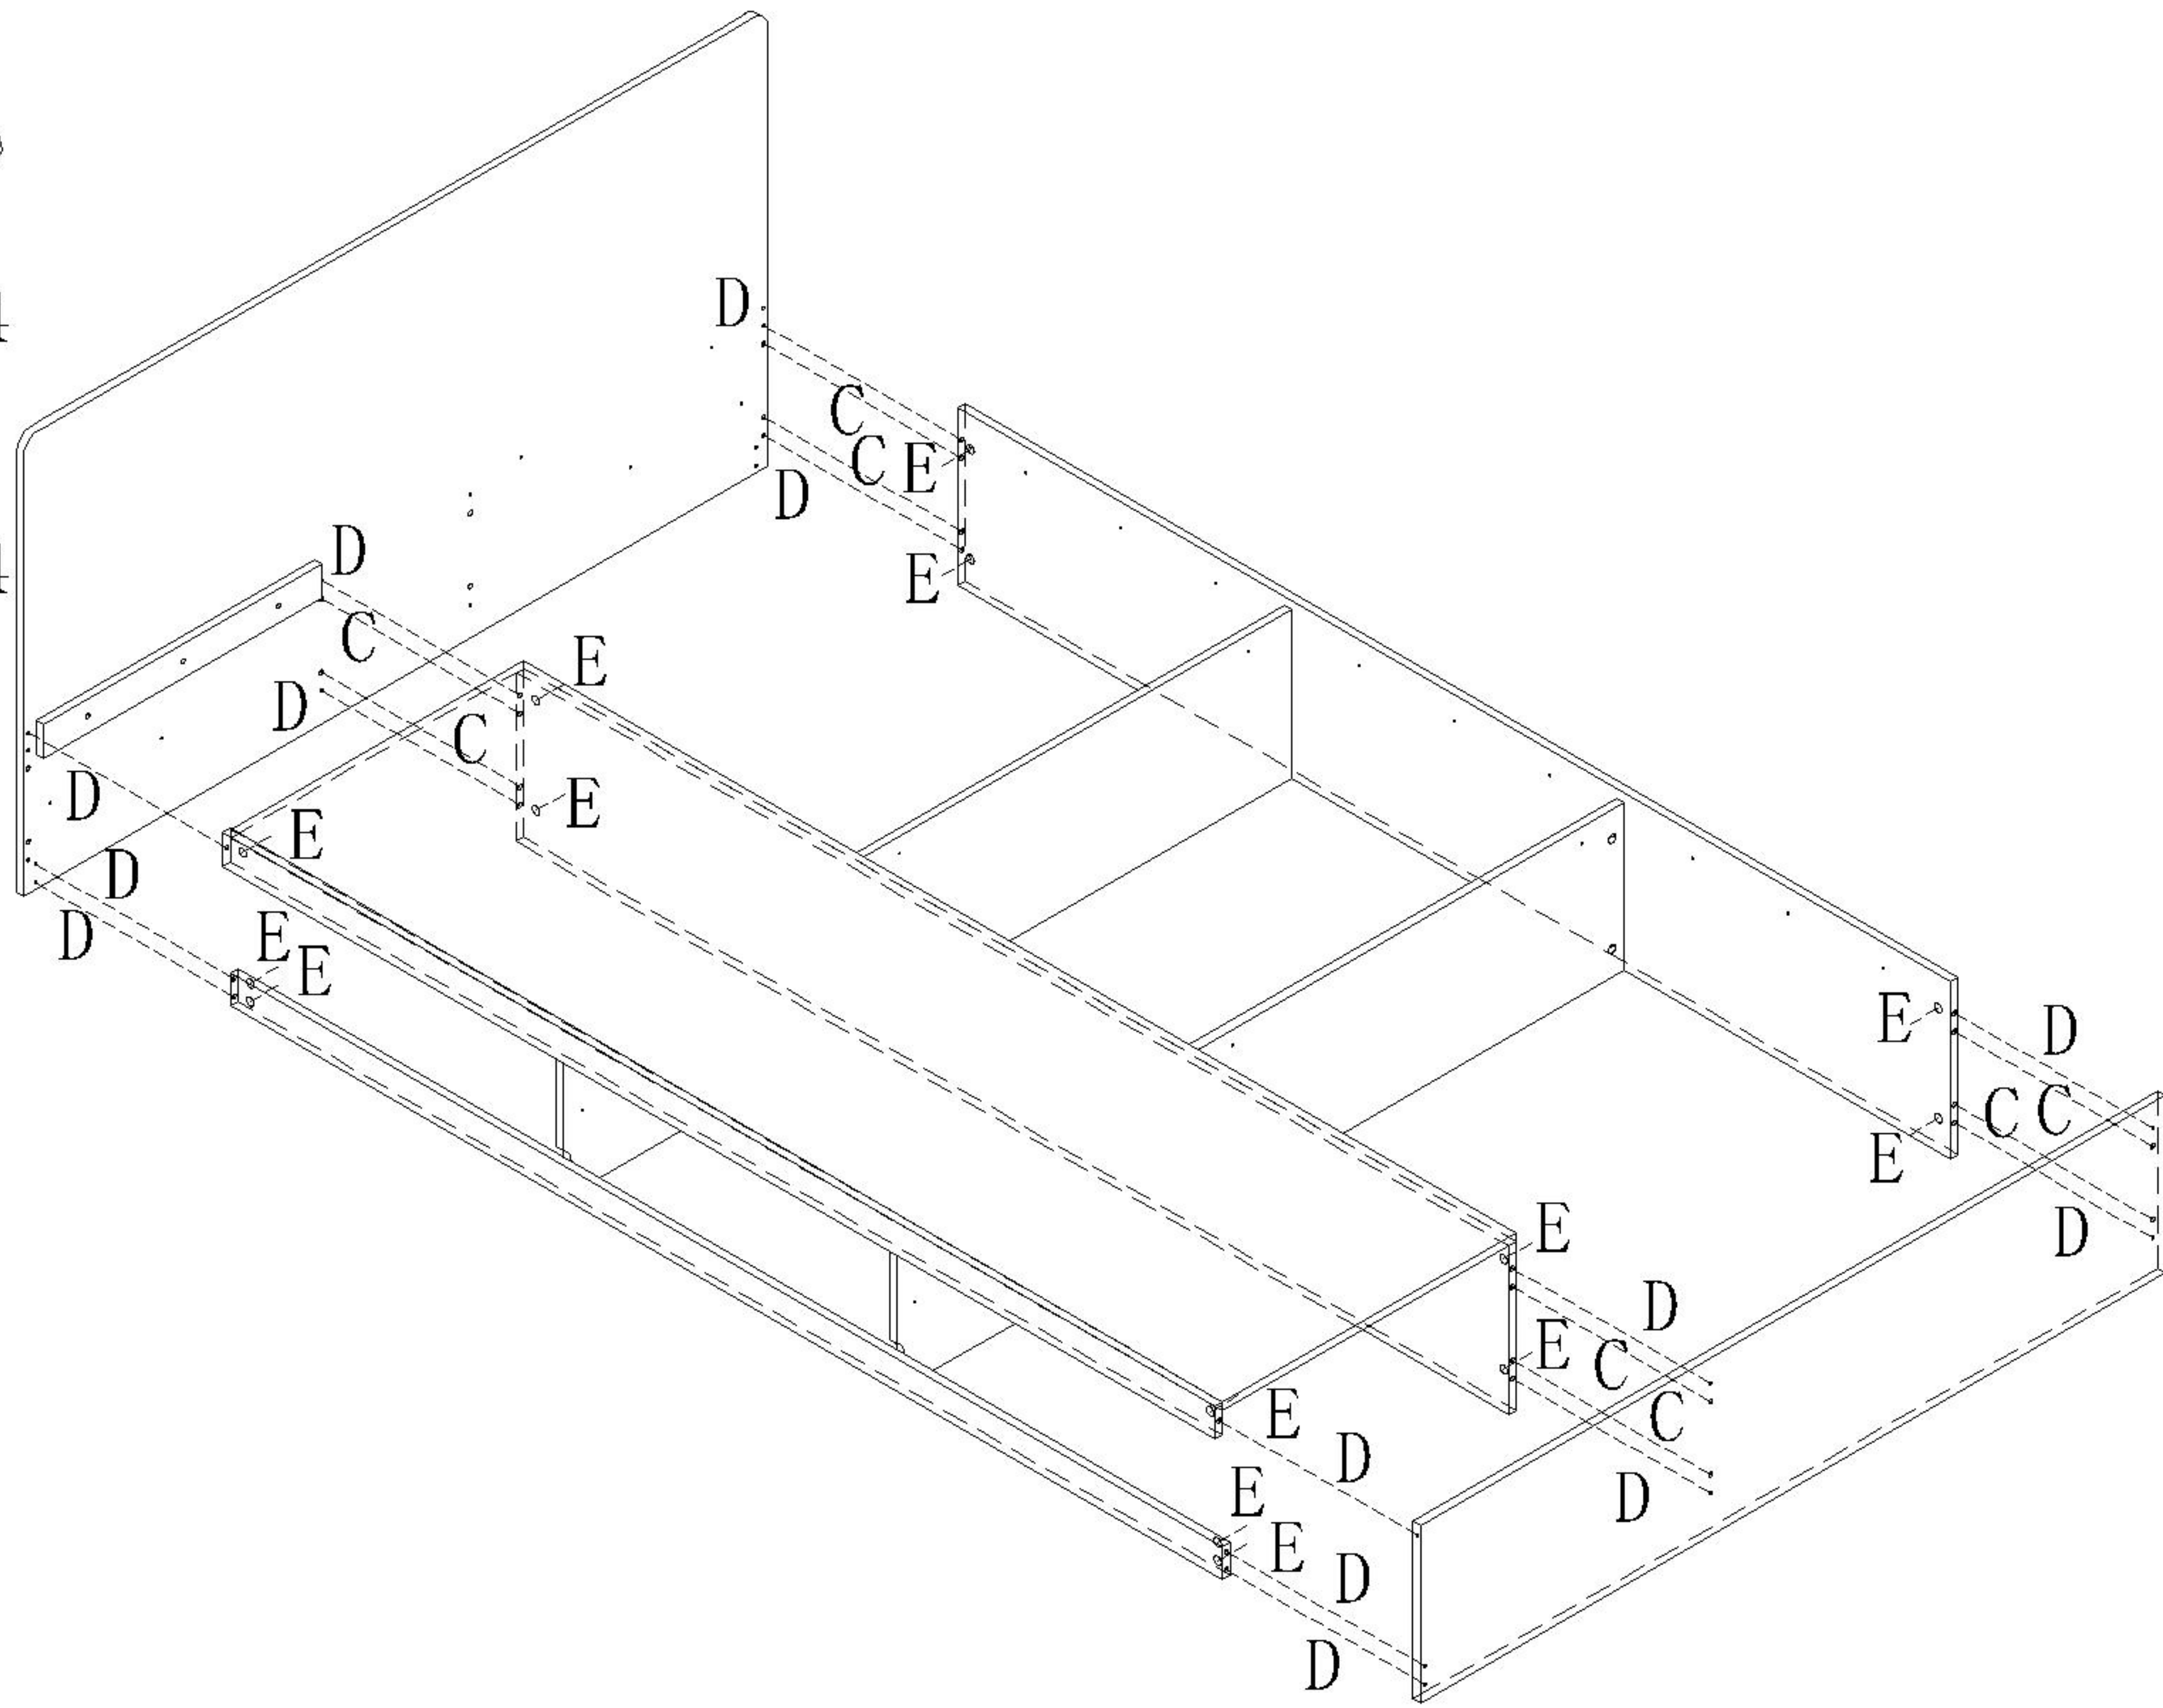


12



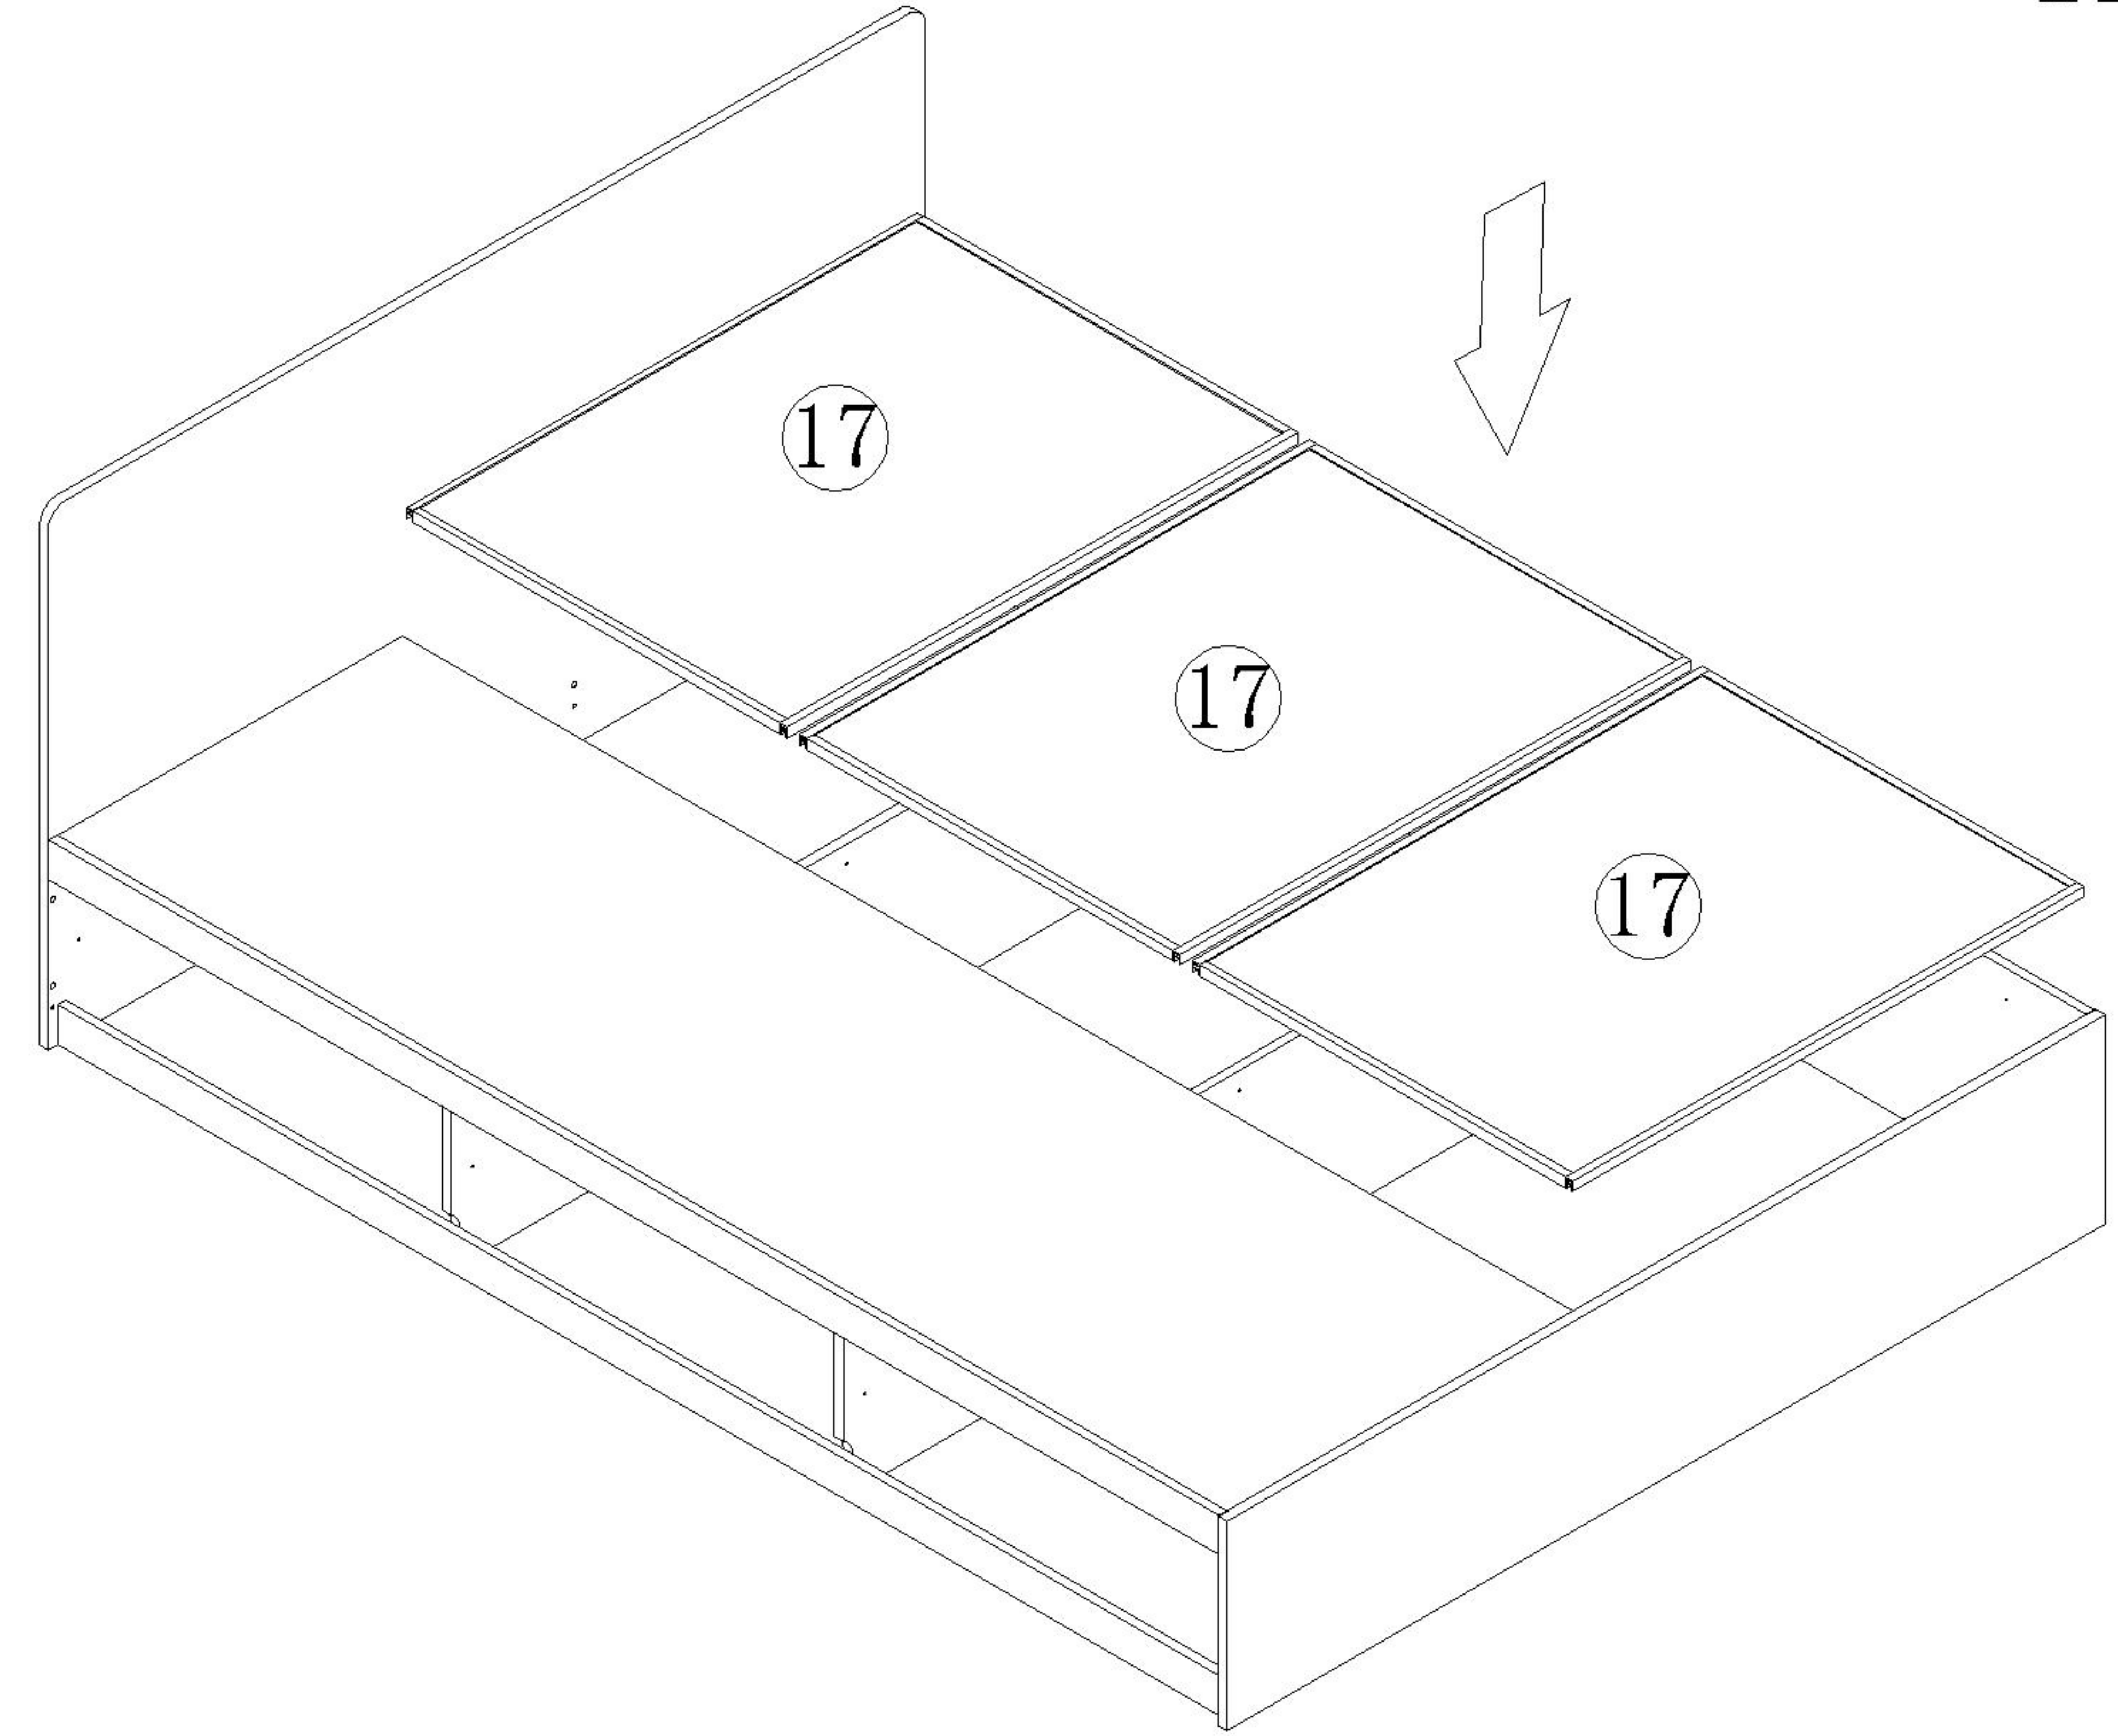


安装方法/ Installation method

阀门开关(下压为开)
Valve switch
(press down to open)

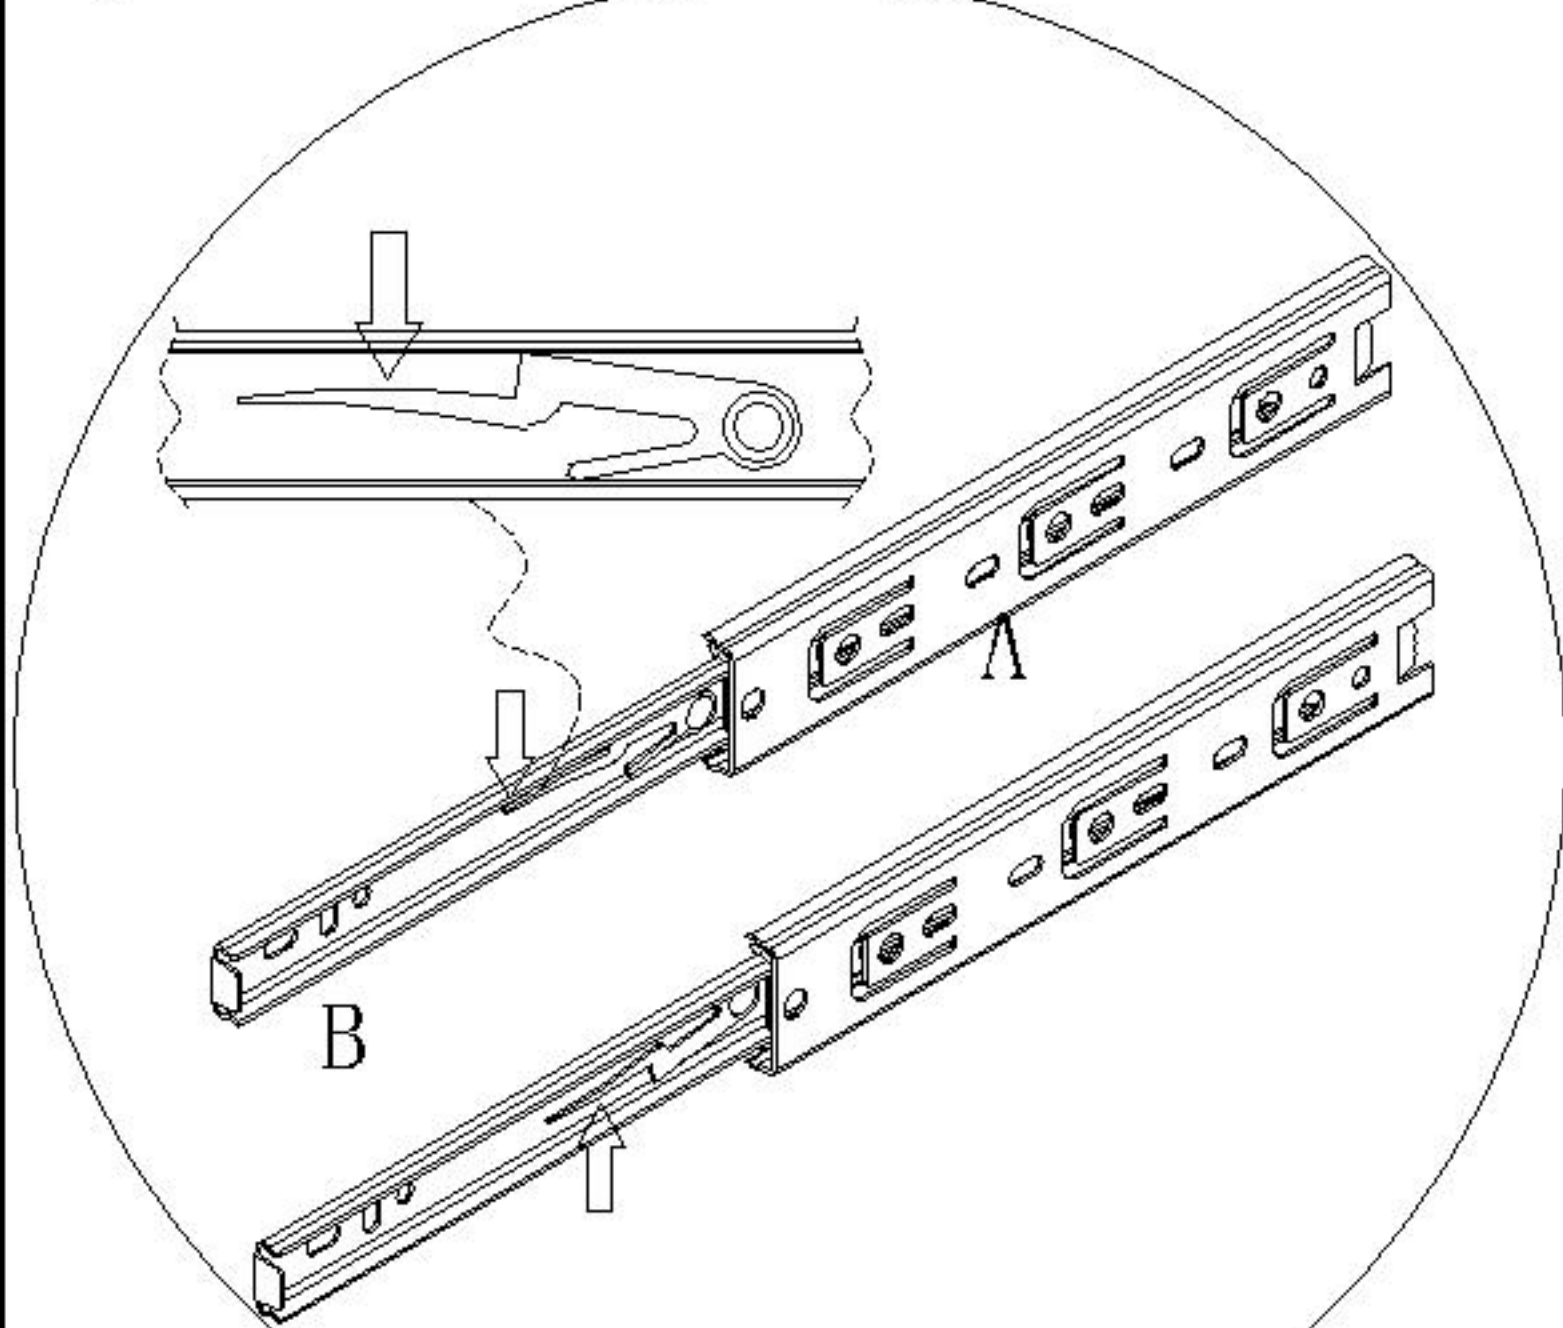


注: 先将A与B拆下来
Note: remove a and B first

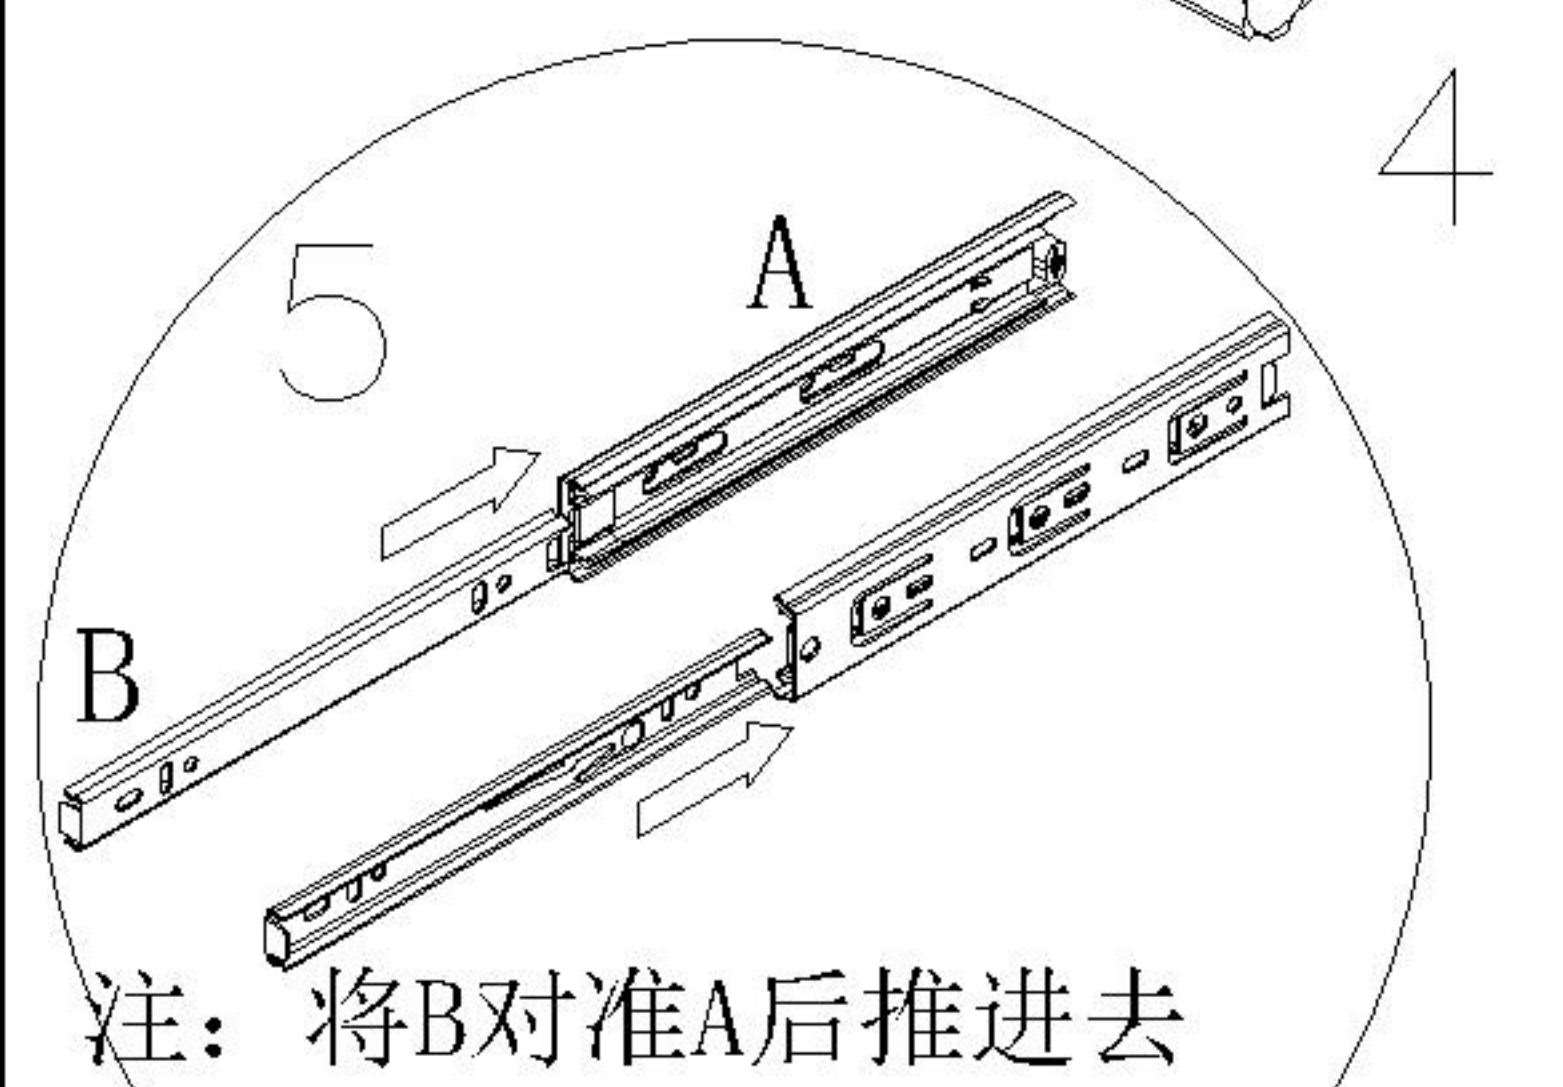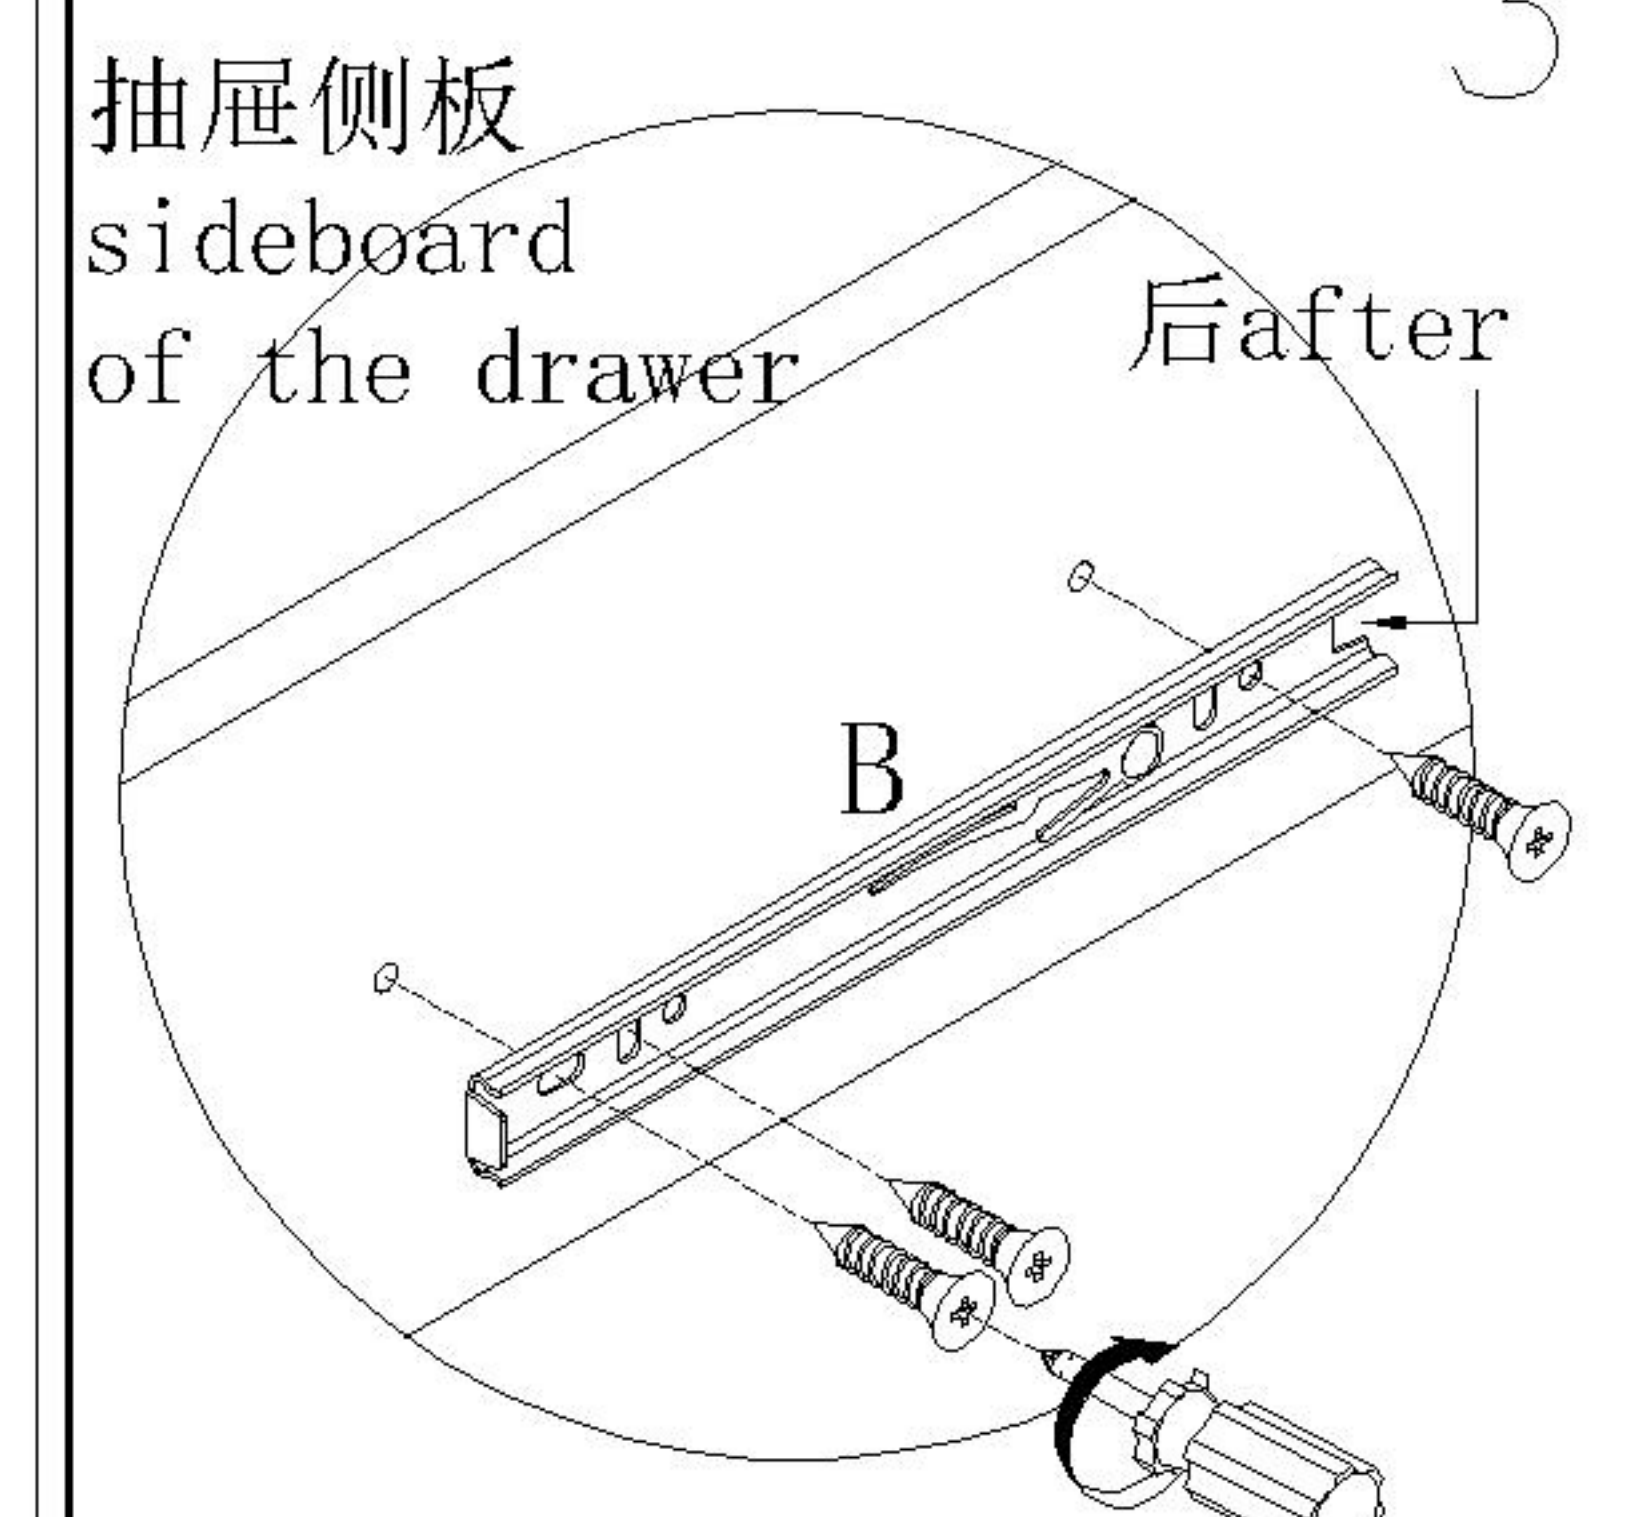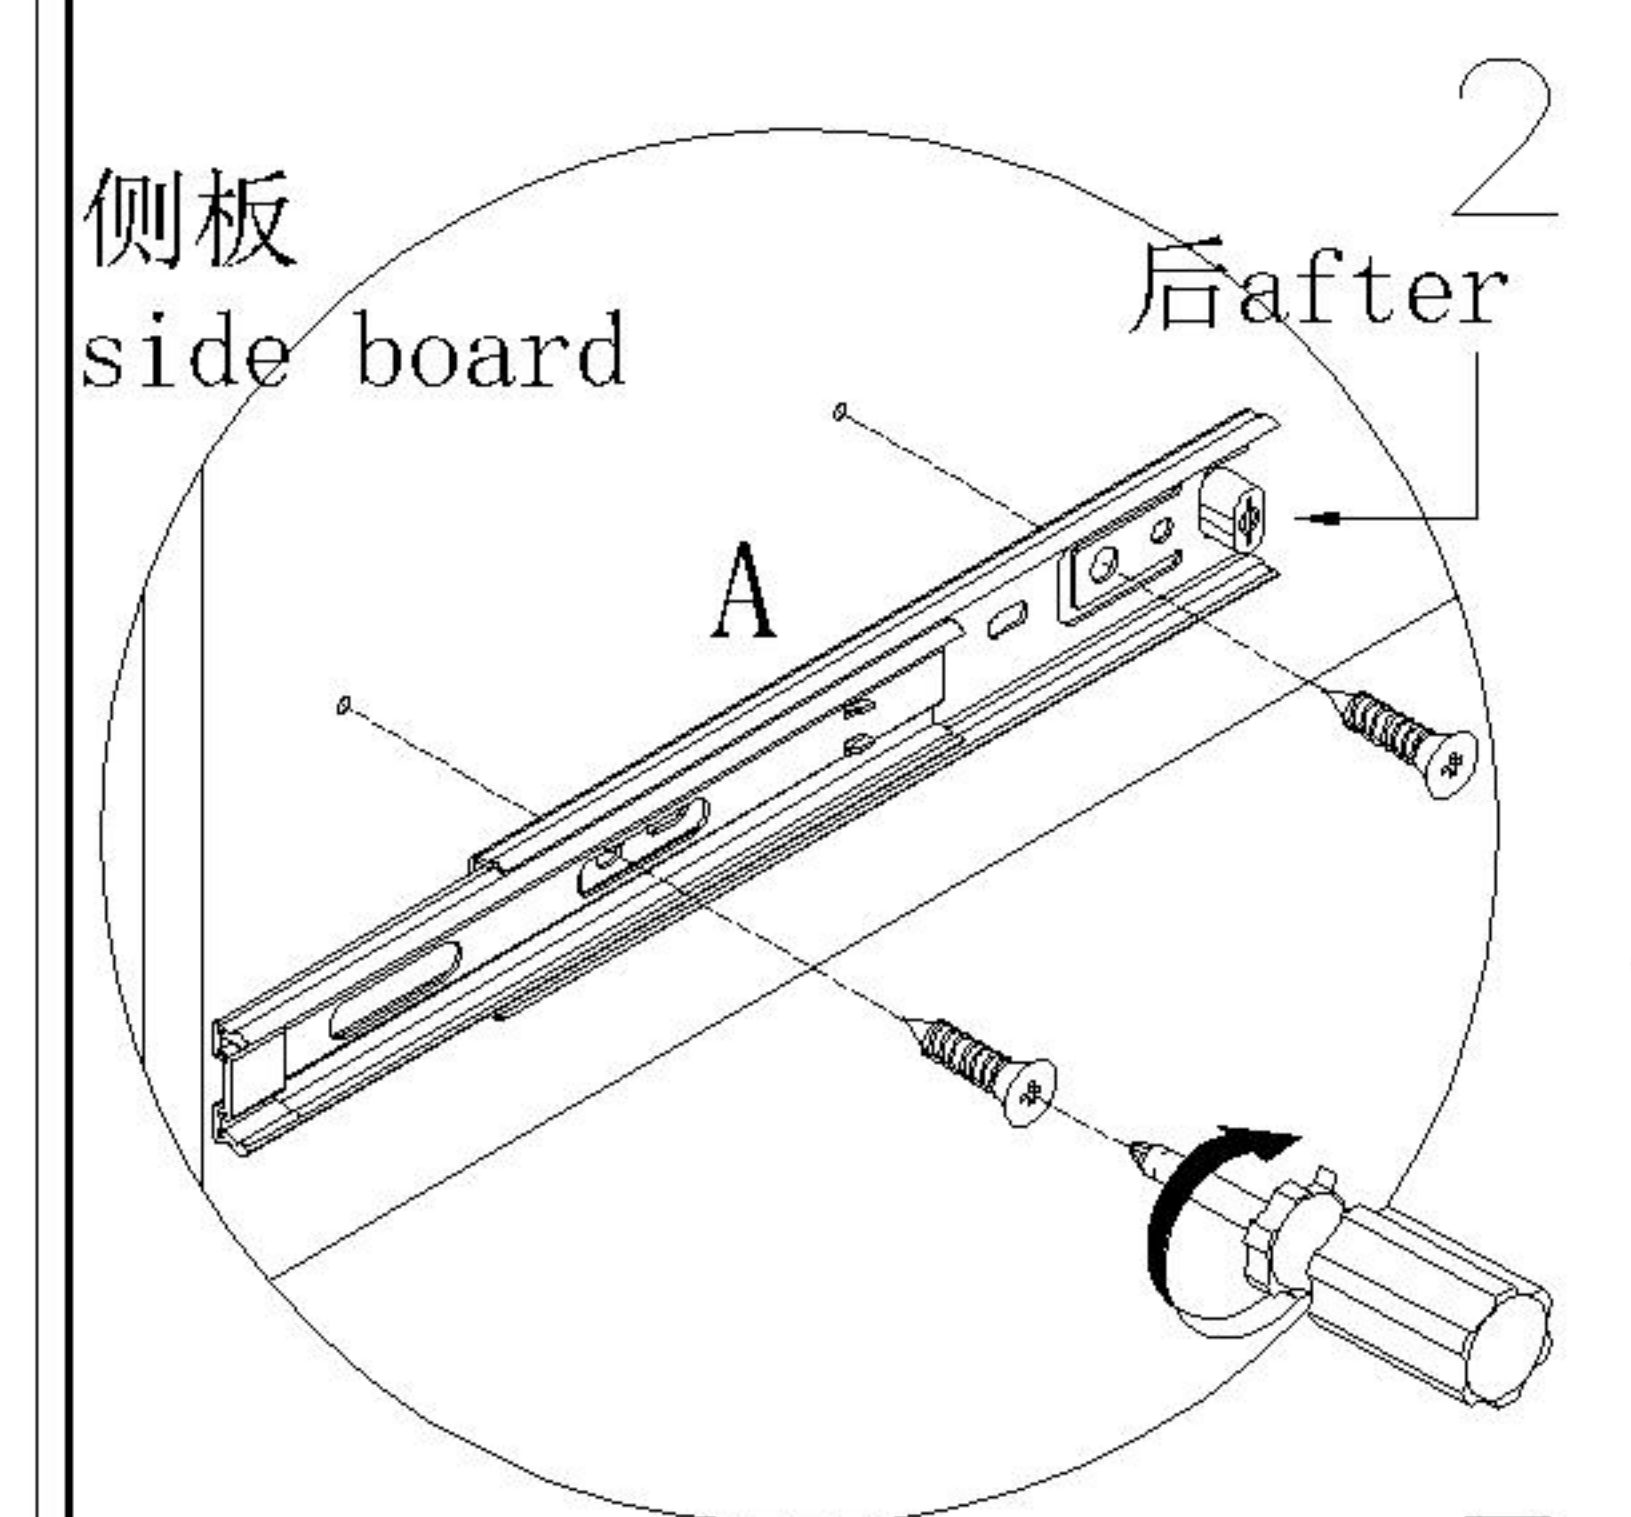

注: 将B对准A后推进去
Note: align B with a
and push it in


三节滚珠导轨
three-section ball rail

(L)*12

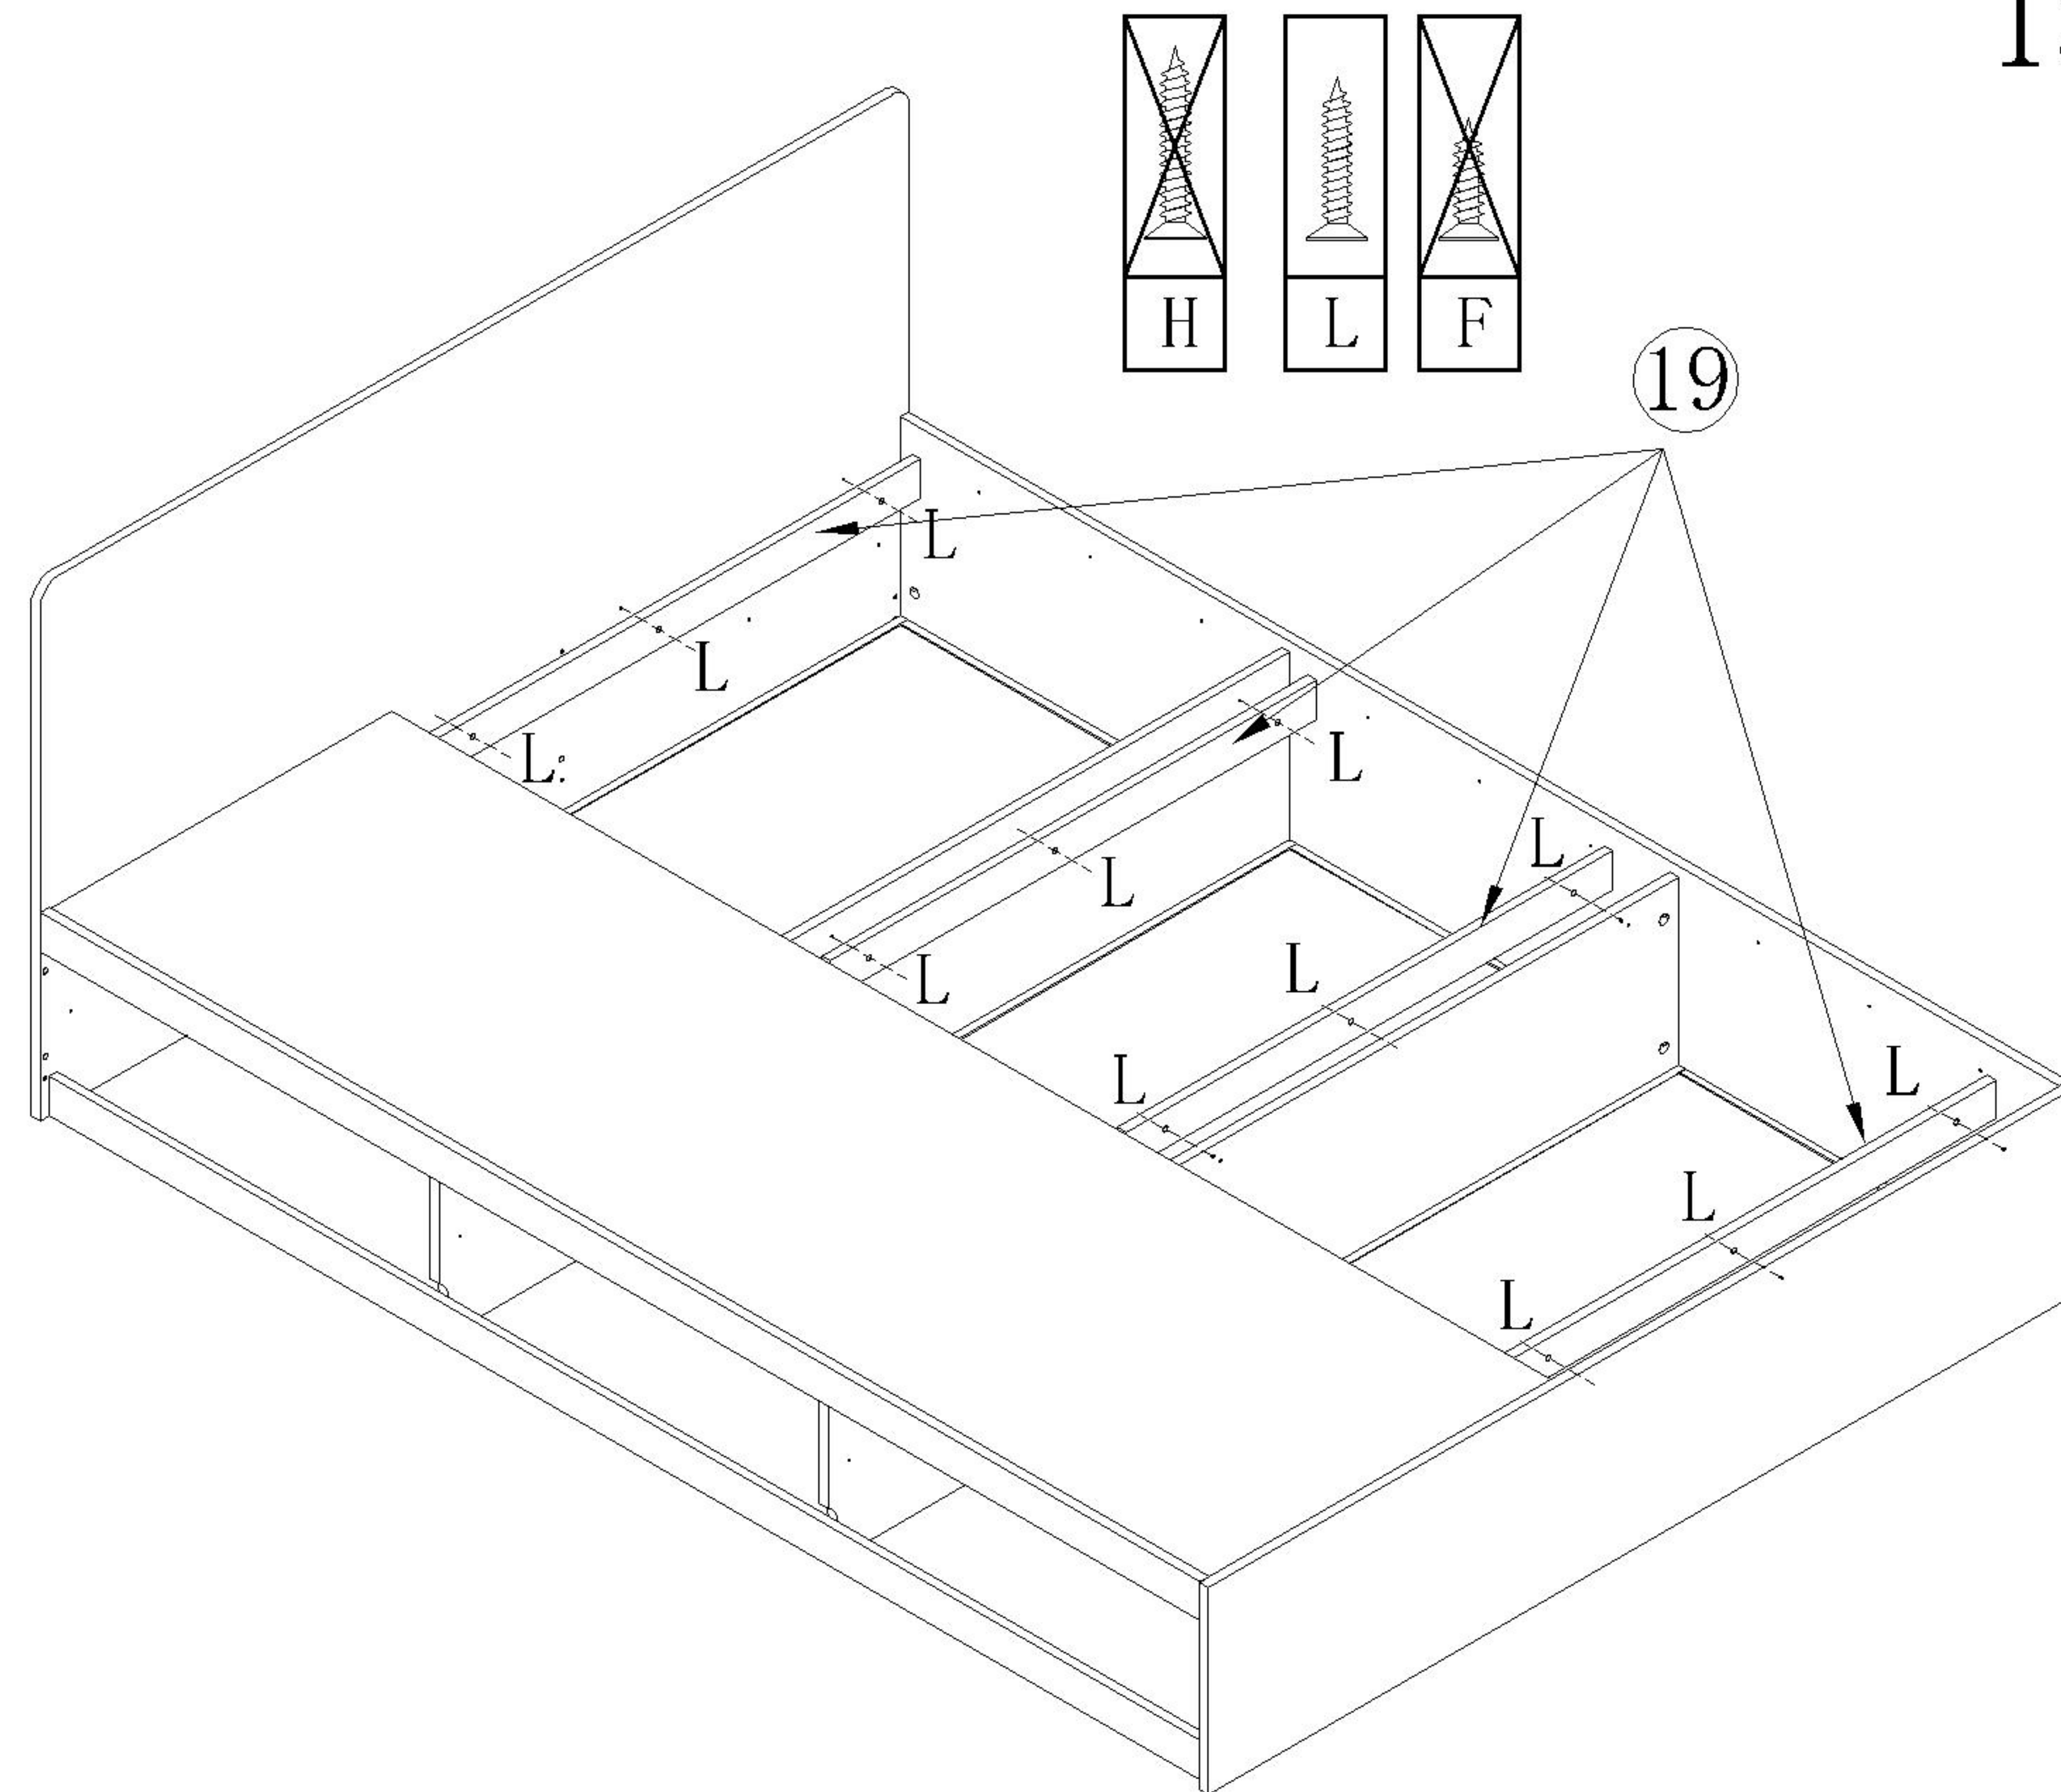

13

(L)*18

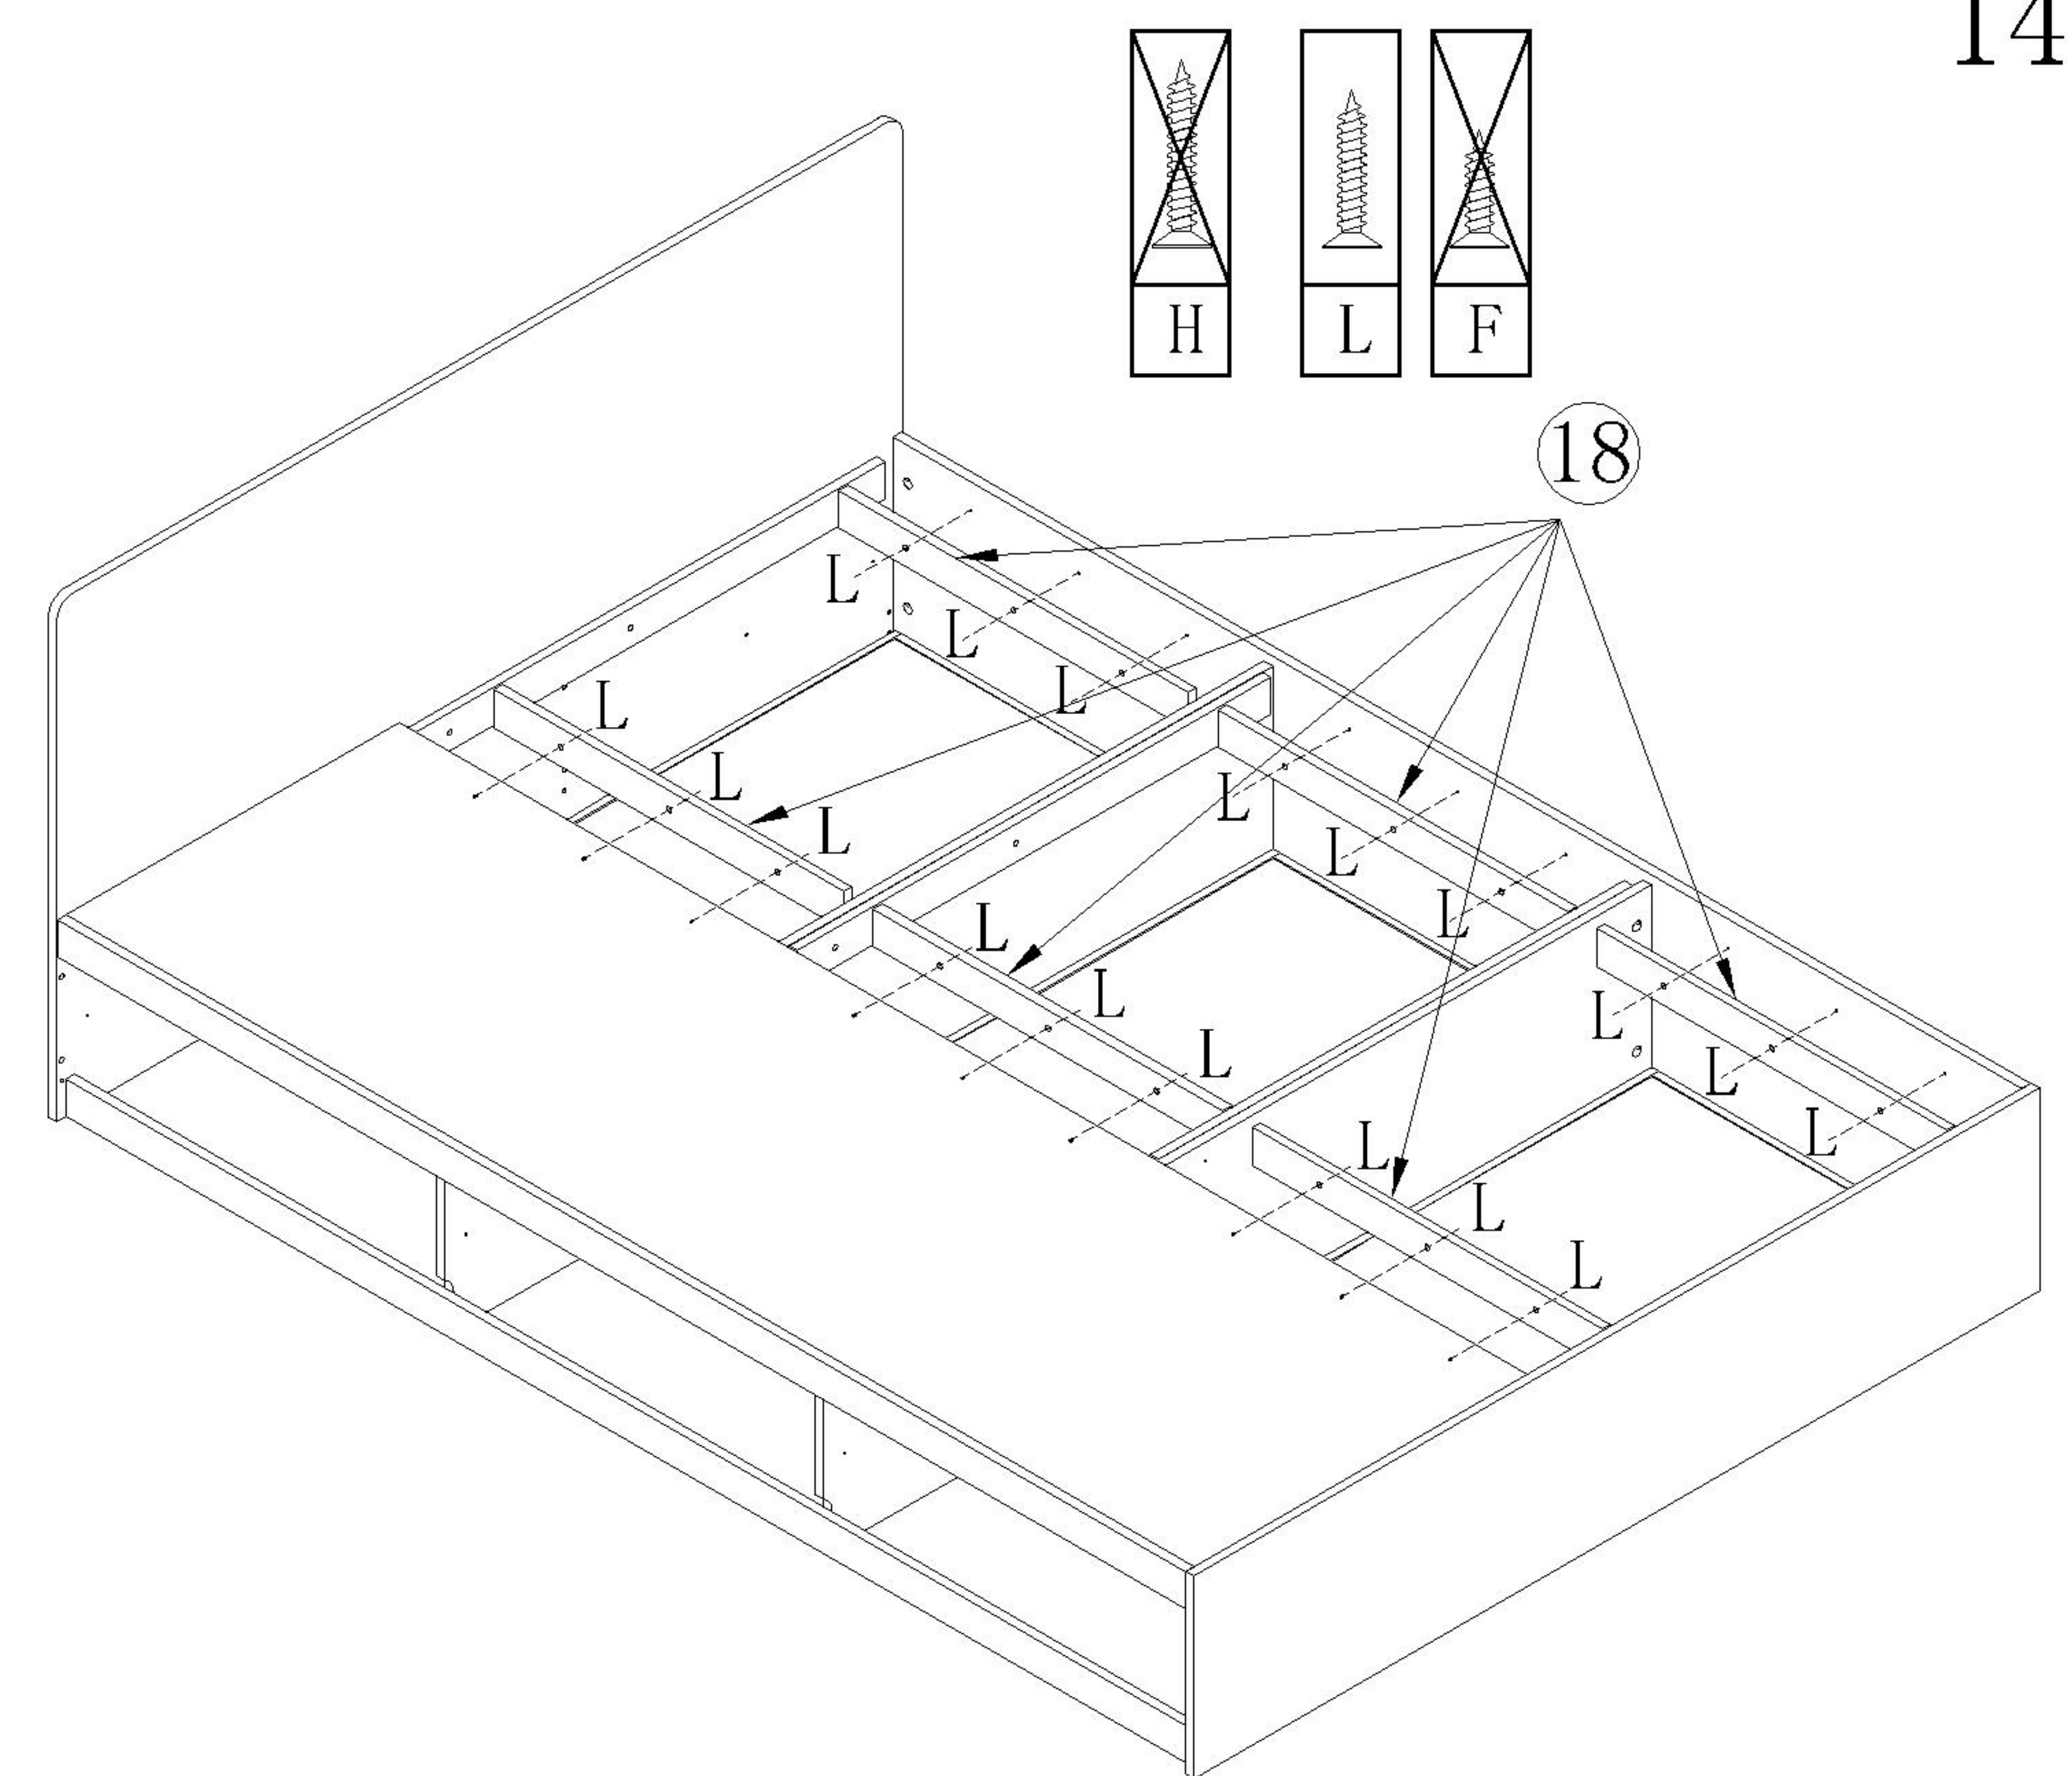


14

(B)*3 (M)*6

注意! 安装五金B时请勿使用五金B内拉手螺丝安装, 需使用五金M进行安装。

Attention! When installing hardware B, do not use the internal handle screws of hardware B for installation. Instead, use hardware M for installation.

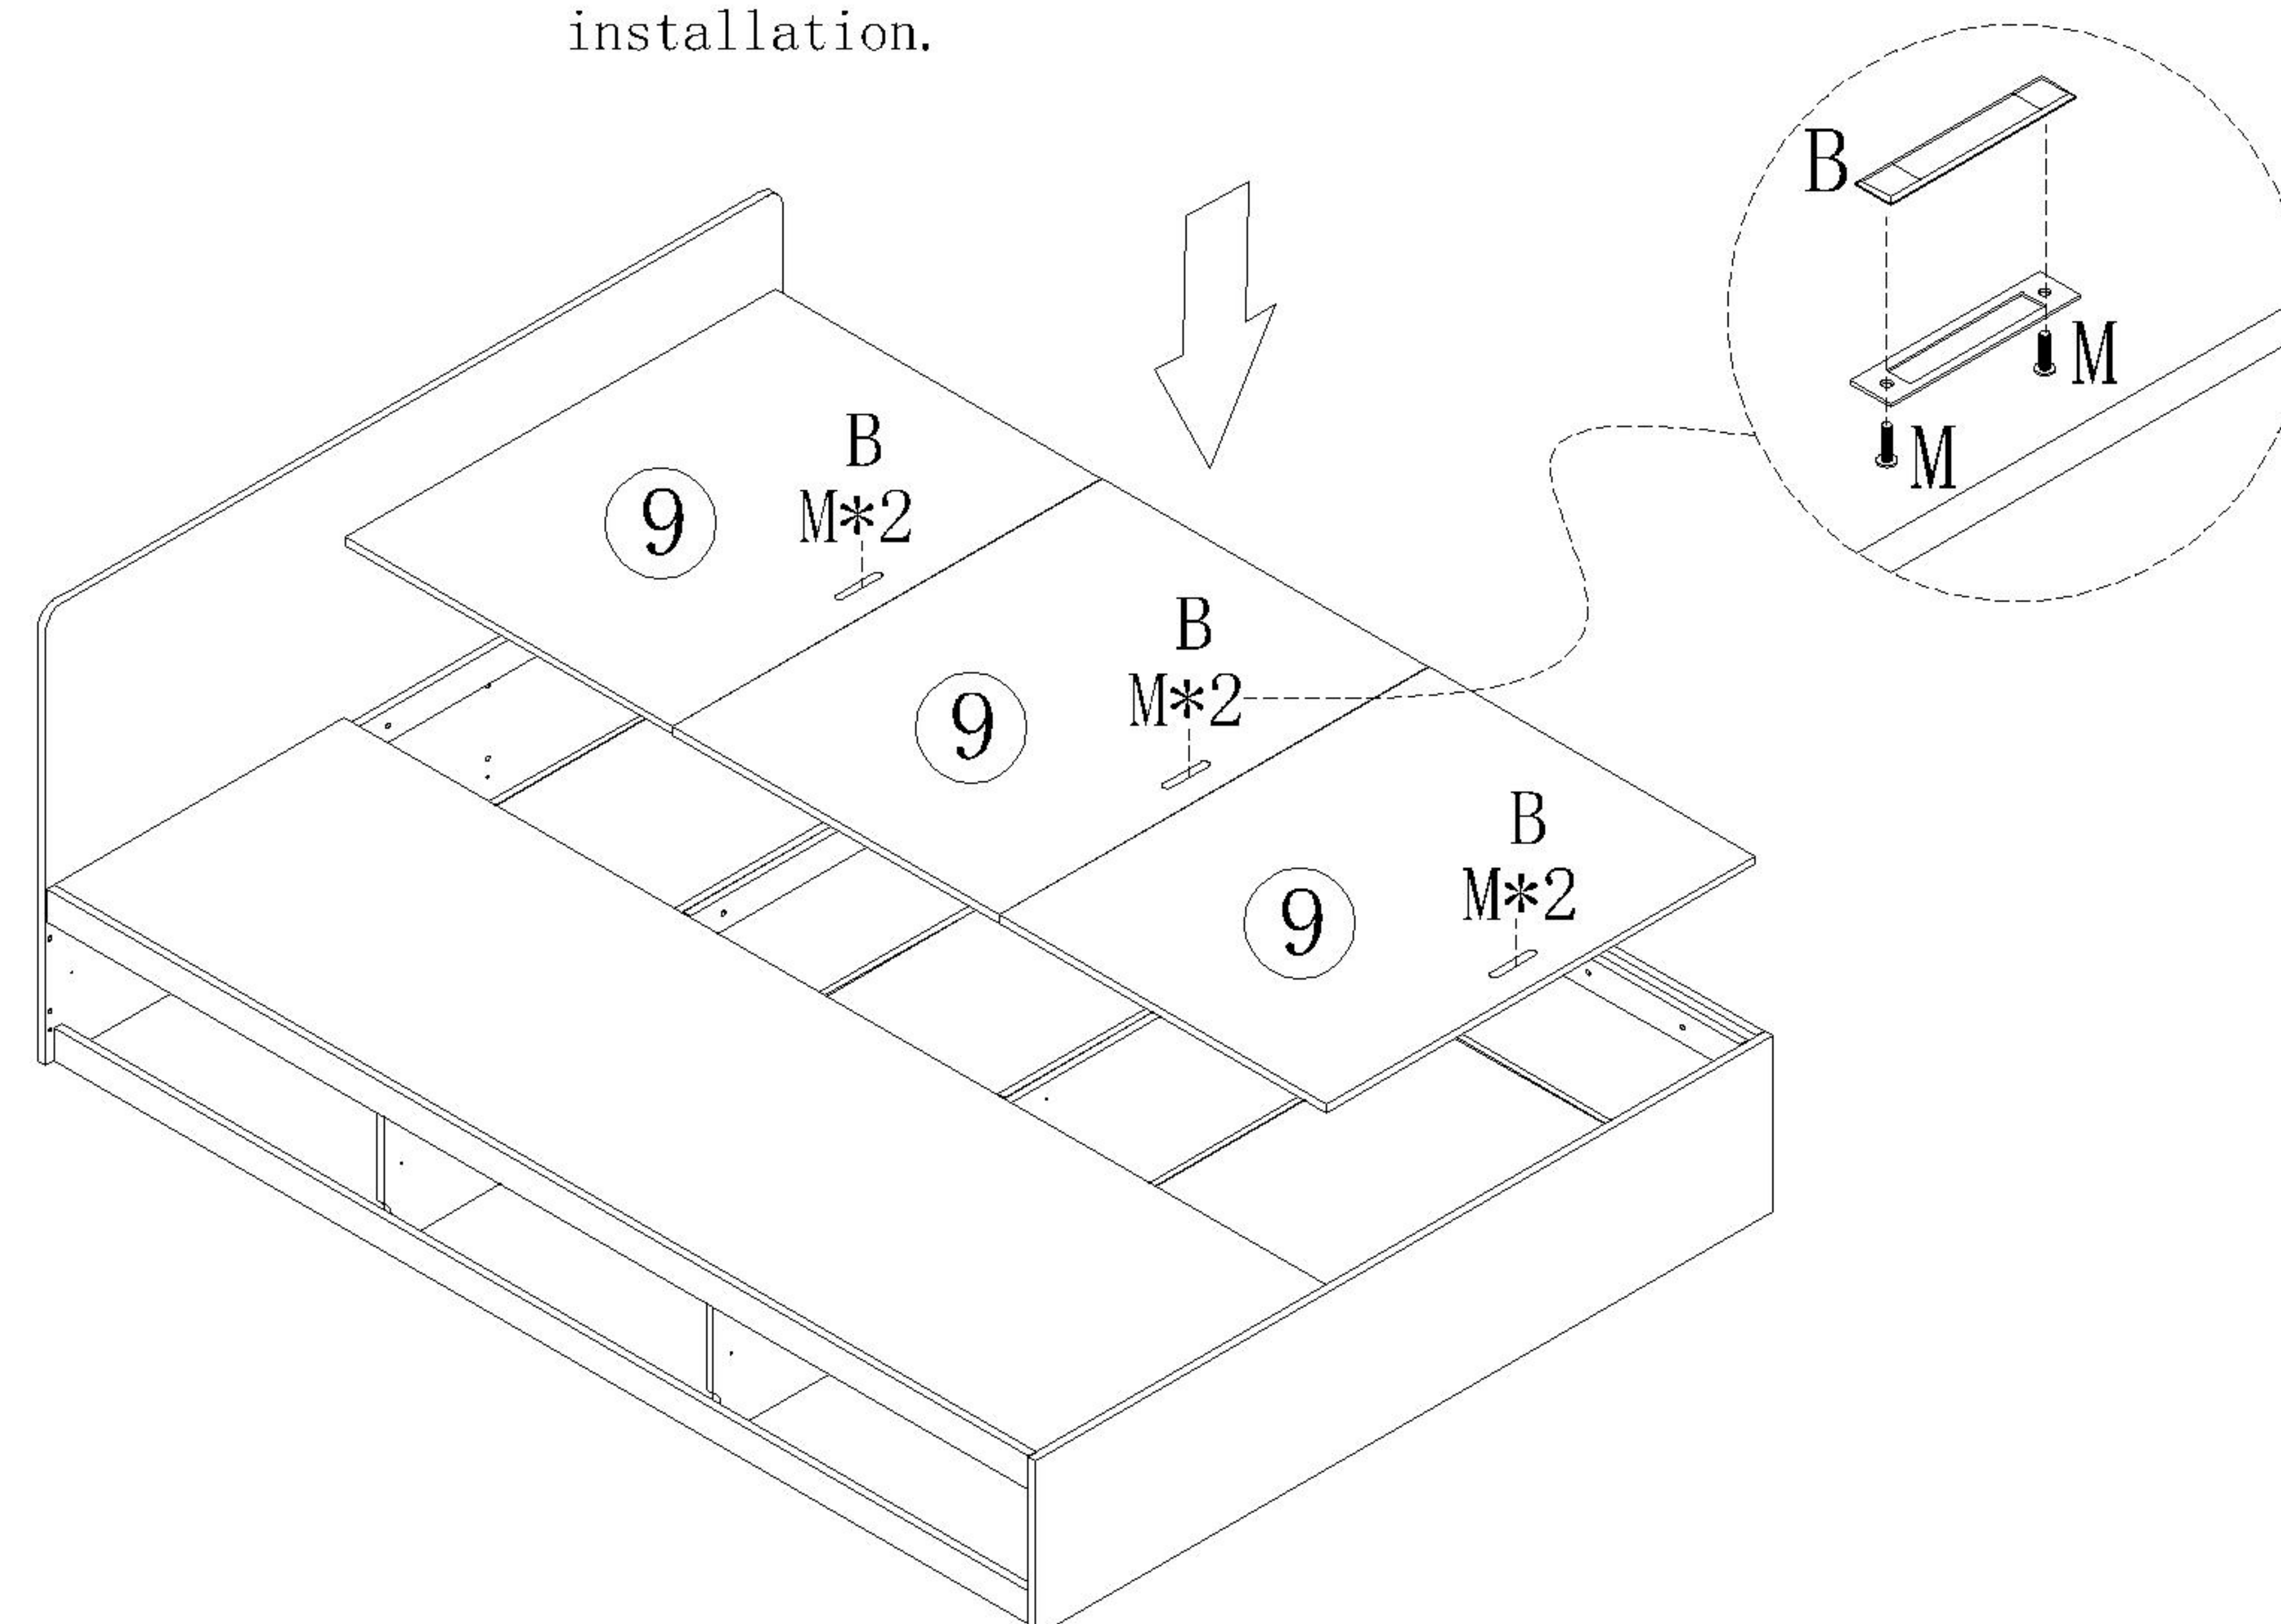


15

(F)*22

(K)*2


(P)*3

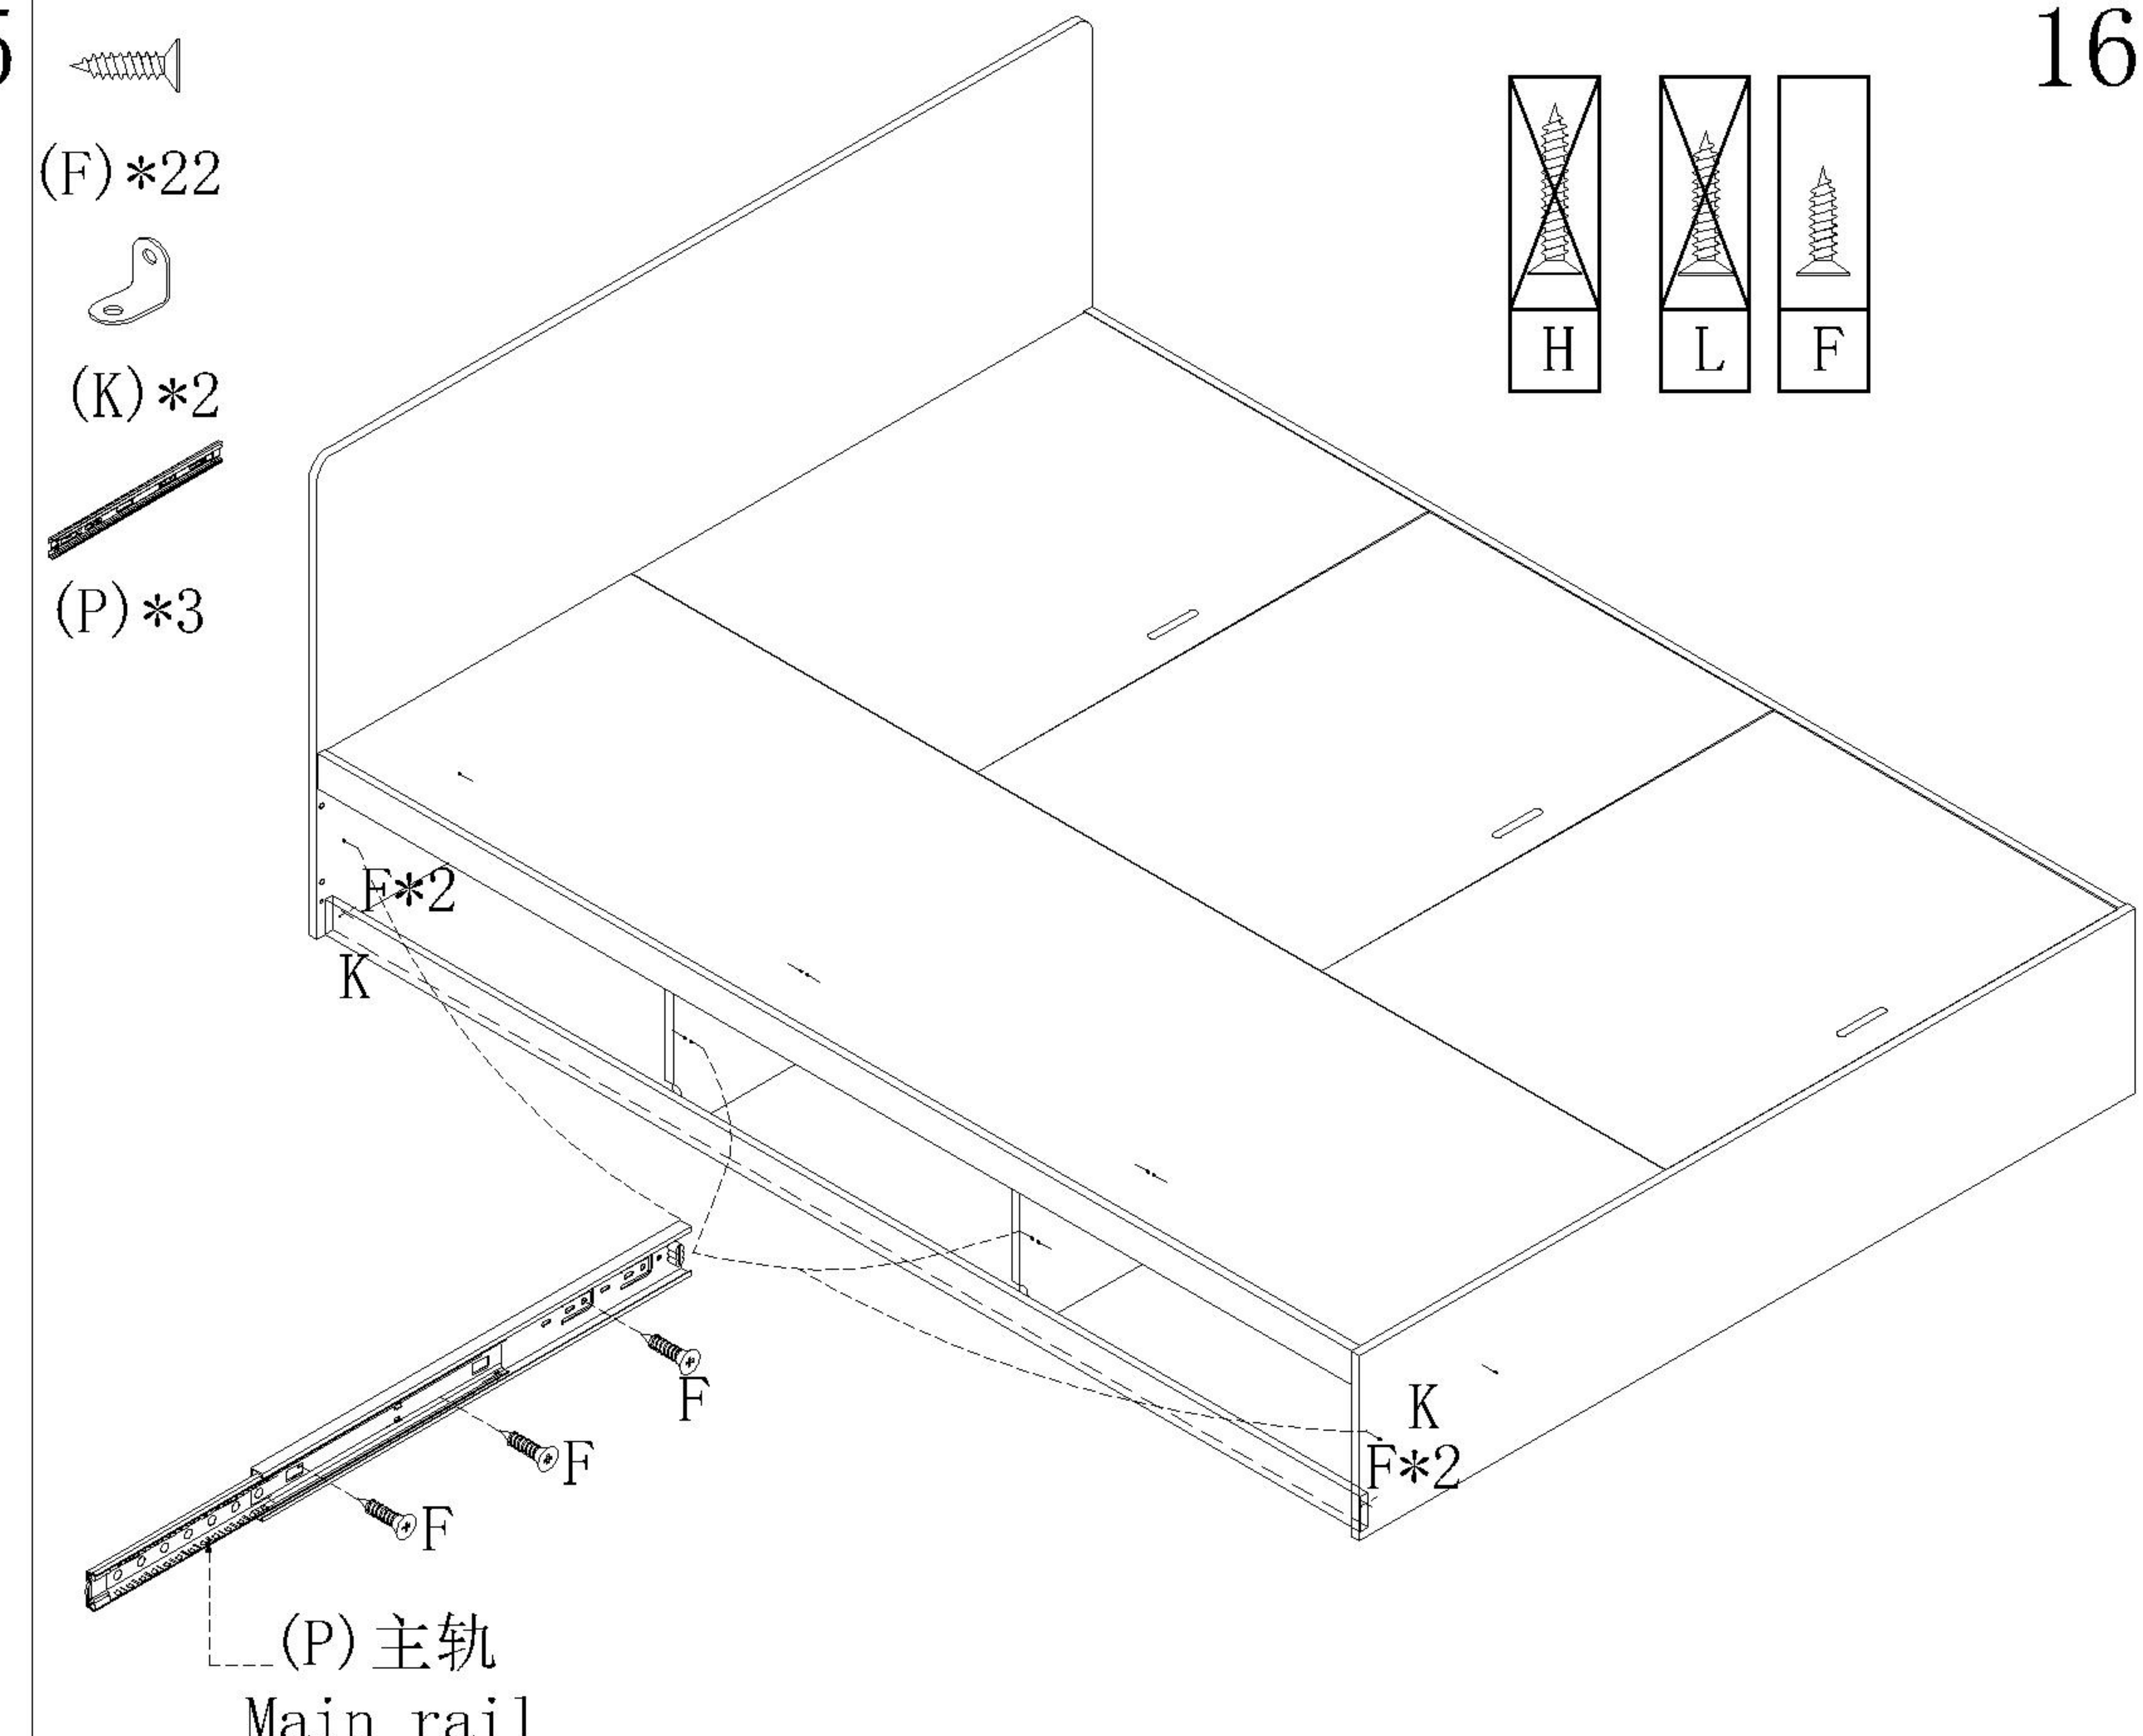

16


OV8A-C 1.5m 床身

安装方法/
Installation method

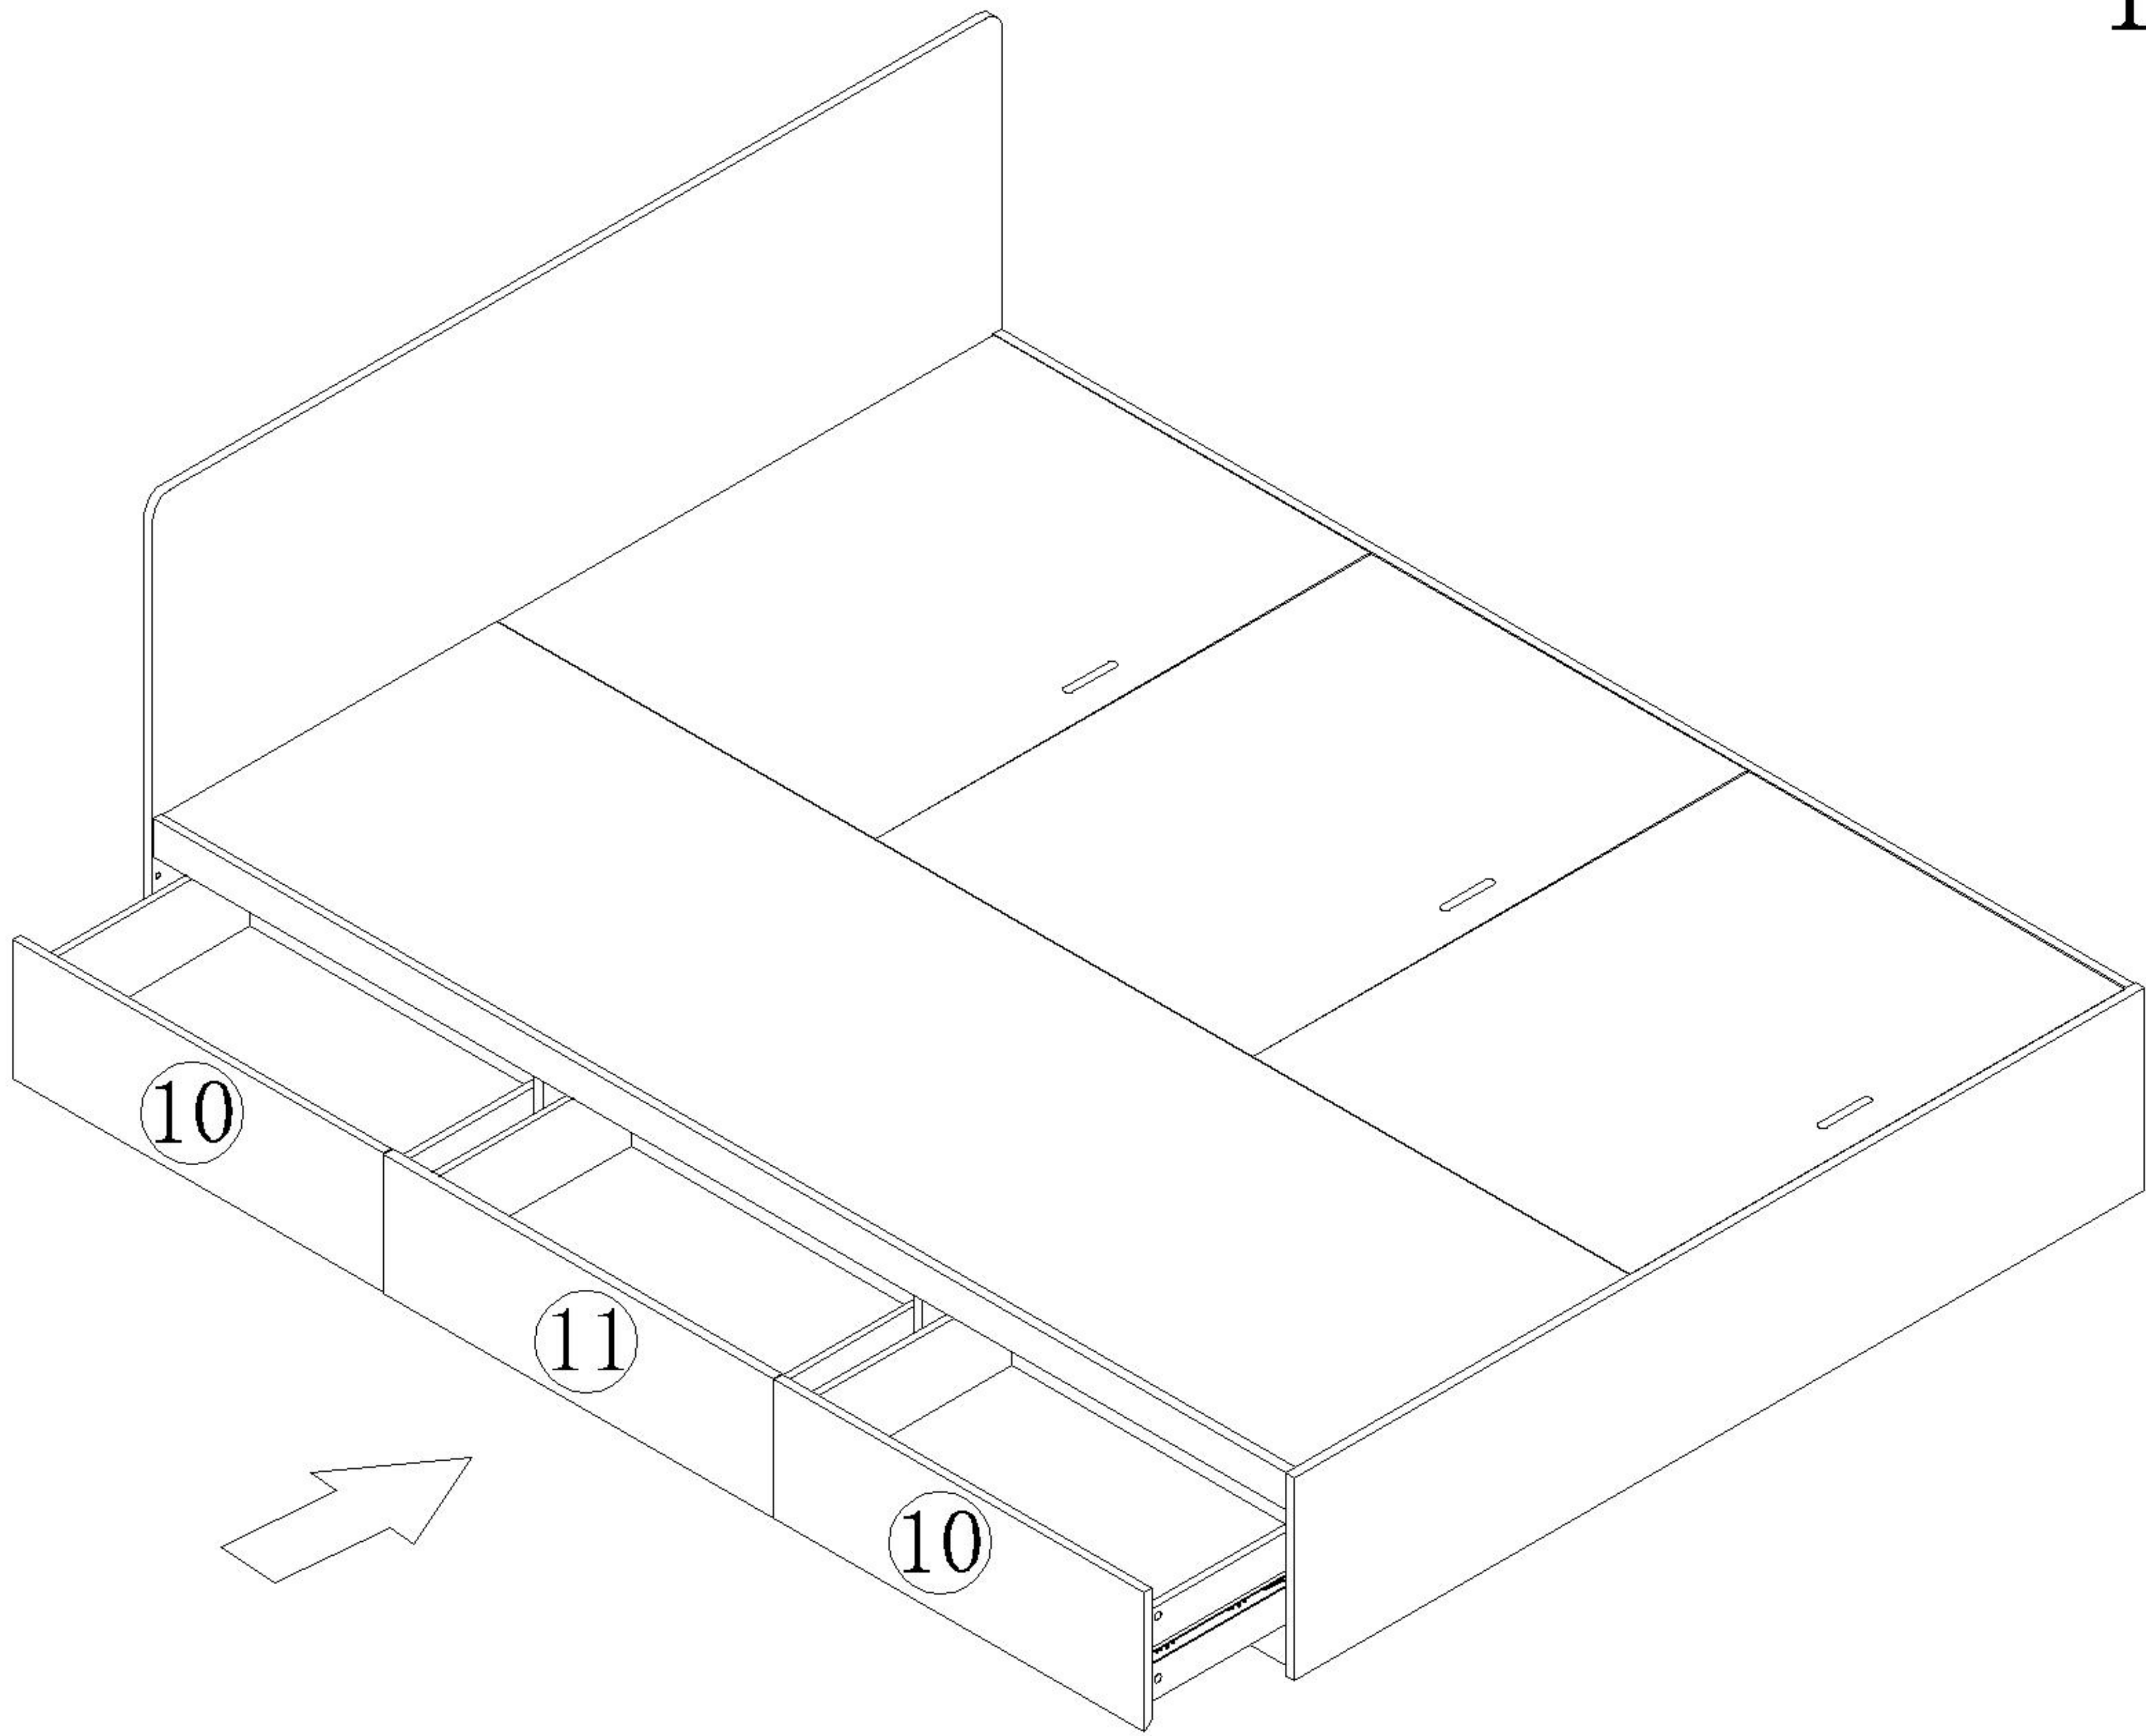



17

OV9A-C 高床头款1.5米 安装完成
OV9A-C 1.5m high headboard is installed

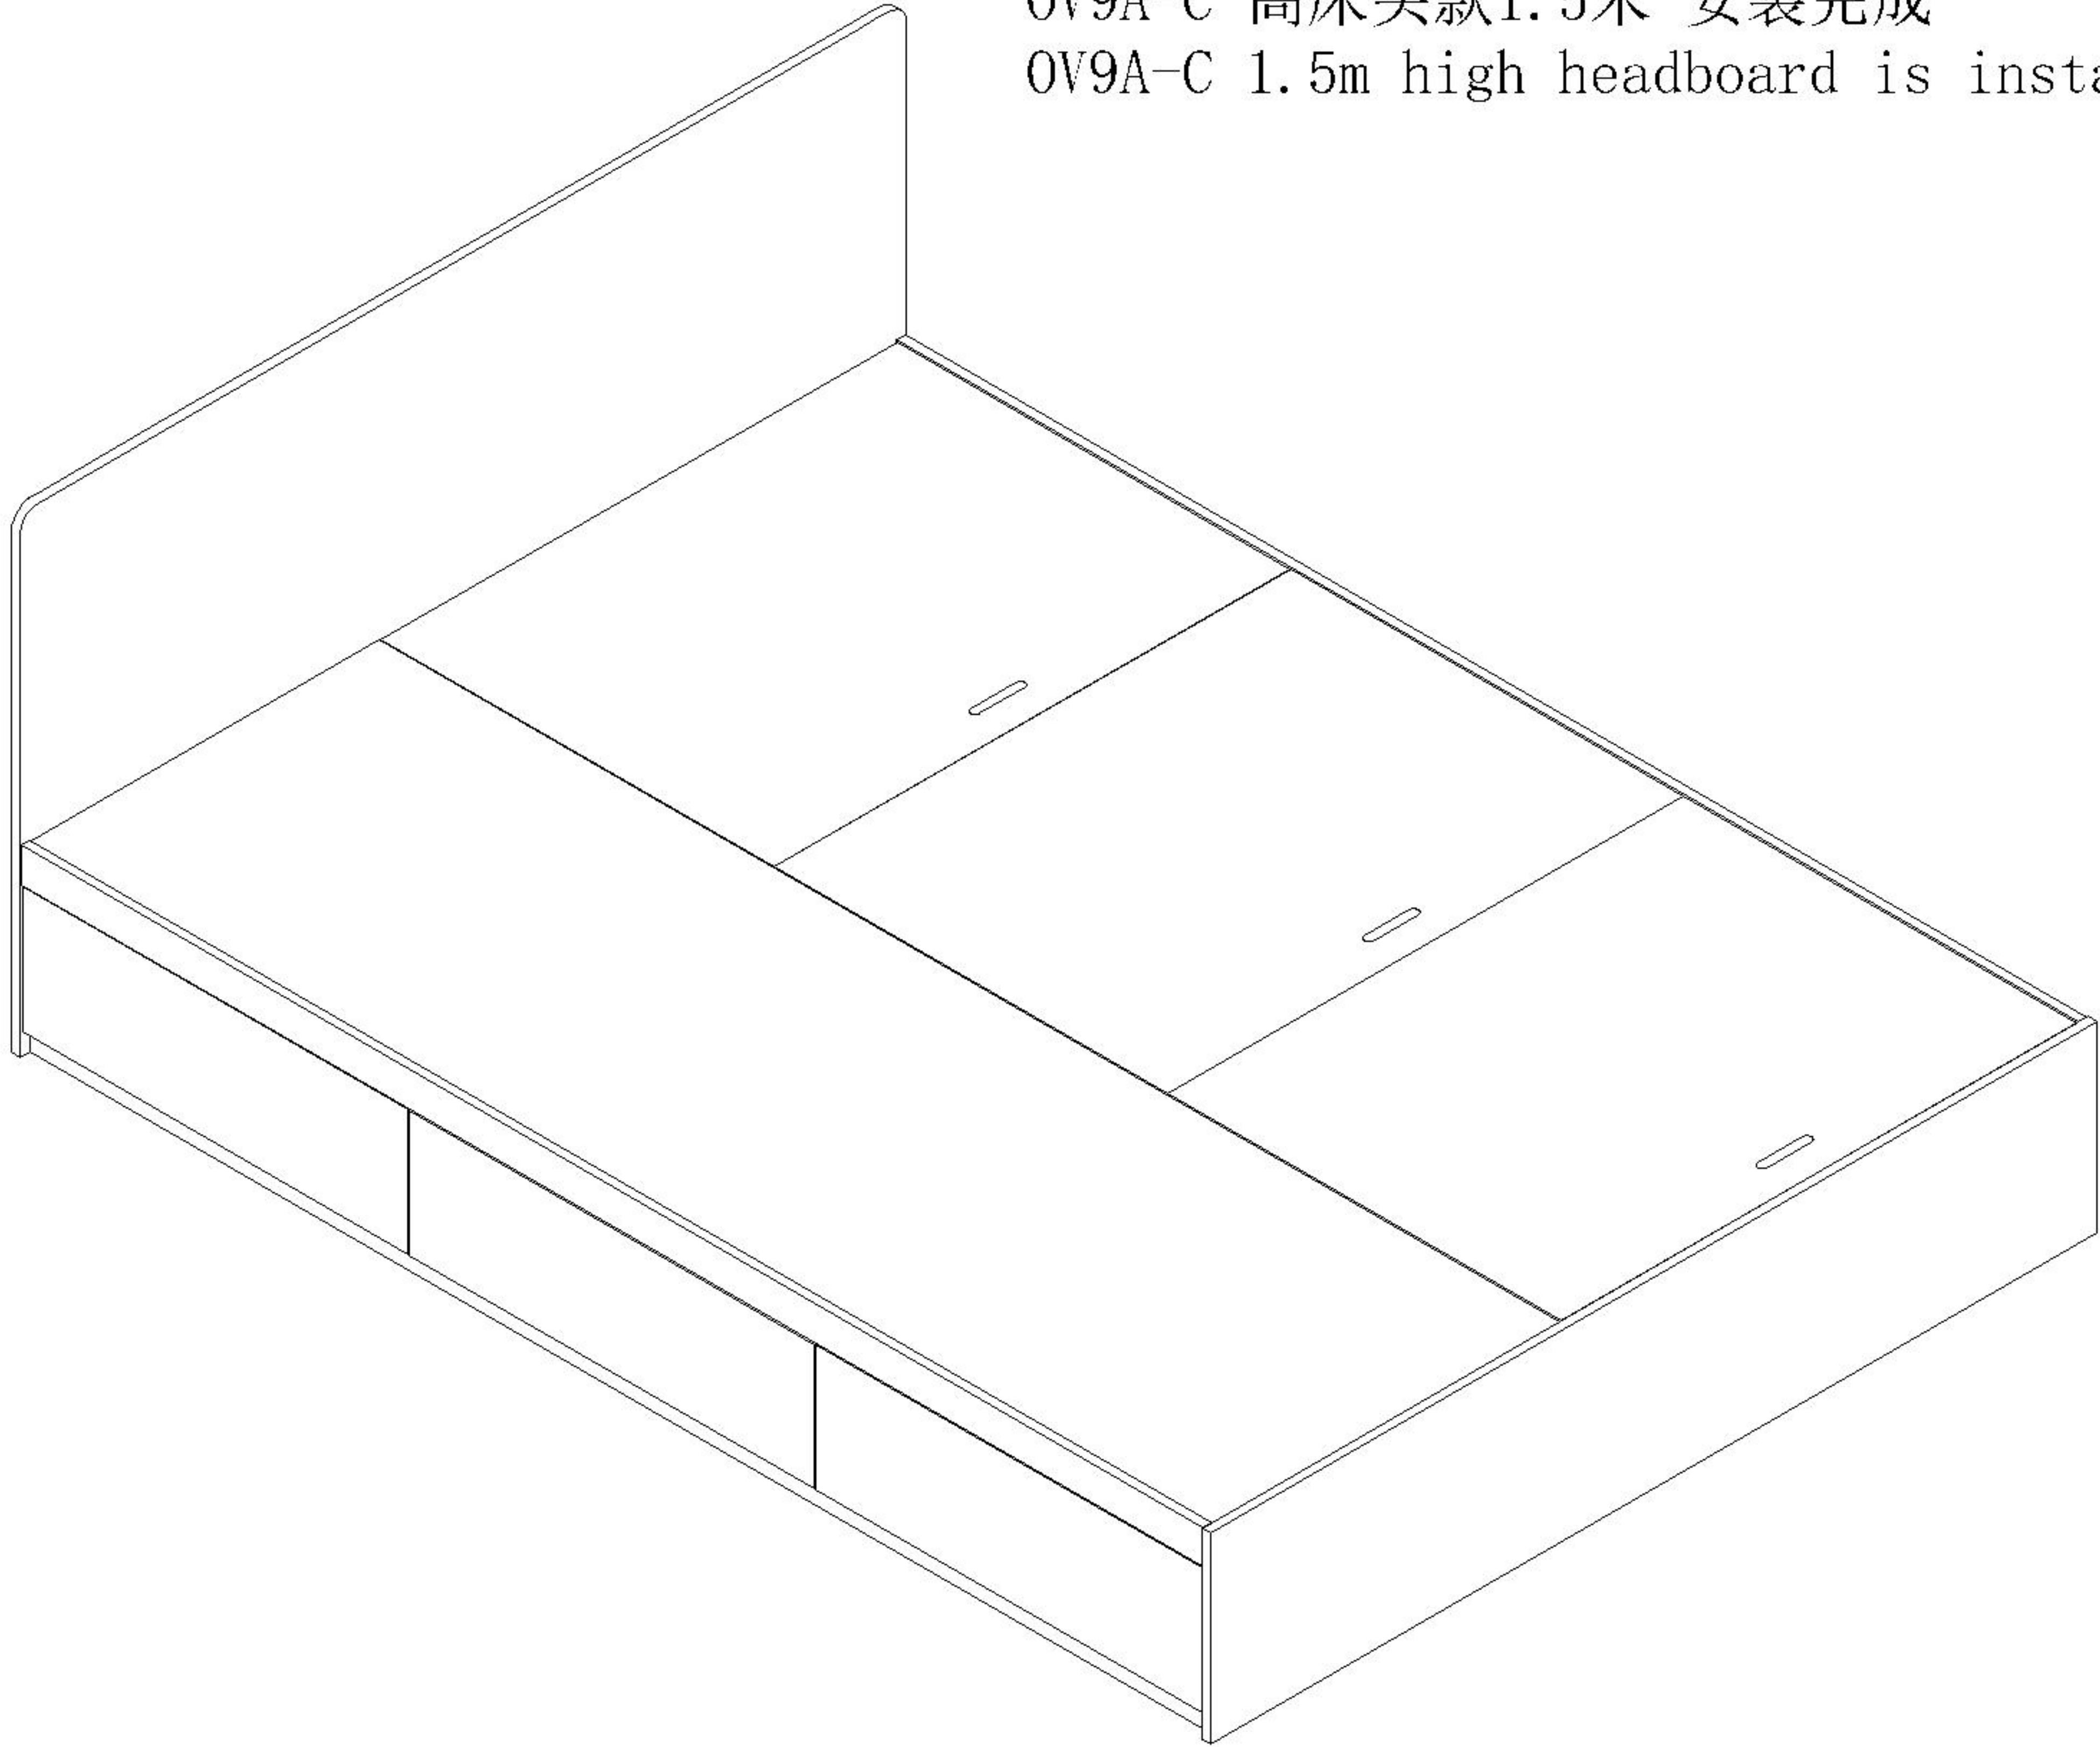


18

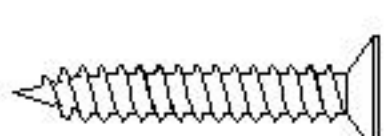
(L)*8

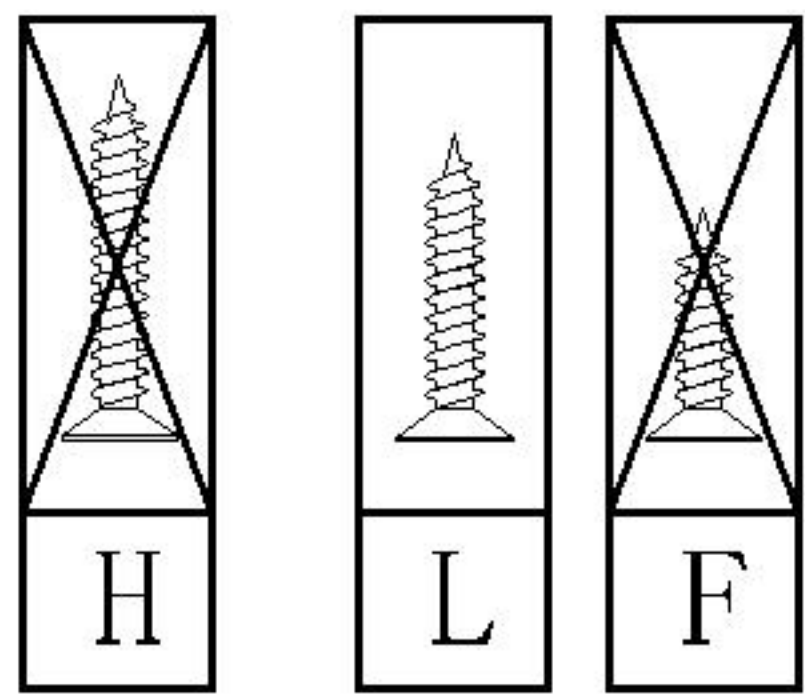


OV10A-C 软包床头款1.5米 按以下步骤安装
OV10A-C soft bag headboard 1.5m Follow
the steps below to install

19

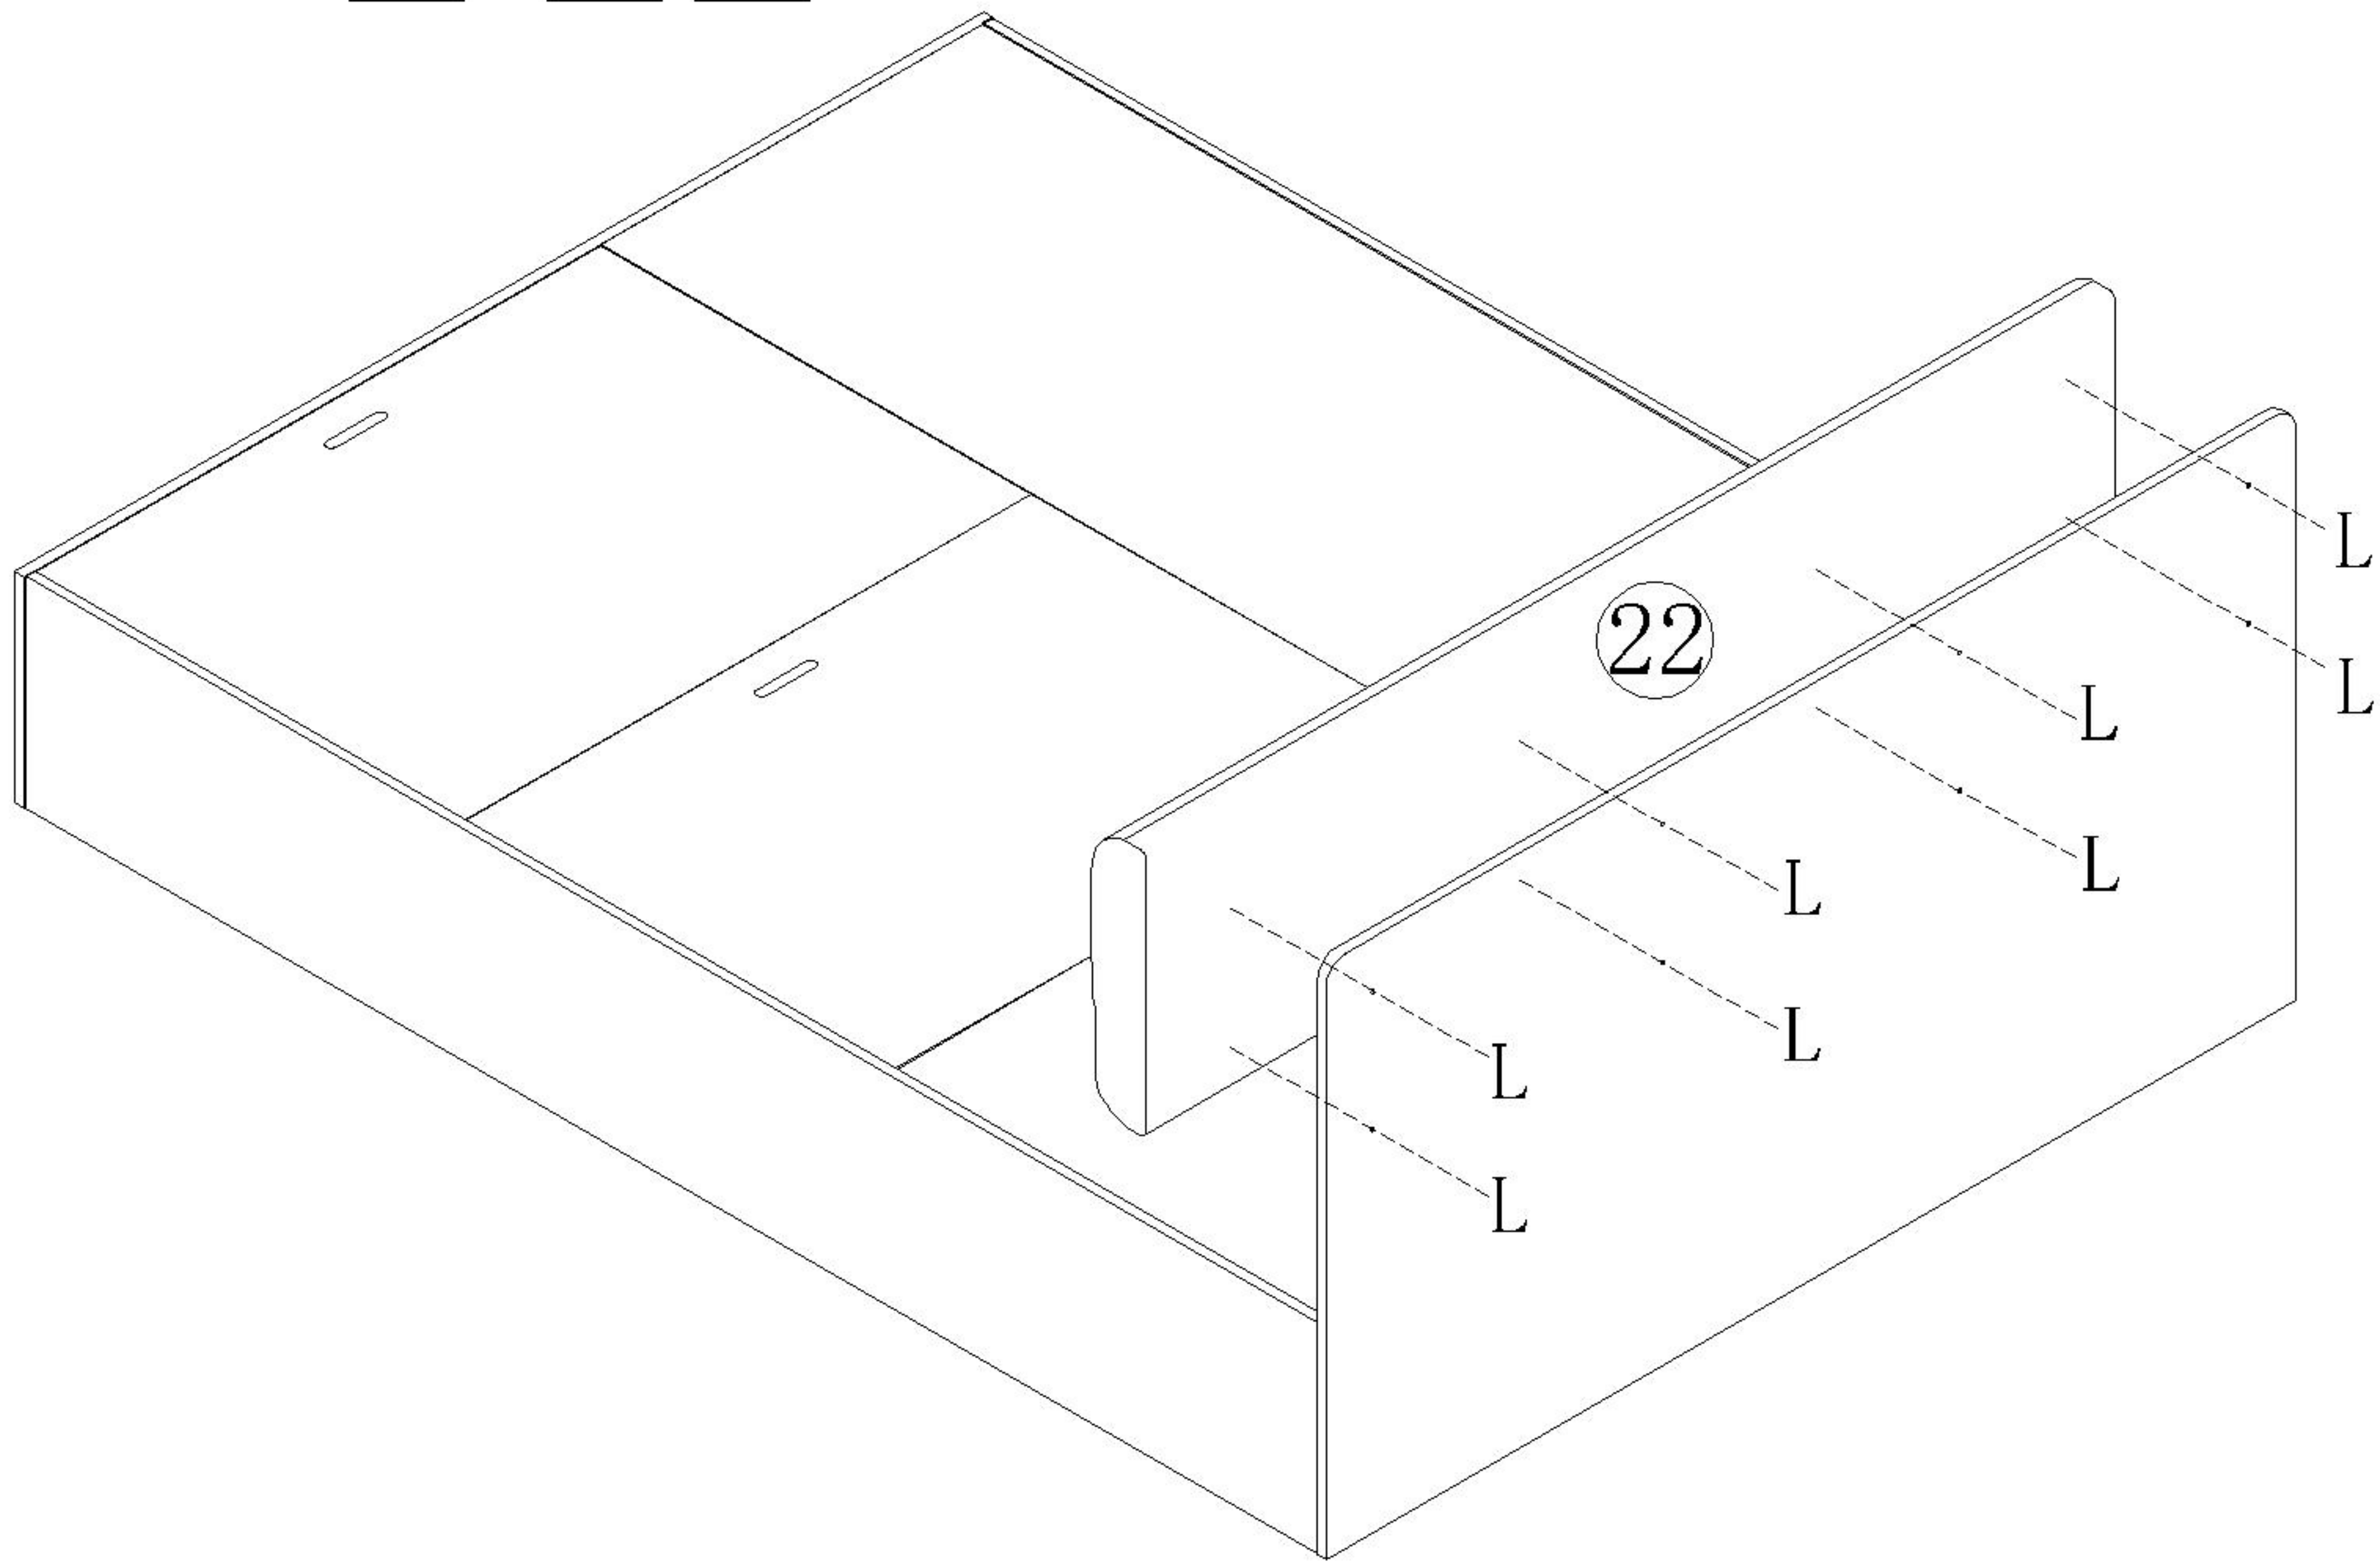


OV10A-C 软包床头款1.5米 安装完成
OV10A-C soft bag headboard 1.5m installation completed

20

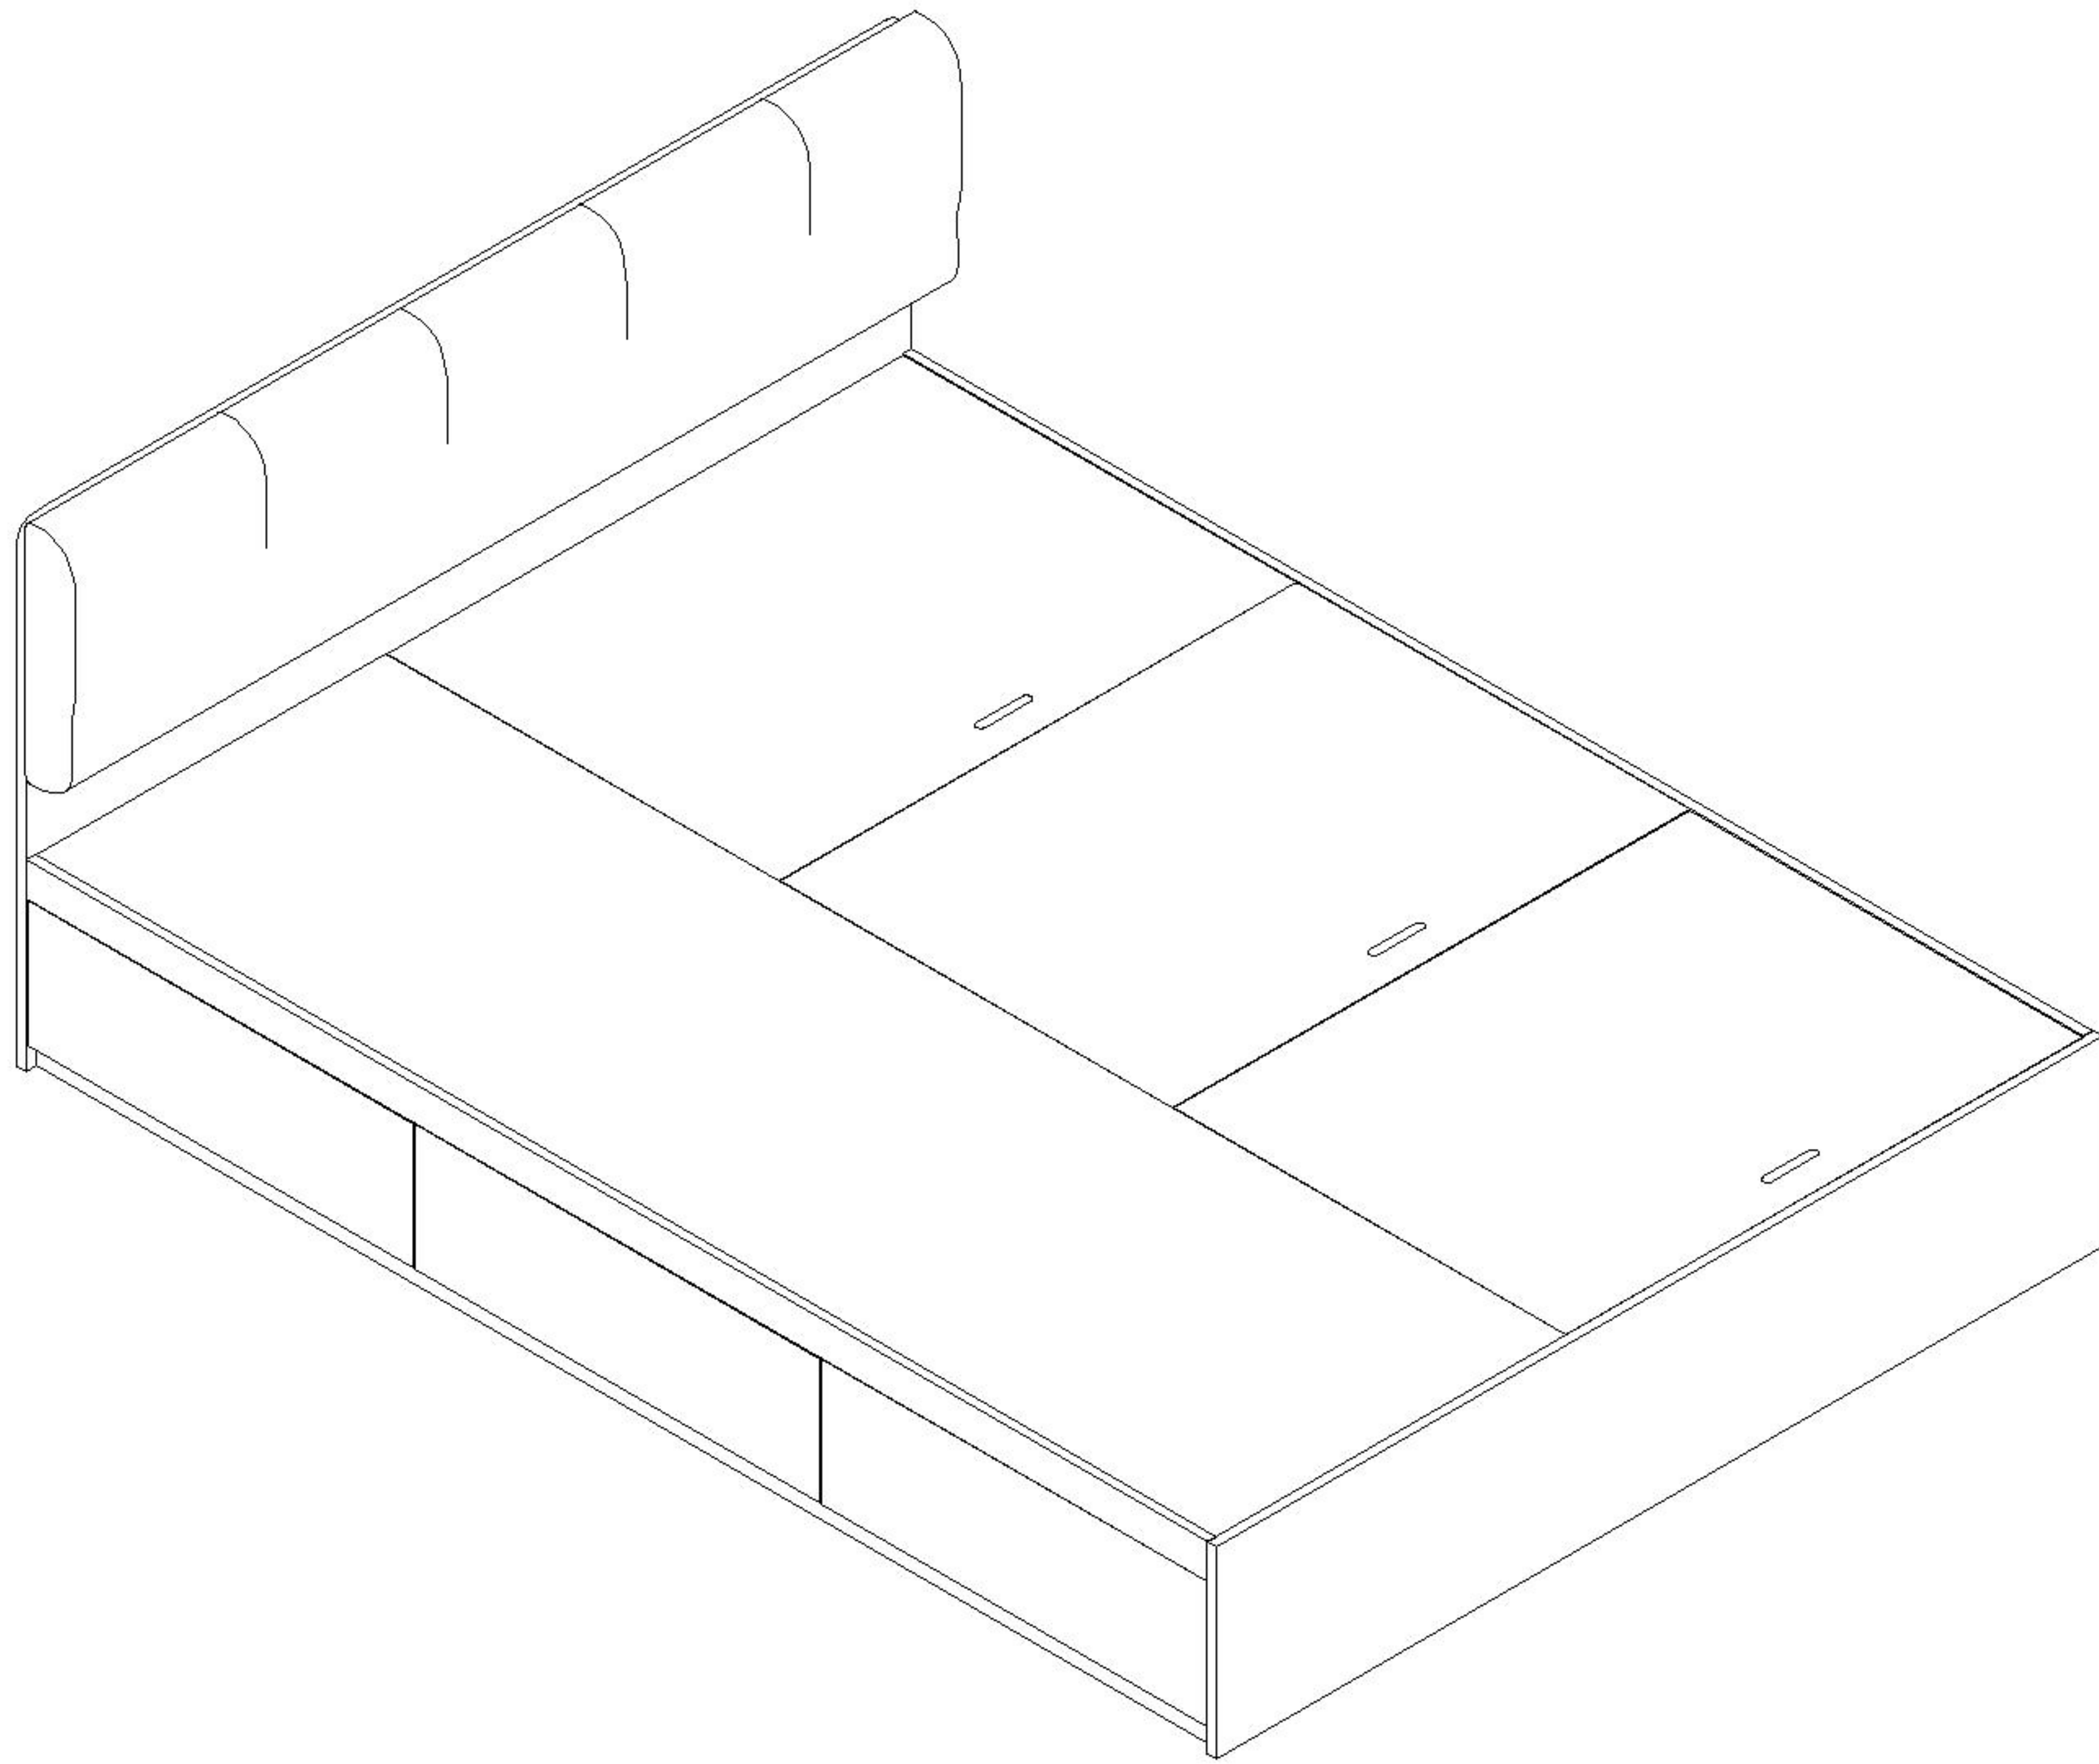


安装方法/
Installation method

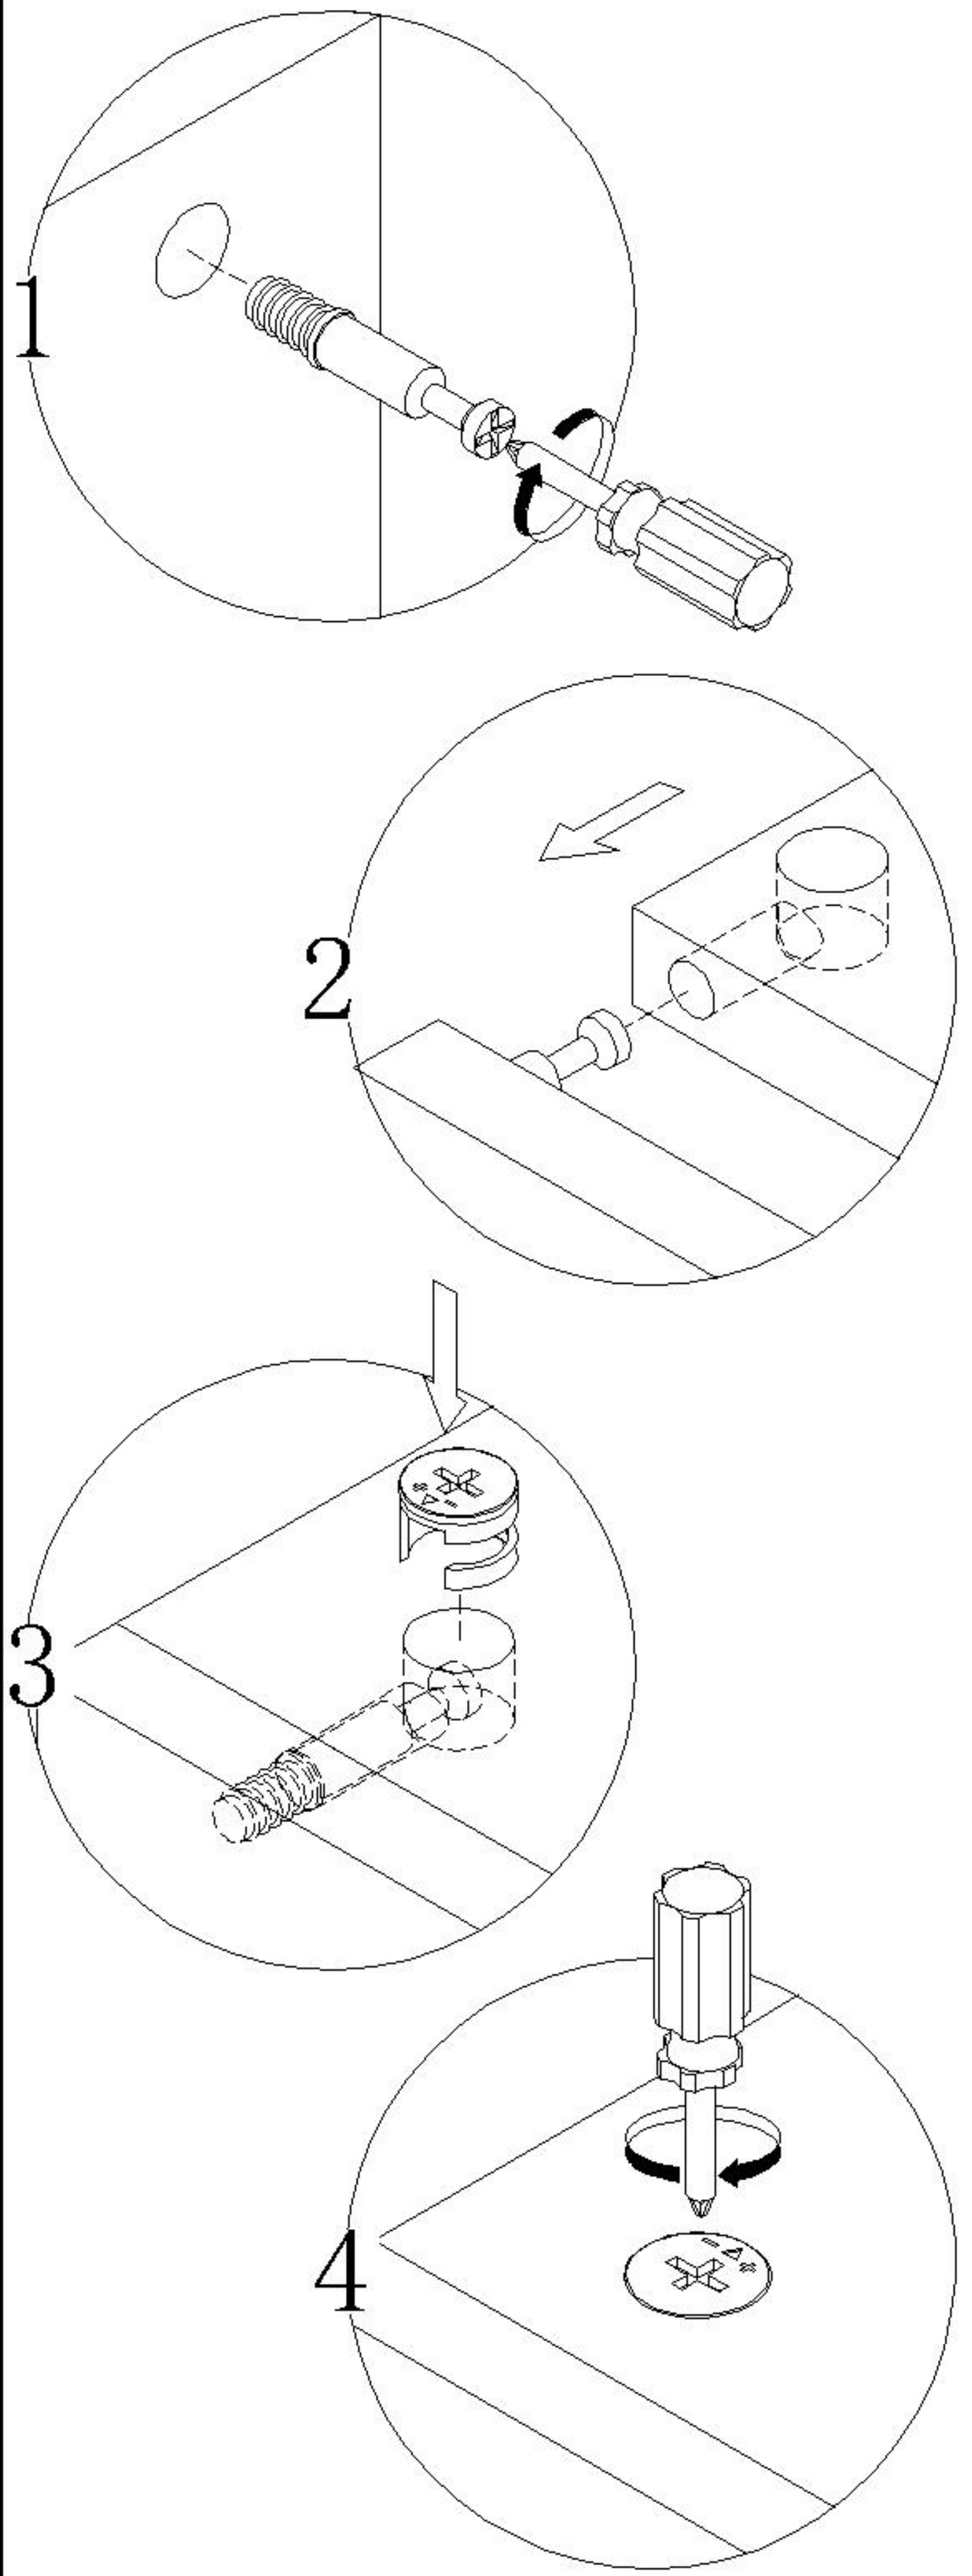


大二合一
two-in-one

(A)*8
(L)*6

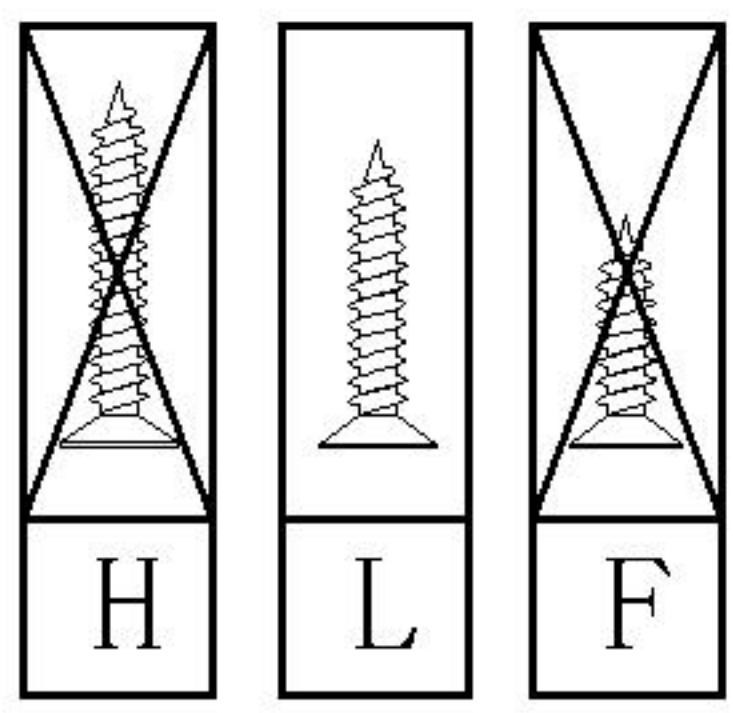


OV8A-C 矮床头款1.5米 按以下步骤安装
OV8A-C Low Headboard 1.5m Follow
the steps below to install

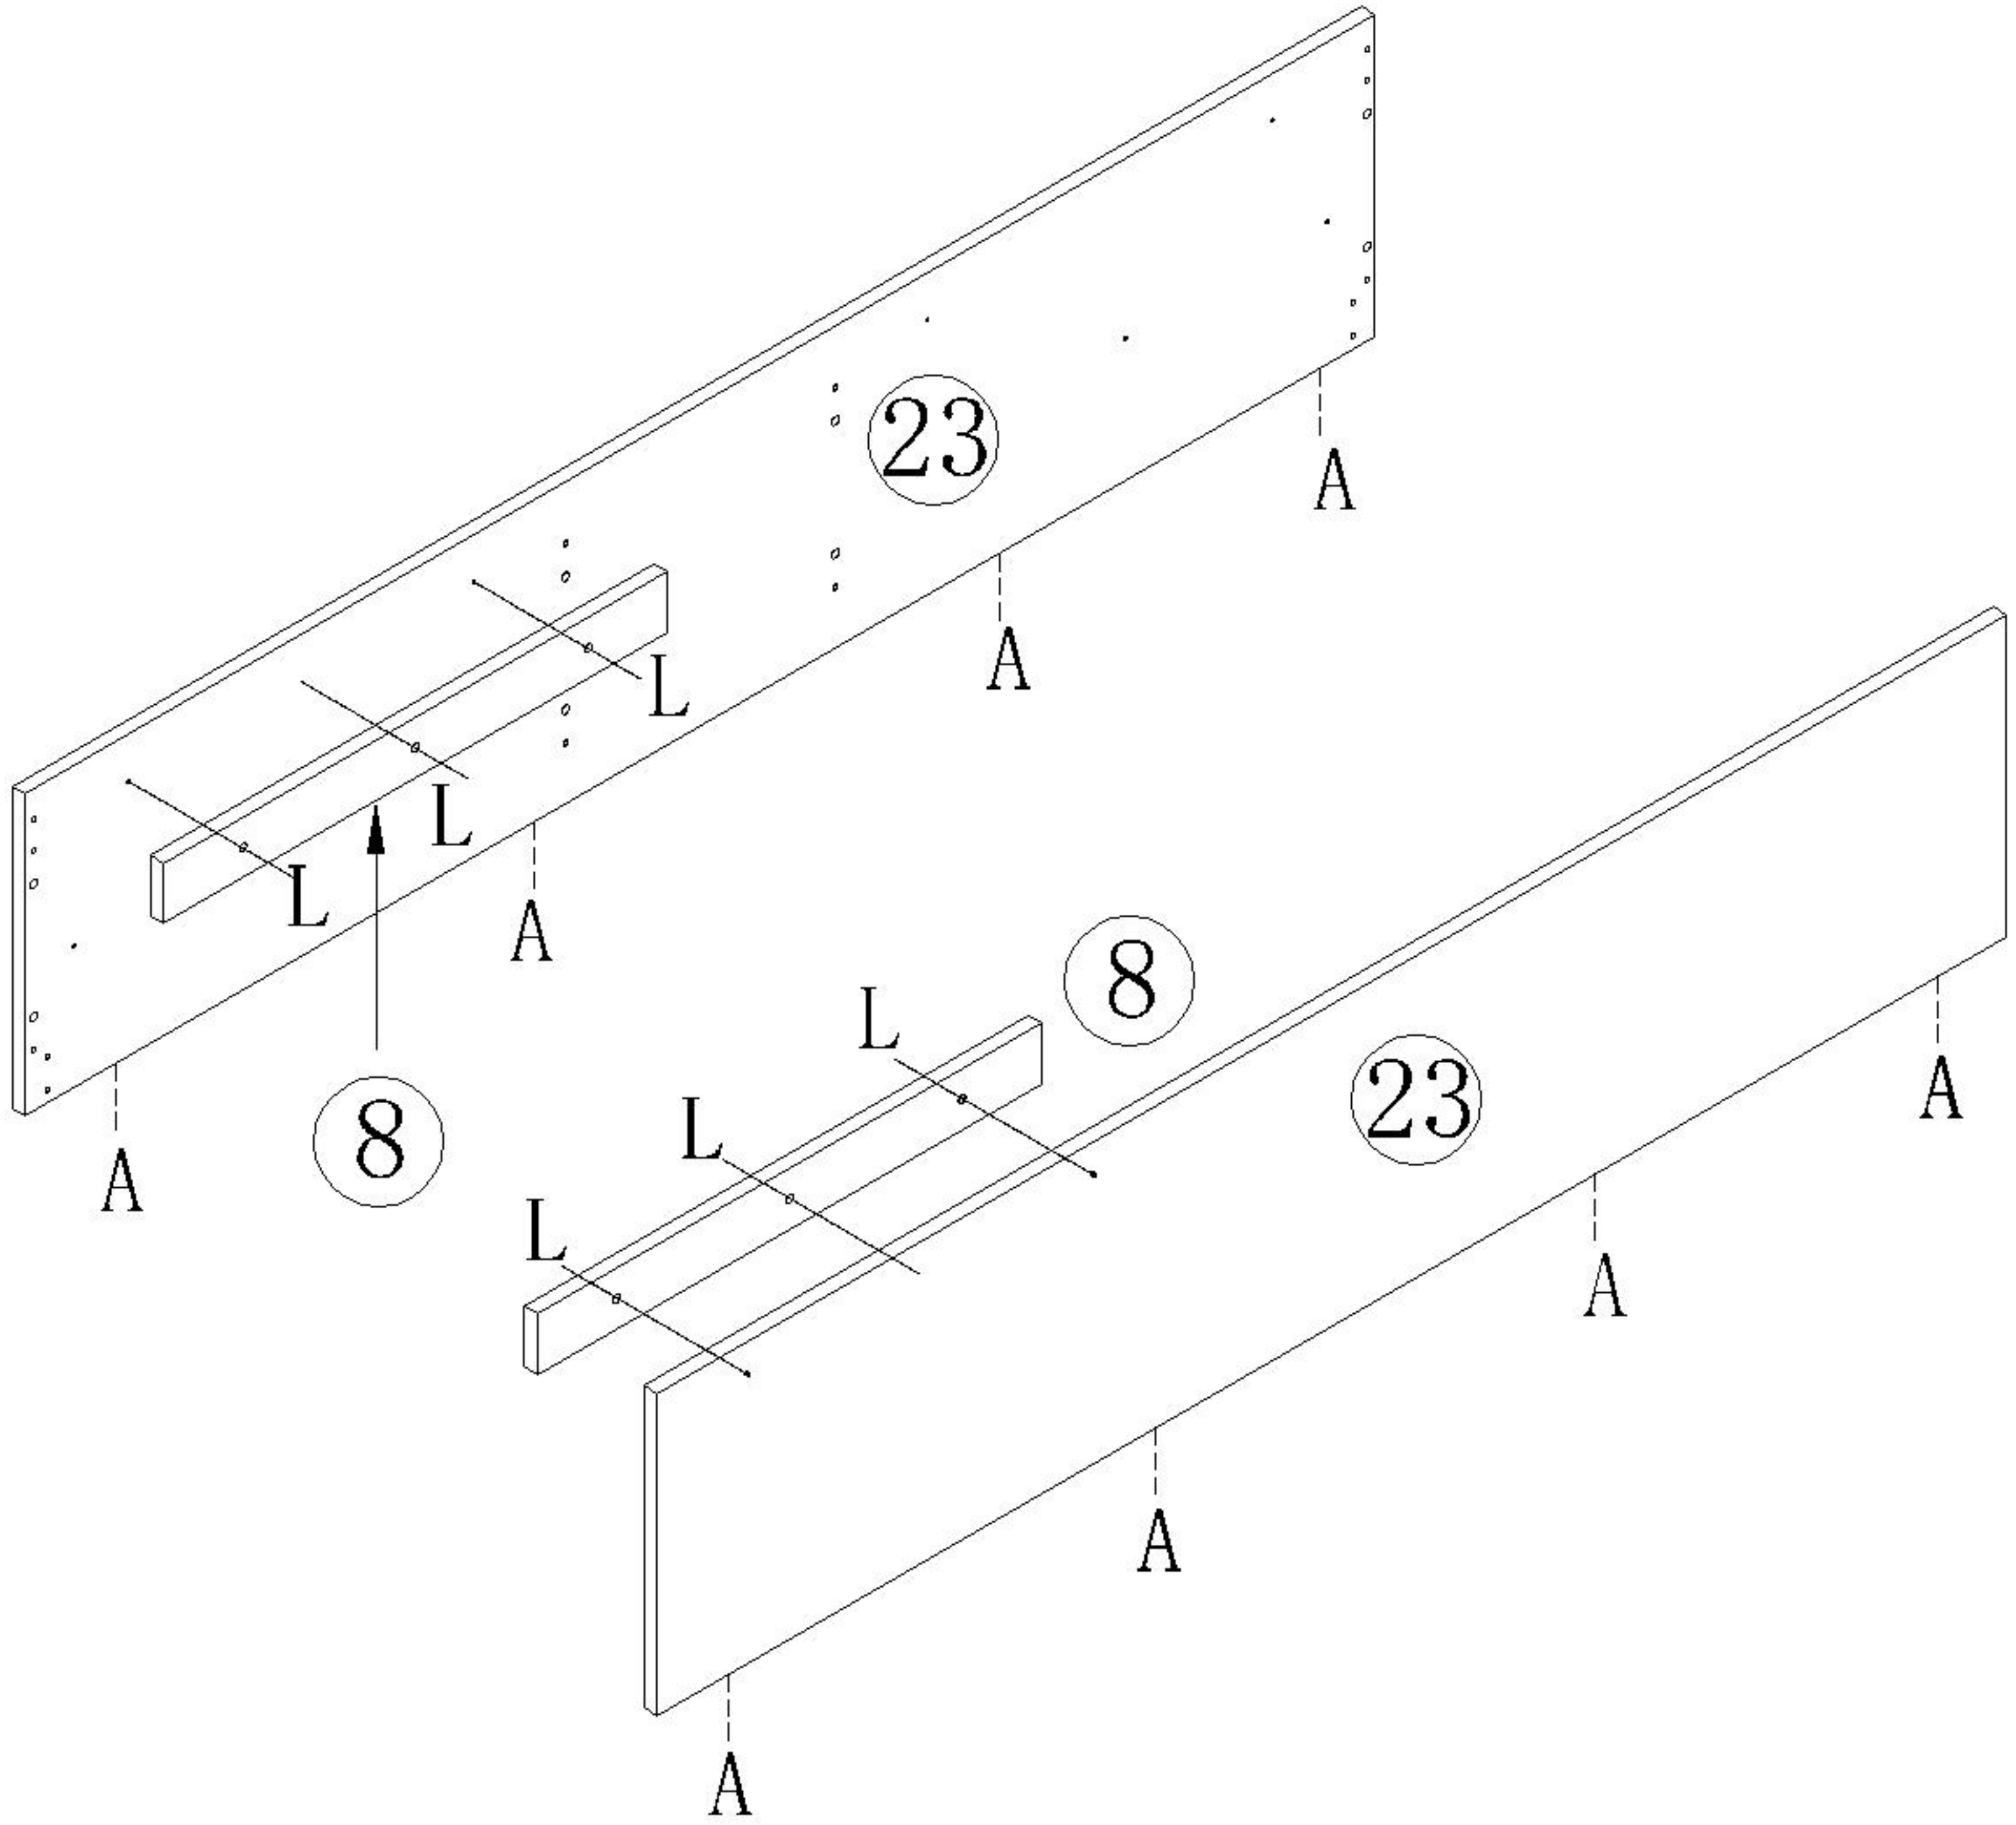

21



(C)*8
(D)*14
(E)*14

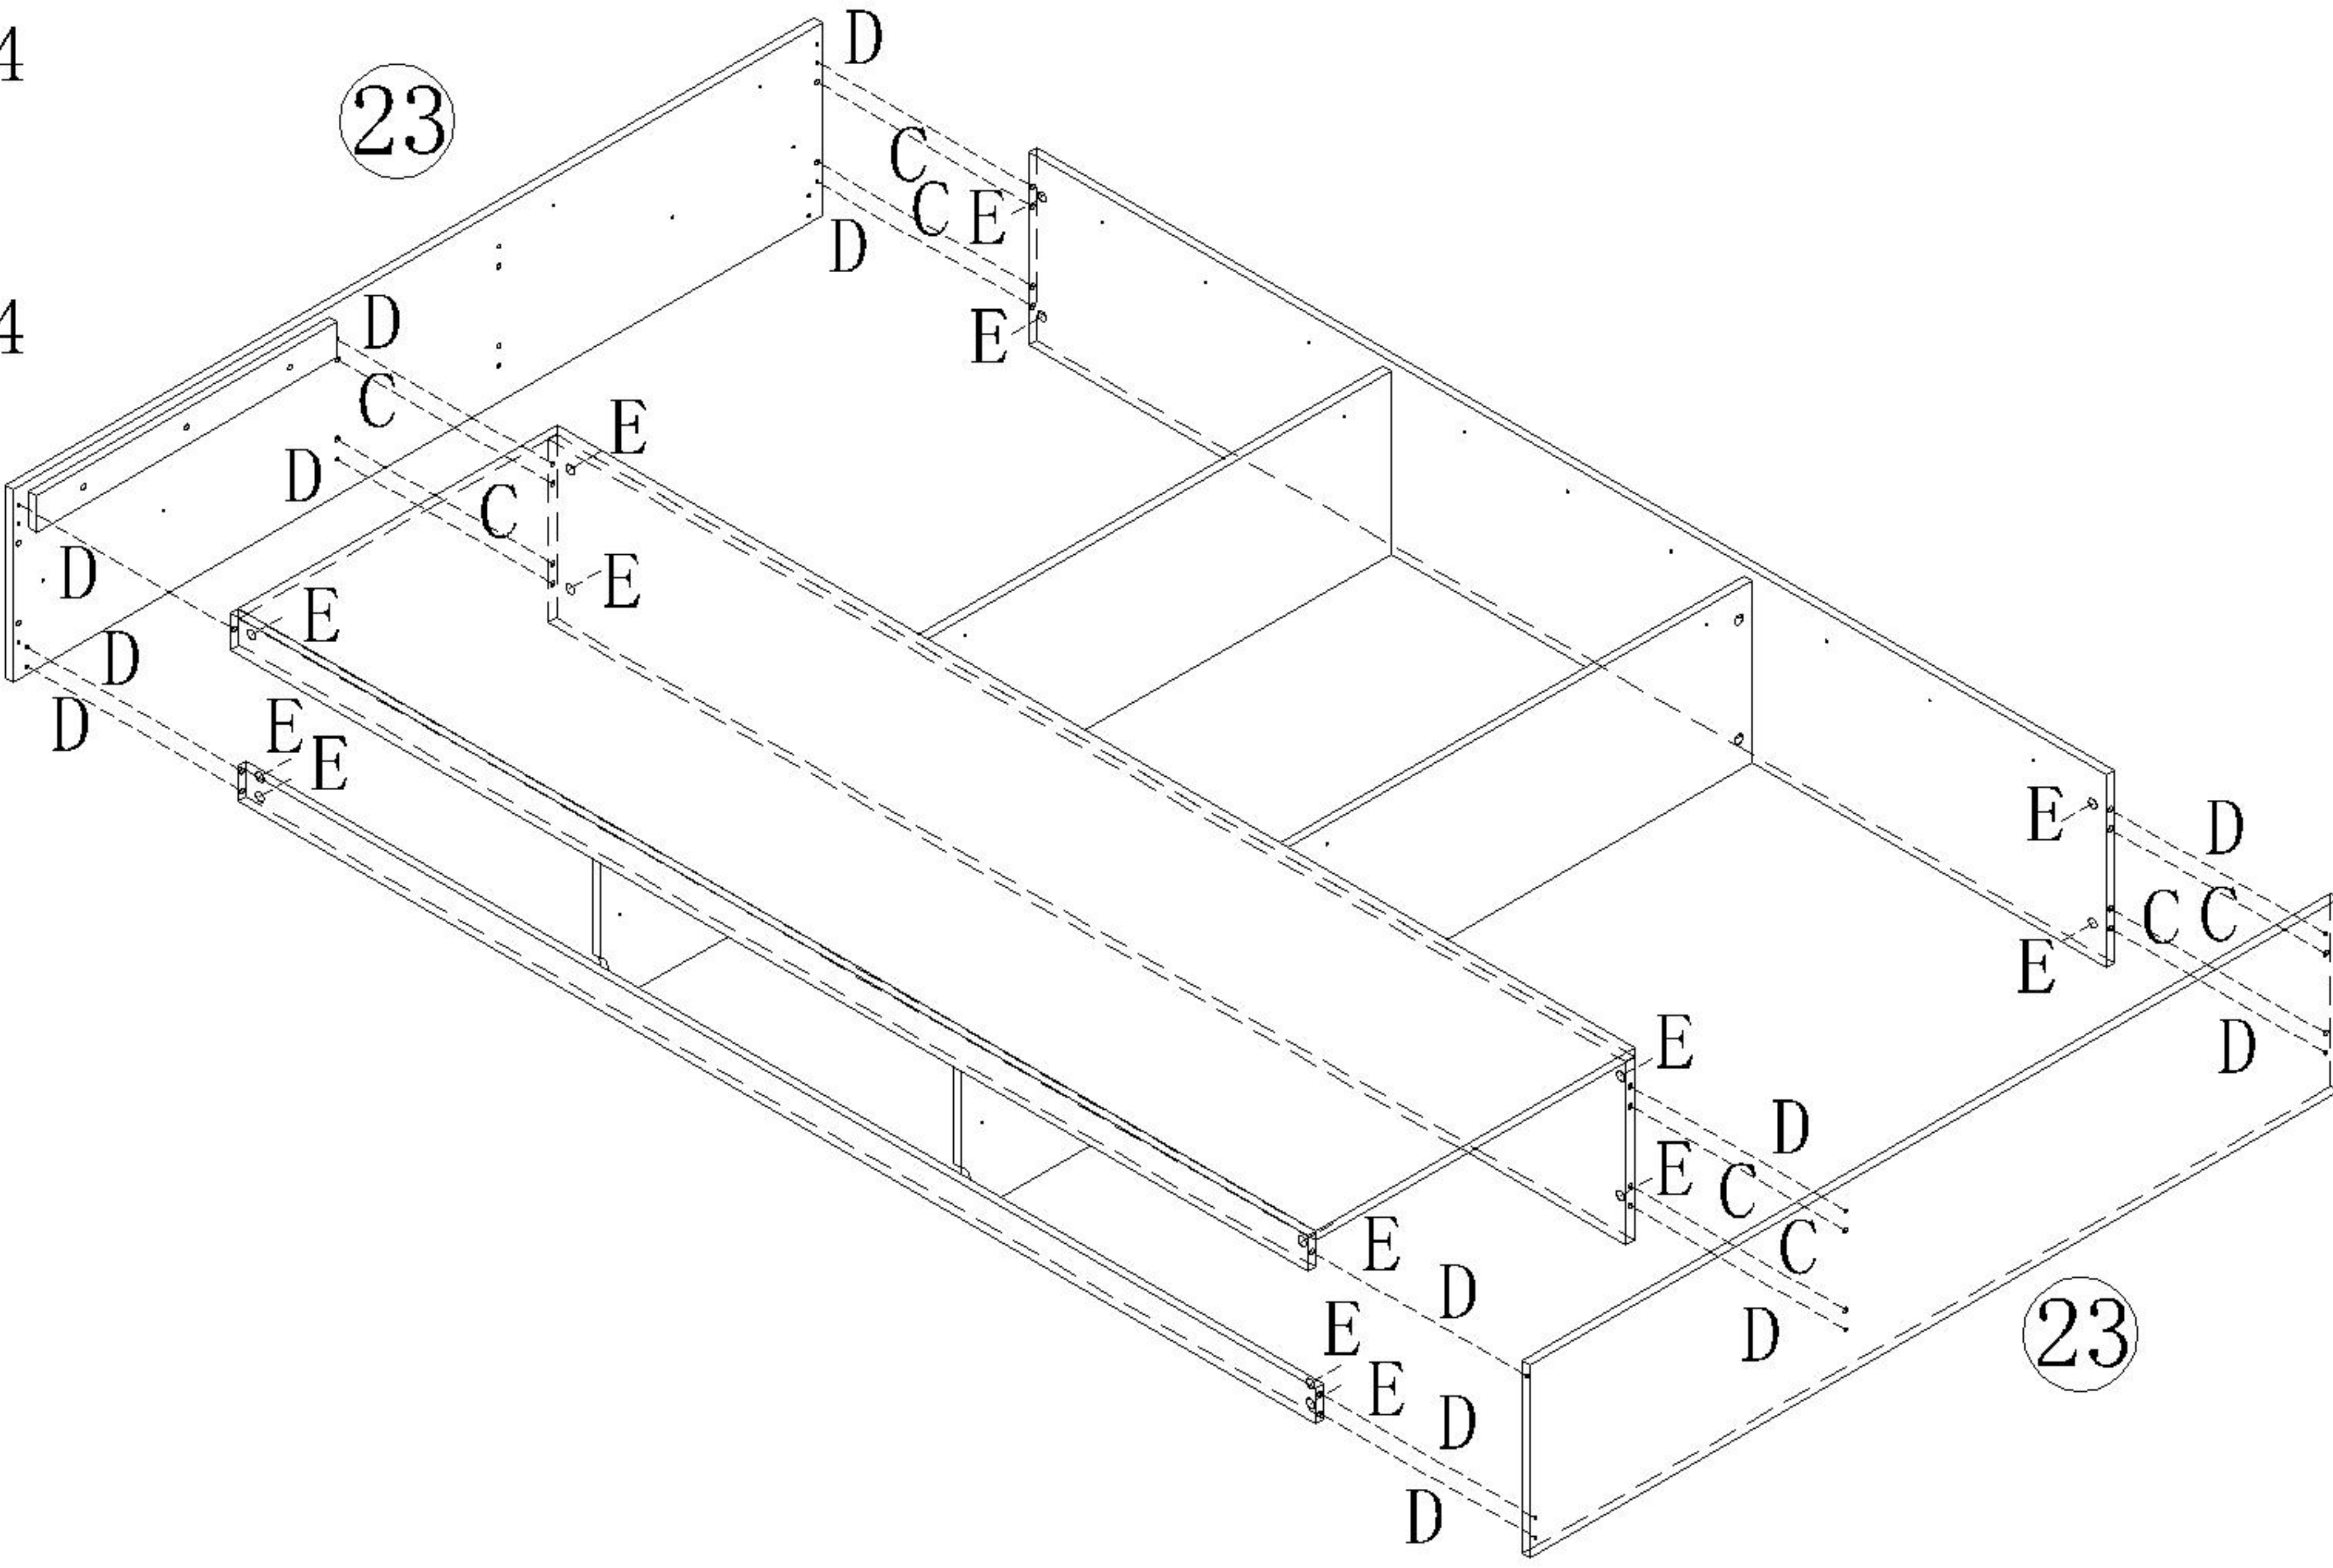


22

23

(L)*12

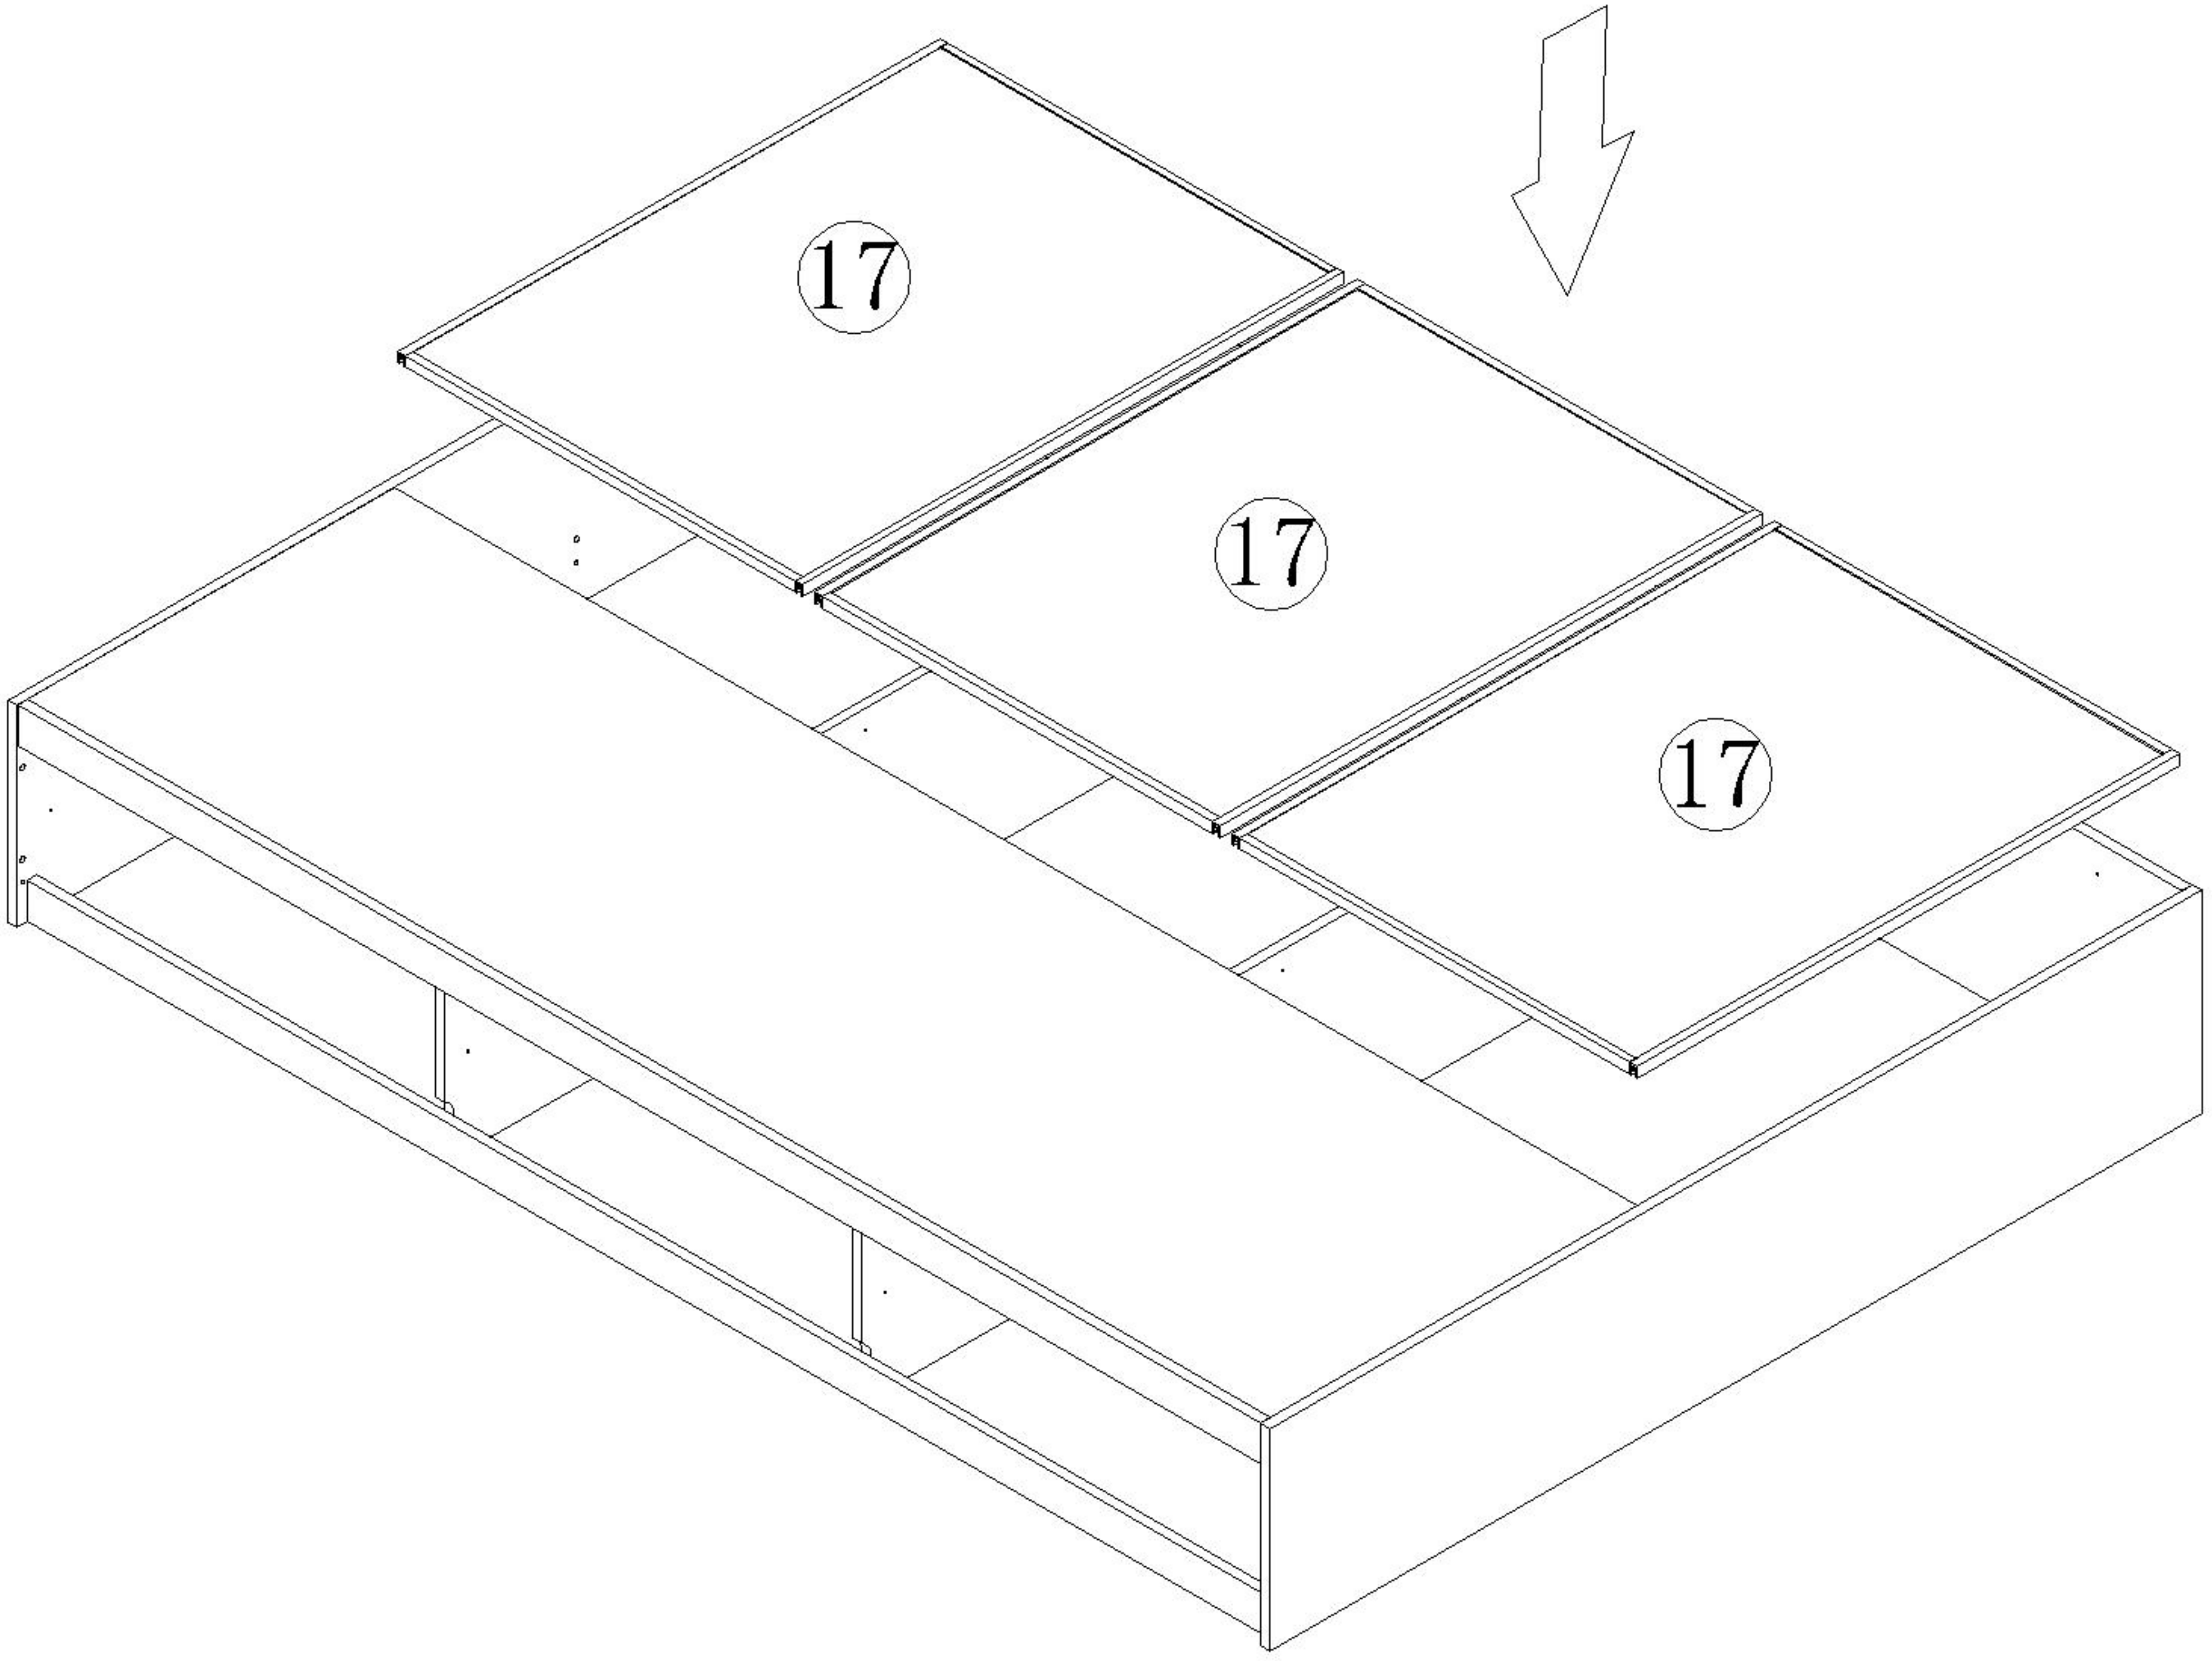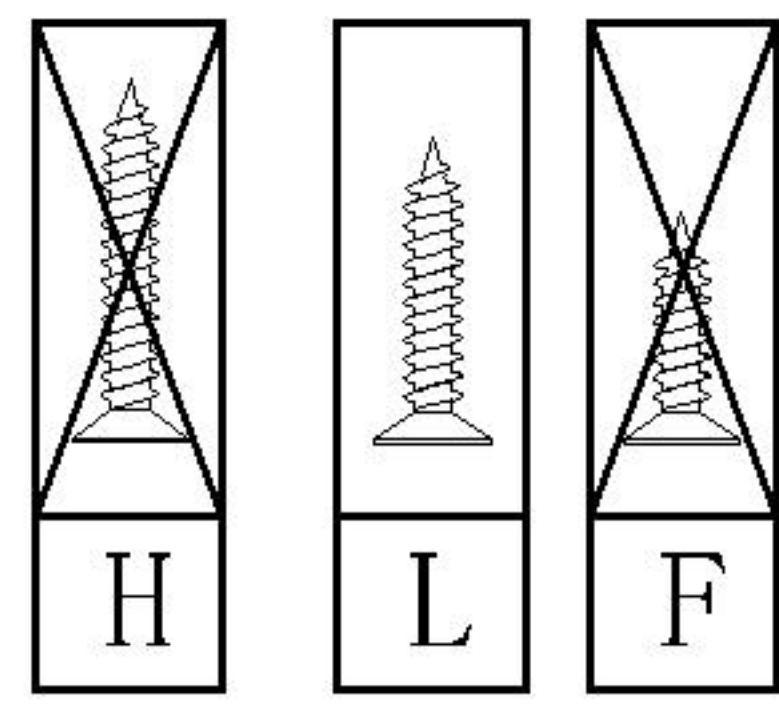


24



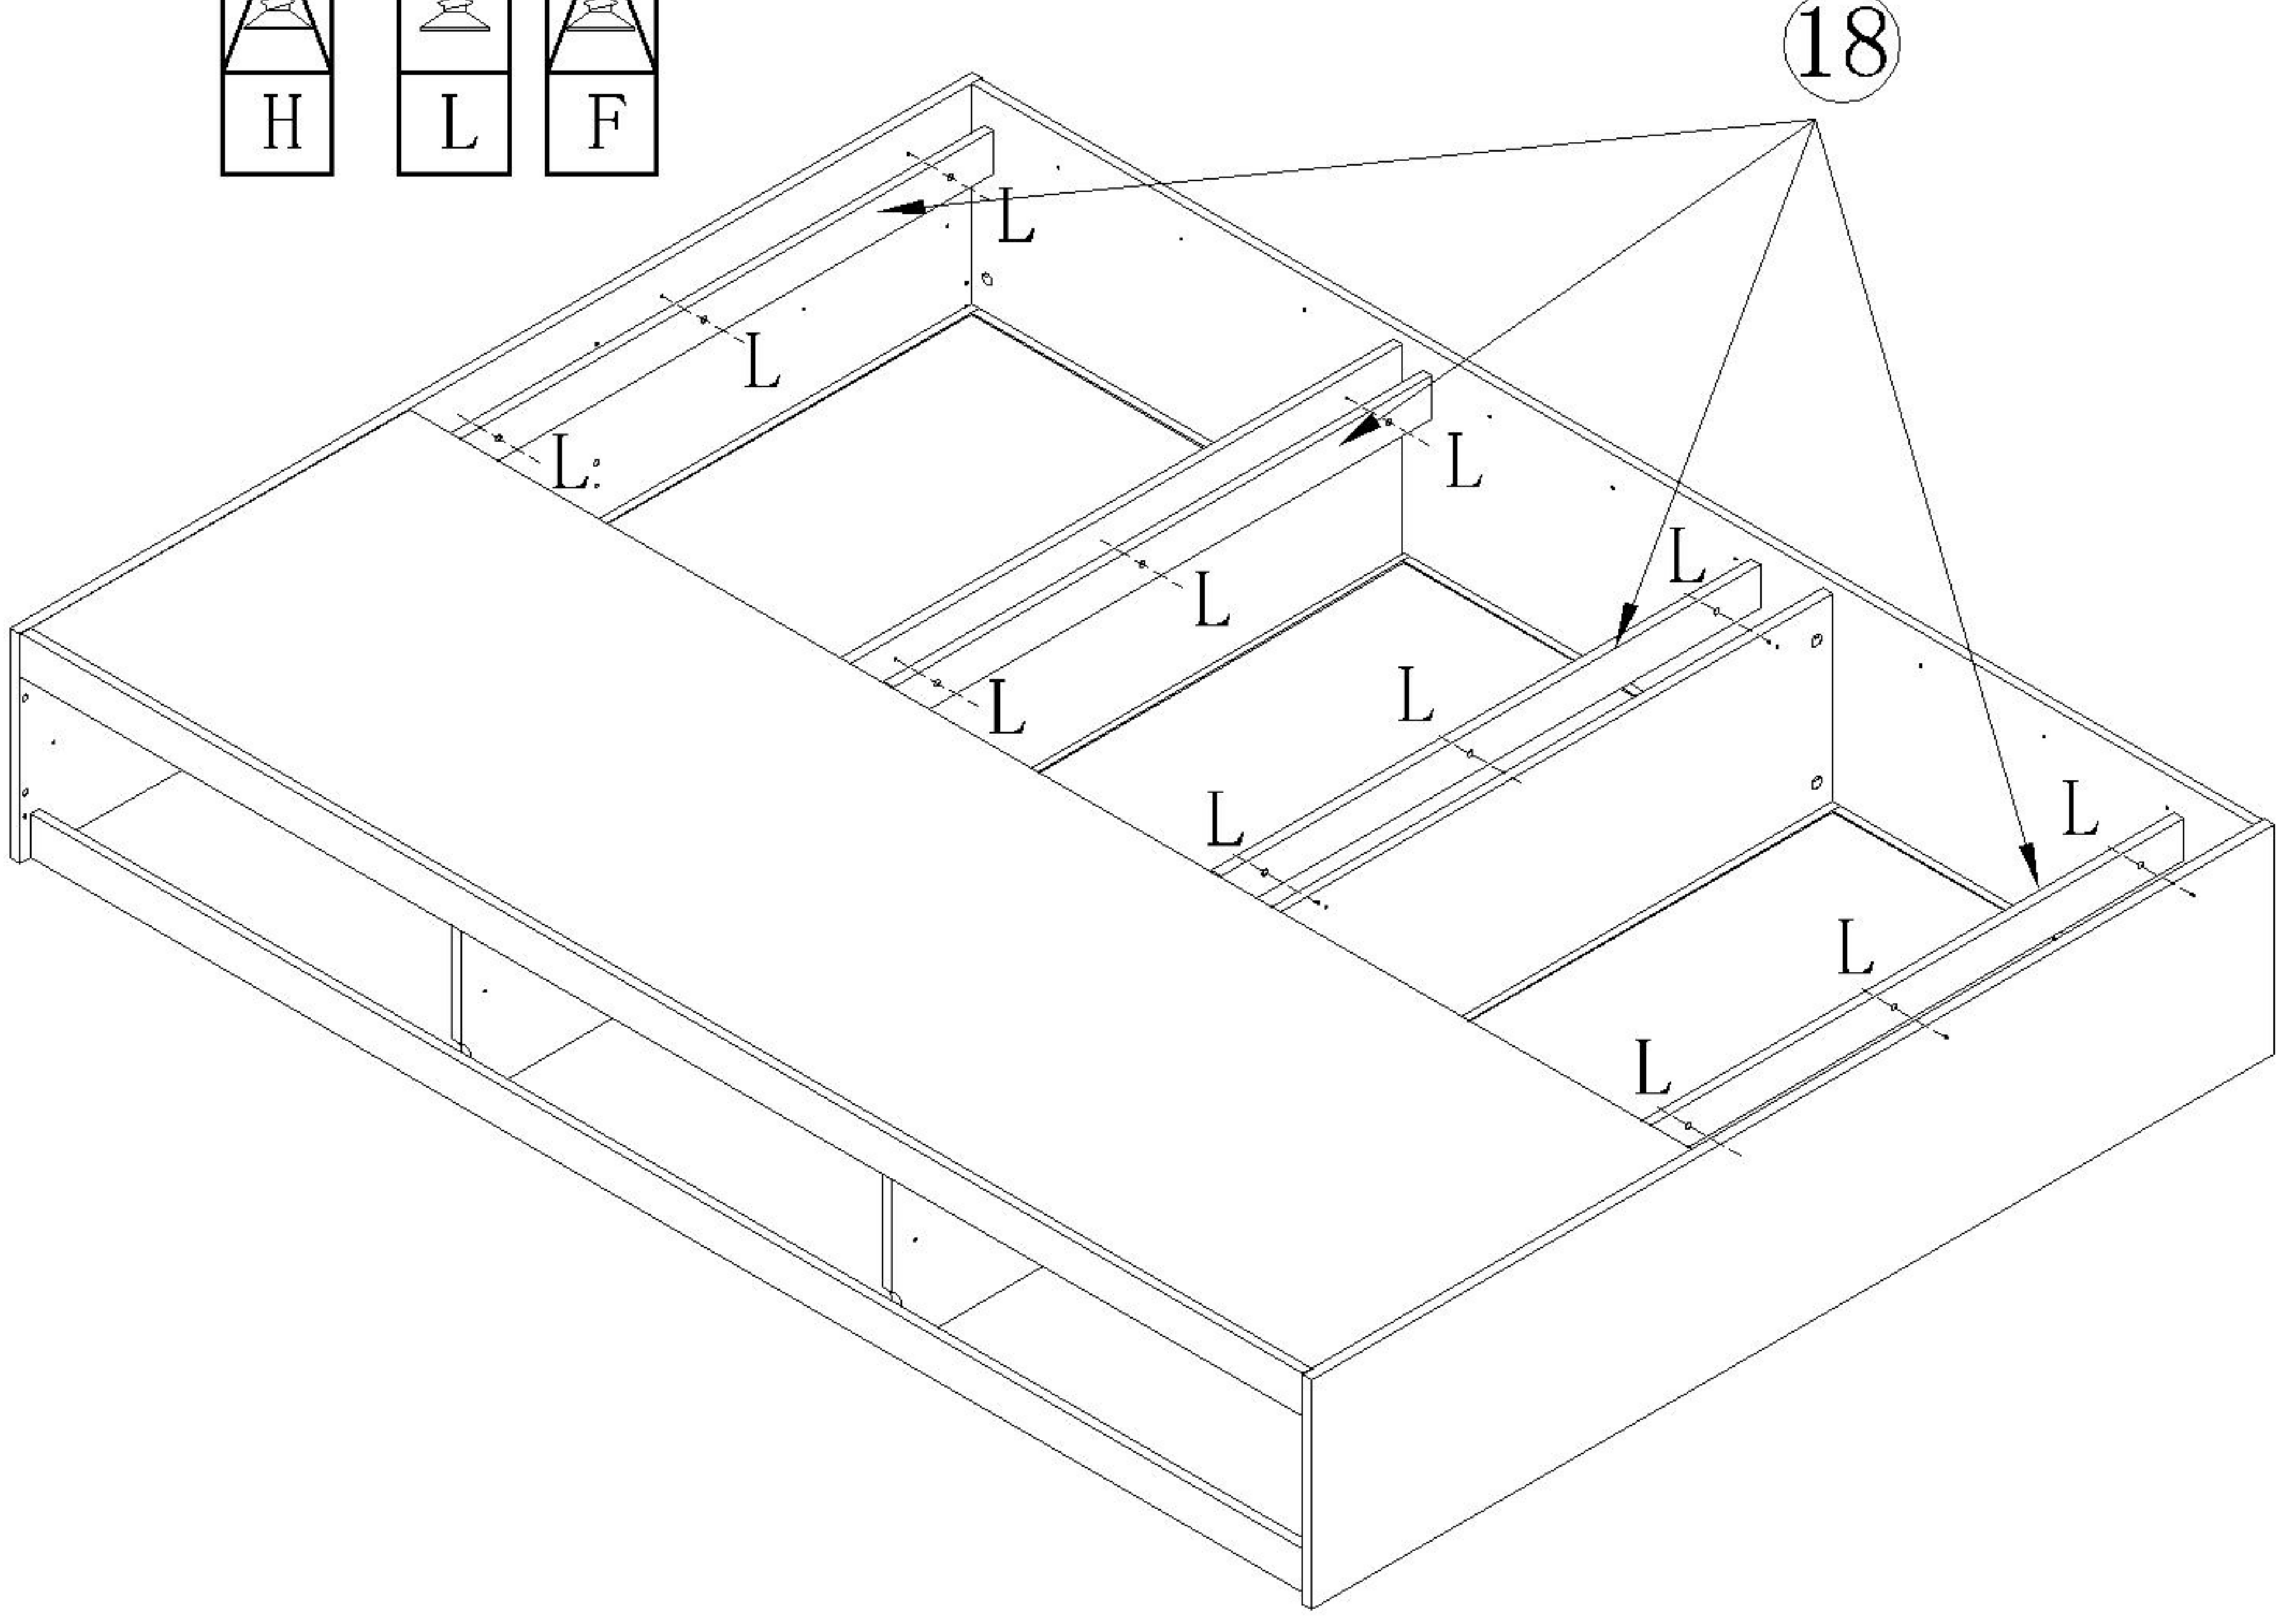


安装方法/ Installation method


阀门开关(下压为开)
Valve switch
(press down to open)

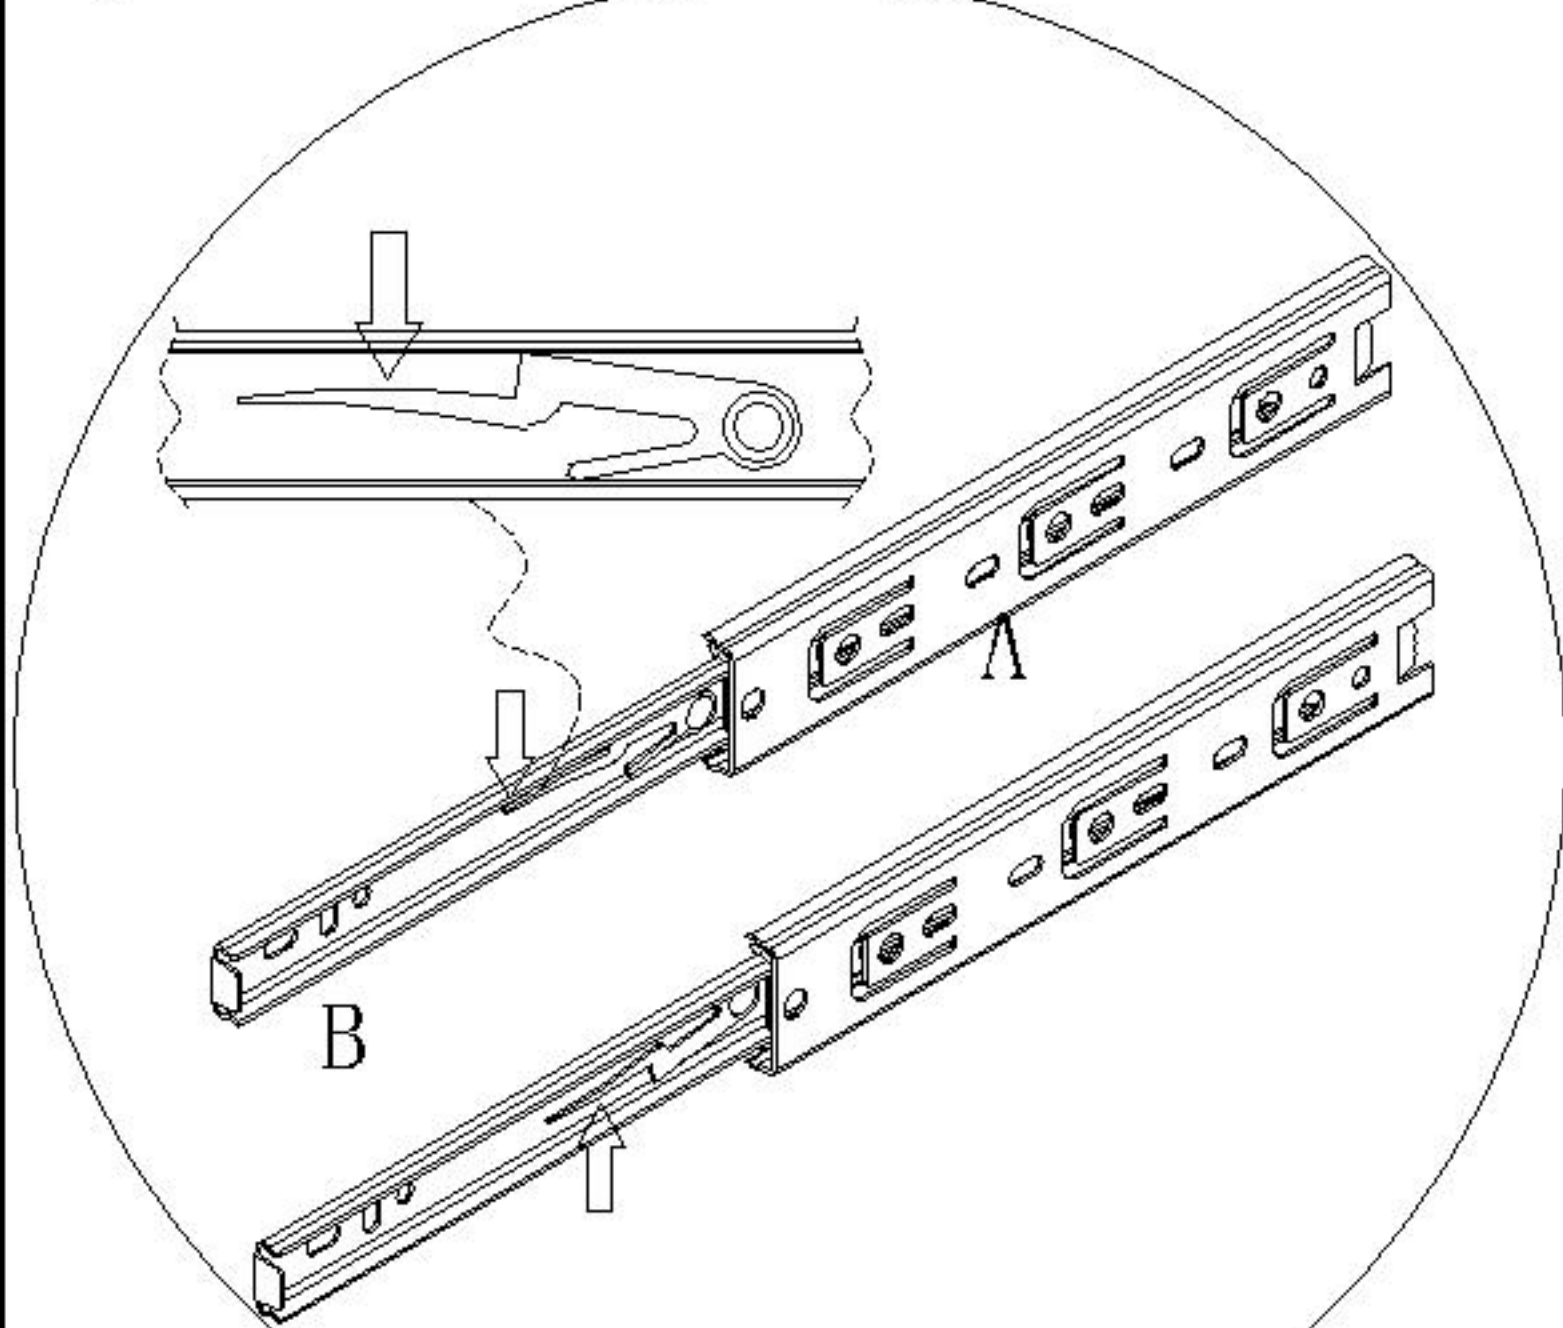



注: 先将A与B拆下来
Note: remove a and B first

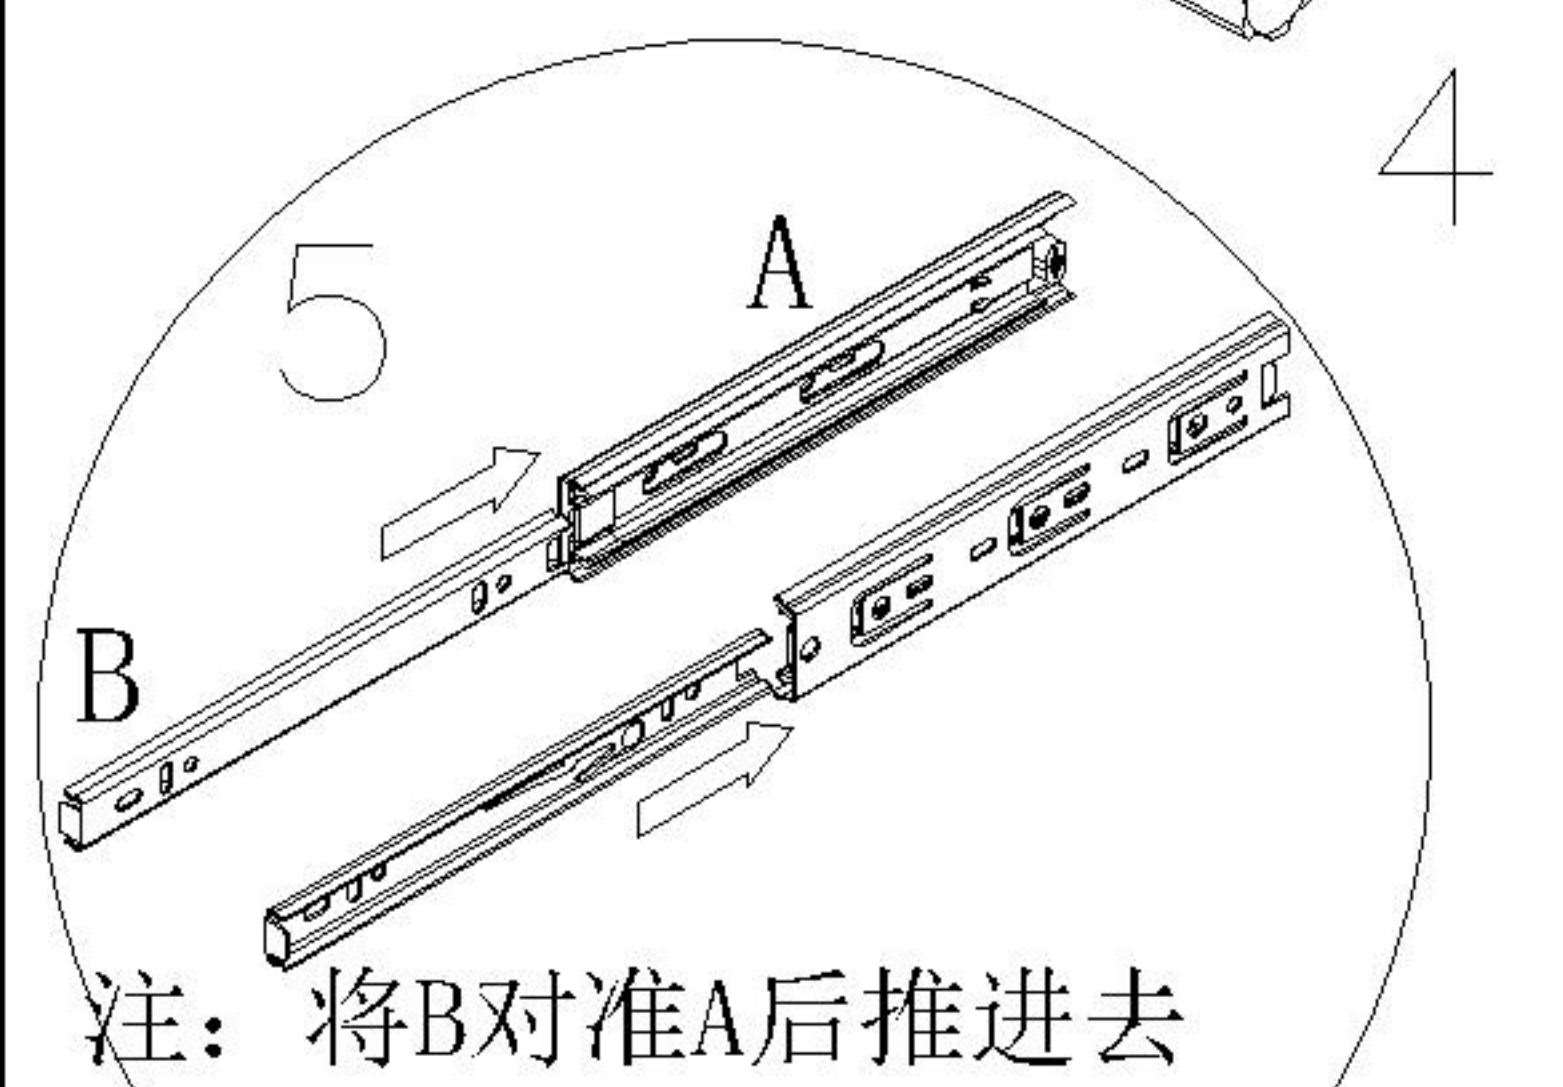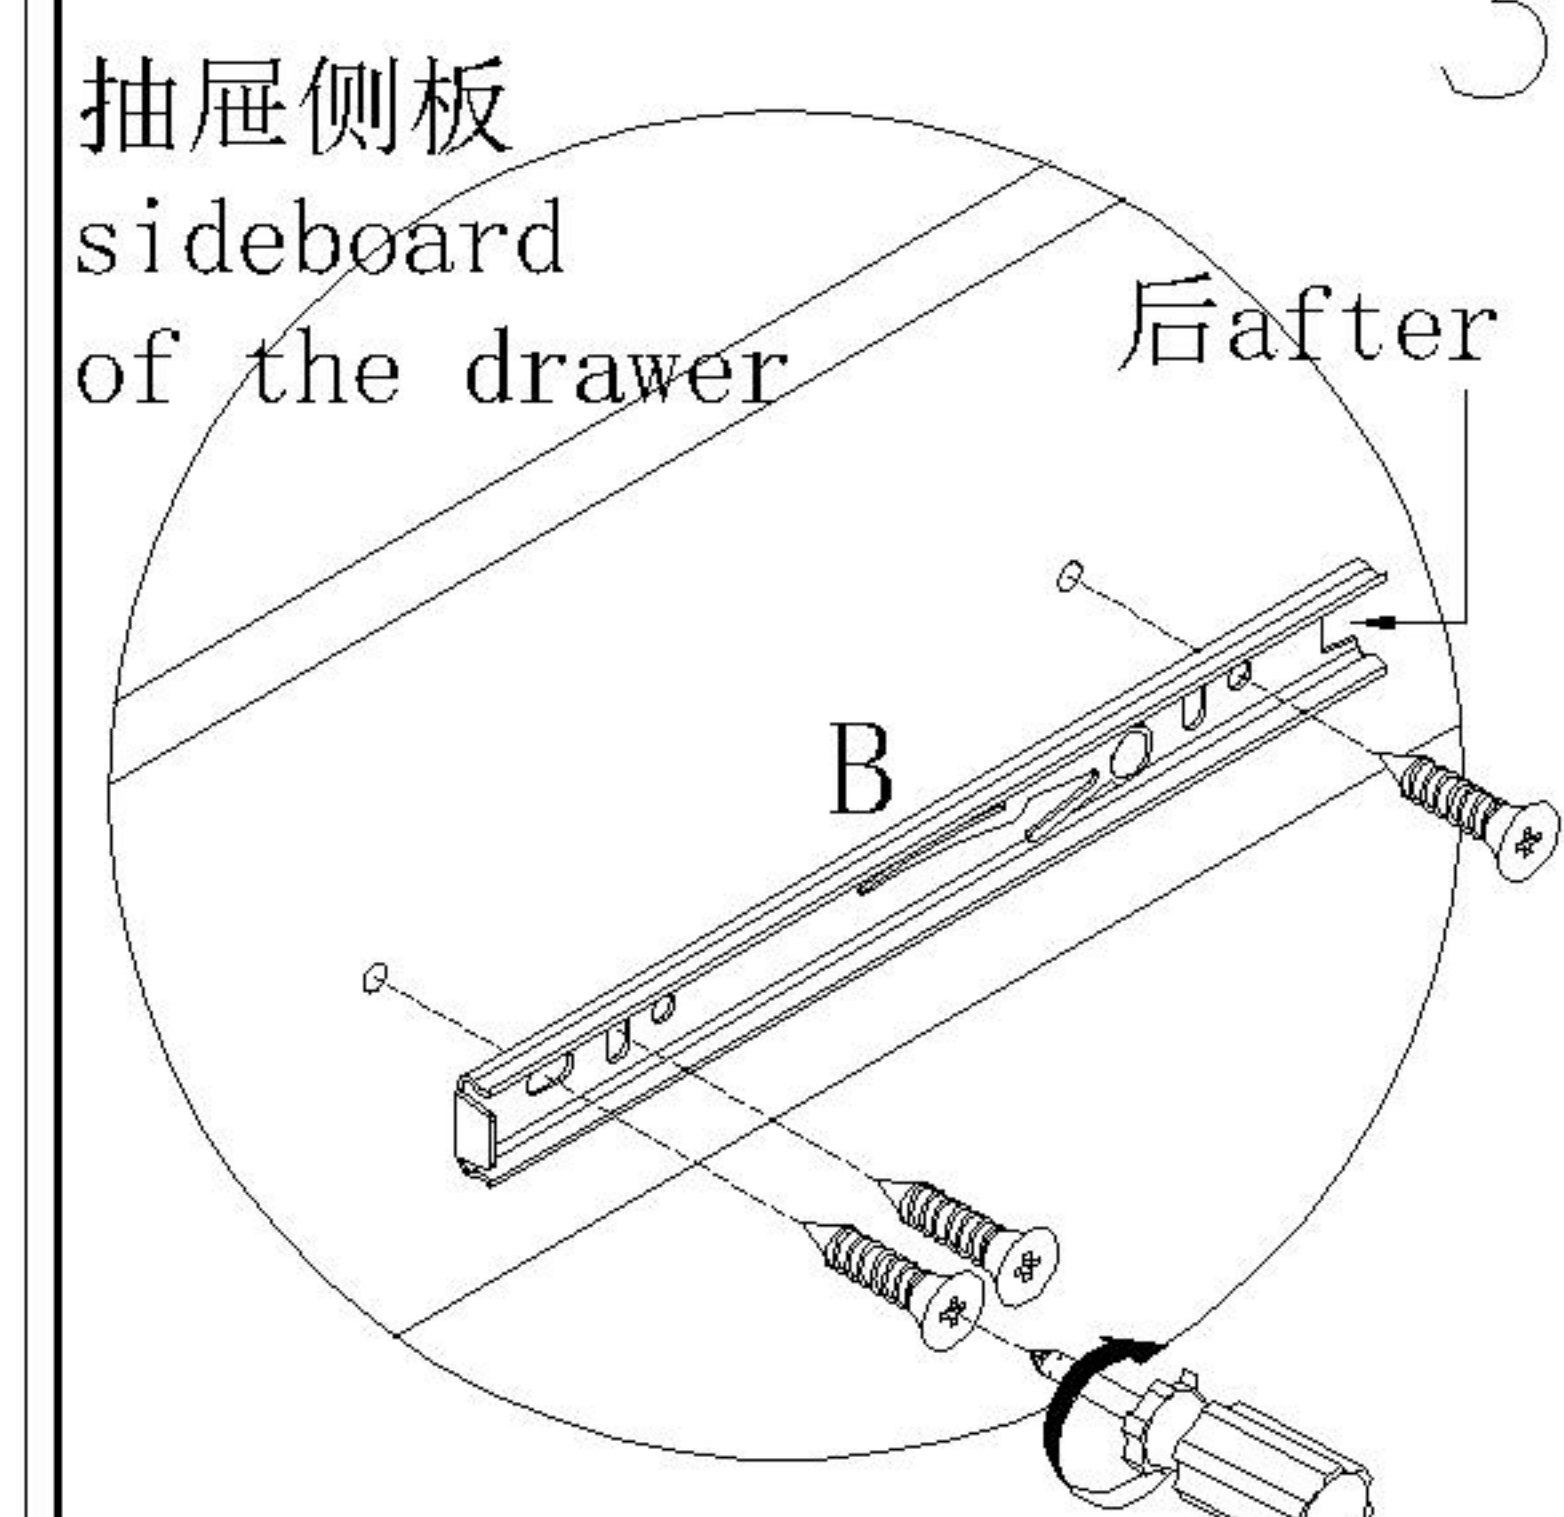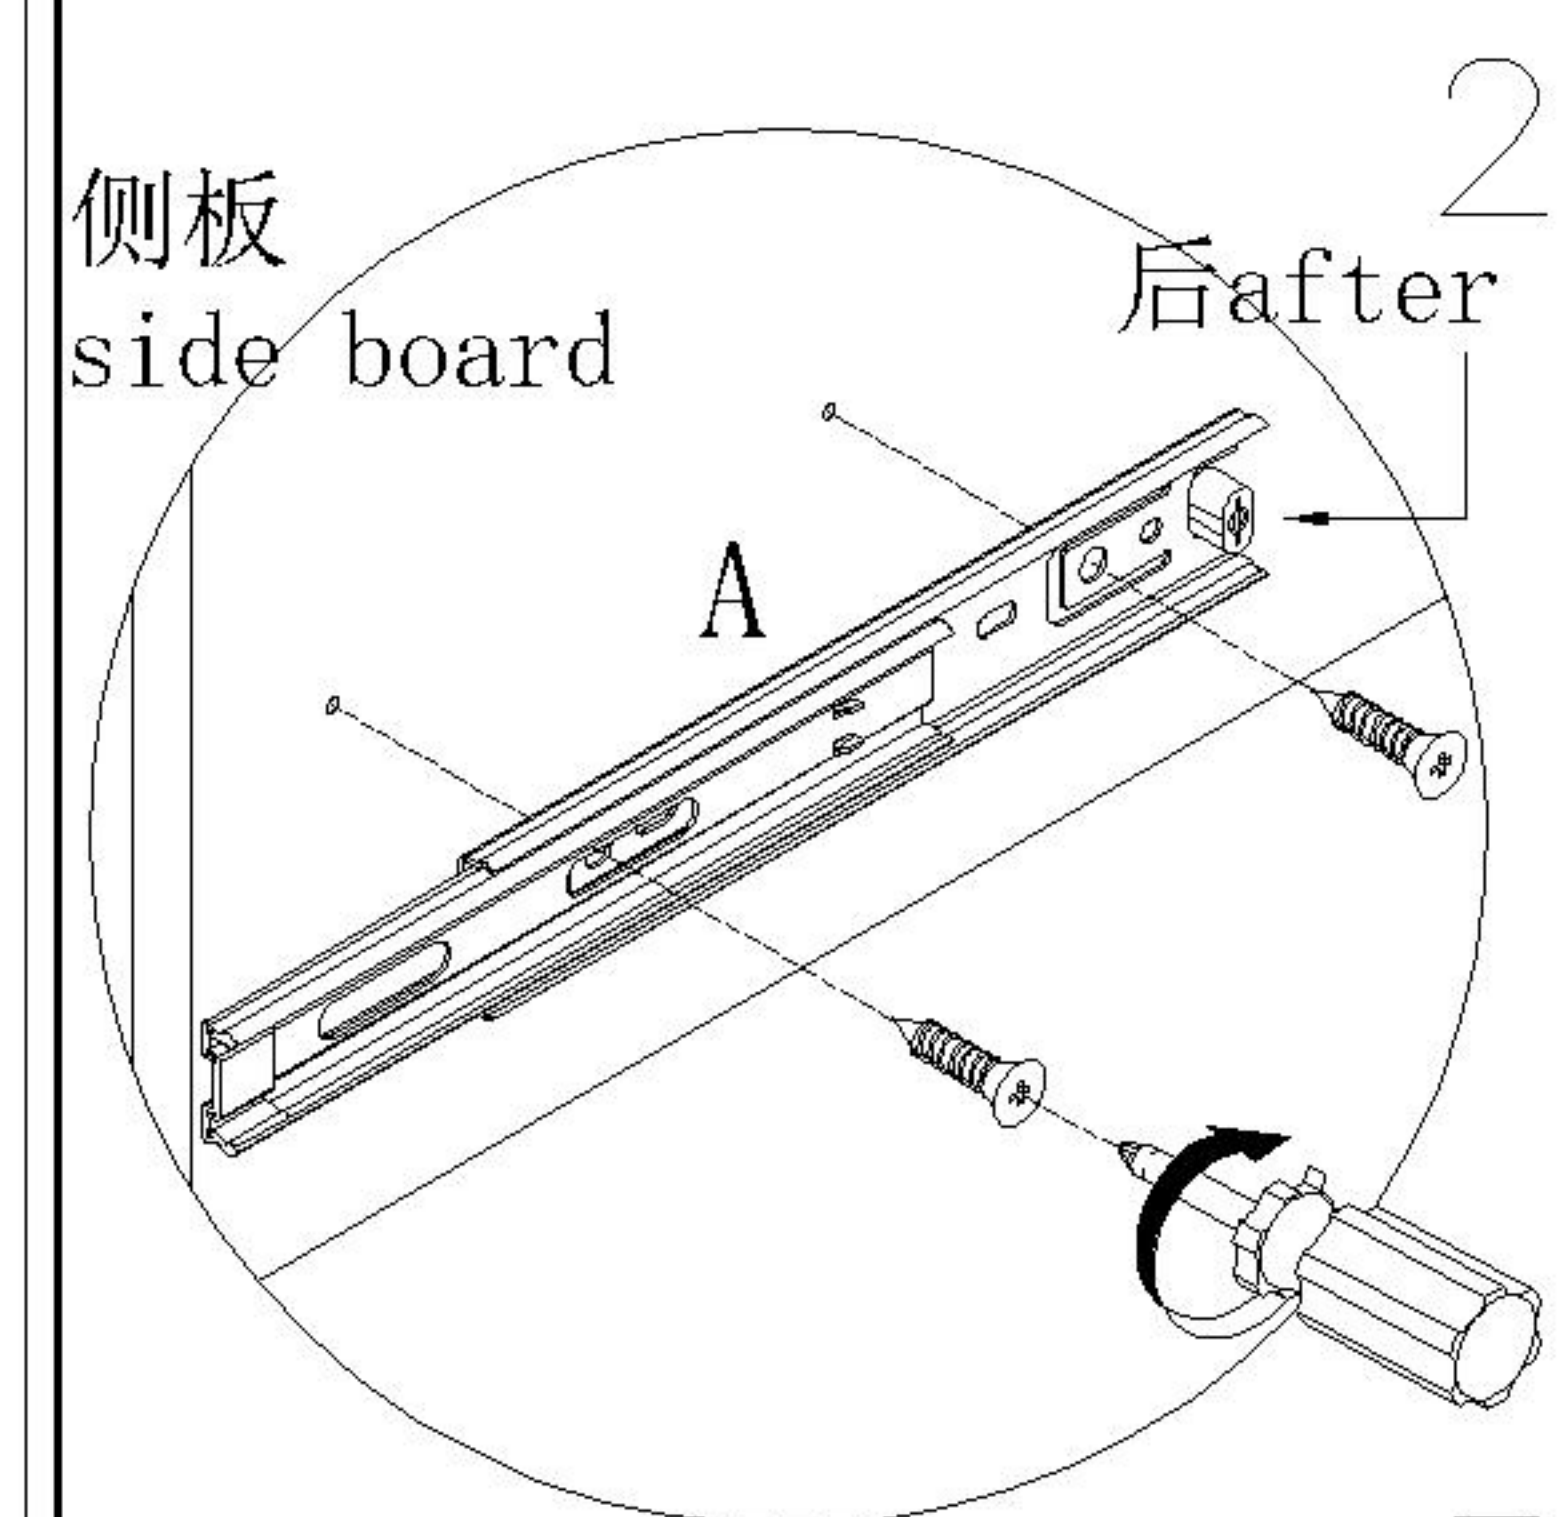

注: 将B对准A后推进去
Note: align B with a
and push it in
三节滚珠导轨
three-section ball rail

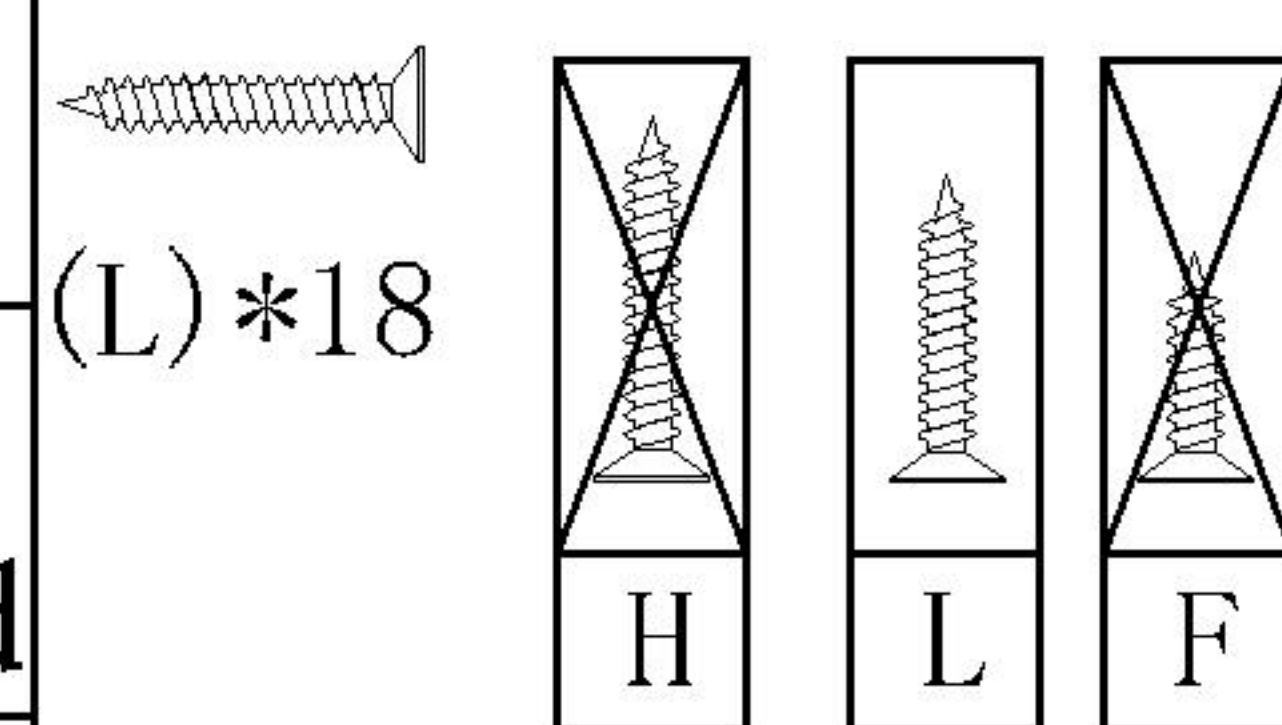

(L)*18

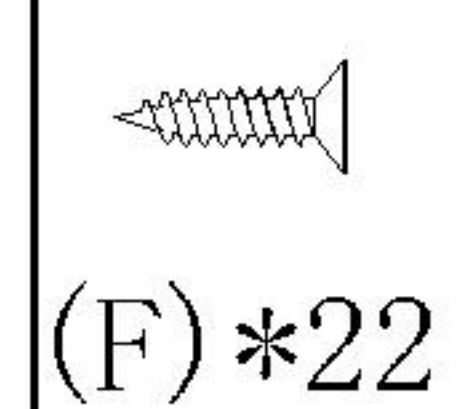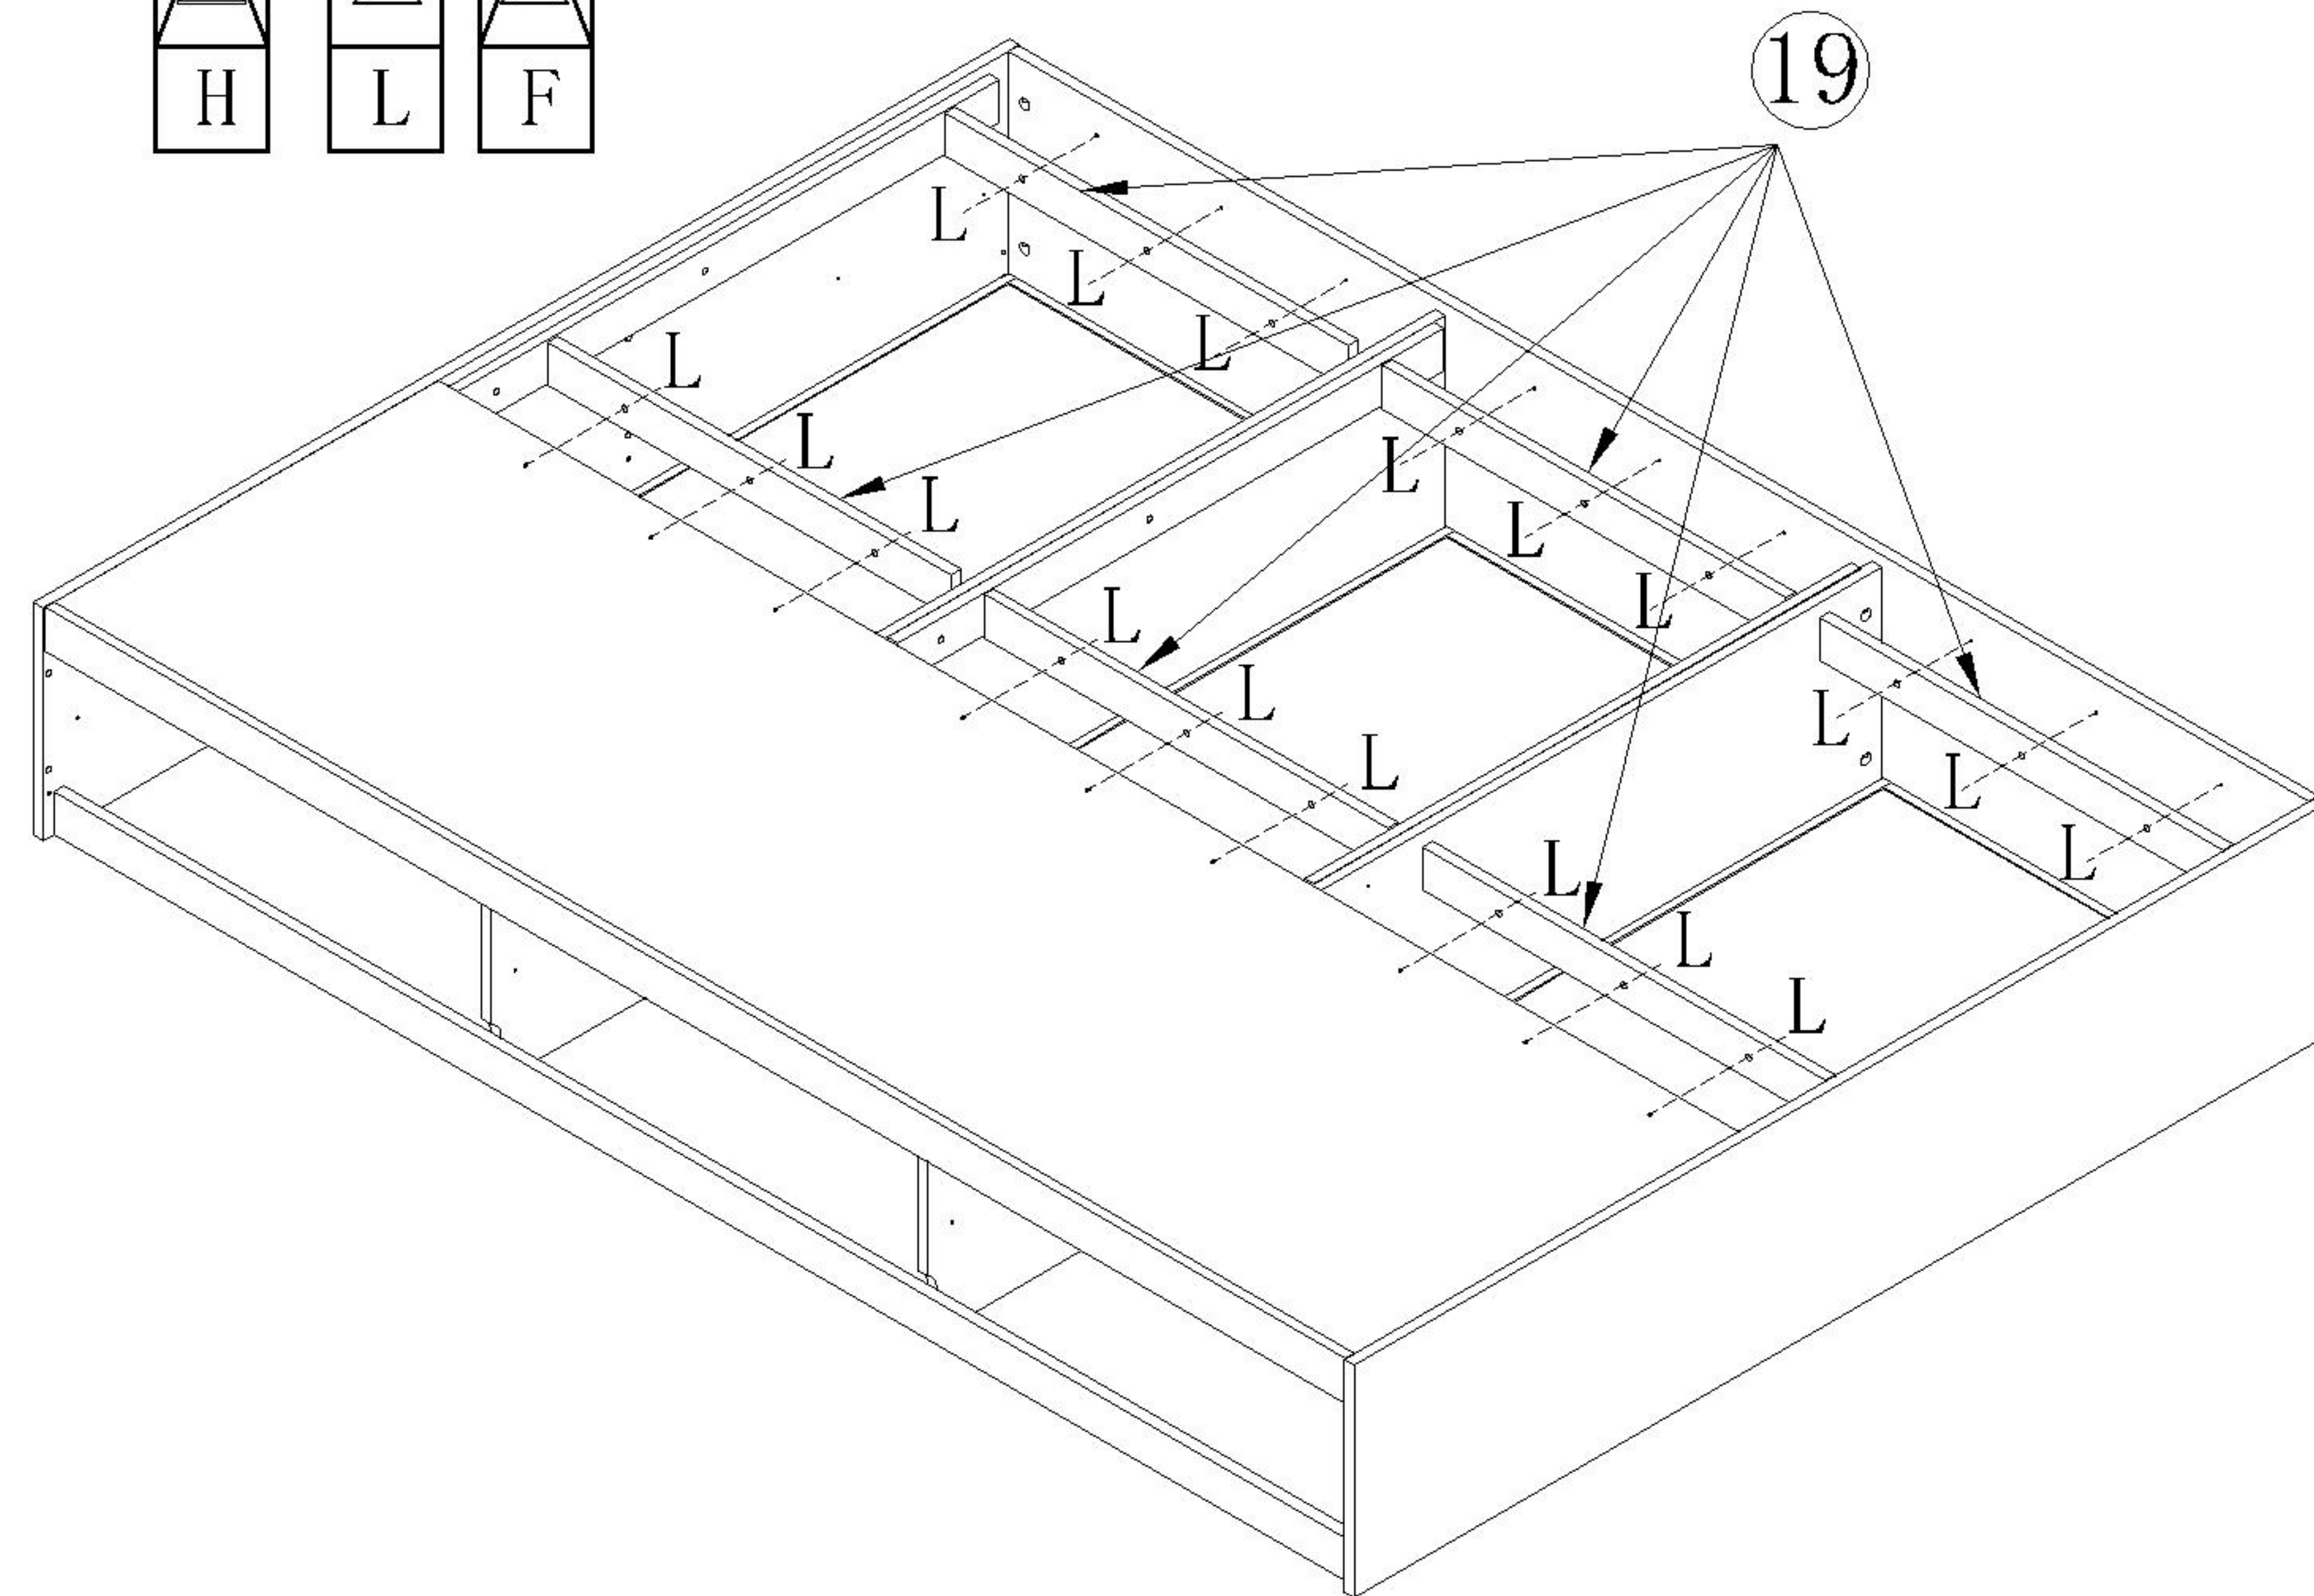

(F)*22



(K)*2



(P)*3

