

LINSY 林氏家居

安装示意图/Assembly Instruction

产品名称 Model NO.

PC218-A

产品规格 Specification

1500*2000

尺寸组合 Combined size

2210*1600*1010mm

配件表/Accessories list

部件表/Parts List

编号 NO.	名称Name	图示Icon	数量QTY	编号 NO.	名称Name	规格Specification	数量QTY	材质material
A	说明书(含安装图) Mounting Instruction (with drawing)		1	①	床头 The head of a bed	1600*240*1110	1	松木+胶合板+海绵+真皮+人造皮 Pine wood + plywood + sponge + Dermis+Artificial leather
B	M8*20斜边十字螺杆 M8*20 bevel cross bolt		36	②	床侧 Side of the bed	1985*45*225	2	胶合板+海绵+人造皮 plywood + sponge + Artificial leather
C	M8垫片 M8 pad		34	③	床尾 The end of the bed	1540*45*225	1	胶合板+海绵+人造皮 plywood + sponge + Artificial leather
D	角码-(52*52*76mm) 磨砂黑角码 Corner code -(52*52*76mm) Frosted black corner code		4	④	实木条形排骨架 Solid wood bed slat	1440*1960	1	松木 Pine wood
E	角码-(182*182*41mm) 磨砂黑角码 Corner code -(182*182*41mm) Frosted black corner code		4	STEP 1:				
F	SG-(直径72*40mm) 沙发通用小圆脚 SG-(diameter 72*40mm) sofa general small round feet		4					
G	M8*45全牙螺杆 threaded rod M8*45		2					
H	M8*70斜边十字螺杆 M8*70 bevel cross bolt		4					
I	170MM排骨架实木中脚-01 (含M8*15锤母) 170MMsolid wood midfoot for slat-01 (including M8*15 hammer head)		4					
J	(290*48*184mm) 枪黑色床垫防滑钩 (290*48*184mm) Gun black mattress non-slip hook		1					
K	排骨架加固条002A1(1975*48*38mm) reinforcement bar for side slat002A1 (1975*48*38mm)		2					
O	角码-(30*30*16mm) L型 Angle code -(30*30*16mm) L type		4					
P	M4*16自攻螺丝 M4*16 slef tapping screw		8					
Q	M4*40自攻螺丝 M4*40 slef tapping screw		4					
				制图 Draw	C20	Page NO. 页码 (3-1)		
				安装工具Tool		安装人数Installer		
实木条形排骨架配套配件 Solid wood strip frame supporting accessories				充电式手电钻 或者 十字螺丝刀 Cordless hand drill Phillips screwdriver				
M4*30自攻螺丝=17 M4*30 slef tapping screw=17								

如何区分床的左右方向?
How to distinguish the left and right
directions of the bed?

Right
右
床
侧

Left
左
床
侧

人躺在床上，分左右方向
Lie on the bed, facing left and right
(图示仅供分辨方向用)

图1: 脚安装示意图
Figure 1: Foot
installation diagram

图2: 角码安装示意图
Figure 2: Schematic diagram of corner code installation

Step ①
床头/床尾
Head/end of
bed

先把角码锁在床头/床尾上
First, lock the corner code
on the head/end of the bed

Step ②
床头/床尾
Head/end of
bed

再把角码锁在床侧上
Then lock the corner code to
the side of the bed

图3: 床垫防滑钩安装示意图
Figure 3: Installation diagram
of mattress anti-skid hook

图4: 床尾脚安装示意图
Figure 4: Bed foot installation diagram


Steps①
床侧
Side of
the bed

床尾
end of
bed


Steps②
床侧
Side of
the bed

床尾
end of
bed


STEP 2:

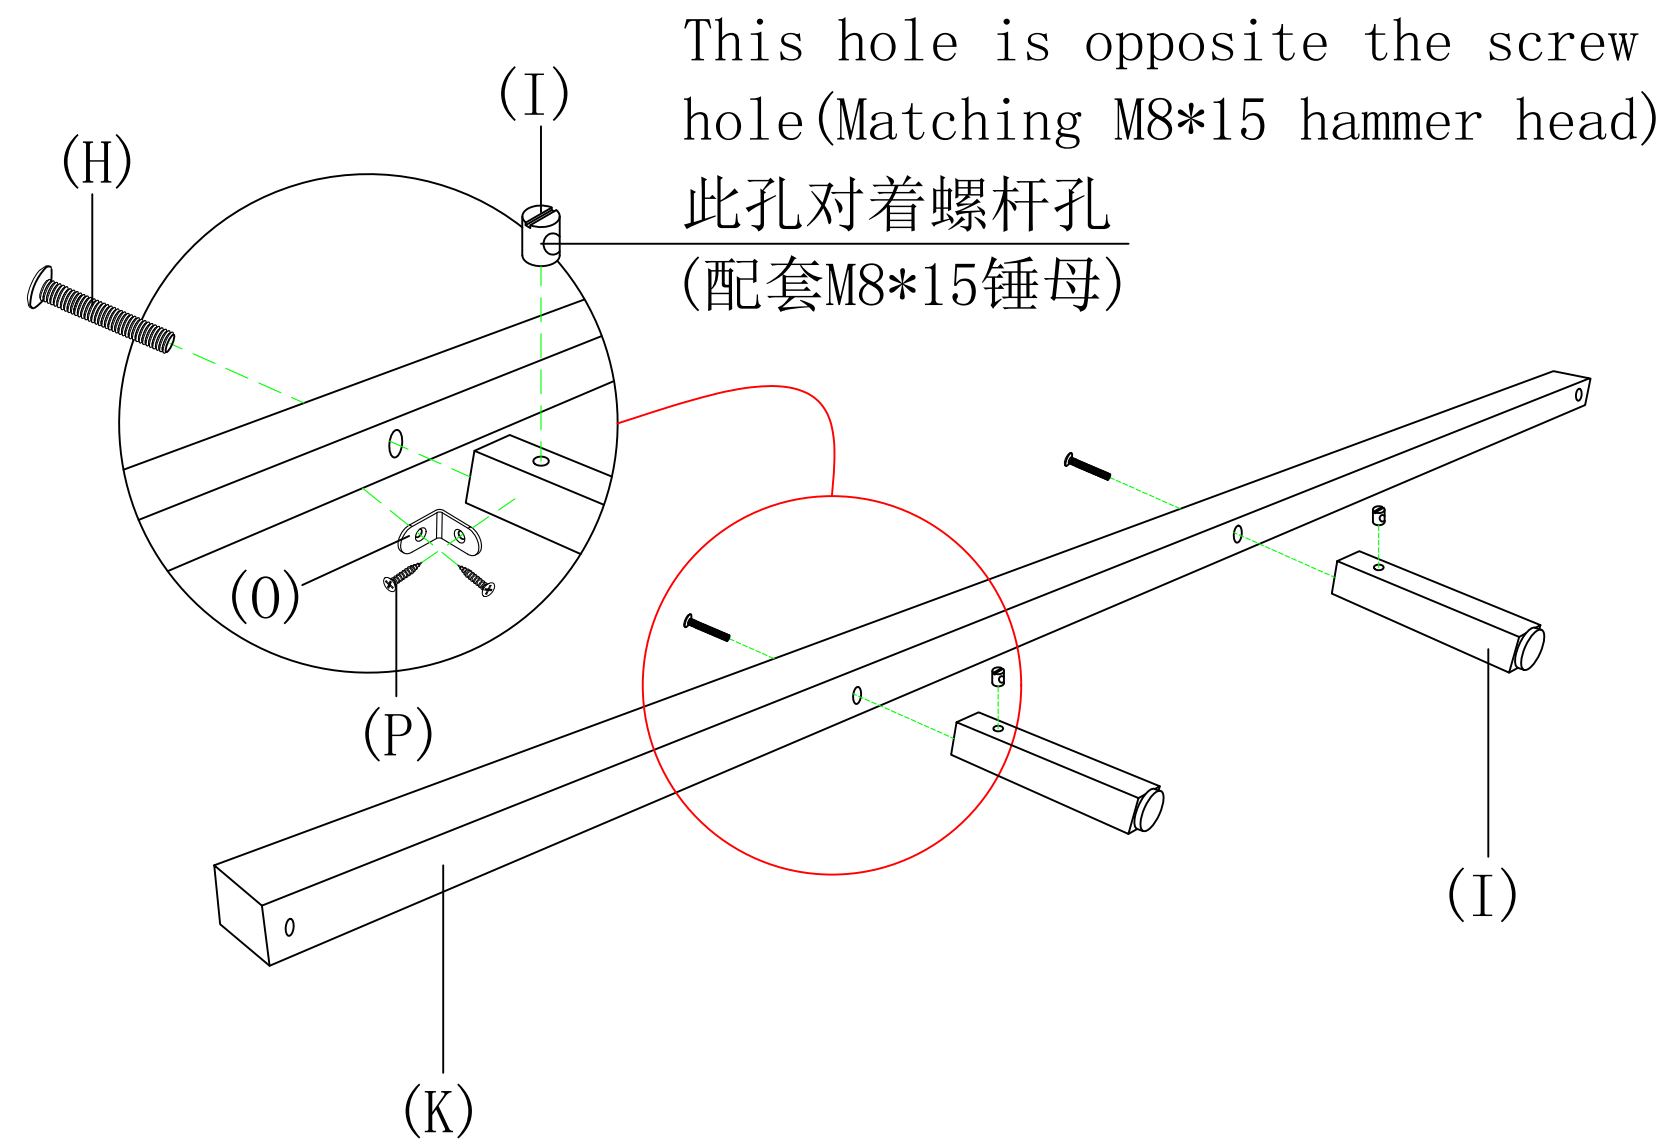


STEP 3:

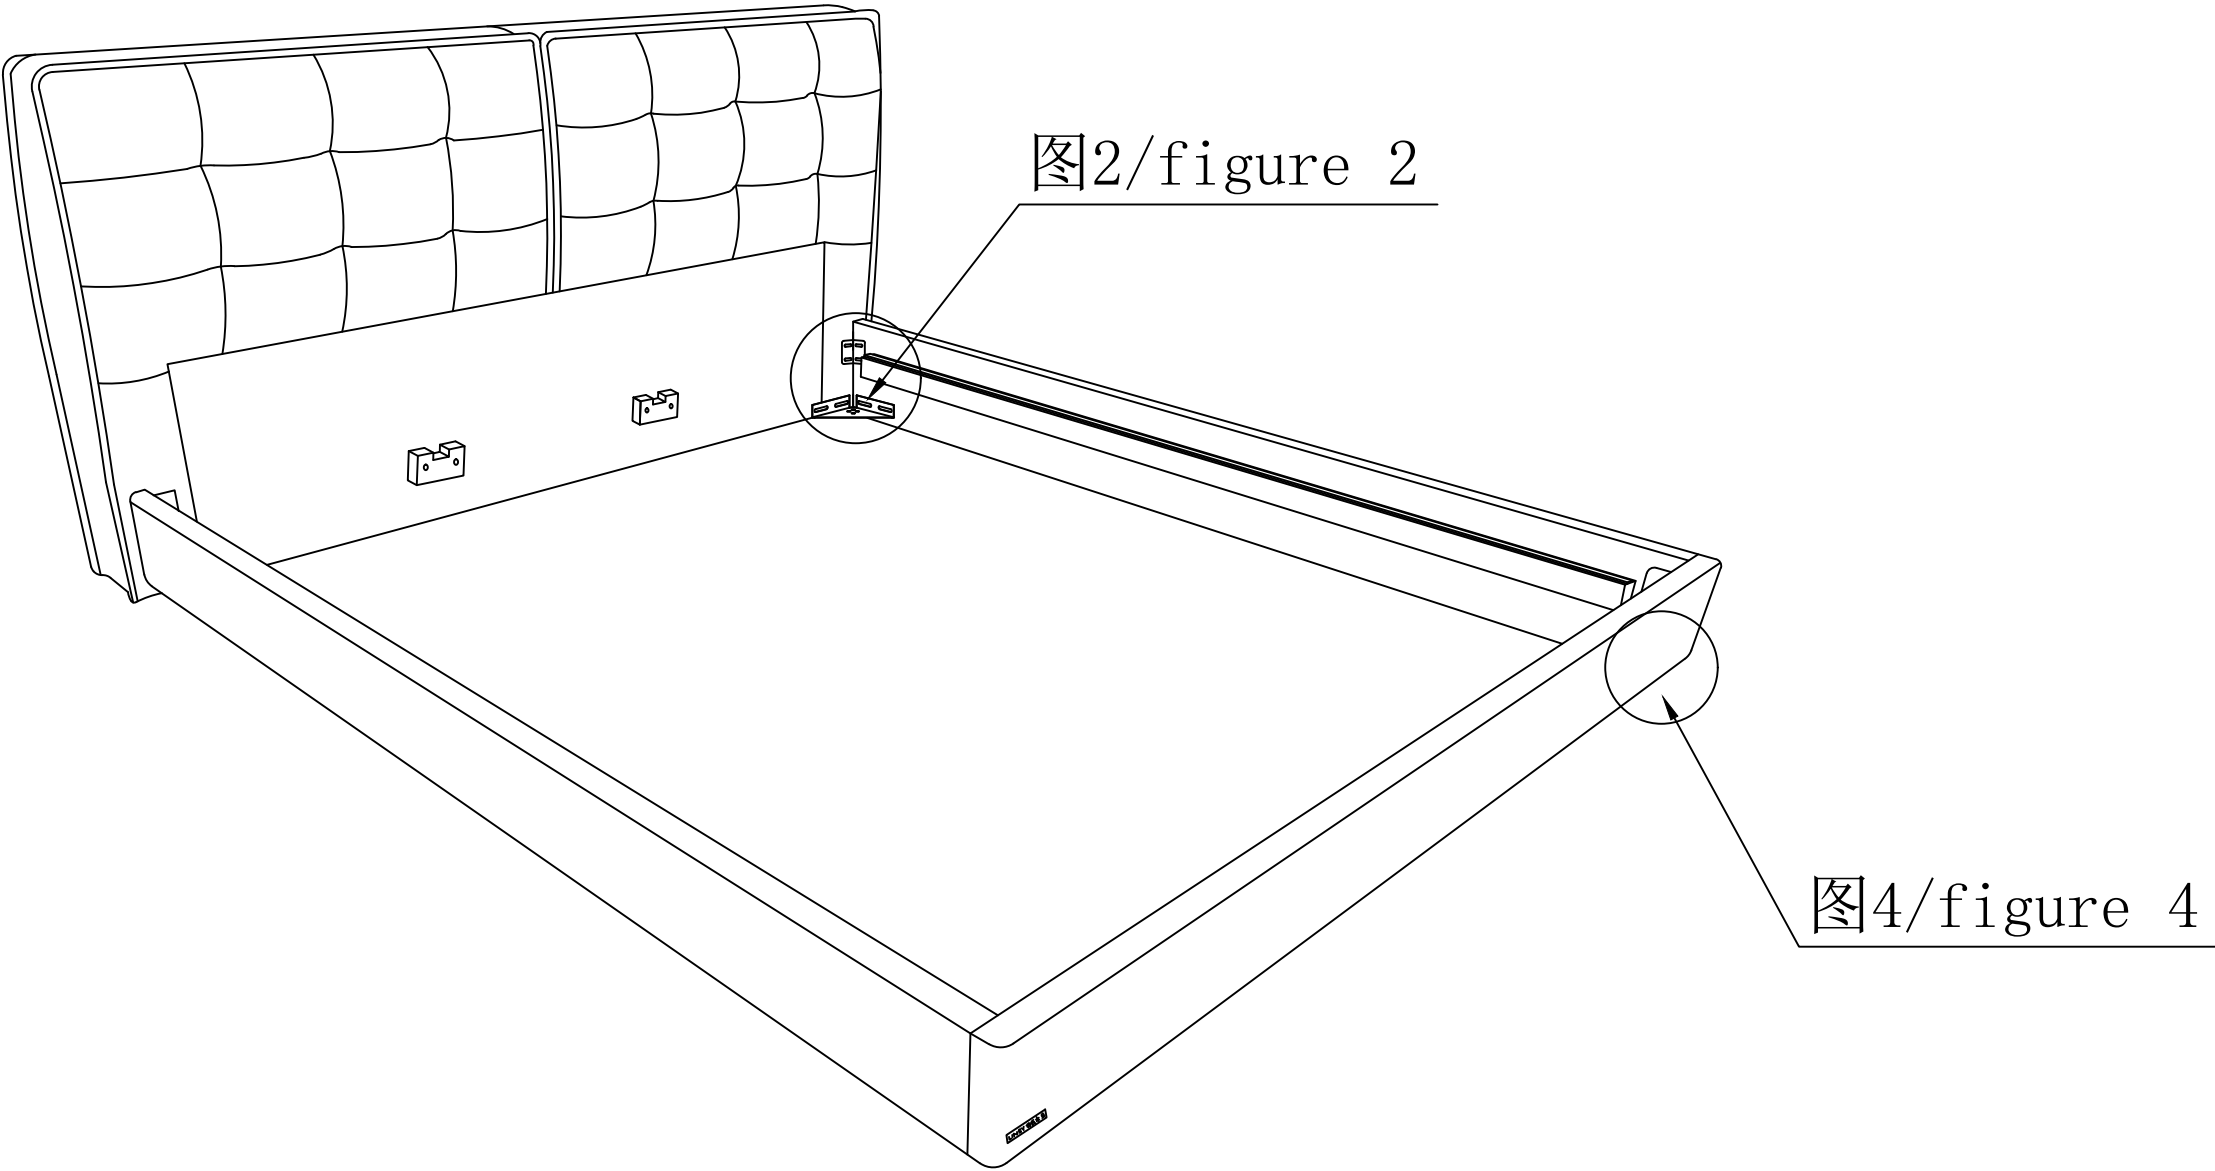

STEP 4:

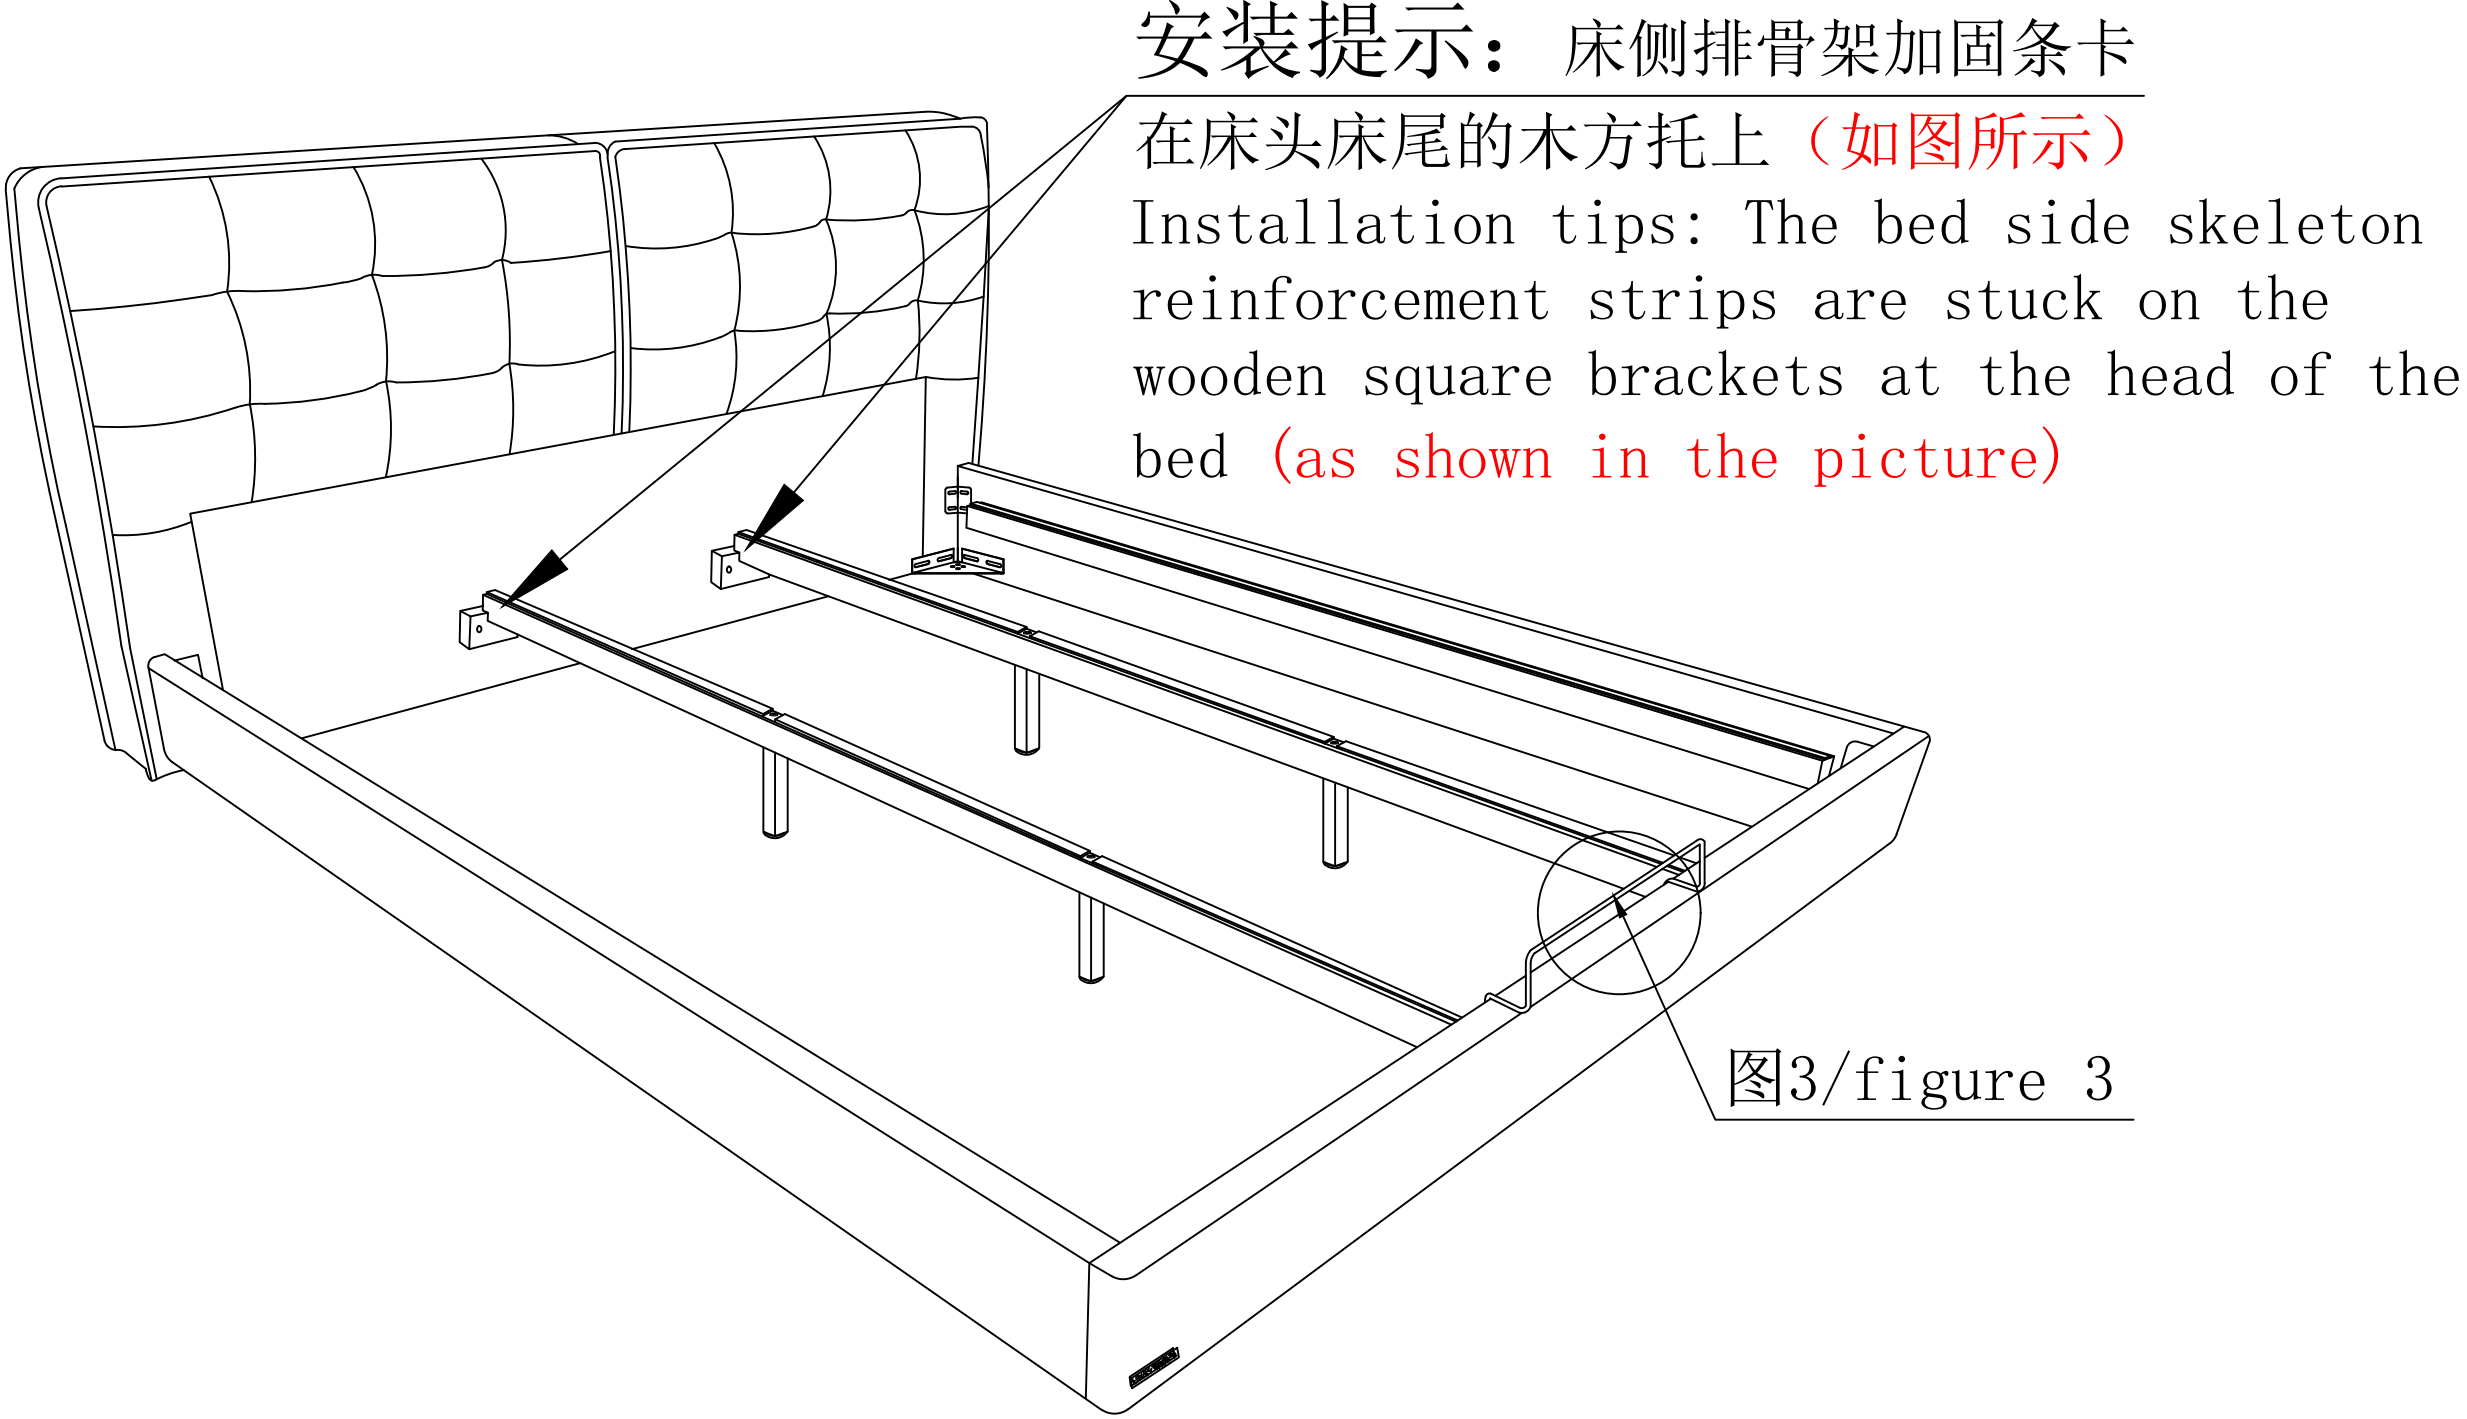

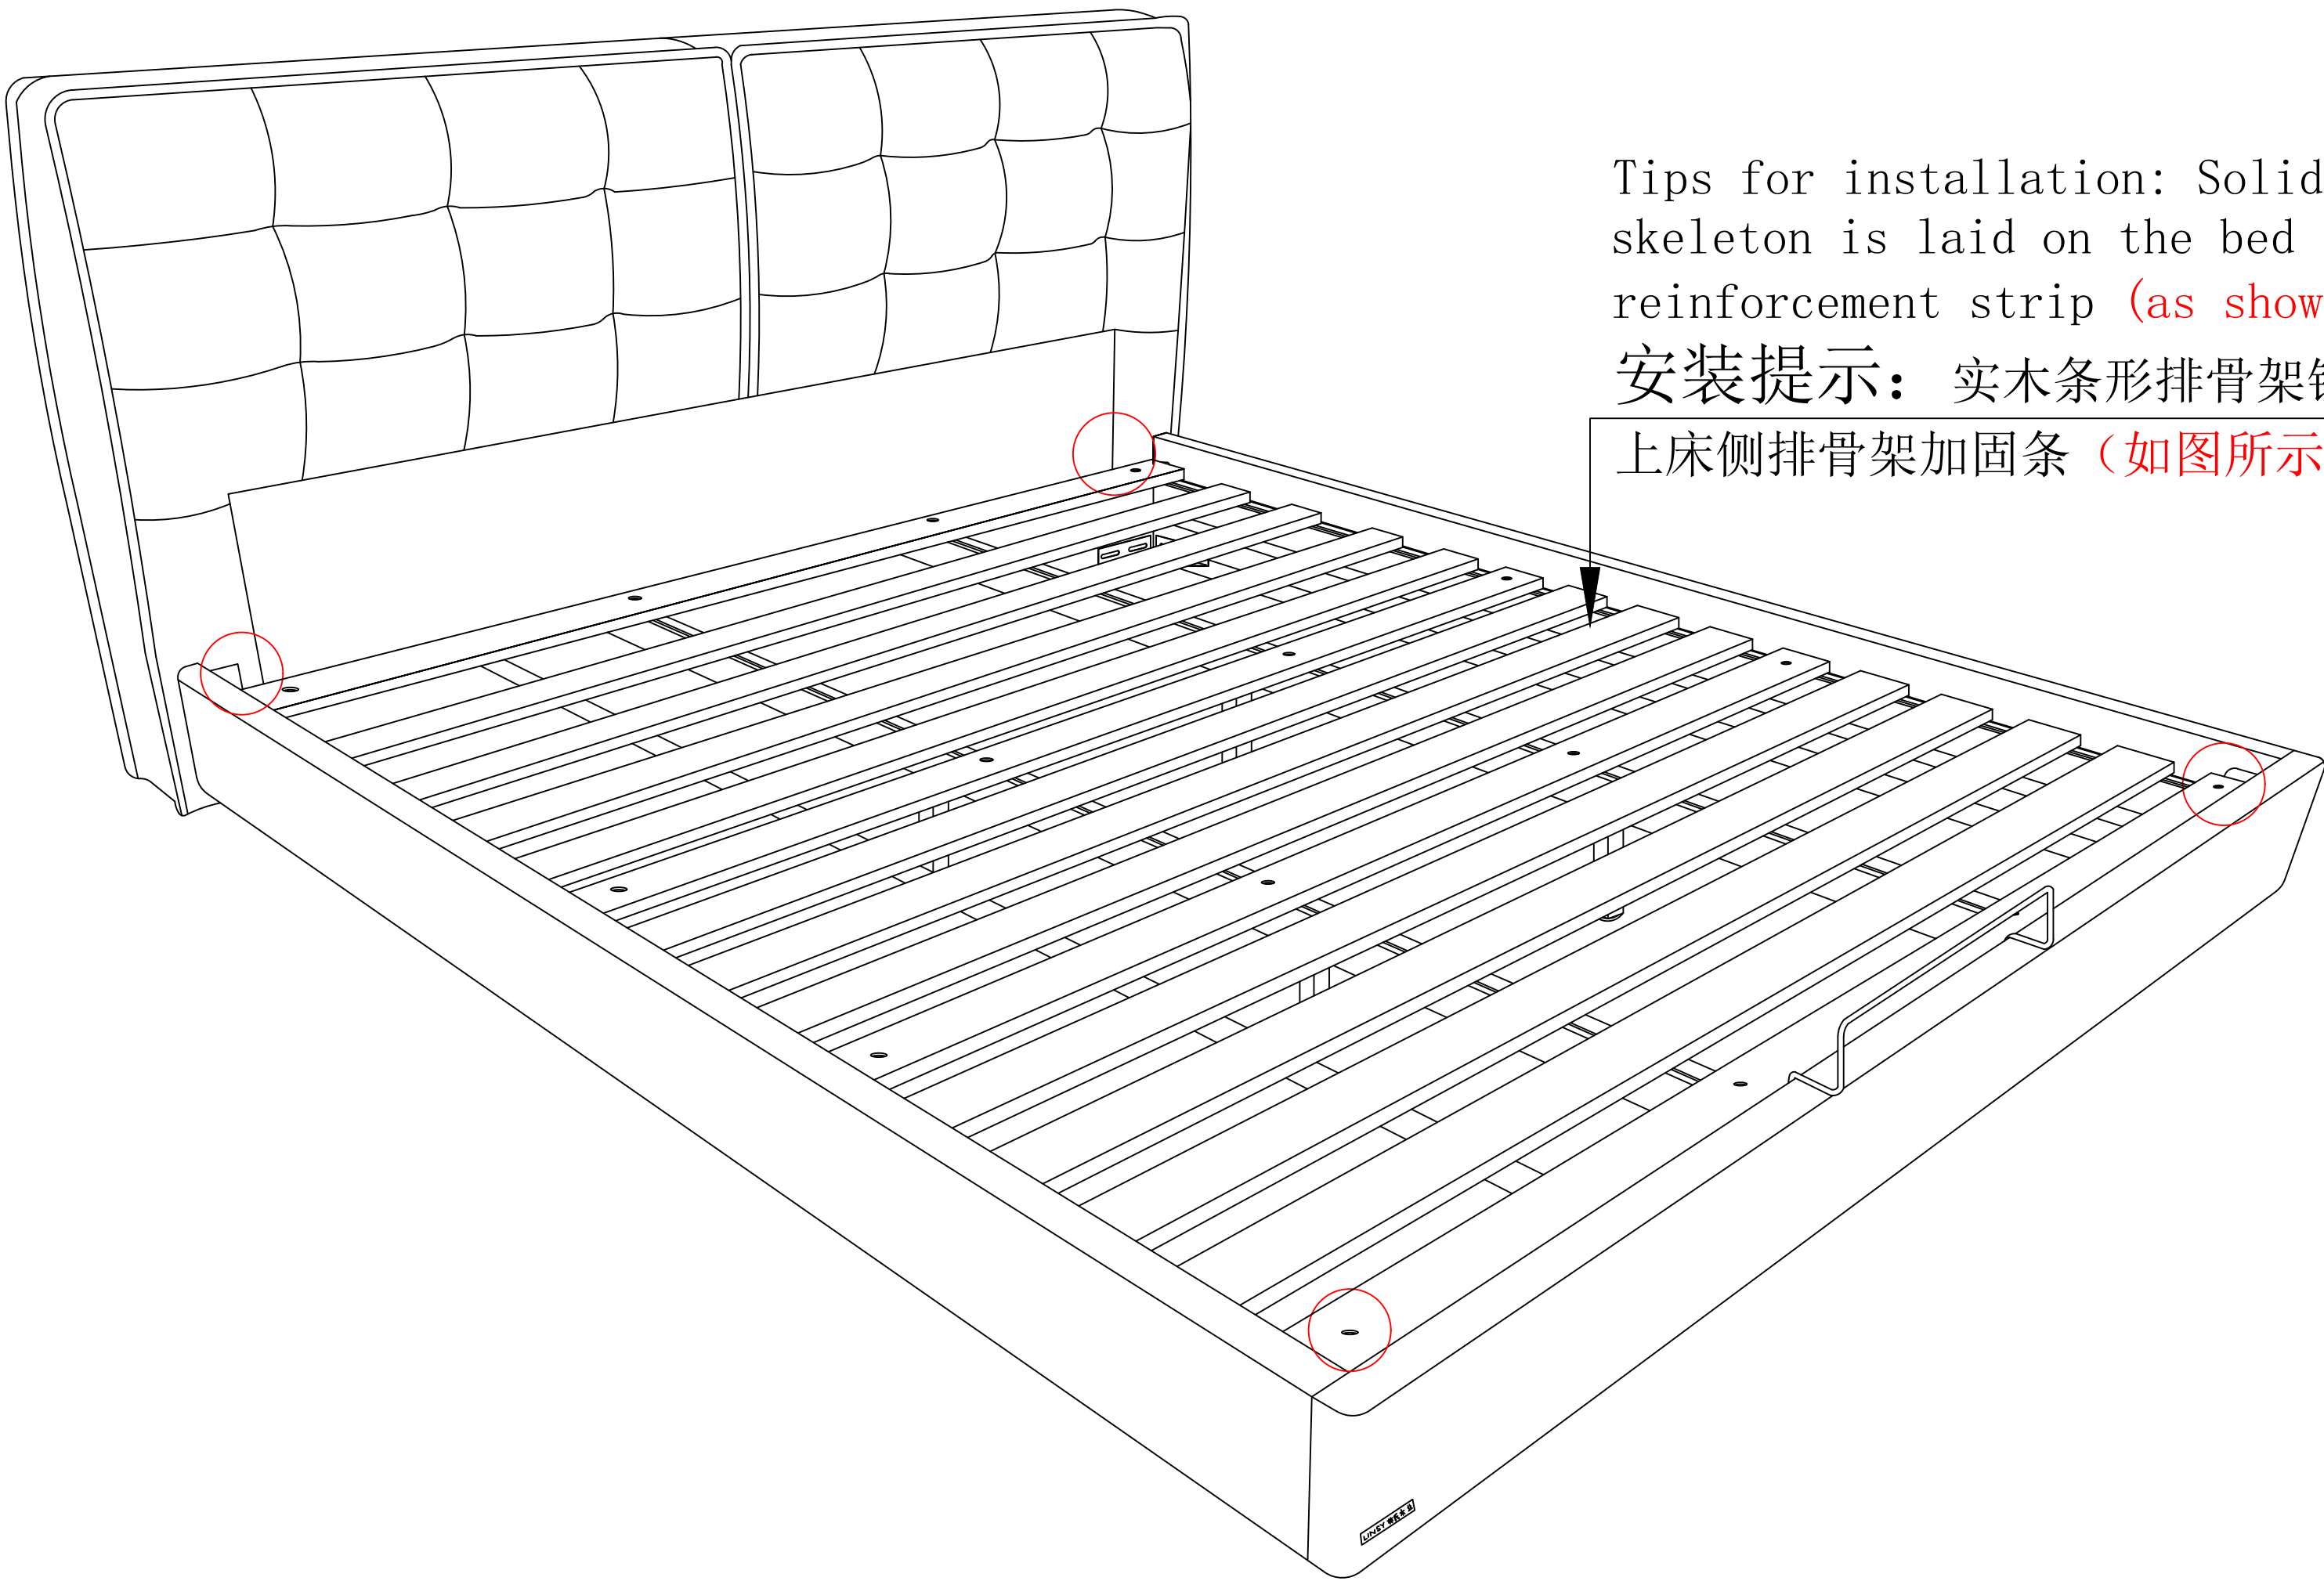

Tips for installation: Solid wood strip skeleton is laid on the bed side skeleton reinforcement strip (as shown in the figure)
安装提示：实木条形排骨架铺上床侧排骨架加固条（如图所示）

注：

- 1、用M4*30自攻螺丝*12按孔位固定实木条形排骨架。
- 2、实木条形排骨架四角无需用M4*30自攻螺丝固定。
- 3、自攻螺丝固定实木条形排骨架步骤可选装可不装。

Note:

- 1. Use M4*30 self-tapping screws *12 to fix the solid wood strip row frame according to the hole position.
- 2, solid wood strip row frame four corners without M4*30 self tapping screws fixed.
- 3, self-tapping screws fixed solid wood strip row skeleton steps optional installation.