


安装示意图/Assembly Instruction

产品名称 Model NO.	LS405N1-A
产品规格 Specification	鞋柜 Shoe cabinet
尺寸组合 Combined size	1200*360*990mm



配件表/Accessories list

编号 NO.	名称Name	图示Icon	数量QTY	编号 NO.	名称Name	规格 Specification	数量 QTY	材质material
A	M8*70内六角螺栓 M8*70 Hexagon socket bolt		8	①	柜体框架 Cabinet frame	1200*360*876	1	实木 Solid wood
B	M8*10弹垫 shim-(M8*10mm) spring		8	②	门 Door	772*383*20	3	实木 Solid wood
C	M8平垫 shim-M6 colored zinc		8	③	活动层板1 Movable laminate 1	766*300*20	4	实木 Solid wood
D	5mm六角扳手 spanner-(5mm) hex		1	④	活动层板2 Movable laminate 2	366*300*20	1	实木 Solid wood
E	拉手 Handle		3	⑤	腿 legs	180*50*50	4	实木 Solid wood
F	拉手丝4*25 Handle wire 4*25		3					
G	防倒五金一套 A set of anti-fall hardware		2					

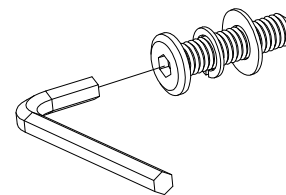

内六角螺丝垫片安装顺序
Installation sequence of
hexagon socket screw gasket


STEP 1

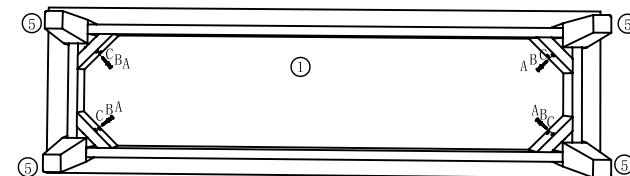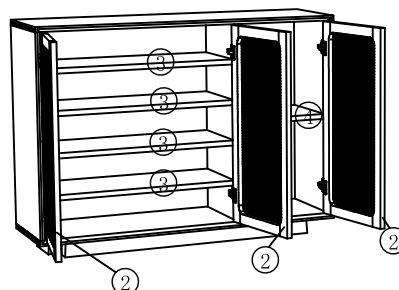

△: 先将部件3和部件4取出, 再将柜体防倒, 用五金ABC将部件1和部件5连接固定, 安装完成后, 将柜子扶正, 再将部件3和部件4安装到柜体内;


First take out part 3 and 4, then put down the cabinet , connect part 1 and 5 with hardware ABC and fix them. After the installation is complete, straight the cabinet, and then install part 3 and 4 into the cabinet.;

STEP 2

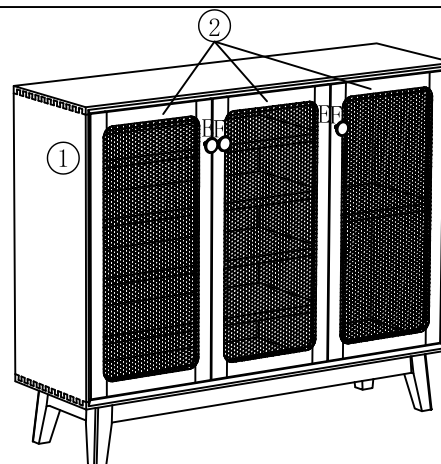


△: 将五金EF安装到部件2的相应位置.

Install the hardware EF to the corresponding position of Part 2.

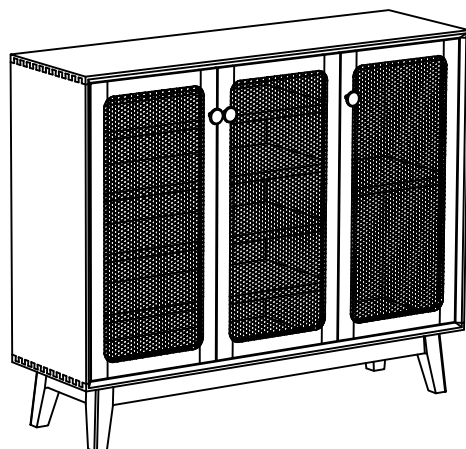

LS405N1-A


防倒器安装方法

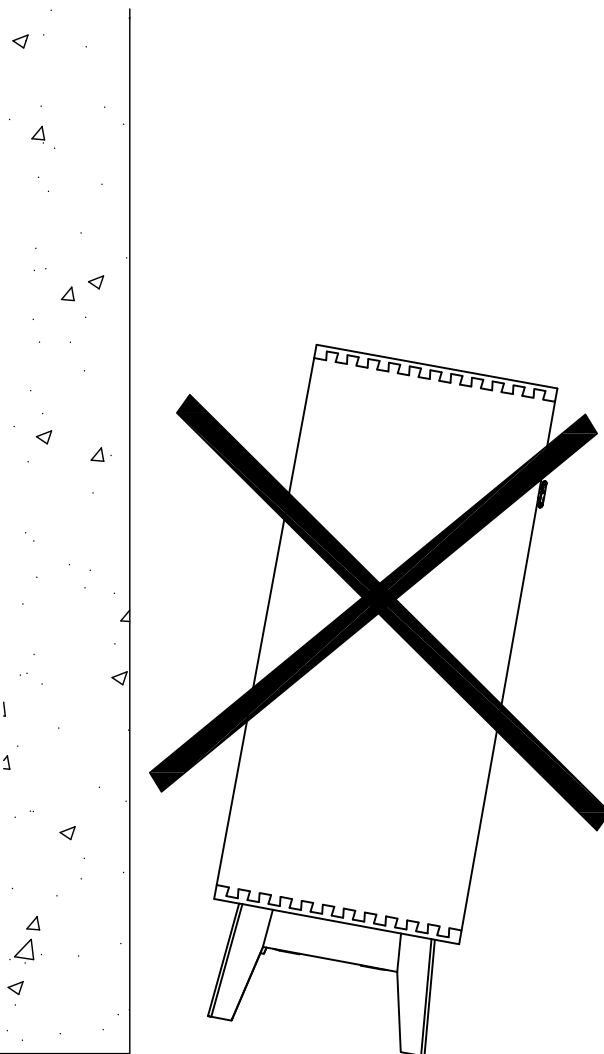

Anti-fall hardware
(G)*2

Anti-fall hardware

(G) Zoom

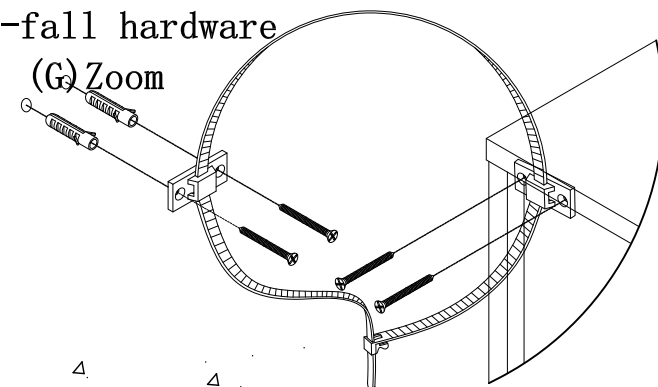

Wall

Anti-fall hardware (G)

