


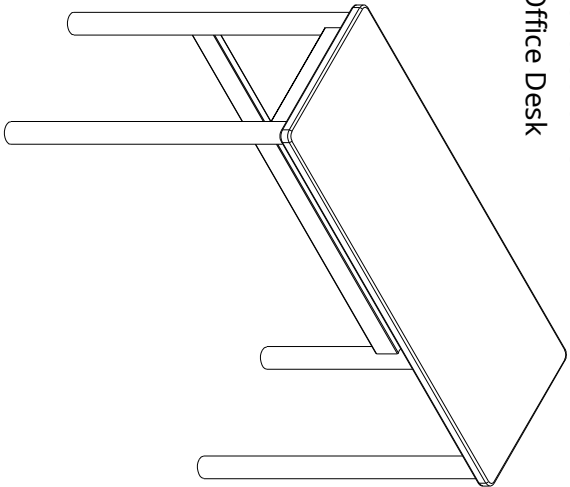
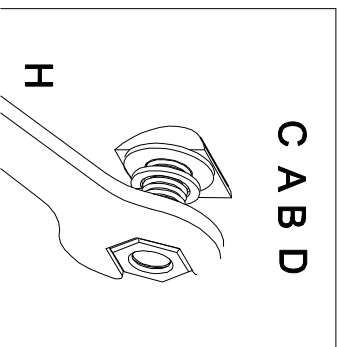
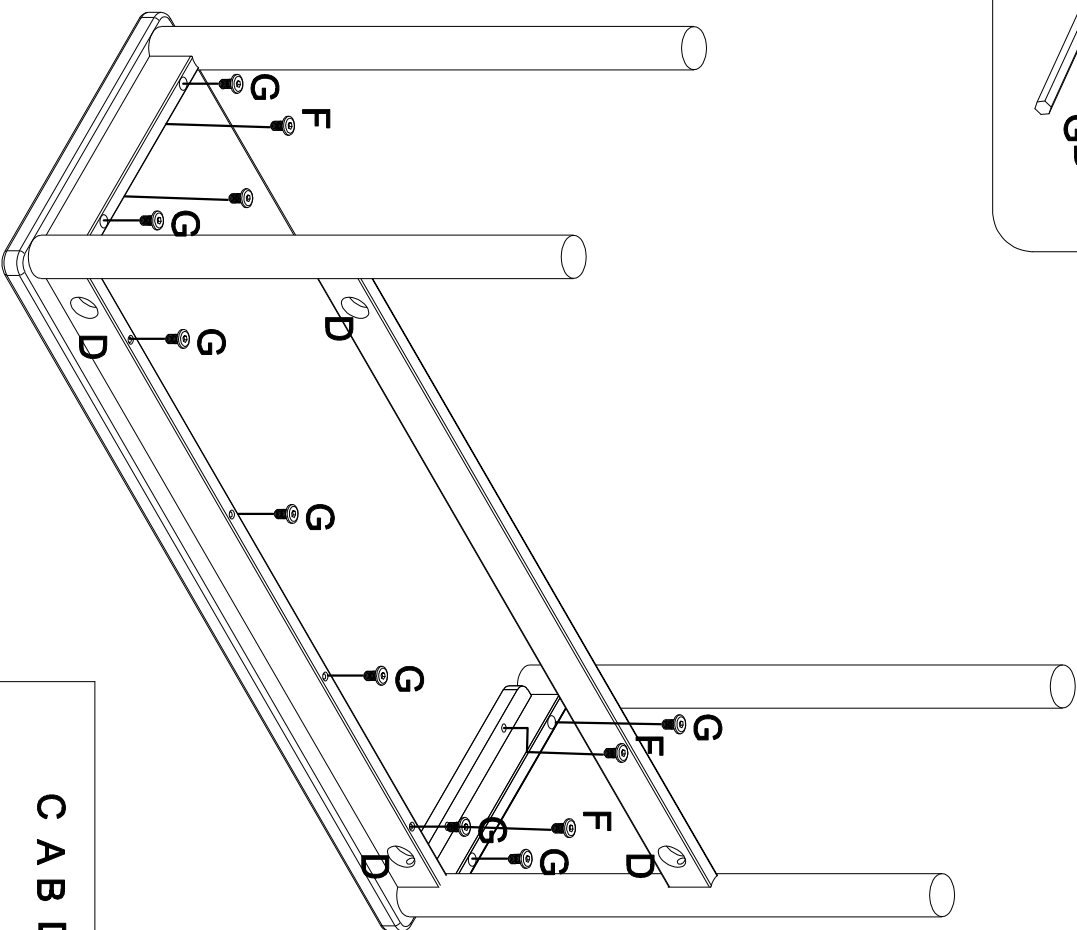


Assembly Instructions
Solidwood Dolce Office Desk

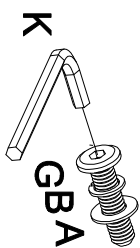

Ax16	Bx16	Cx4	Dx4	Ex4	Fx4	Gx8	Hx1	Kx1	Lx4

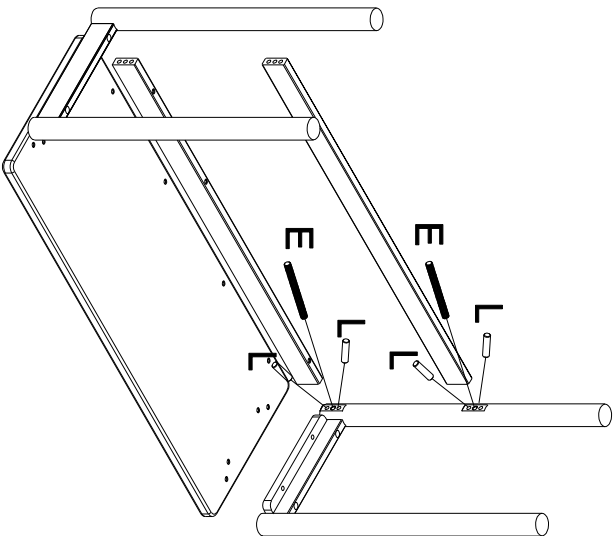

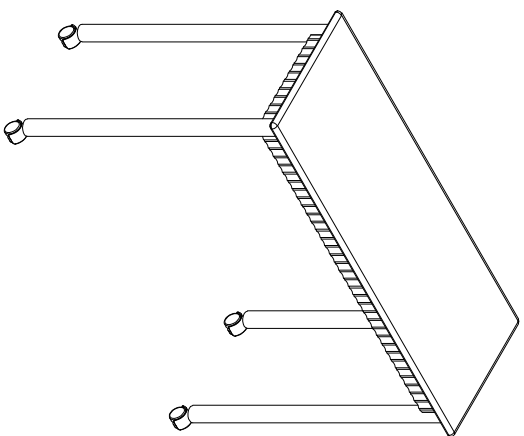

			
A×8	B×8	G×8	K×1

