


Assembly Instructions

Solidwood Kano Stool

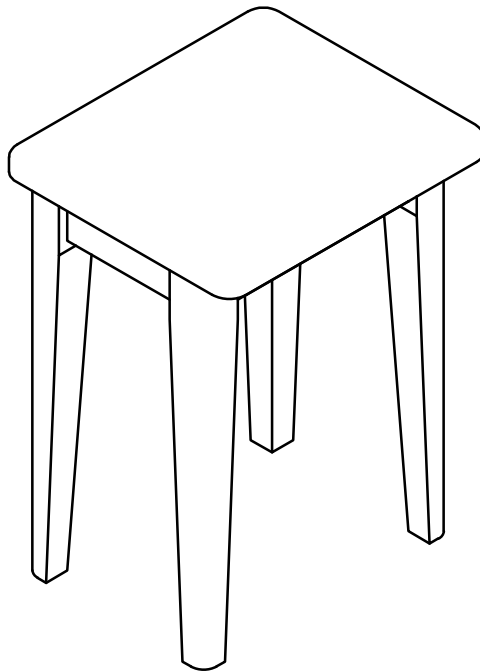

A=8



B=8



C=8



D=1

1. Hardware Setup: For each connection point, insert A, B, and C as shown in the diagrams.
2. Tightening: Use D to securely tighten all connections. Repeat this for all 8 points.

