



Assembly Instructions

Solidwood Seattle Bookcase

Assembly Diagram:

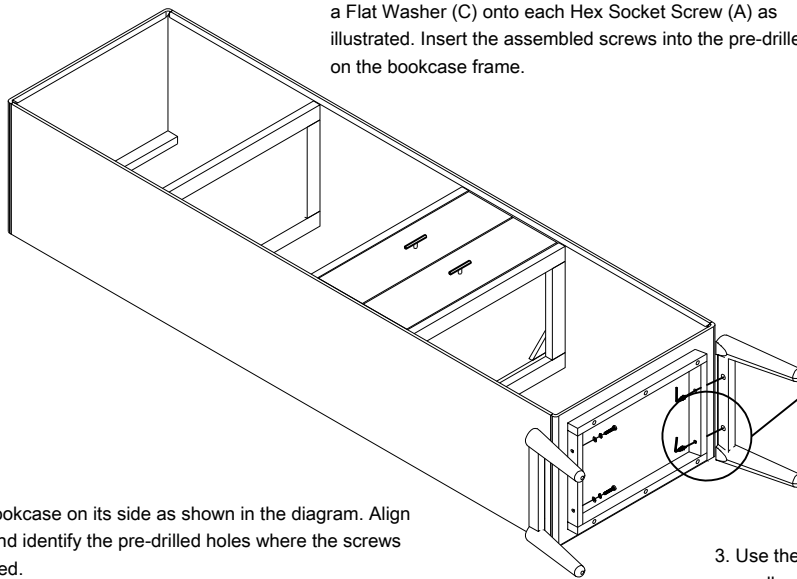

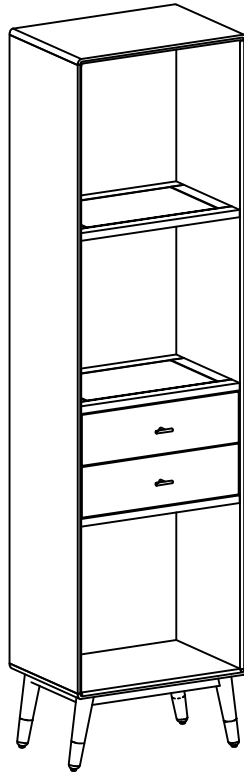



2. Assemble each screw set by placing a Spring Washer (B) and a Flat Washer (C) onto each Hex Socket Screw (A) as illustrated. Insert the assembled screws into the pre-drilled holes on the bookcase frame.

1. Lay the bookcase on its side as shown in the diagram. Align the panels and identify the pre-drilled holes where the screws will be inserted.

3. Use the Hex Key (D) to tighten each screw securely. Make sure all screws are fully tightened, ensuring that the frame is securely fastened.

Hardware List:

			
Hex Socket Screw=4	Spring Washer=4	Flat Washer=4	Hex Key=1