
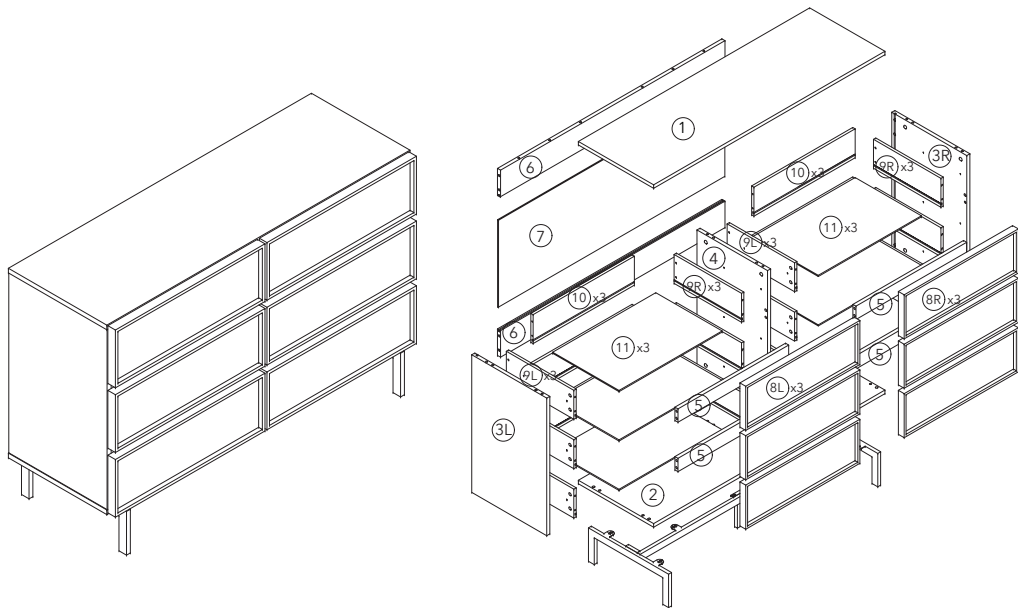


Assembly Instruction



NO.	SIZE	QTY
1	1200x390x16	1
2	1200x390x16	1
3	618x389x16	2
4	618x366x16	1
5	574x60x16	4
6	1164x119x16	2
7	1174x390x5	1
8	592x198x30	6
9	350x130x12	12
10	525x130x12	6
11	535x344x5	6

		
A M6x40mm 32pcs	B Ø15x11.5 32pcs	C Ø8x30 28pcs
		
D Ø12x10mm 24set	E M4x14 72pcs	F M4x30 24pcs
		
O 4# 1pcs	R M6x25 6pcs	K 12" 6set
		
P / 2set	G M6x12mm 8pcs	Z Ø20 32pcs

STEP 1:

	
O 4# 1pcs	R M6x25 6pcs


STEP 2:



G M6x12mm 8pcs

STEP 3:


A M6x40mm 8pcs


STEP 4:



K 12" 6set

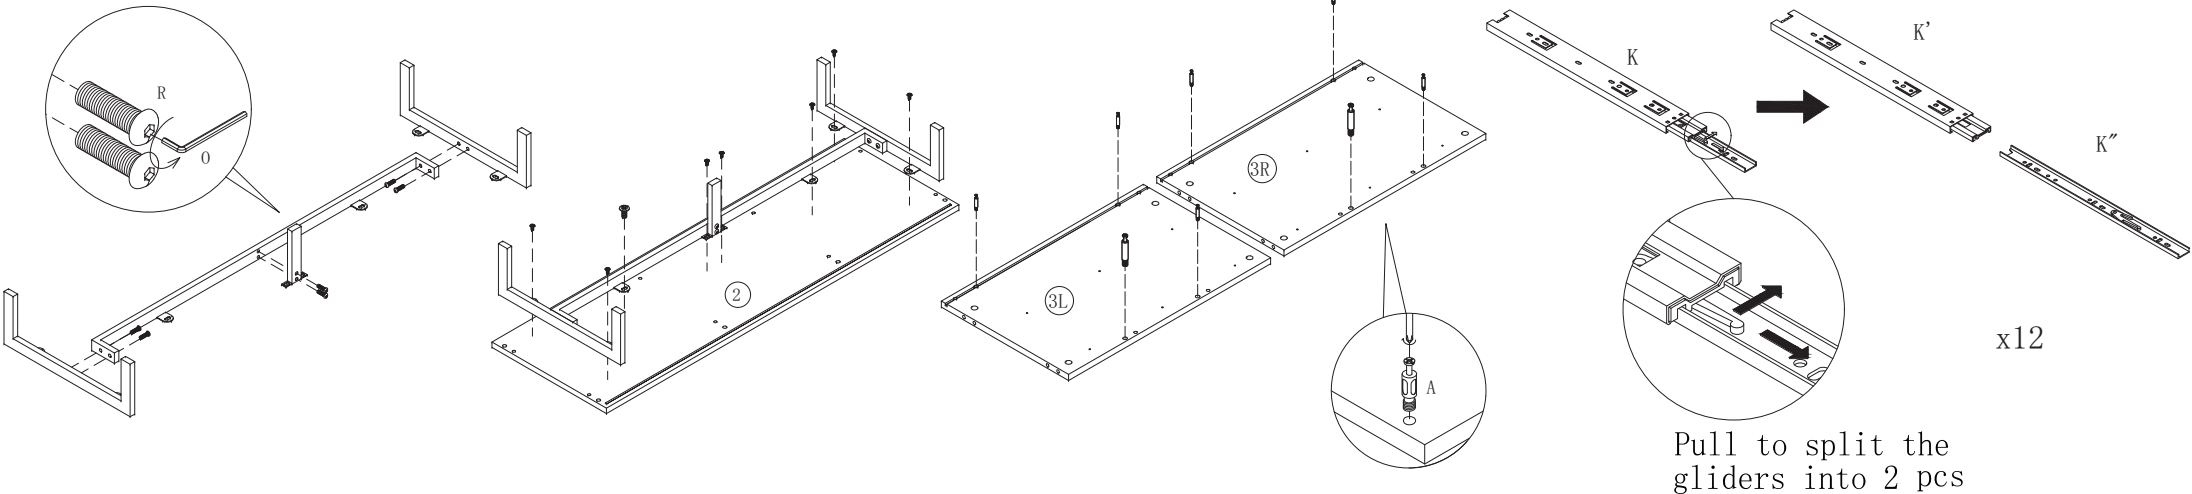


Pull to split the gliders into 2 pcs


STEP 5:

	
E	M4x14 18pcs
K	12" 3set

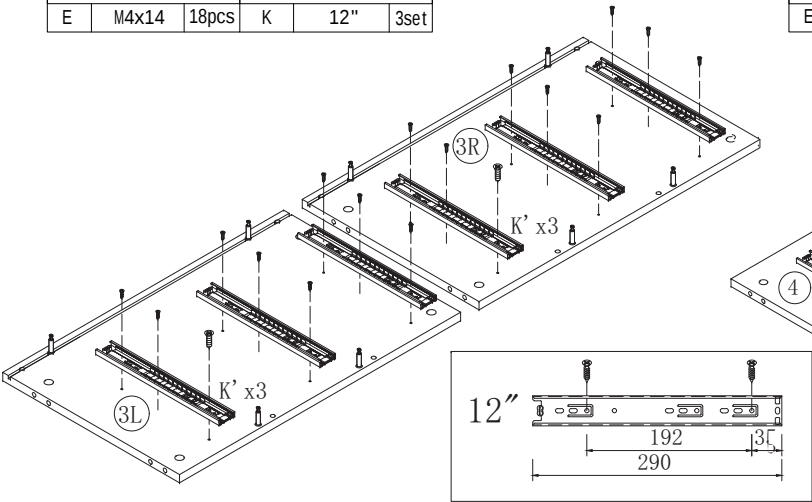


STEP 6:

		
E	M4x14 18pcs	A
	M6x40mm 4pcs	K
		12" 3set

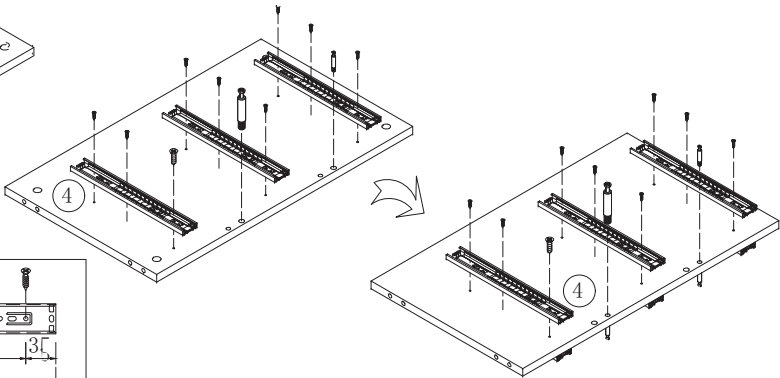


STEP 7:

	
B	Ø15x11.5 4pcs
C	Ø8x30 4pcs

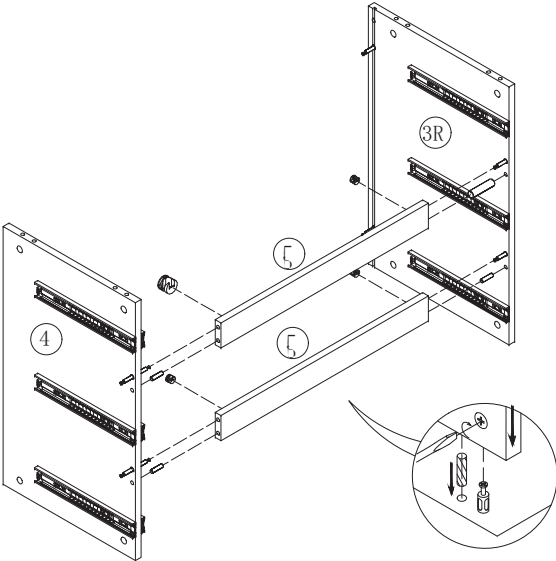


STEP 8:

	
B	Ø15x11.5 2pcs
C	Ø8x30 2pcs

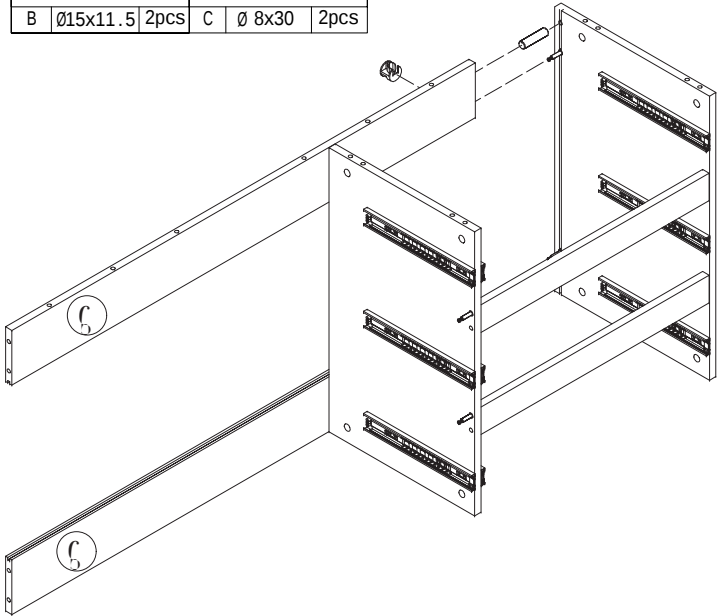


STEP 9:

	
B	Ø15x11.5 6pcs
C	Ø8x30 6pcs

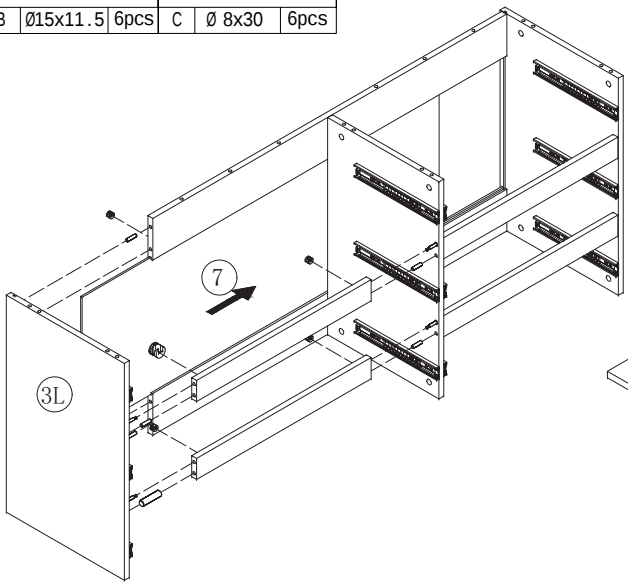


STEP 10:


A
M6x40mm 20pcs

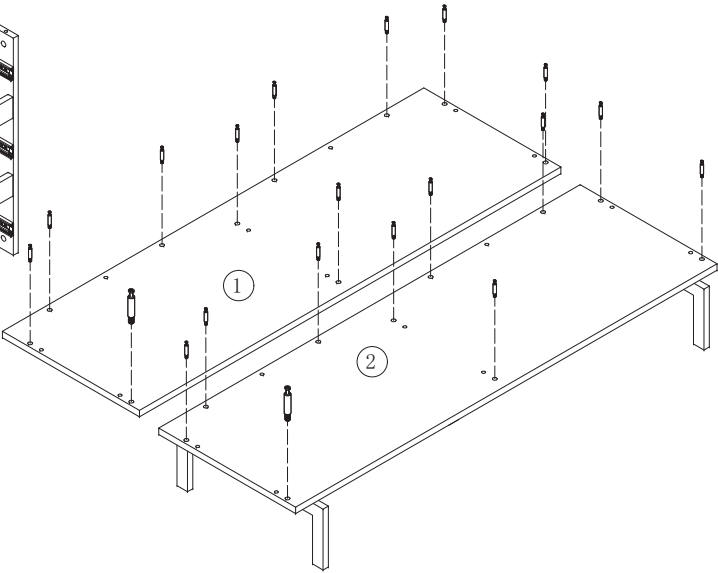


STEP 11:

					
B	Ø15x11.5	10pcs	C	Ø 8x30	8pcs

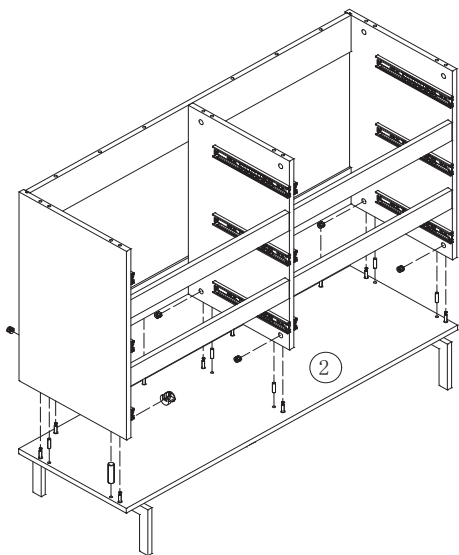



STEP 12:

					
B	Ø15x11.5	10pcs	C	Ø 8x30	8pcs


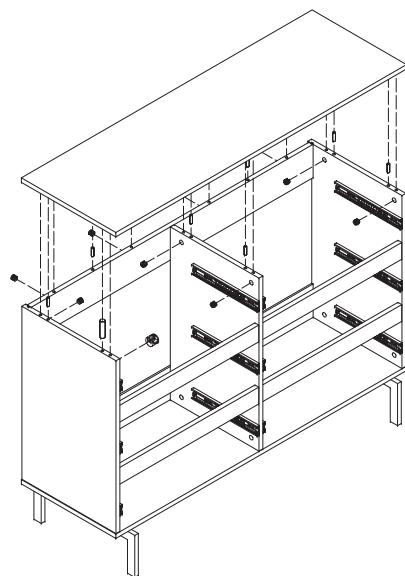


STEP 13:


					
D	Ø12x10mm	24set	E	M4x14	36pcs
					
K	12"	6set	F	M4x30	24pcs

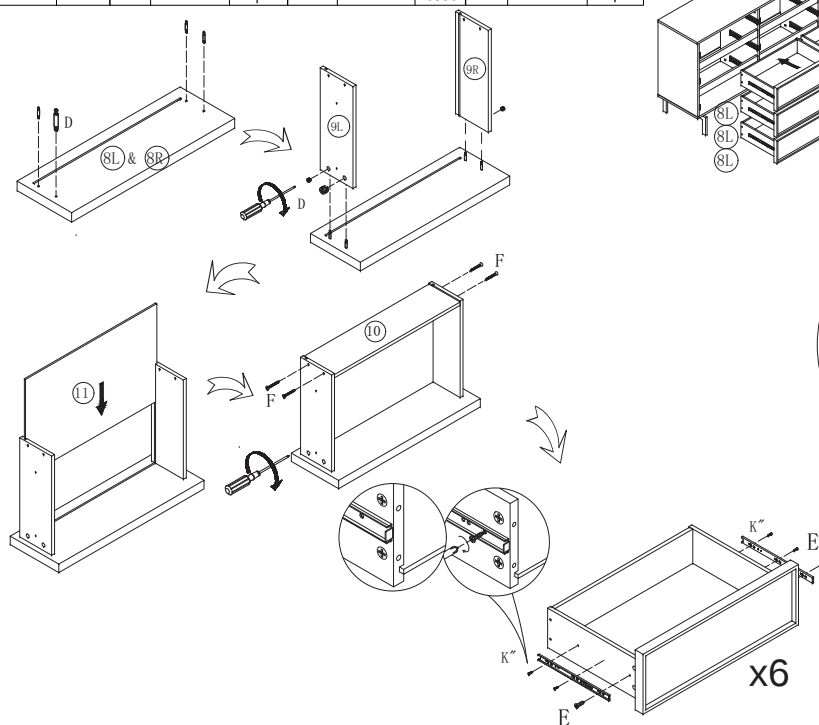

STEP 14:

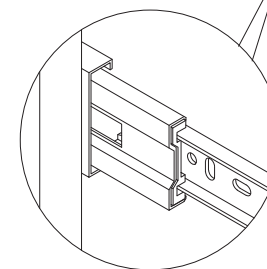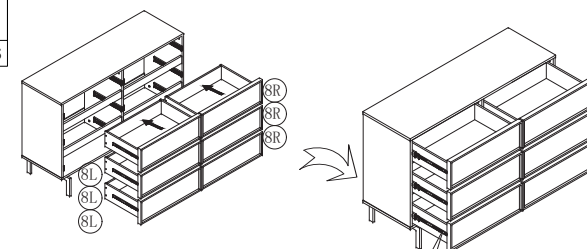



STEP 15:

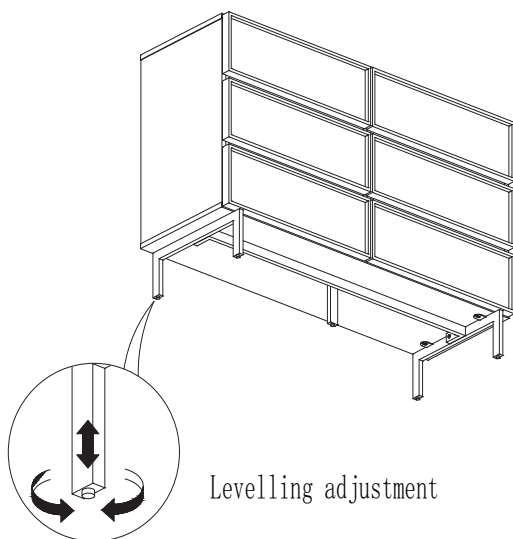

Levelling adjustment

STEP 16:

		
P	I	2set

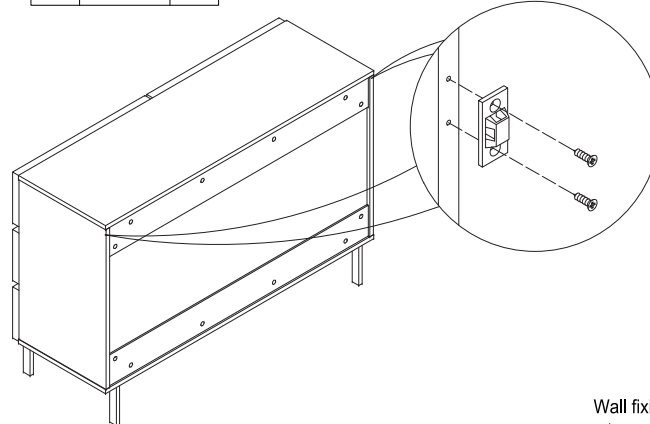

Wall fixing: You may need a different type of wall fixing. Please consult your furniture seller due to you may have a different type of wall.

