
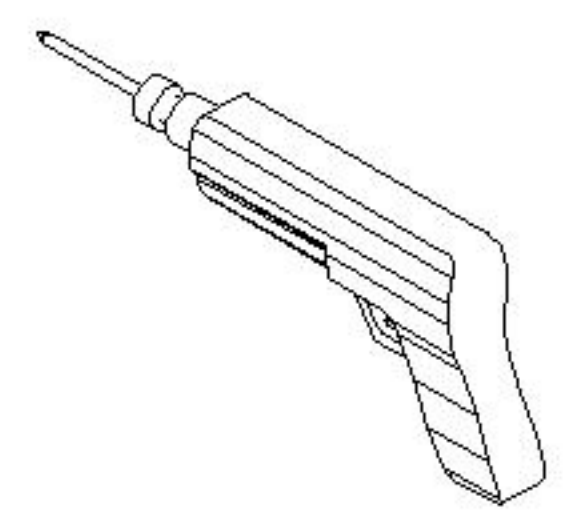
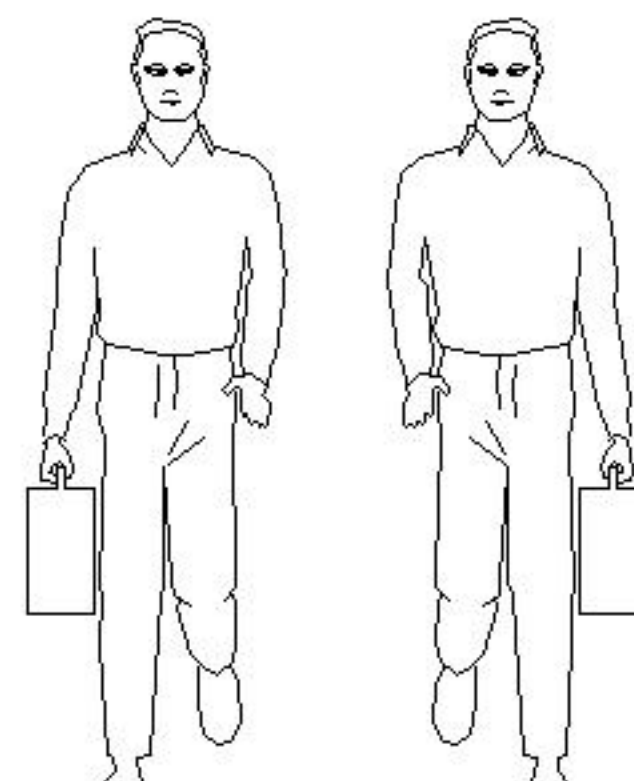
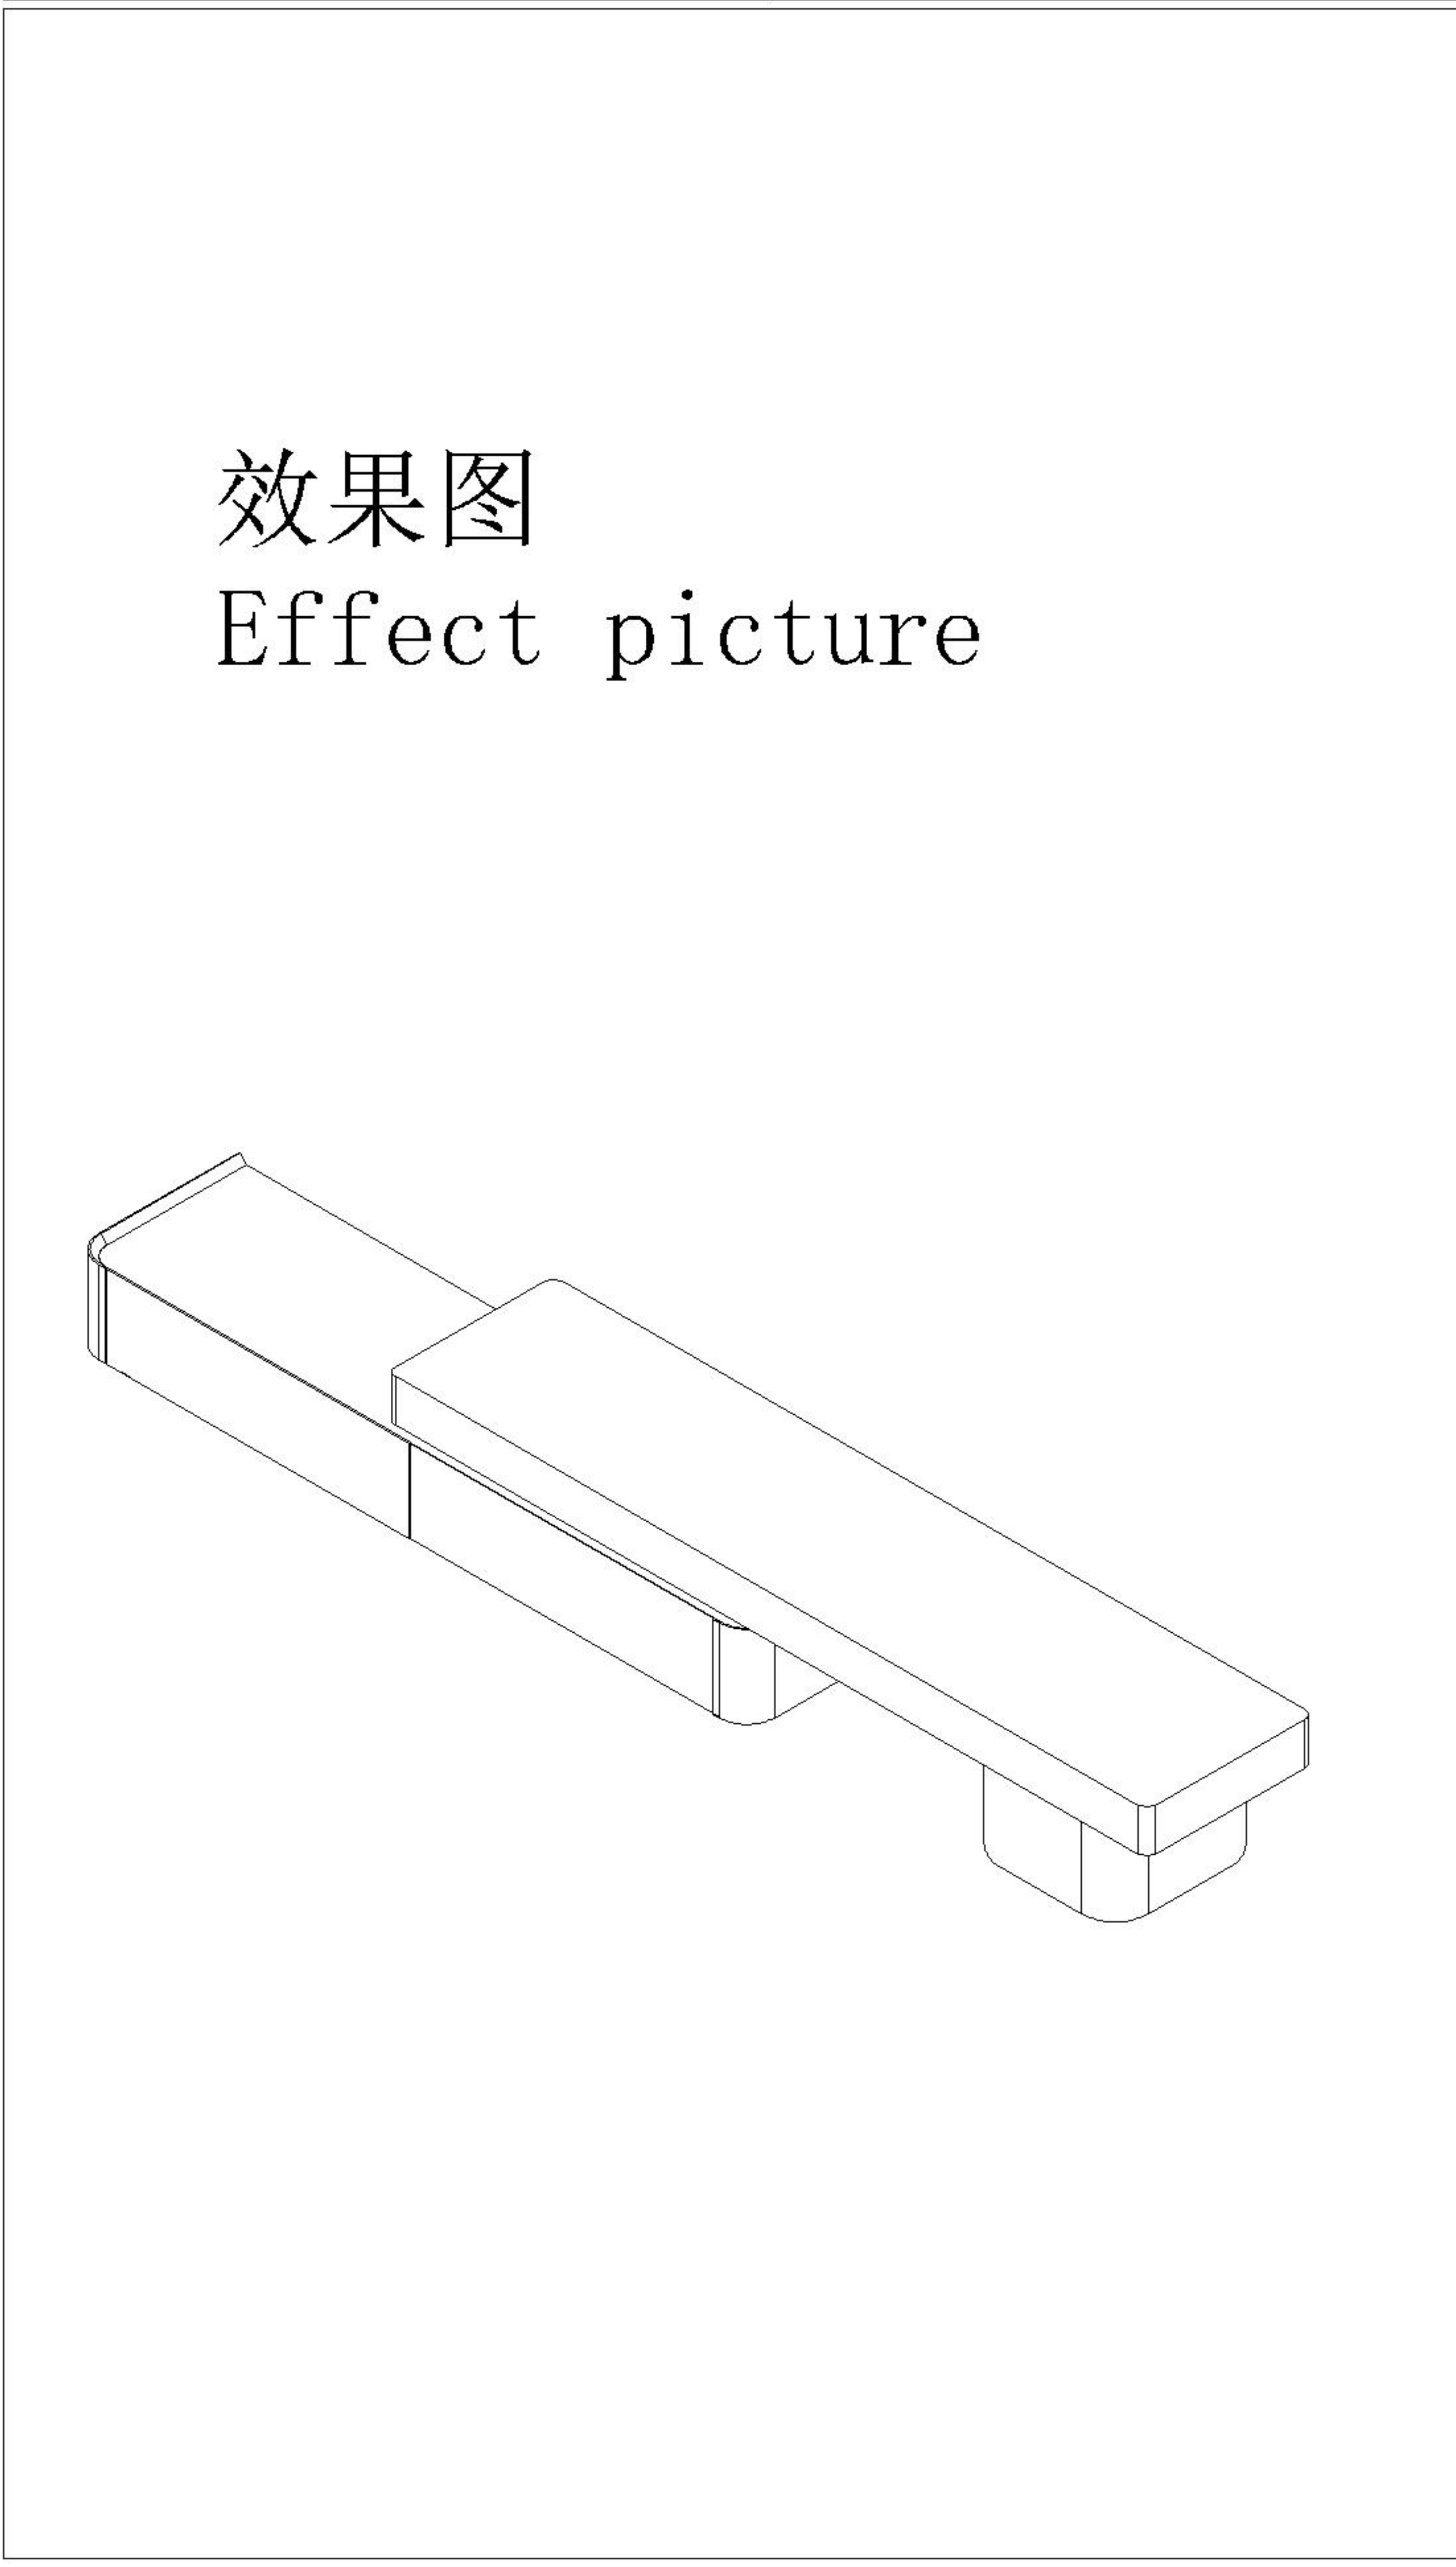
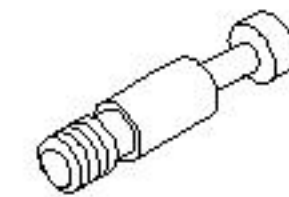
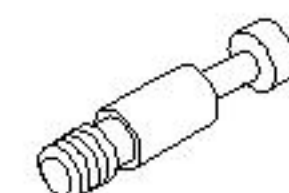
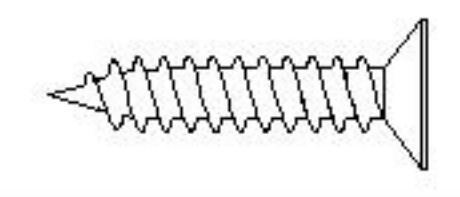
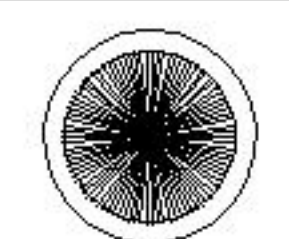
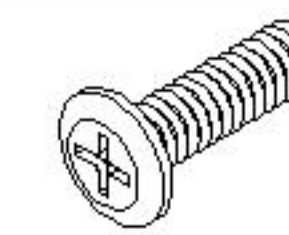
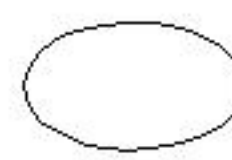
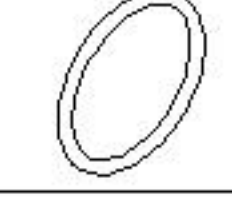


LINSY 林氏家居










安装示意图/Assembly Instruction	
产品名称/Model NO.	LS883M1-A地柜 /TV ark
产品规格/Specification	(1800-2000)*395*345
安装工具/Tool	安装人数/Installer
 手电钻 Hand electric drill	

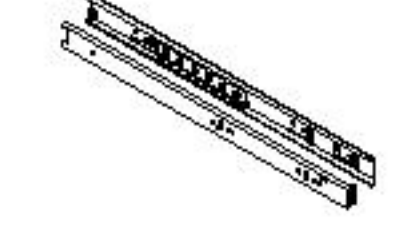

五金表/Hardware list			
编号 NO.	名称 Name	图片 Pictures	数量 QTY
A	大二合一锁饼 two-in-one large lock		36
B	大二合一螺杆 Big 2-in-1-screw		36
C	小二合一锁饼 small two-in-one lock		8
D	小二合一螺杆 small 2-in-1-screw		8
E	沉头纤维钉 M3.5*14 Countersunk head fiber nail (M3.5*14mm)		16
F	木梢Φ8*40 wood tenon-(diameter 8*40mm)		4
G	黑色透气孔盖组合式 Combination breathable hole cover		2
H	丝杆,斜边内六角平头 M6*35 Diagonal hexagonal flat head screw -(M6*25mm)		13
I	毛毡,灰色自粘25*2 Felt, gray self-adhesive-(25*2mm)		10
J	透明自粘硅胶垫 Φ10*1 Transparent adhesive silicone pad Φ10*1		5
K	扳手,六角L型M1 Wrench, hexagonal L-shaped M1		1
L	滑轨300*45*12 Concealed Slides 300*45*15		2

部件表/Parts List				
编号 NO.	部件名称 Name	规格 Specification	数量 QTY	材质 Material
1	左柜面板 Left cabinet panel	1800x395x100	1	三胺板 Melamine
2	左柜垫块 Left cabinet cushion block	200x290x34	1	三胺板 Melamine
3	面板 panel	1562x375x15	1	三胺板 Melamine
4	左旁板 Side panel (L)	395x195x80	1	三胺板 Melamine
5	右旁板 Side panel (R)	395x195x80	1	三胺板 Melamine
6	左抽面 Drawer panel (L)	716x195x18	1	三胺板 Melamine
7	右抽面 Drawer panel (R)	716x195x18	1	三胺板 Melamine
8	支撑脚 Support foot	Φ 50x28	5	橡胶木 Rubber wood
9	后立板 Rear upright plate	1439x149x15	1	三胺板 Melamine
10	底板 floor	1439x376x15	1	三胺板 Melamine
11	中立板 Neutral board	357x149x15	1	三胺板 Melamine
12	左抽帮 sideboard of the drawer (L)	300x118x15	2	松木 pine
13	右抽帮 sideboard of the drawer (R)	300x118x15	2	松木 pine
14	抽尾 Drawer Back panel	670x113x15	2	松木 pine
15	抽底 Drawer Bottom panel	677x288x5	2	三胺板 Melamine
16	抽底托条 Bottom drag strip	281x60x12	2	松木 pine
17	L型亚克力板 L-shaped acrylic board	340x340x244	1	塑料 plastics

LS883M1-A 安装方法/Installation method step 1 缺口在右 The gap is on the right step 2 step 3 step 4 二合一安装方法 2 in 1 Installation method ---- 阀门开关（下压为开） The valve switch (Press down to open) 副轨 Deputy slippery course 主轨 The slippery course 自攻丝 self tapping screw 自攻丝 self tapping screw 阀门开关 The valve switch 副轨 Deputy slippery course 导轨安装方法 Installation method of slide rails ---- 安装工具/Tool 手电钻 Hand electric drill 十字螺丝刀 Phillips screwdriver ----	STEP 1 1 ►用五金H将部件2、17安装在部件1上；均匀粘贴五金I Install components 2 and 17 onto component 1 using hardware H; Uniformly pasting hardware I	STEP2 2 副轨 L Auxiliary track ►用五金E将五金L的副轨安装在部件12/13上；再将 上图部件用五金A/B/C/D相互锁紧 Install the auxiliary rail of hardware L onto component 12/13 using hardware E; Then lock the components in the diagram with hardware A/B/C/D to each other
	STEP3 3 ►先将部件4与部件10用五金A/B/F连接在一起，然后部件9/11与部件10用五金A/B连接，再将部件5用五金A/B/F连接在一起，最后用五金E将五金L的主轨锁紧在部件4/5/上，再在部件10上卡上五金G First, connect component 4 and component 10 together with hardware A/B/F, then connect component 9/11 and component 10 with hardware A/B, then connect component 5 together with hardware A/B/F, finally lock the main rail of hardware L onto component 4/5/ with hardware E, and then clip hardware G onto component 10	STEP4 4 ►用五金A/B将部件3安装在STEP3组装好的柜体上 Install component 3 onto the cabinet assembled by STEP3 using hardware A/B

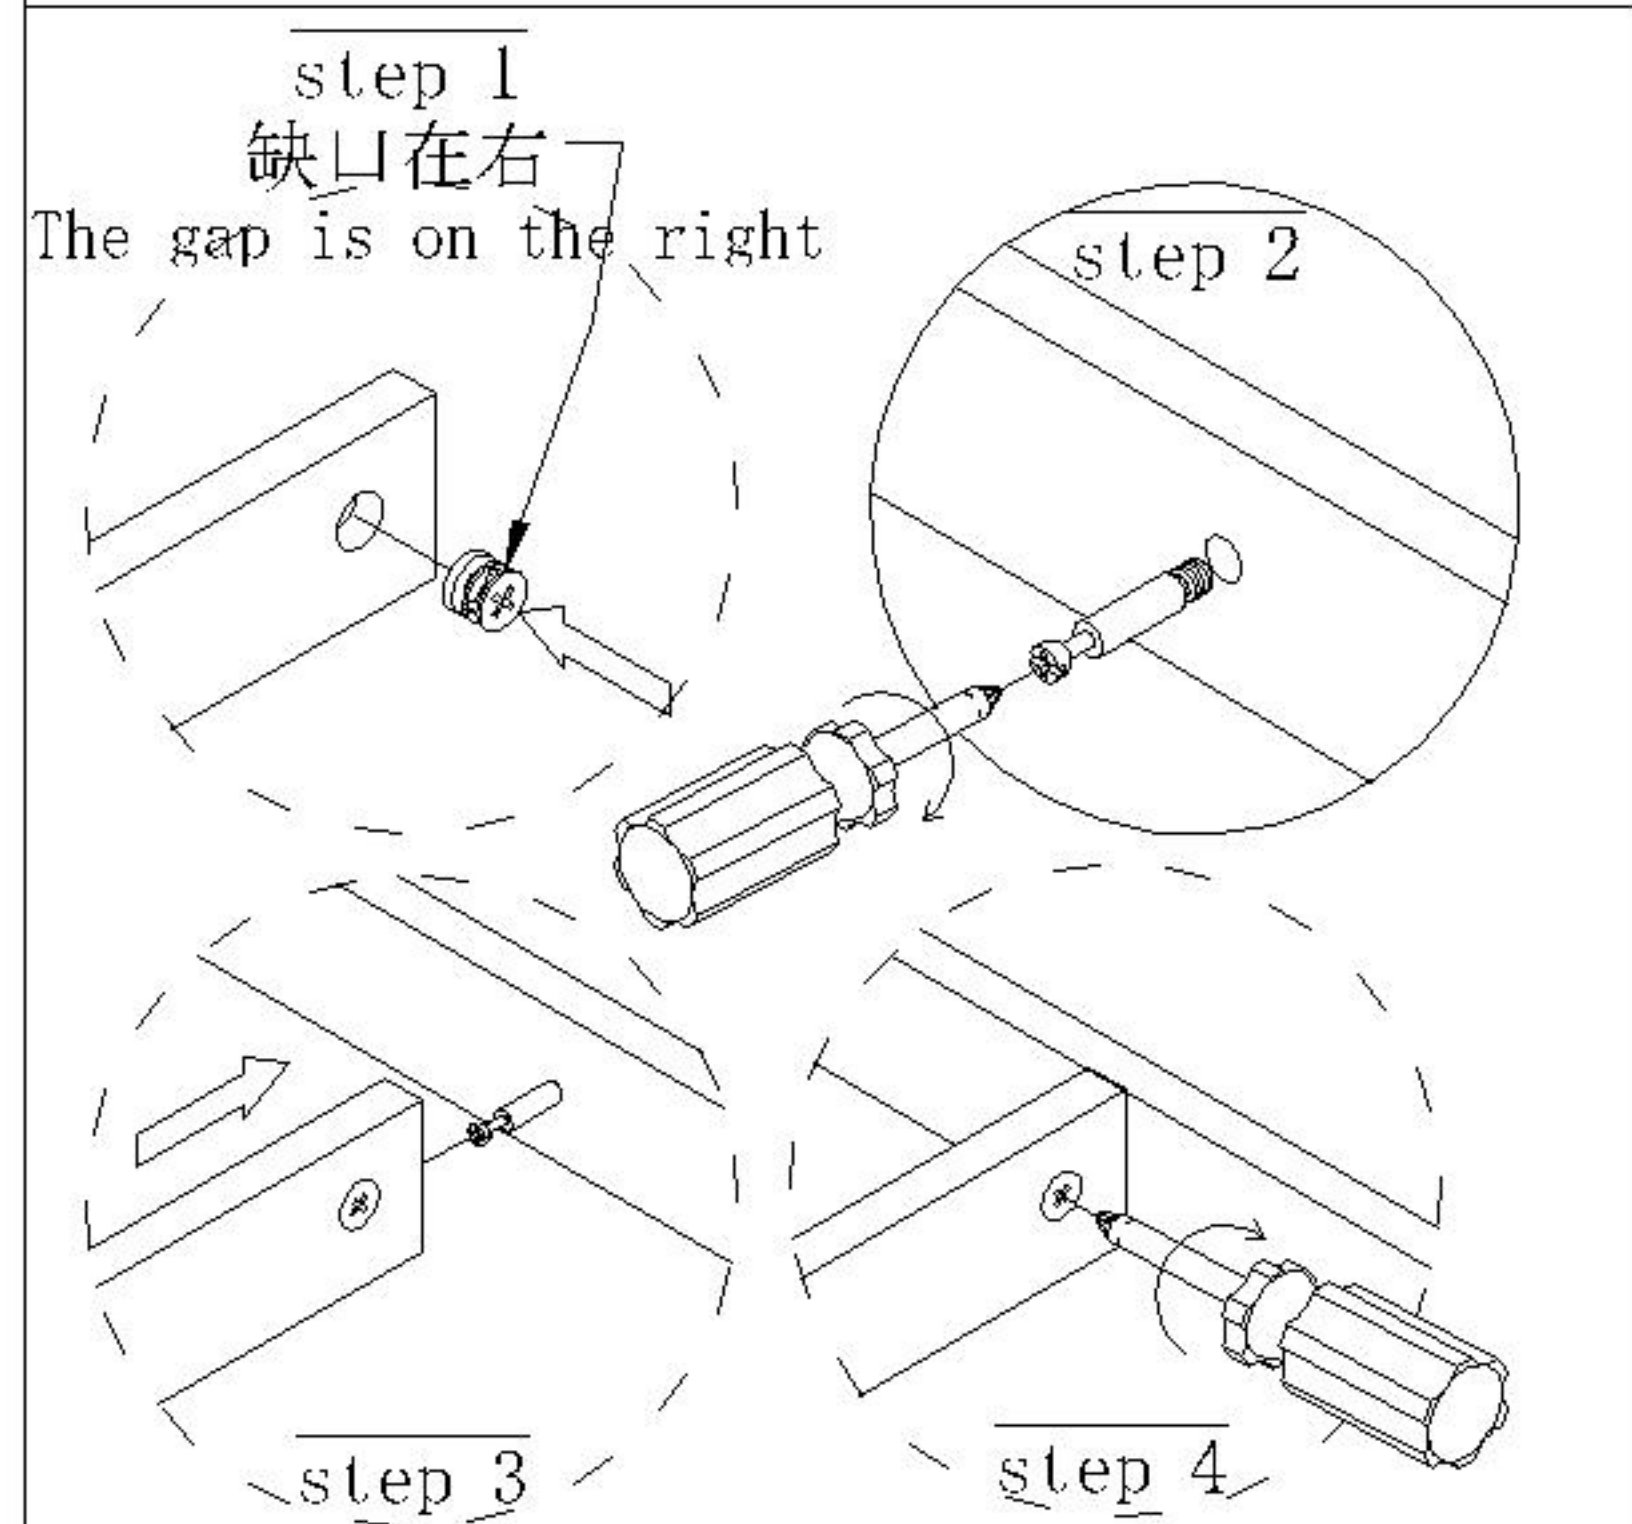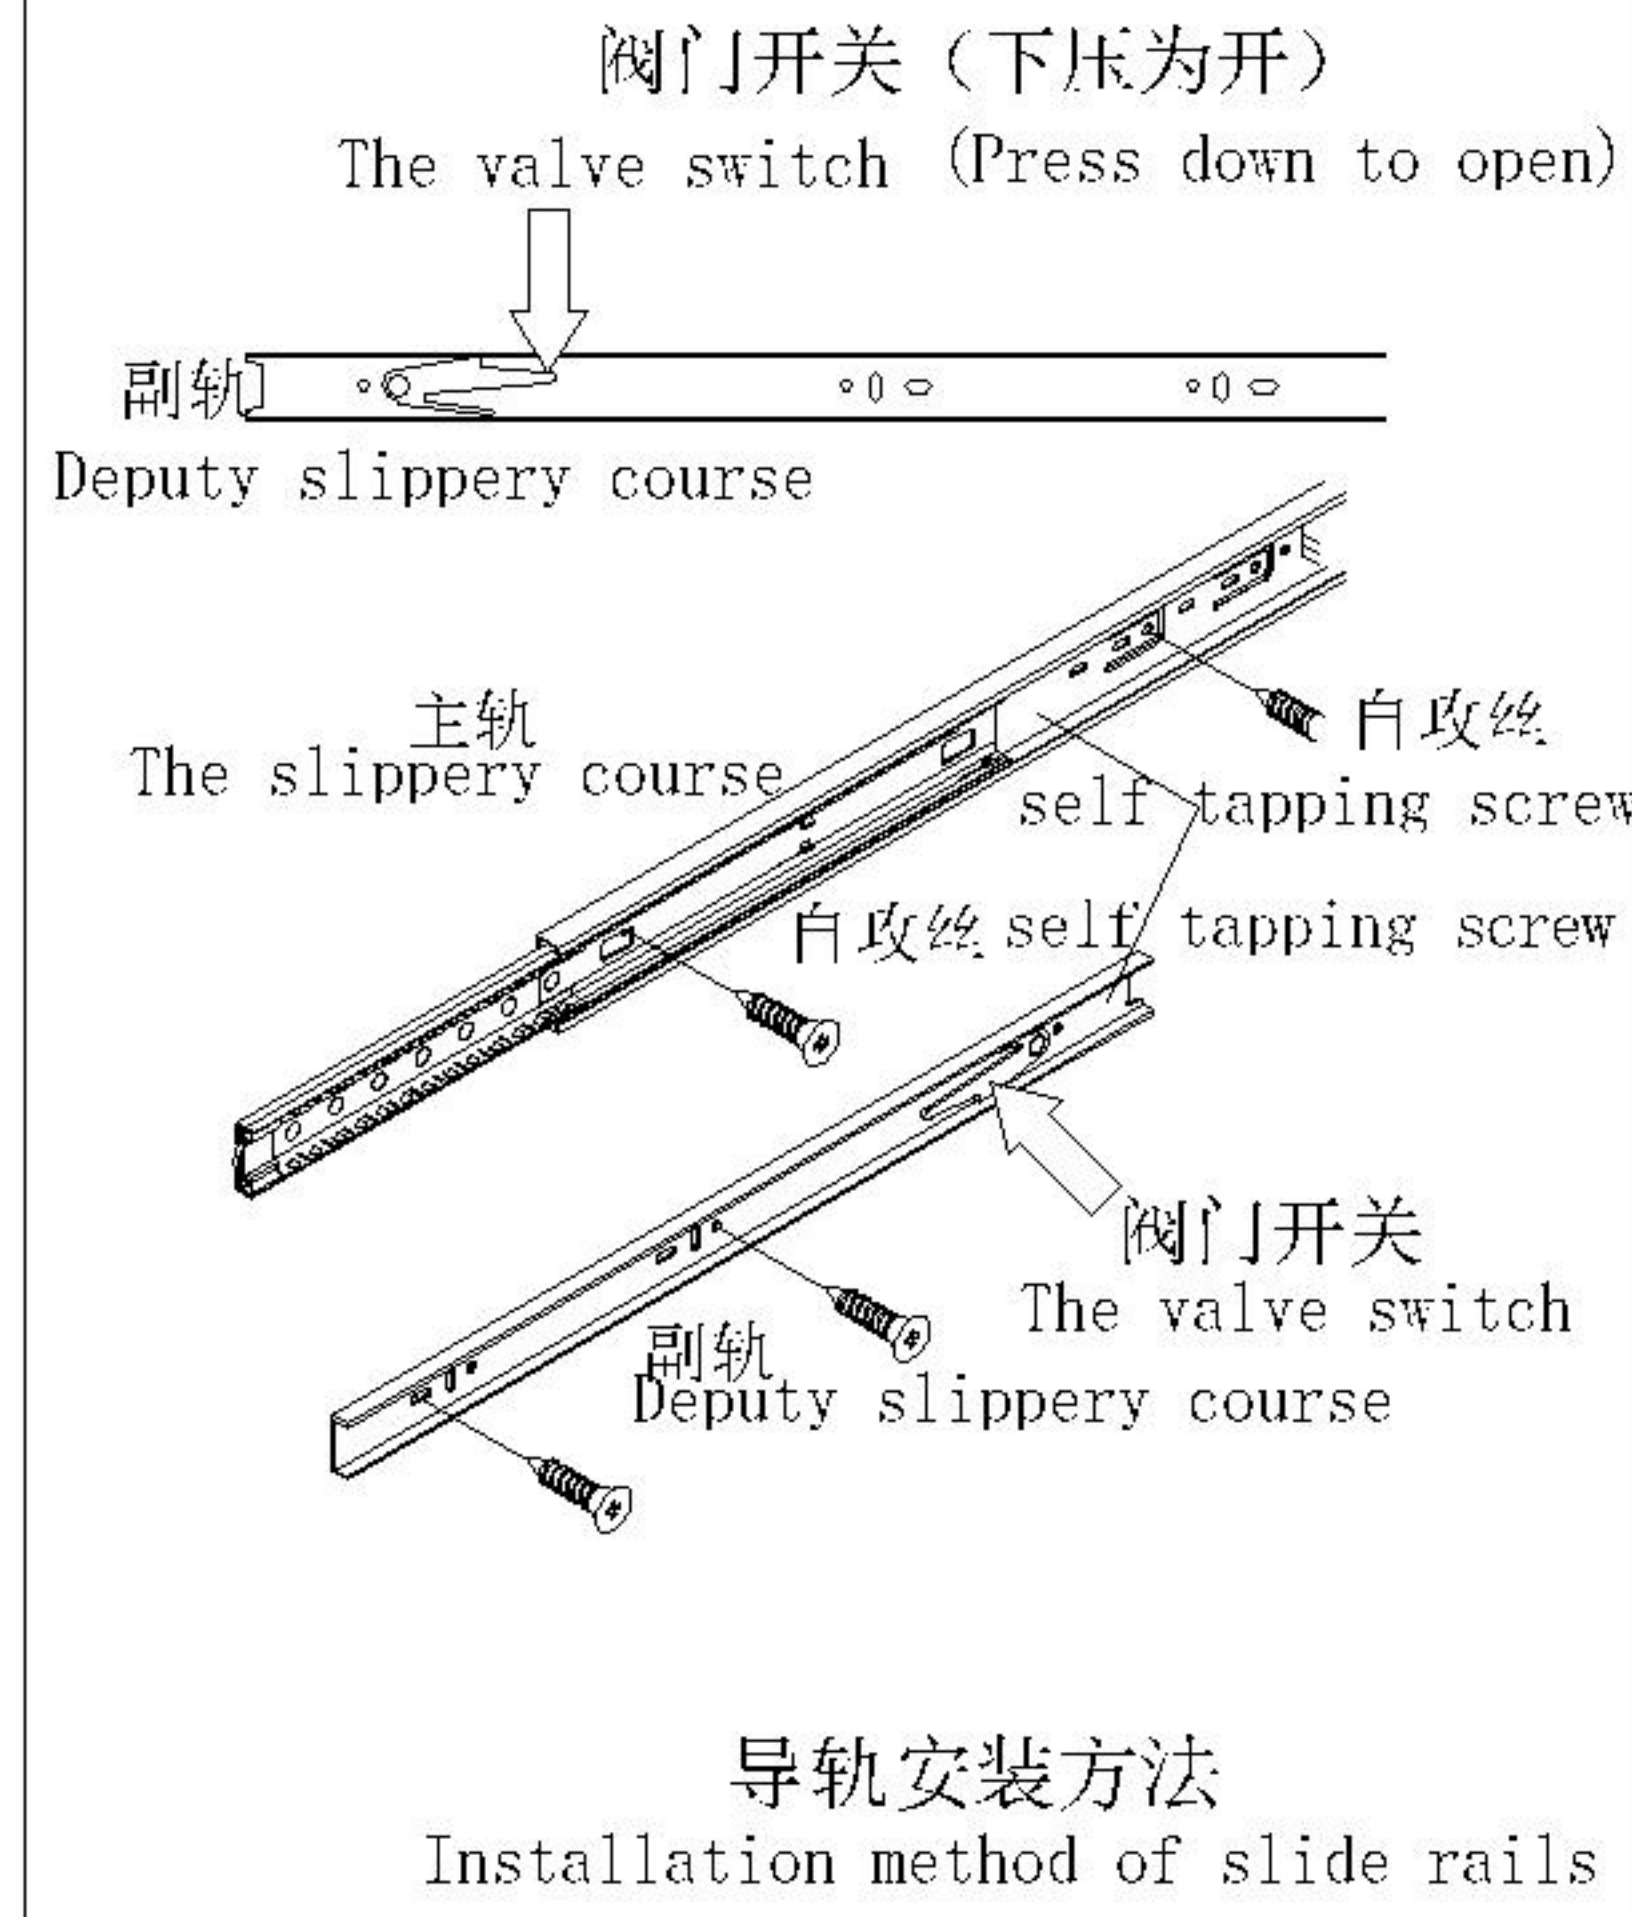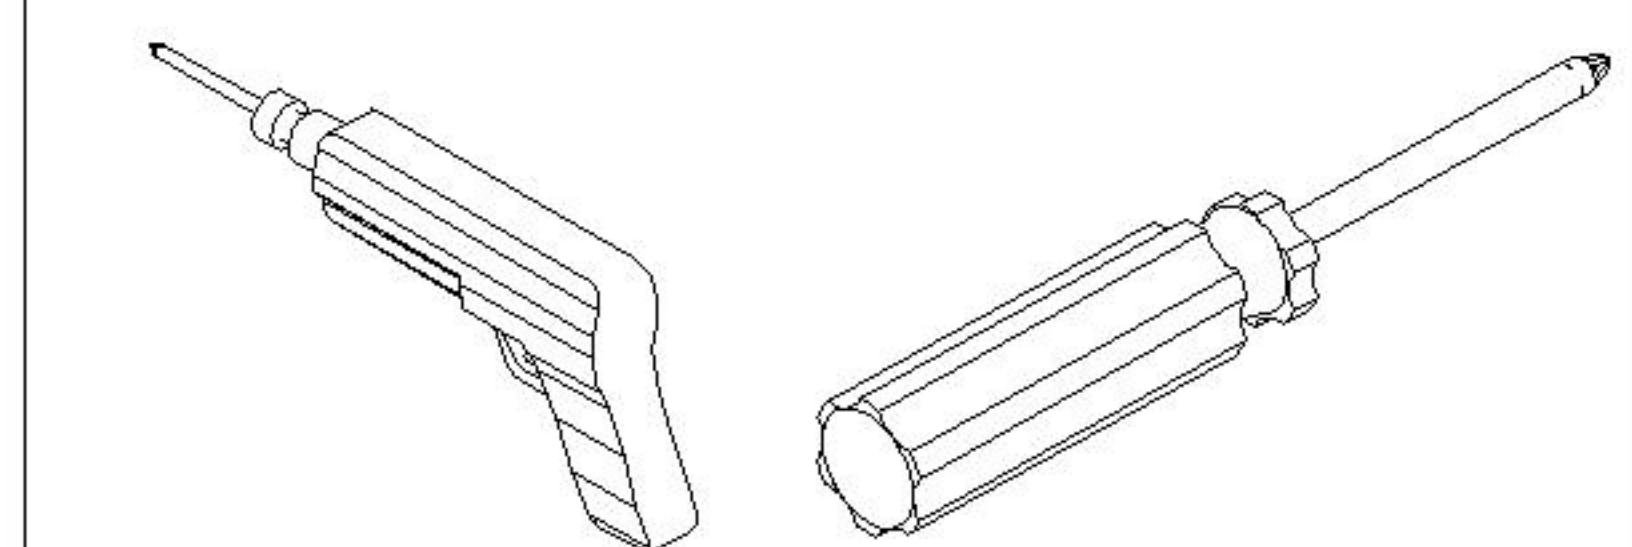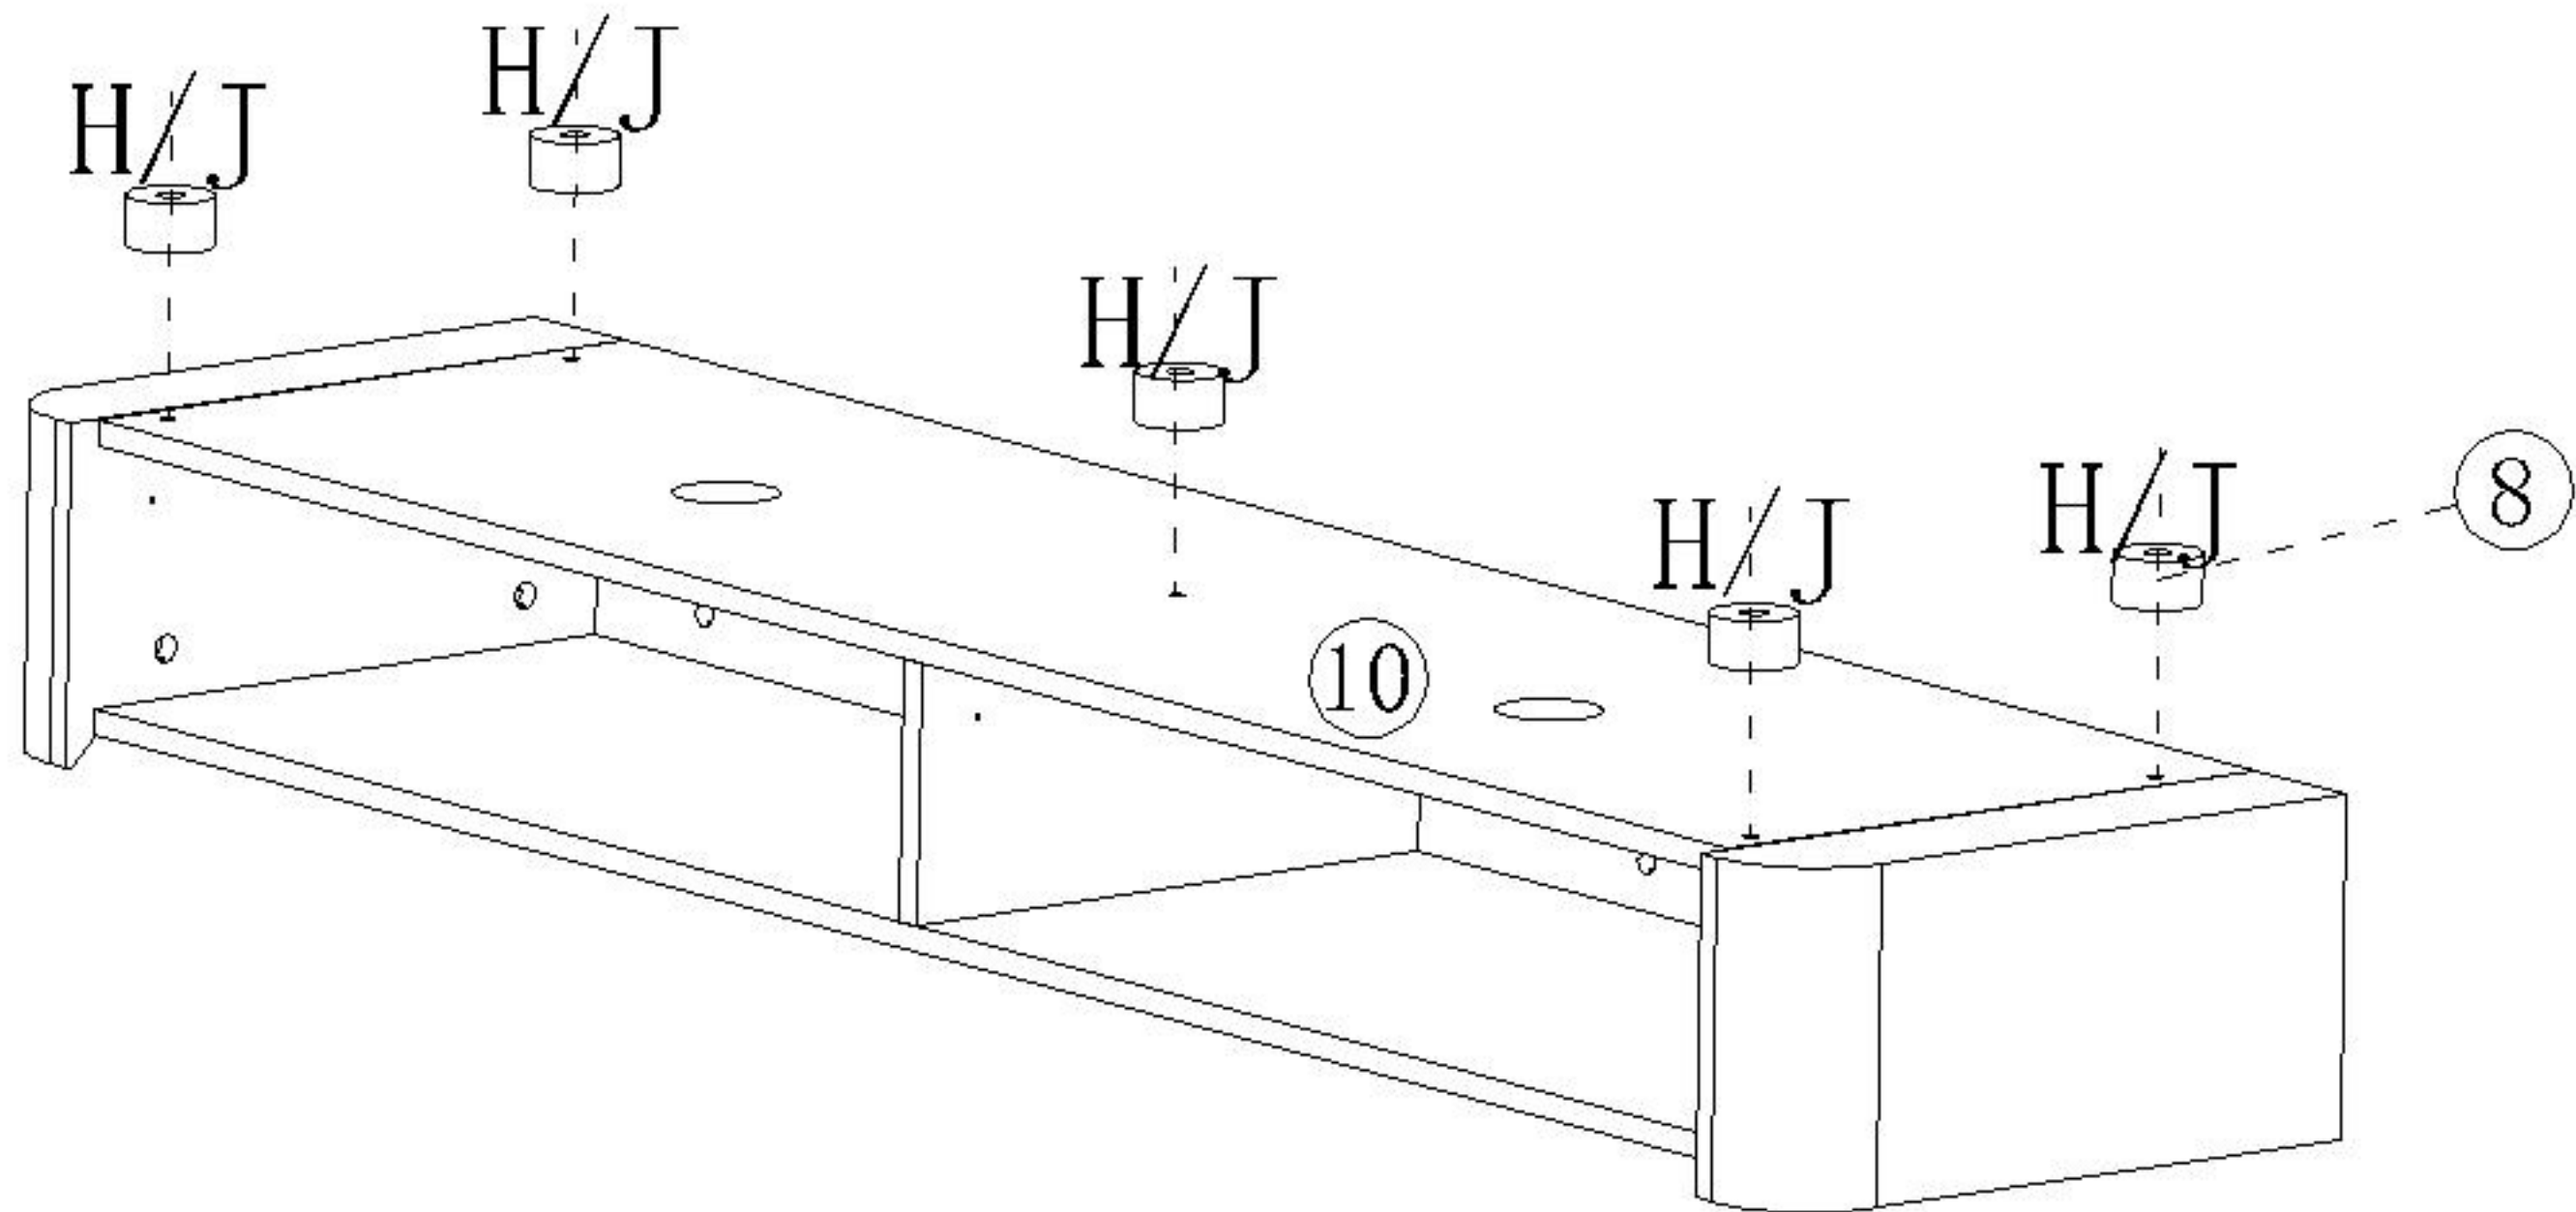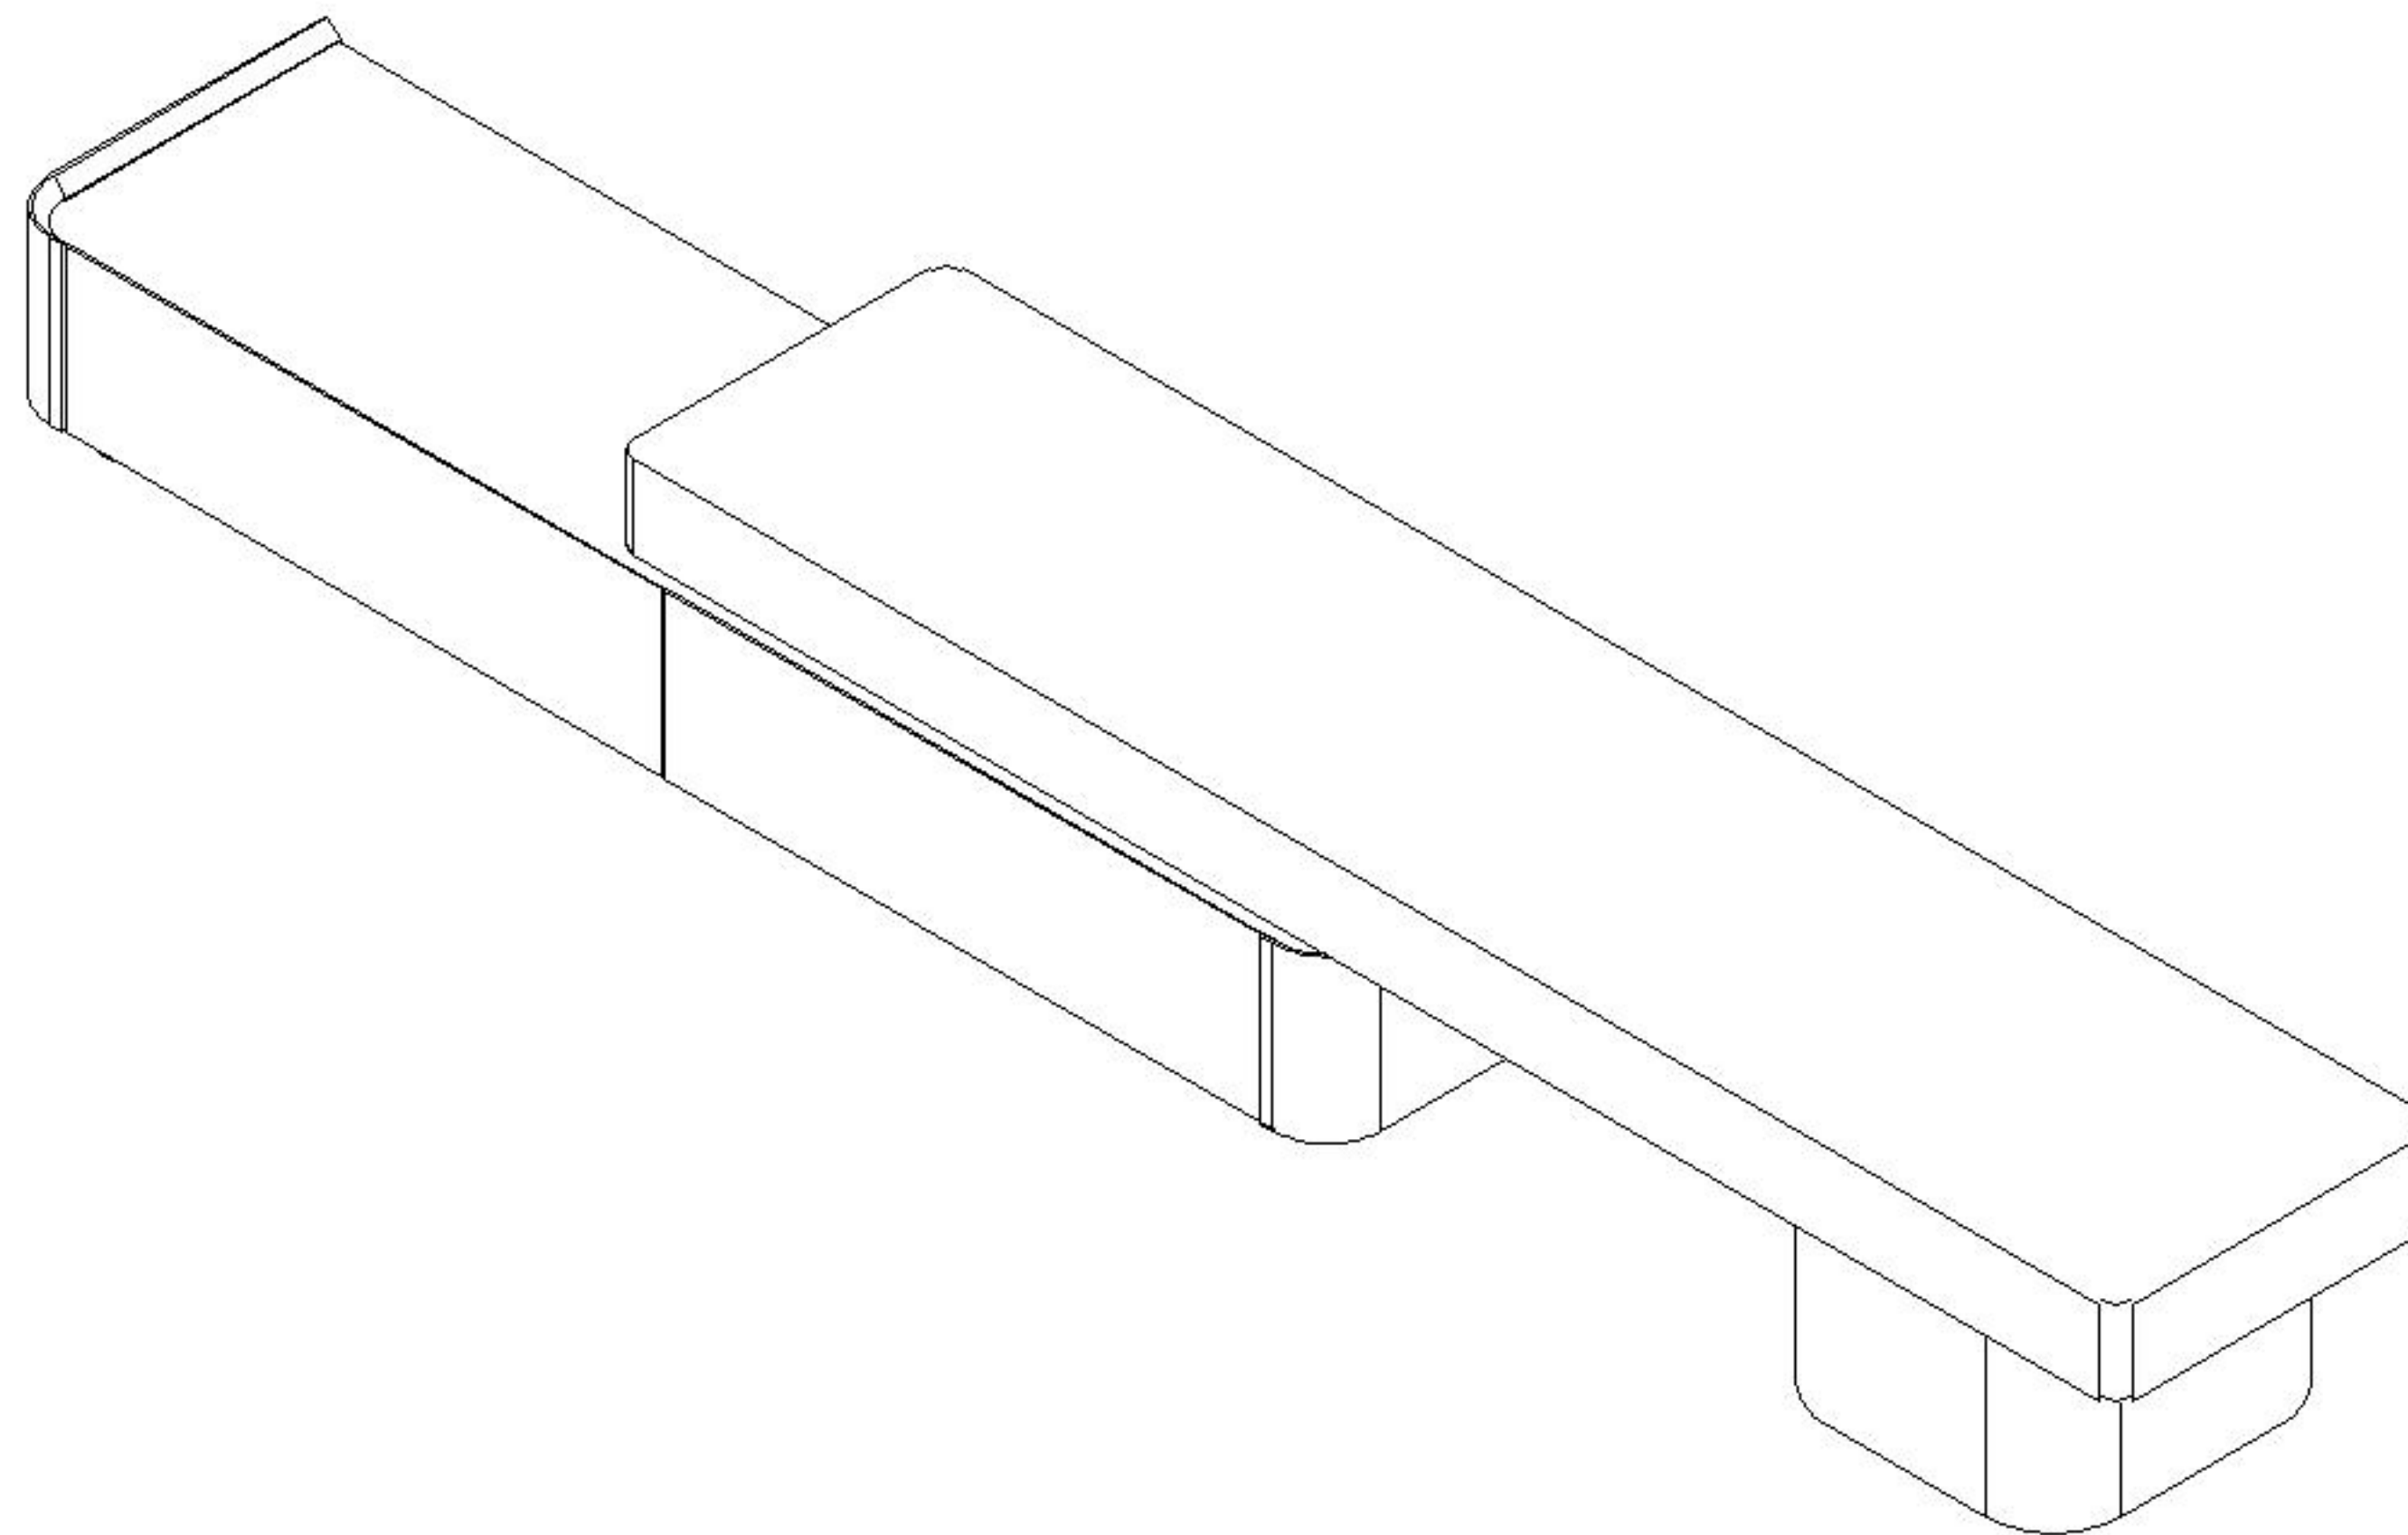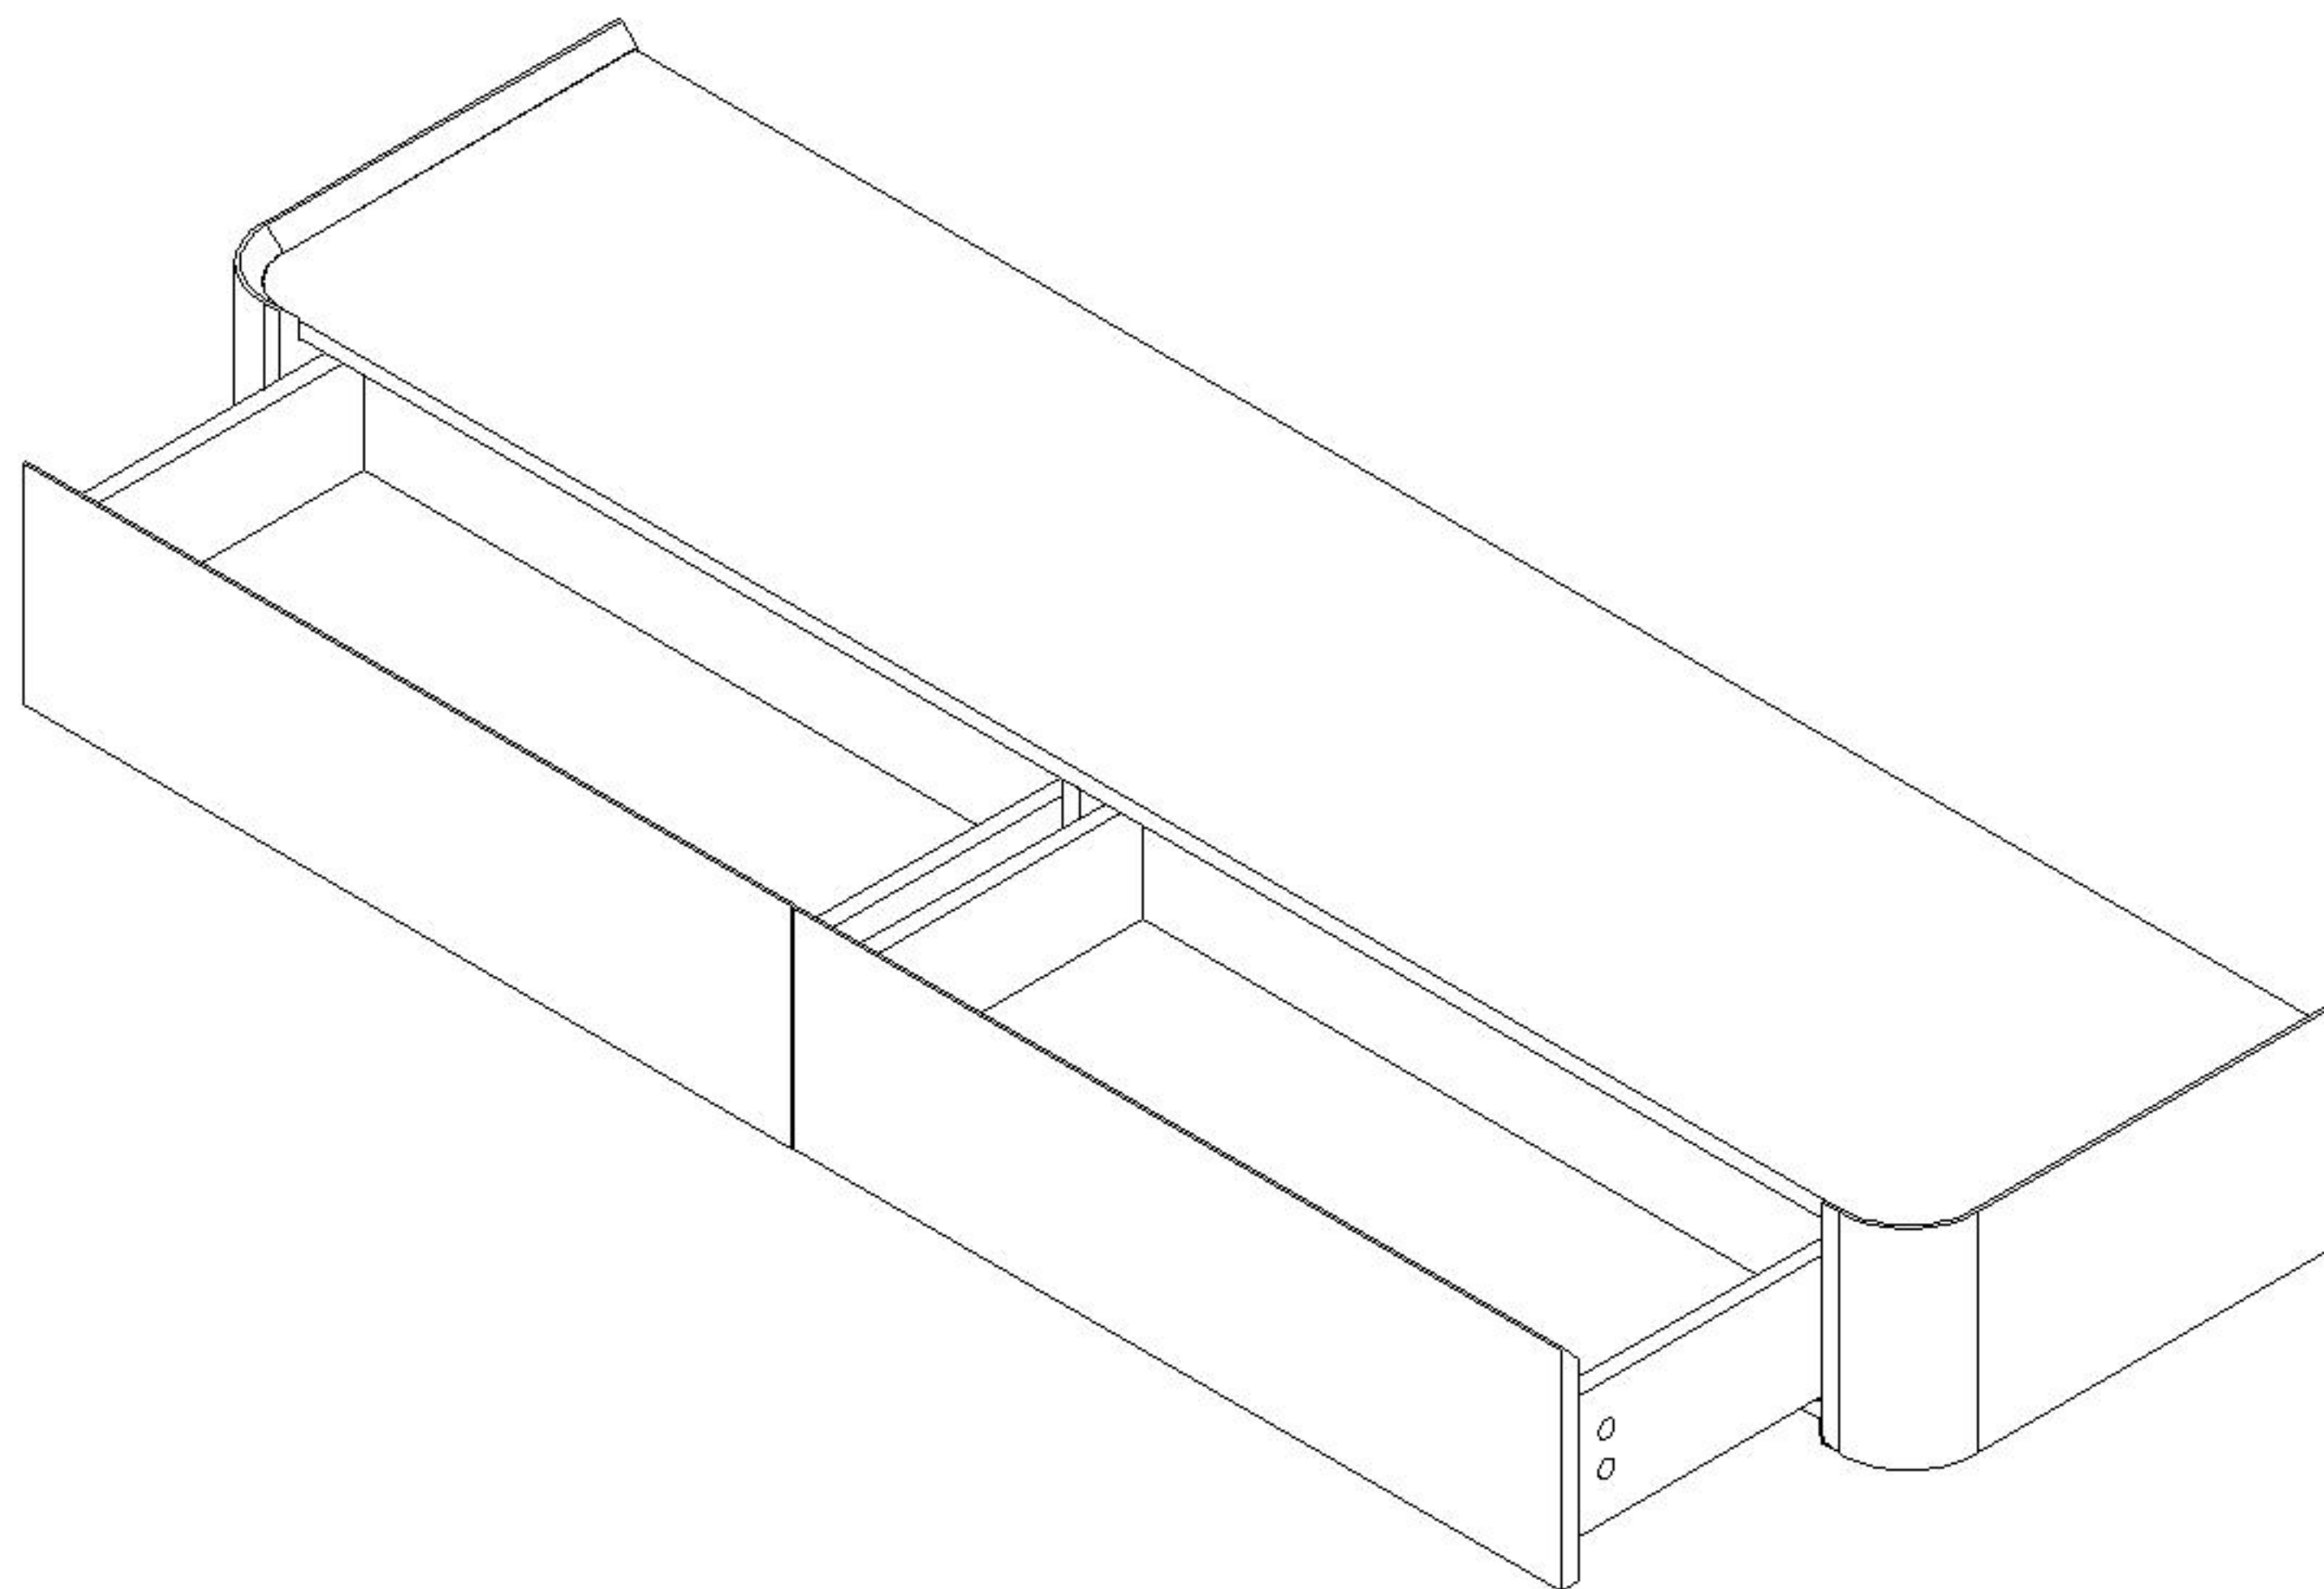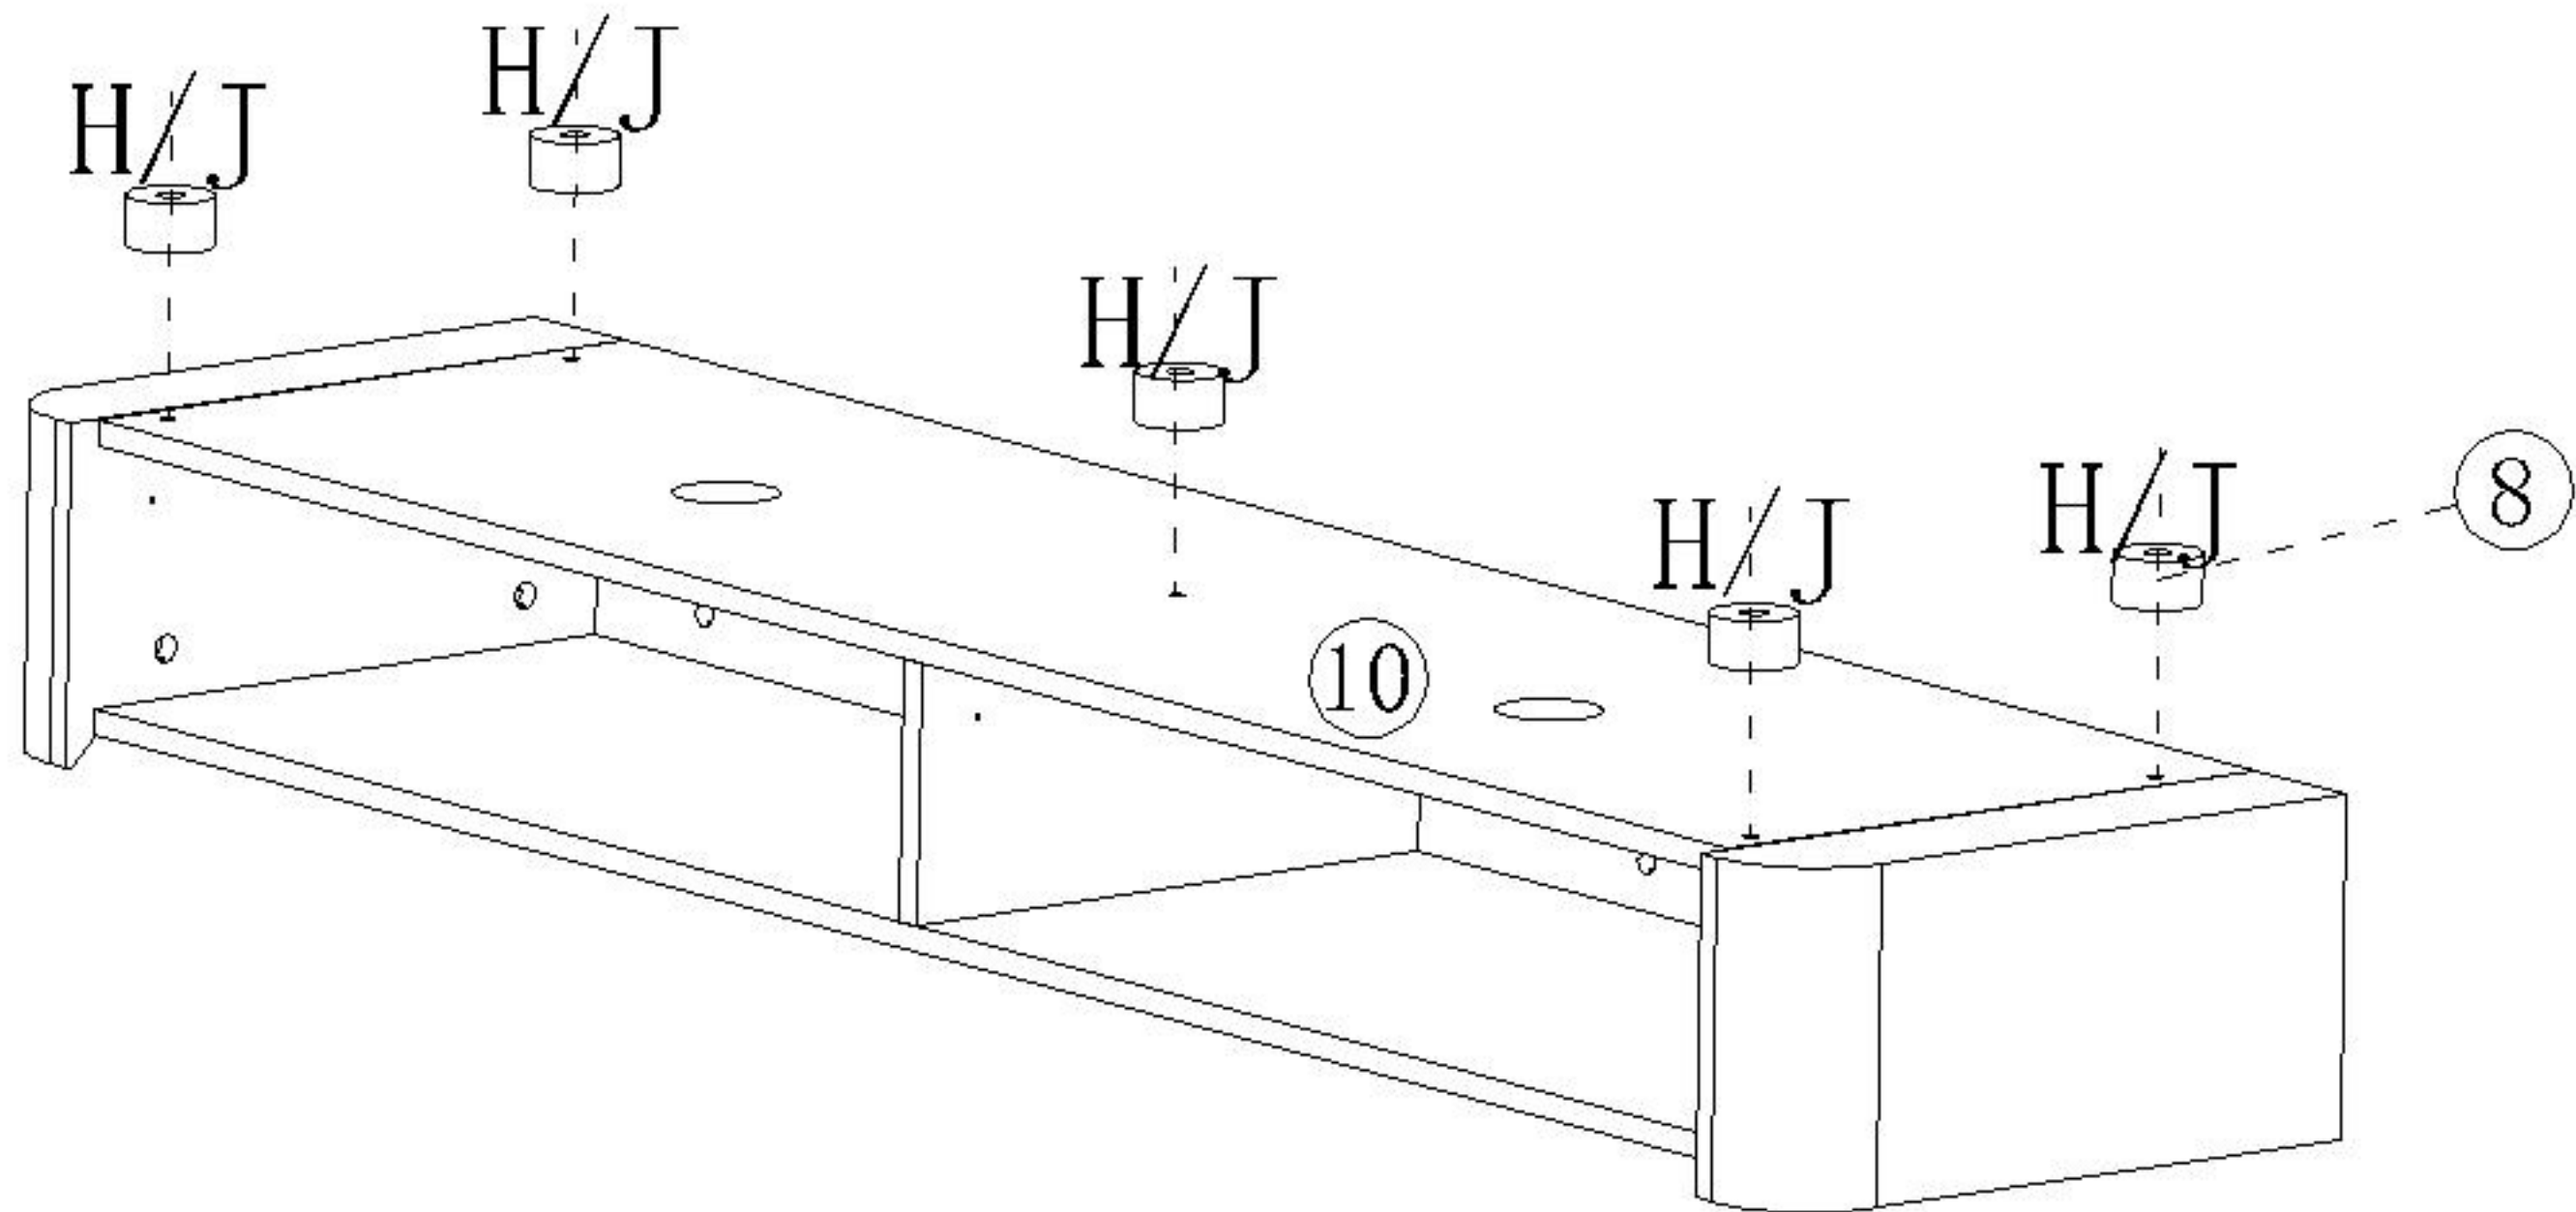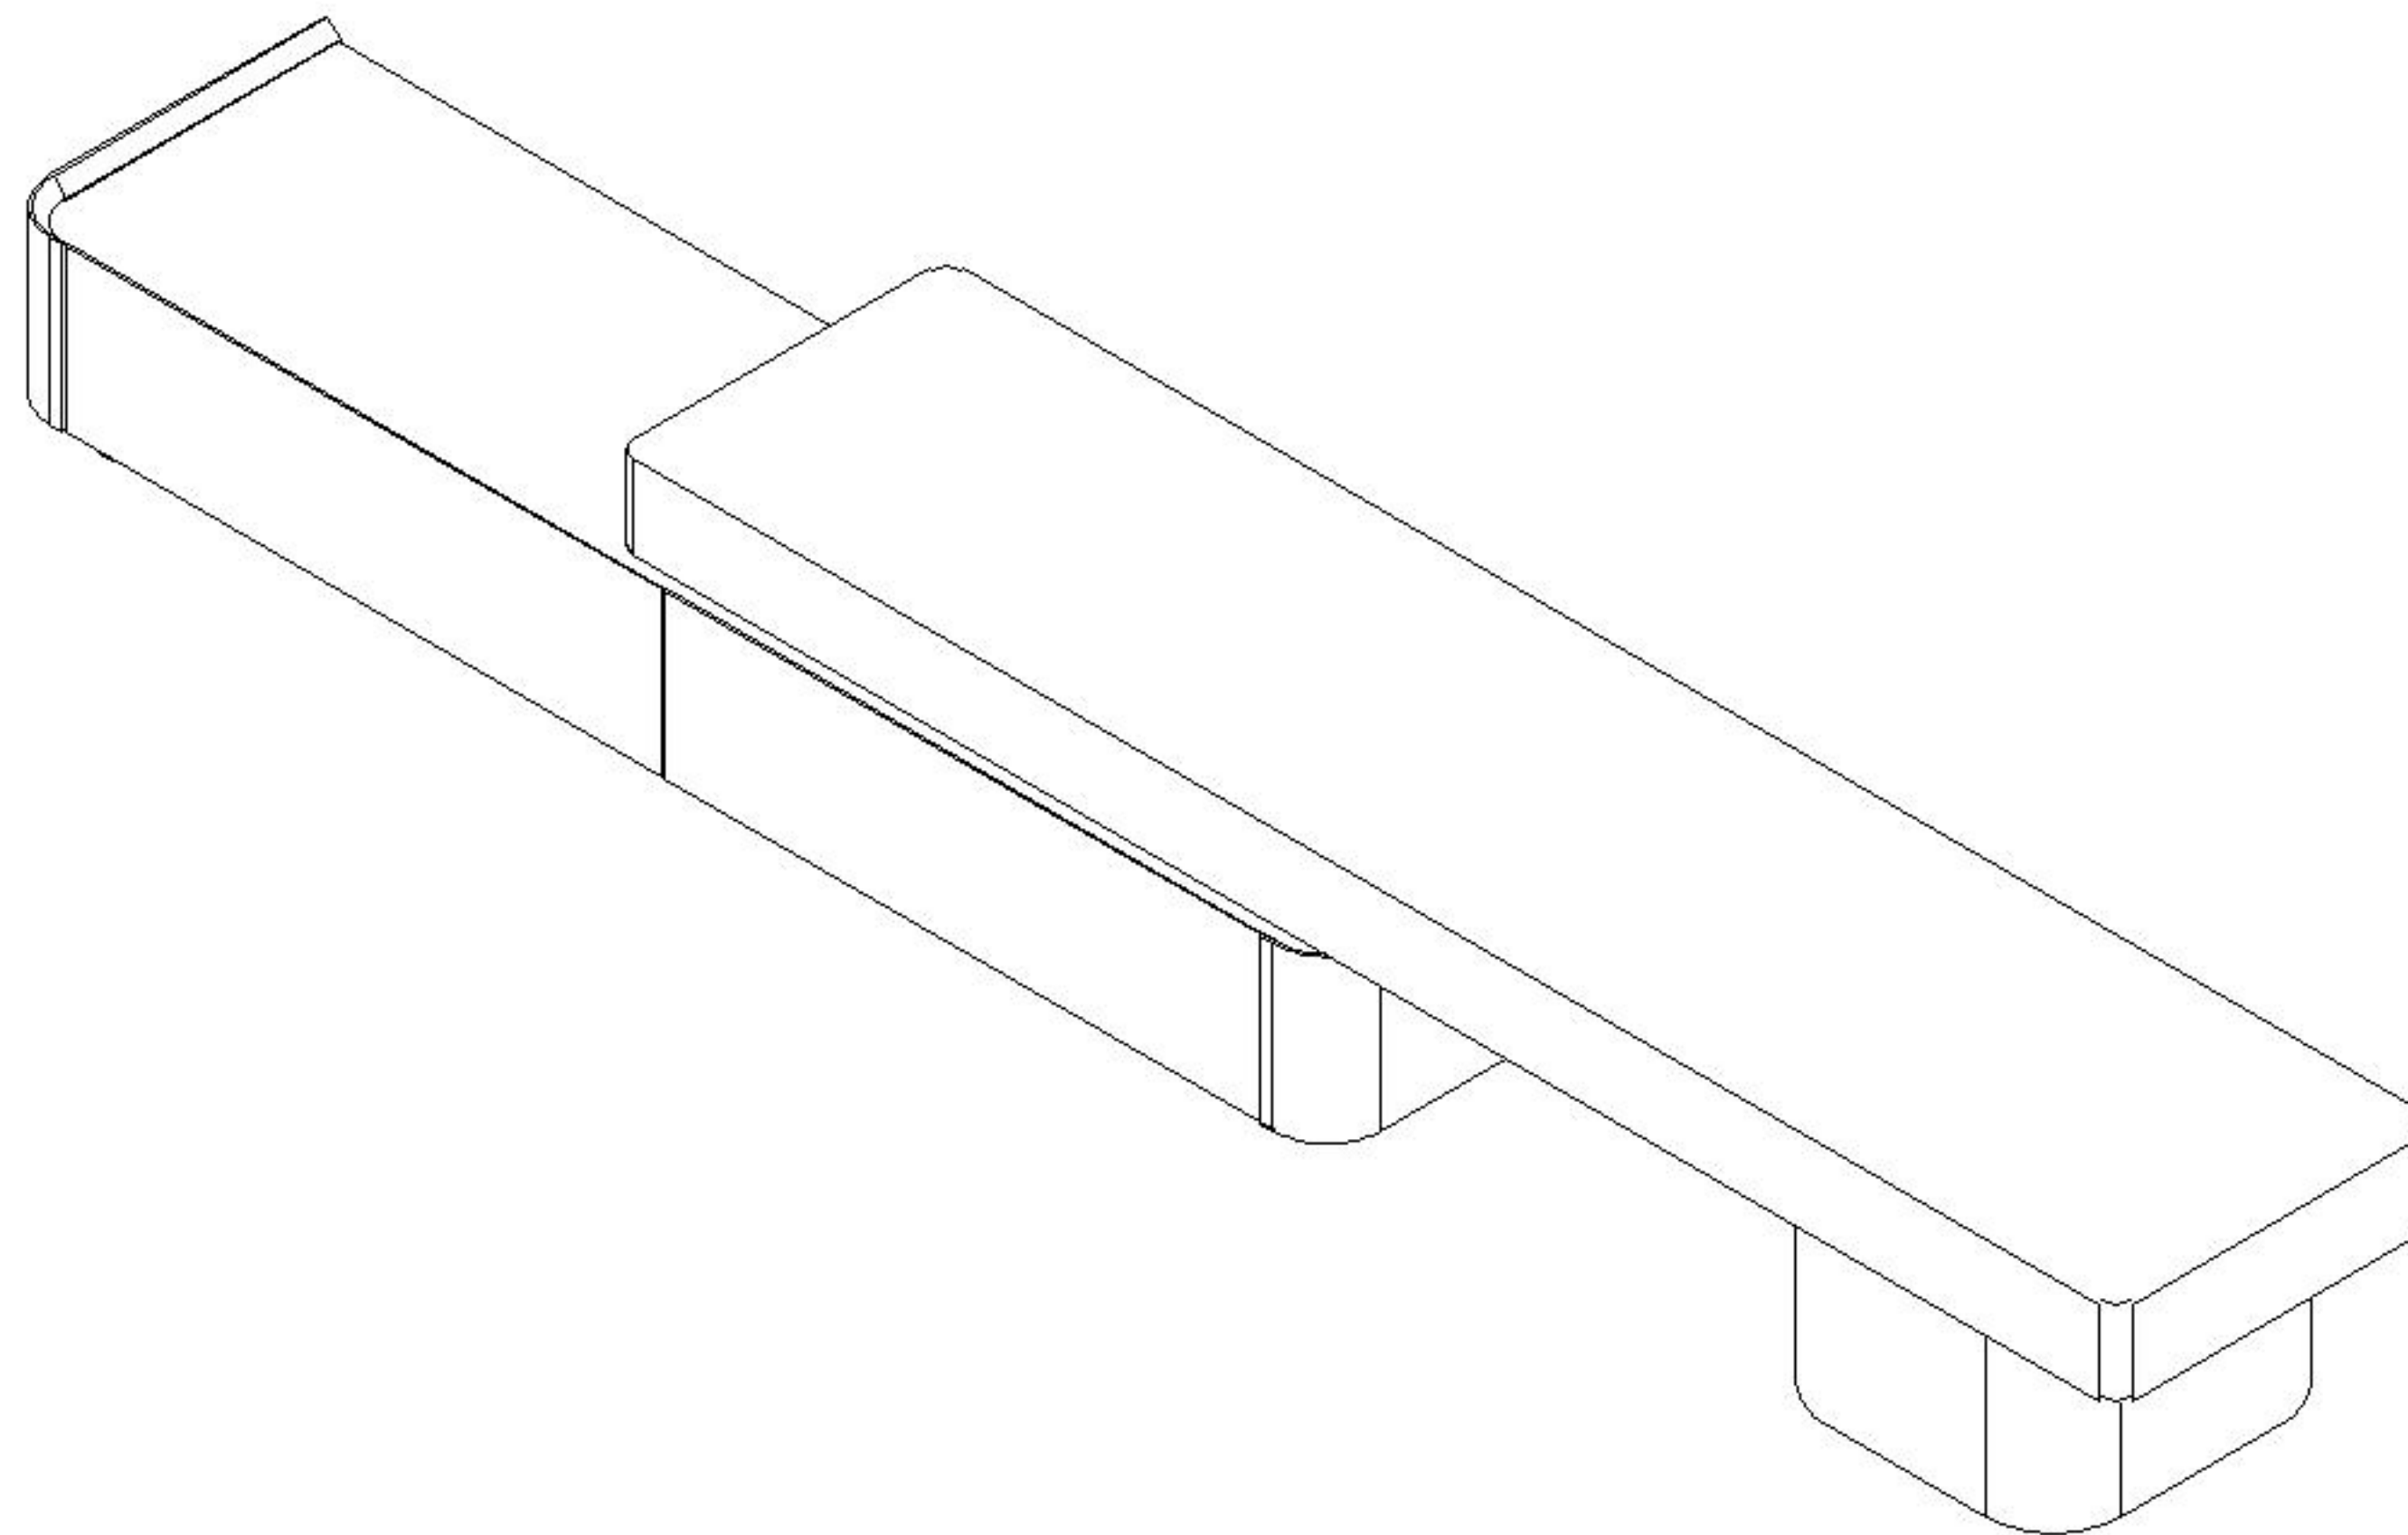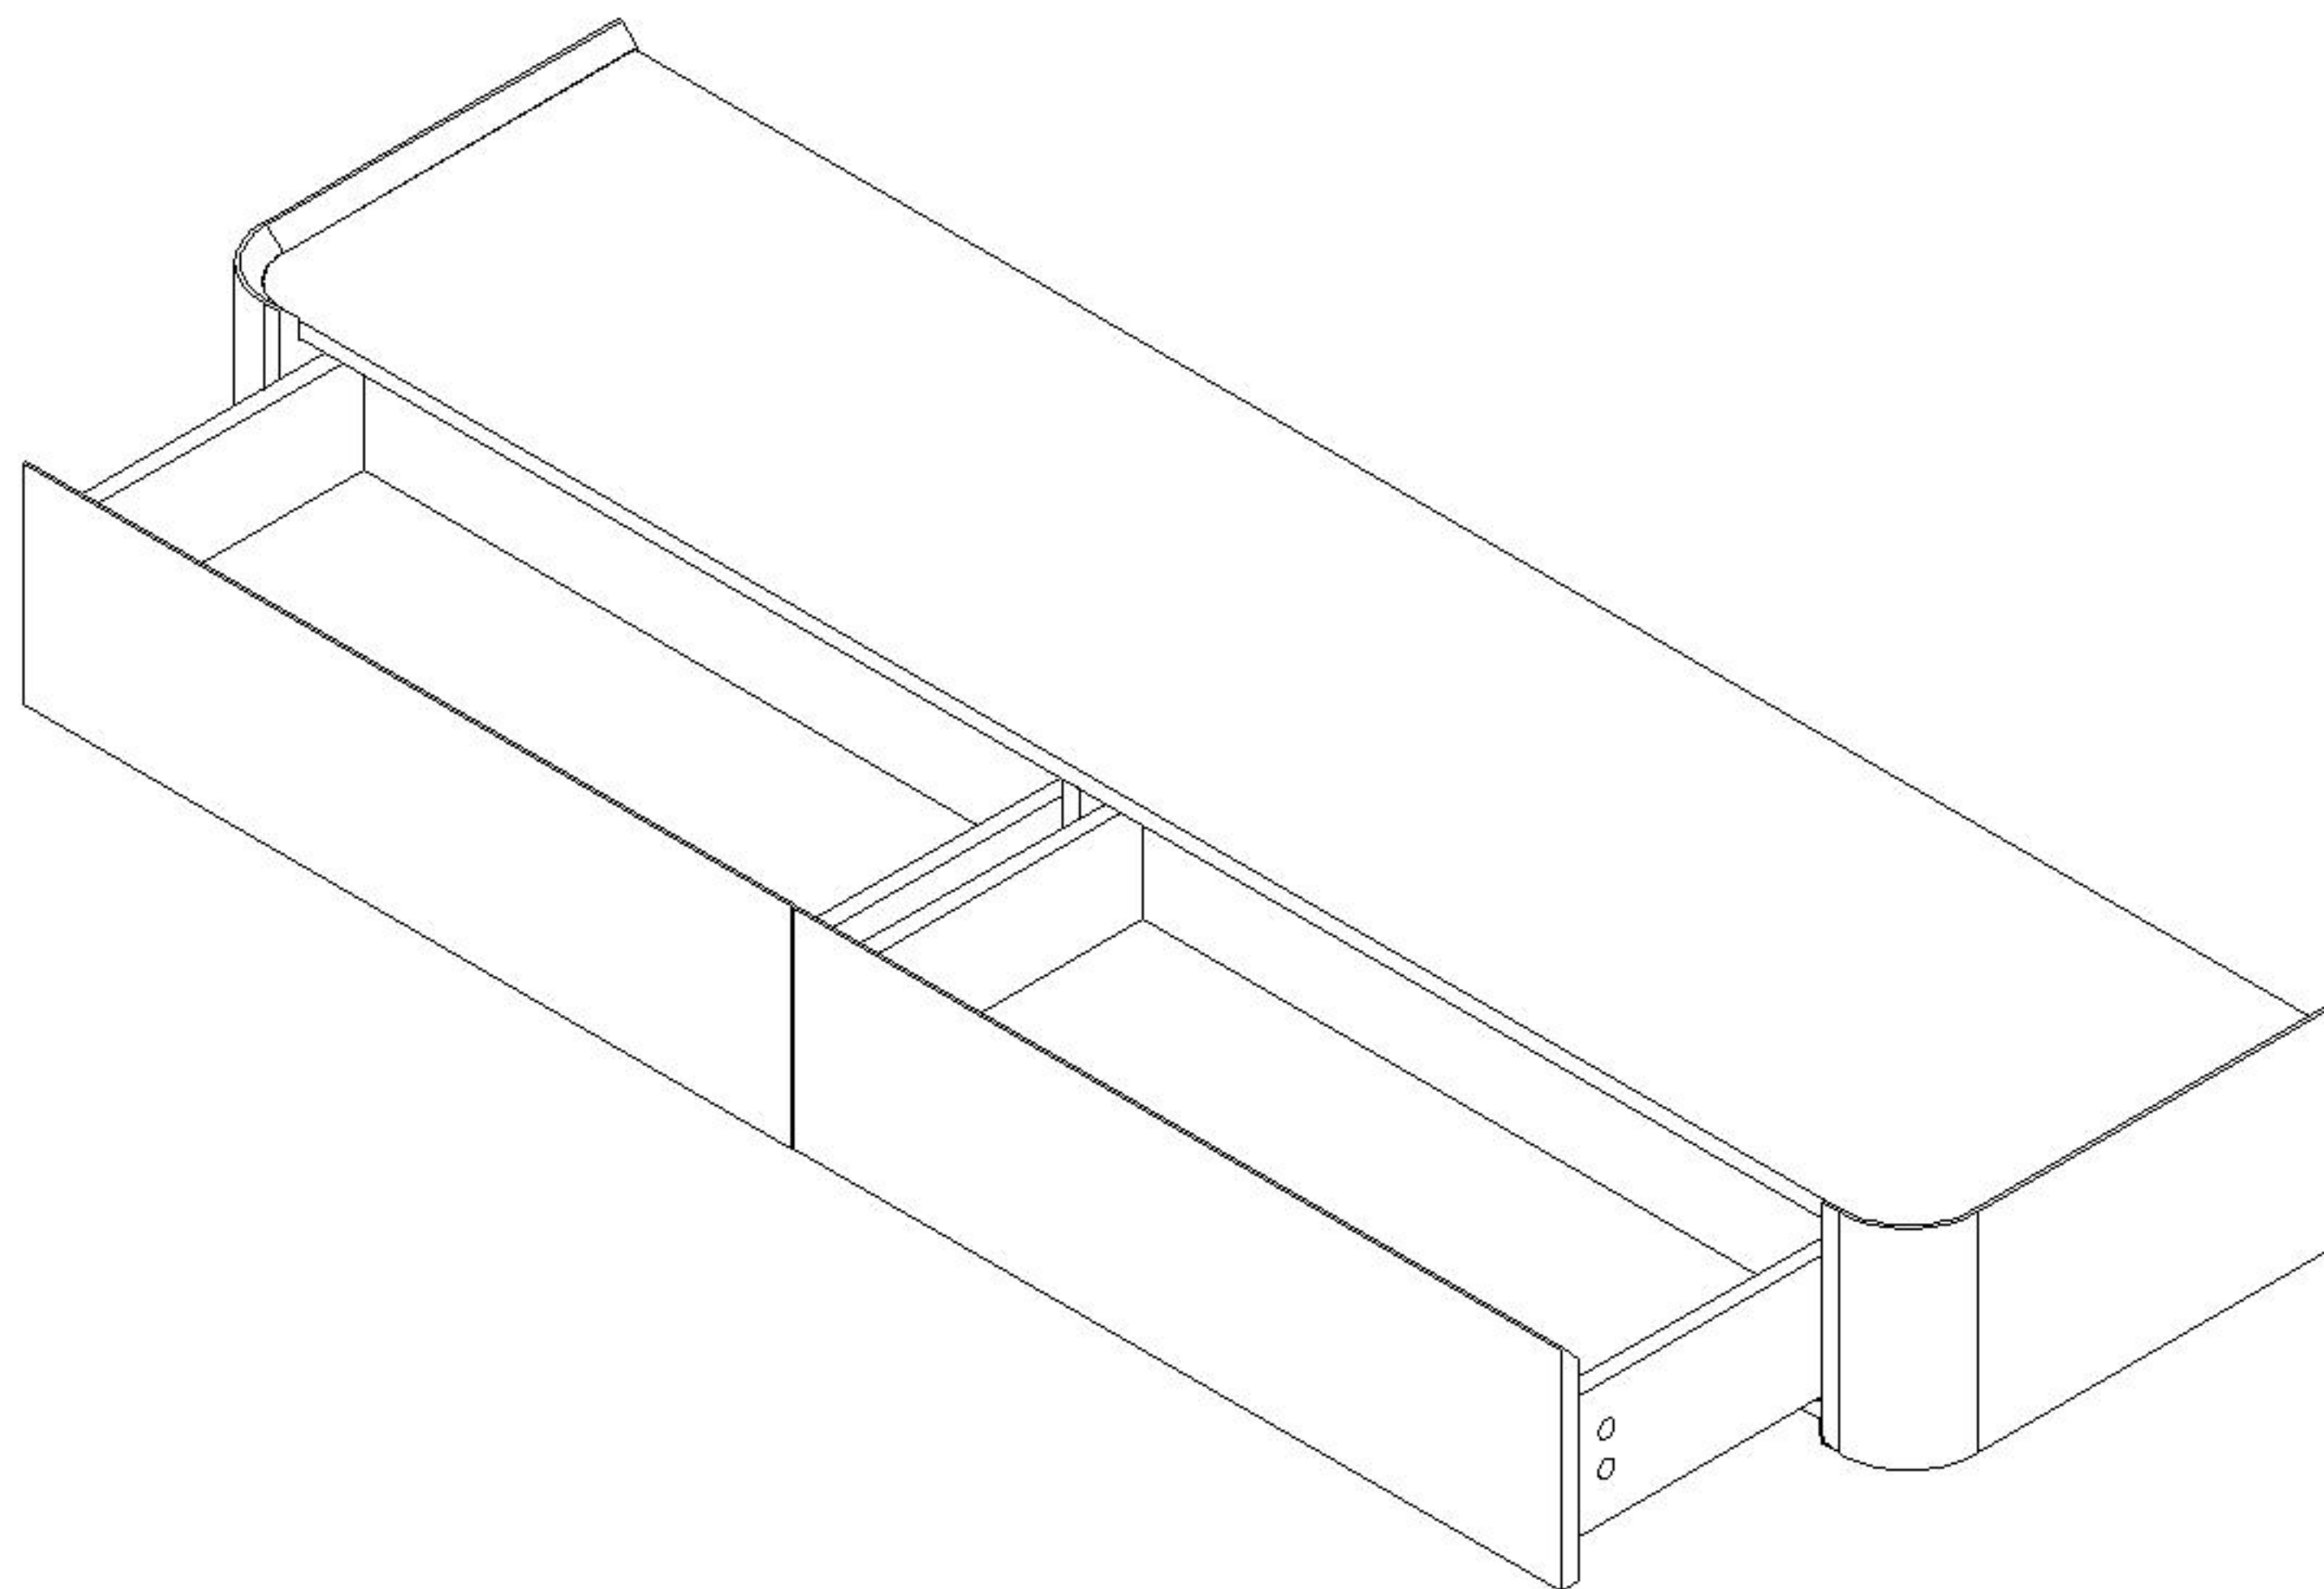LS883M1-A 安装方法/Installation method  二合一安装方法 2 in 1 Installation method  导轨安装方法 Installation method of slide rails 安装工具/Tool  手电钻 Hand electric drill 十字螺丝刀 Phillips screwdriver <td data-bbox="547 14 1720 2020"> STEP5  ►将STEP4安装好的柜体翻转，用五金H将部件8安装在部件10上，再贴好五金J Flip the cabinet with STEP4 installed, use hardware H to install component 8 on component 10, and then attach hardware J  ►将STEP1安装好的柜体摆放在STEP6上，组装完成 Place the cabinet installed in STEP1 on STEP6 and complete the assembly </td> <td data-bbox="1720 14 2906 2020"> STEP6  ►将STEP2安装好的抽屉对齐推入对应位置 Align the drawers installed in STEP2 and push them into the corresponding positions </td>	STEP5  ►将STEP4安装好的柜体翻转，用五金H将部件8安装在部件10上，再贴好五金J Flip the cabinet with STEP4 installed, use hardware H to install component 8 on component 10, and then attach hardware J  ►将STEP1安装好的柜体摆放在STEP6上，组装完成 Place the cabinet installed in STEP1 on STEP6 and complete the assembly	STEP6  ►将STEP2安装好的抽屉对齐推入对应位置 Align the drawers installed in STEP2 and push them into the corresponding positions
---	--	--