


Assembly Instruction

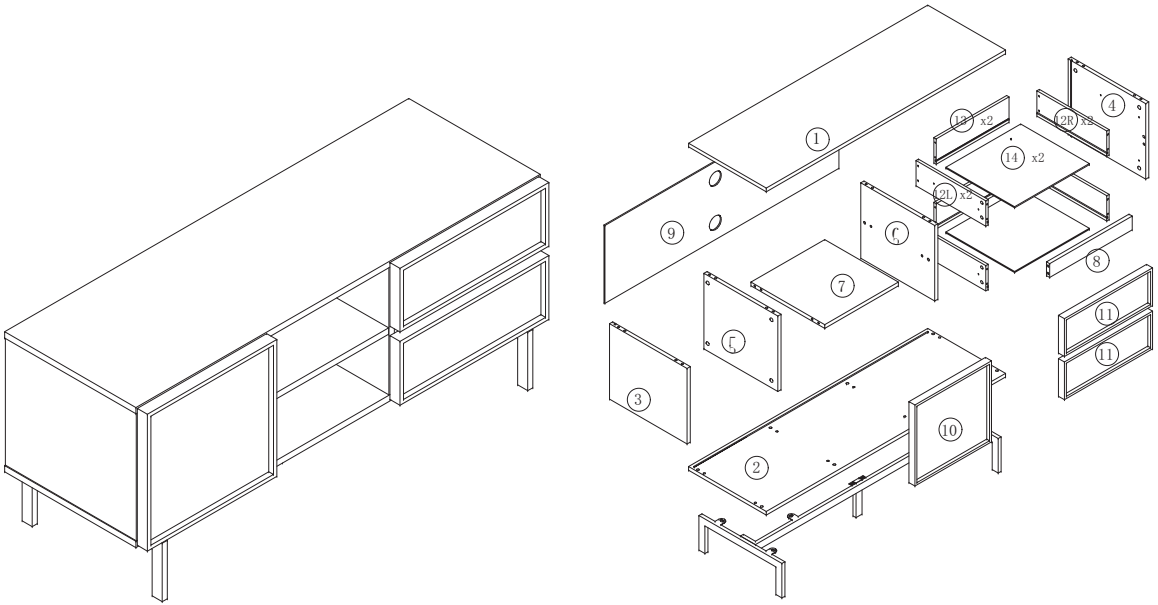

NO.	SIZE	QTY
1	1200x390x16	1
2	1198x390x16	1
3	328x389x16	1
4	328x389x16	1
5	328x371x16	1
6	328x371x16	1
7	362x370x16	1
8	414x60x16	1
9	1174x338x5	1
10	384x352x30	1
11	442x164x30	2
12	350x110x12	4
13	365x110x12	2
14	375x344x5	2

A M6x40mm 22pcs	B Ø15x11.5 22pcs	C Ø 8x30 22pcs
D Ø12x10mm 8set	E M4x14 24pcs	F M4x30 8pcs
O 4# 1pcs	R M6x25 6pcs	N / 8pcs
M / 2set	G M6x12mm 8pcs	K 12" 2set
Z Ø 20 22pcs		

STEP 1:



O 4# 1pcs	R M6x25 6pcs

STEP 2:

G M6x12mm 8pcs


STEP 3:


K 12" 2set

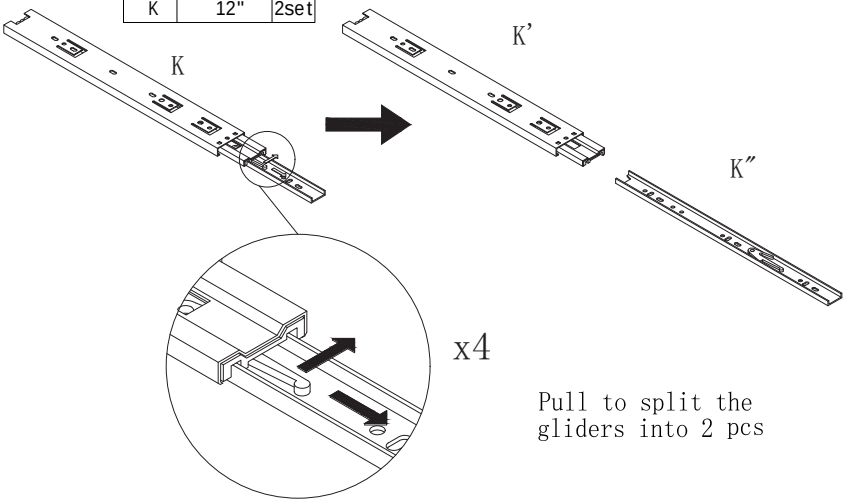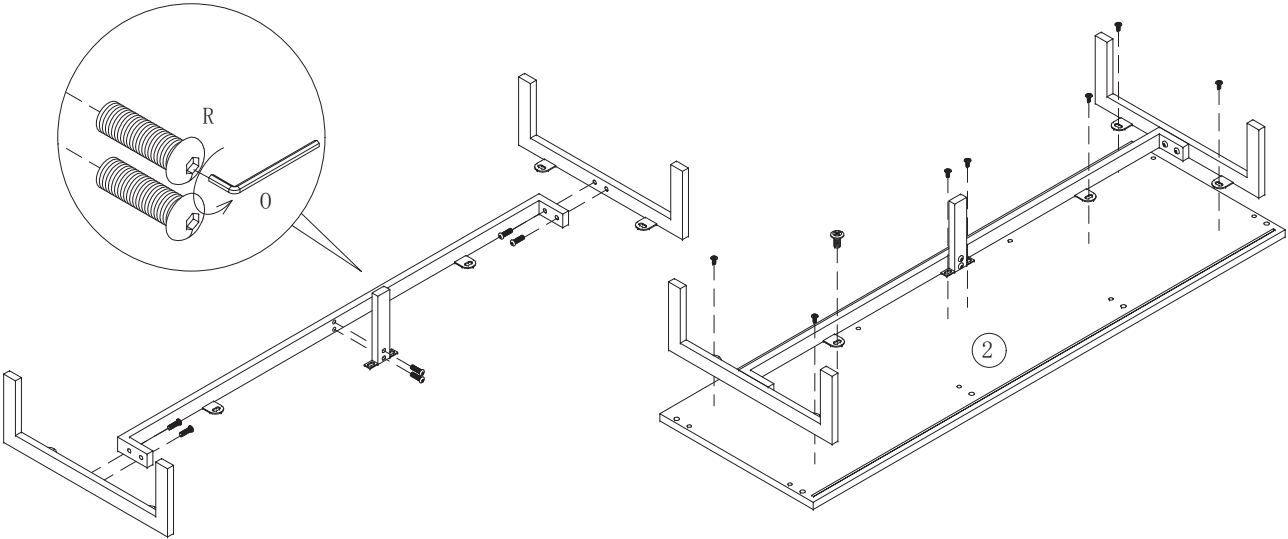

Pull to split the gliders into 2 pcs


STEP 4:

		
A	M6x40mm	2pcs
E	M4x14	12pcs
K	12"	2set

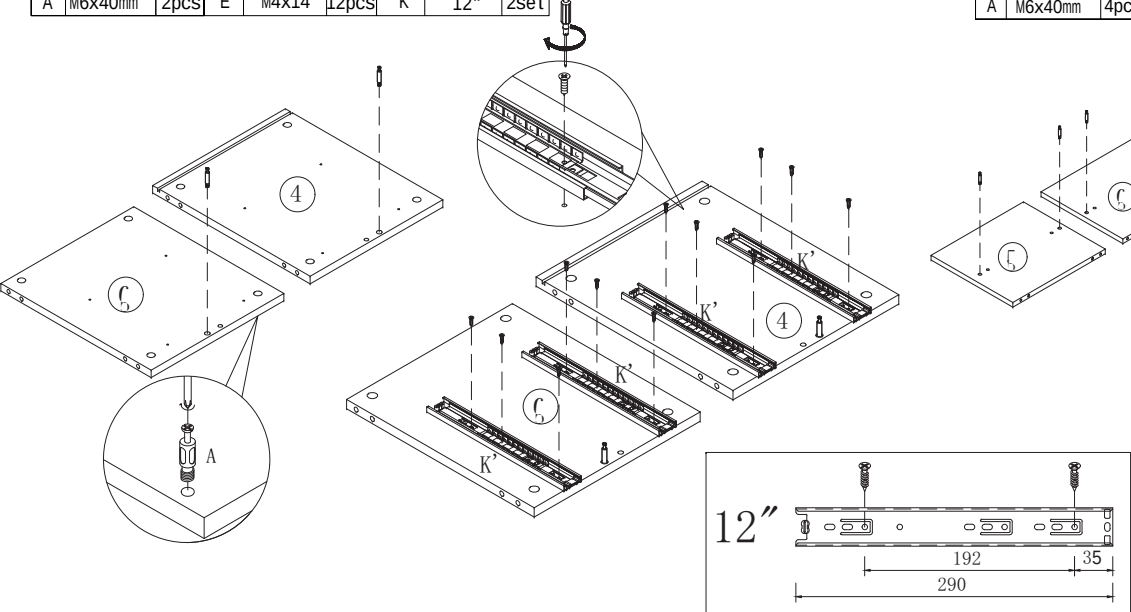


STEP 5:

		
A	M6x40mm	4pcs
B	Ø15x11.5	4pcs
C	Ø8x30	4pcs

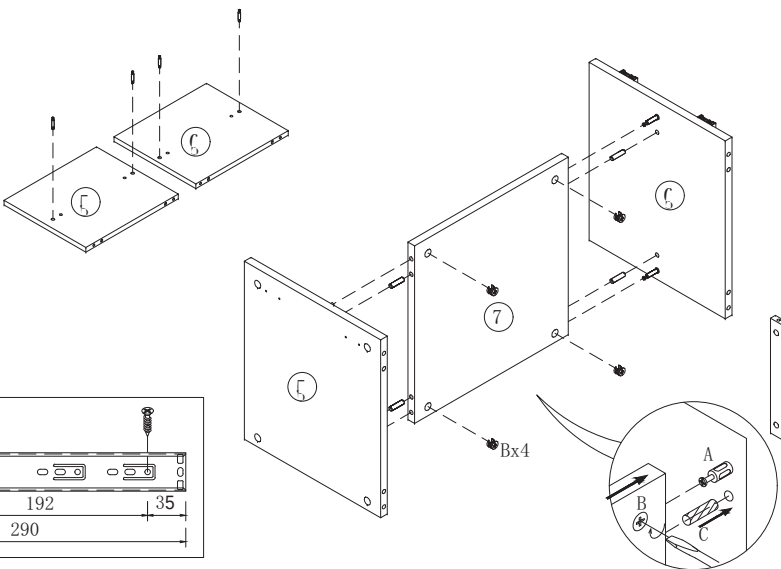


STEP 6:

					
B	Ø15x11.5	2pcs	C	Ø8x30	2pcs

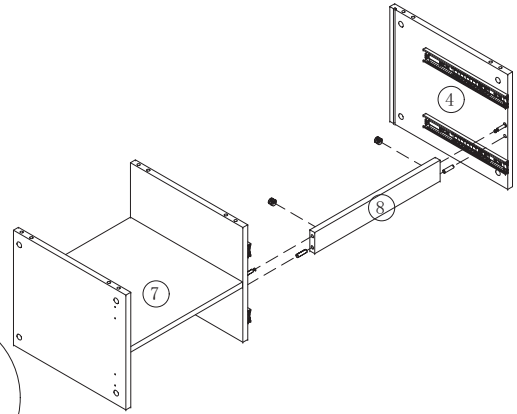


STEP 7:

		
A	M6x40mm	16pcs

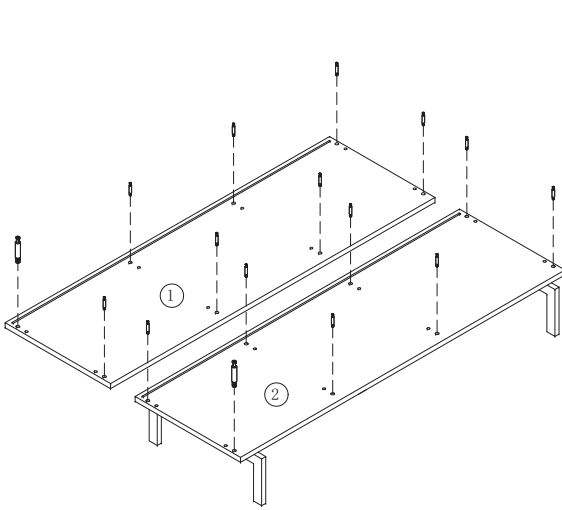


STEP 8:

					
B	Ø15x11.5	8pcs	C	Ø8x30	8pcs

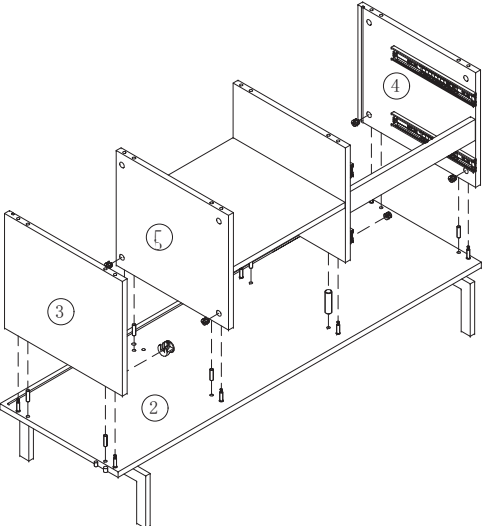


STEP 9:

					
B	Ø15x11.5	8pcs	C	Ø8x30	8pcs

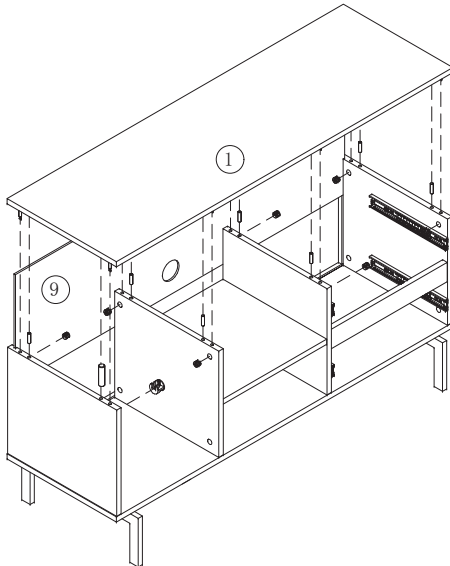



STEP 10:

		
N	/	8pcs

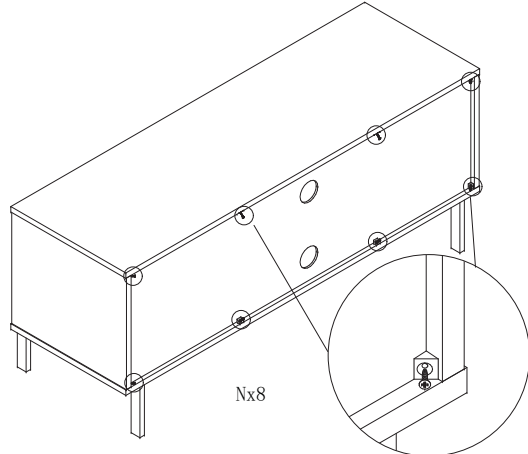


STEP 11:


			
D	E	K	F
ø12x10mm	M4x14	12"	M4x30
8set	12pcs	2set	8pcs

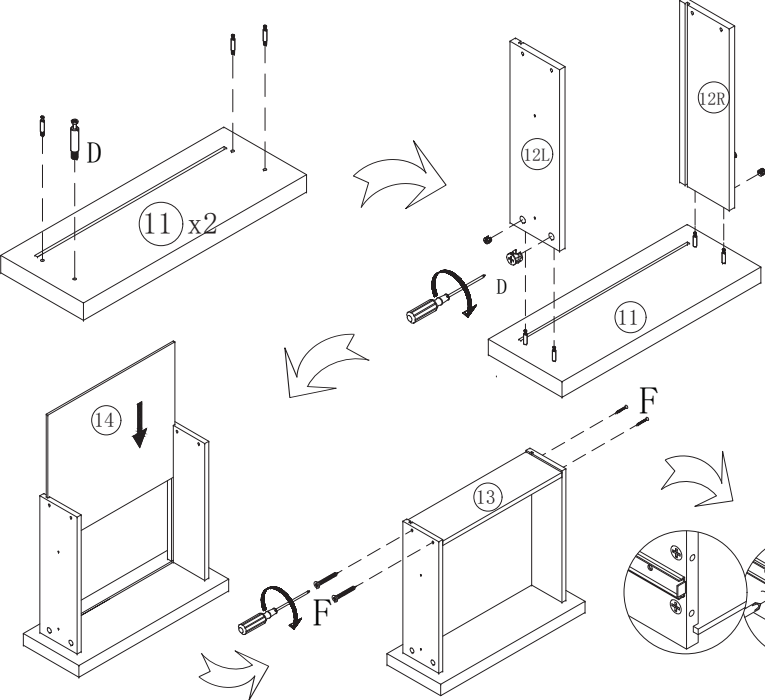


STEP 12:

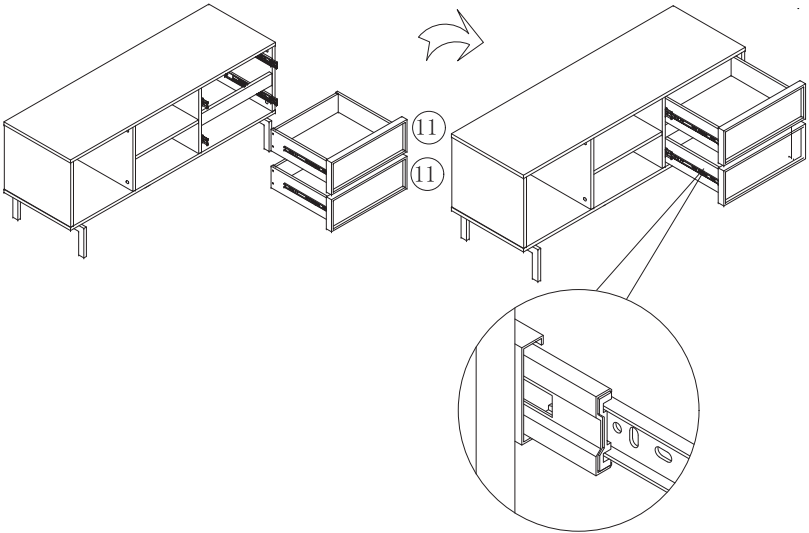



STEP 13:


M
x6
2set

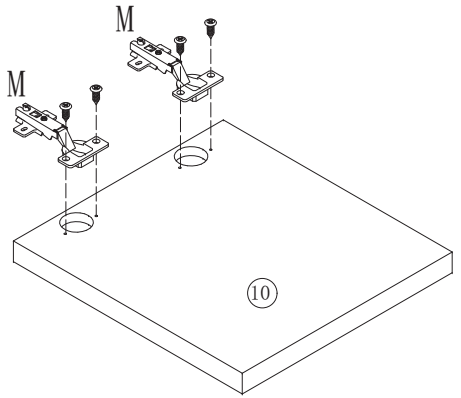


STEP 14:


M
x6
2set

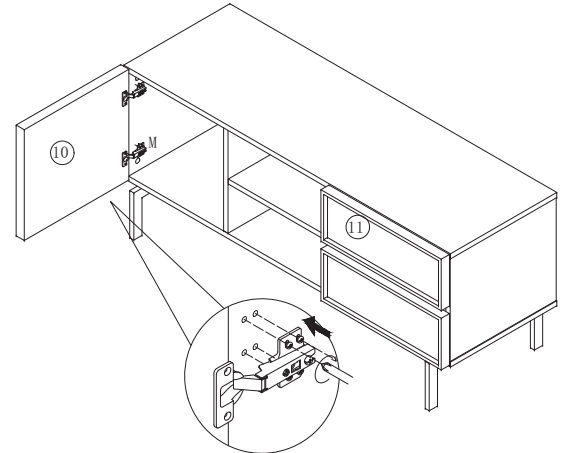

STEP 15:

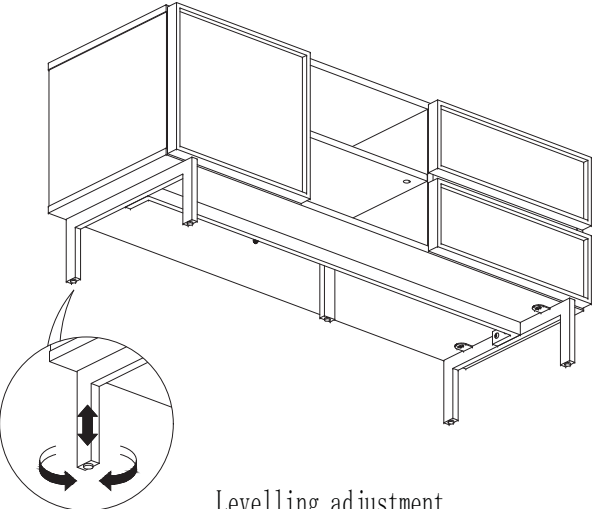

Levelling adjustment

STEP 16:


Z
ø20
22pcs

