














Assembly Instruction

								
A	M6*40	30pcs	B	Ø15*11.5	30pcs	C	Ø8*30	22pcs
 								
D	Ø12*10mm	15set	E	M4*14	36pcs	F	M4*30	18pcs
								
K	12"	3set	J	/	6pcs	I	M4*20mm	6pcs
								
R	20*20*600	2pcs	Q	M6*30mm	20pcs	P	/	2set

Q M6*30mm 12pcs

9L

2L



9R


2R


K	E
12"	M4*14
3set	18pcs

Diagram showing the assembly of the 2L&2R component. The main assembly consists of two long metal rails (K) and two shorter metal rails (K'). The rails are shown being pulled apart to split the gliders into two pieces. A circular inset shows a close-up of the glider being split. The final assembly shows the rails (K and K') being secured to a base plate (2L&2R) using screws (E).

12"

	
A	M6*40 8pcs

	
C	ø8*30 4pcs



The diagram illustrates the assembly of the cabinet and panel. It shows the following components and their assembly order:




- 2L**: The main cabinet body.
- 4**: A horizontal rail or support bar.
- 5**: A vertical support or divider.
- 6**: A horizontal rail or support bar.

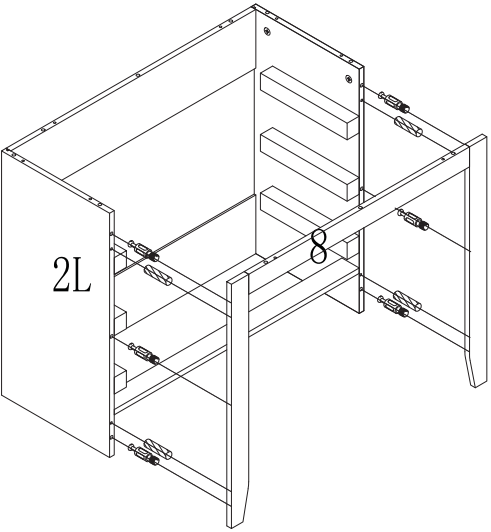
The assembly steps are as follows:

- Install screws **A** (M6*40) into the cabinet body **2L** and the horizontal rail **4**.
- Install screws **B** (ø15*11.5) into the cabinet body **2L** and the horizontal rail **6**.
- Install screws **C** (ø8*30) into the cabinet body **2L** and the vertical support **5**.




C	Ø8*30	2pcs
---	-------	------

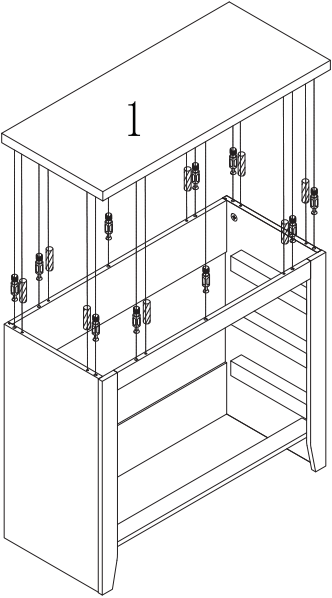
STEP 5:

		
A	M6*40	6pcs
B	Ø15*11.5	6pcs
C	Ø8*30	4pcs









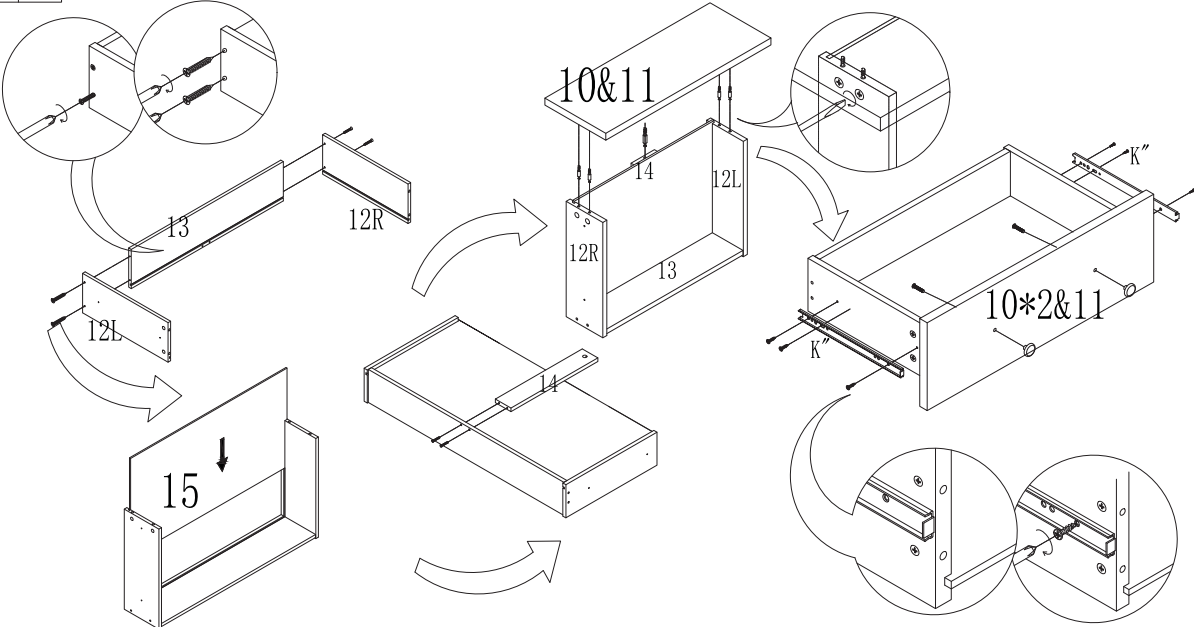
STEP 6:

		
A	M6*40	10pcs
B	Ø15*11.5	10pcs
C	Ø8*30	8pcs

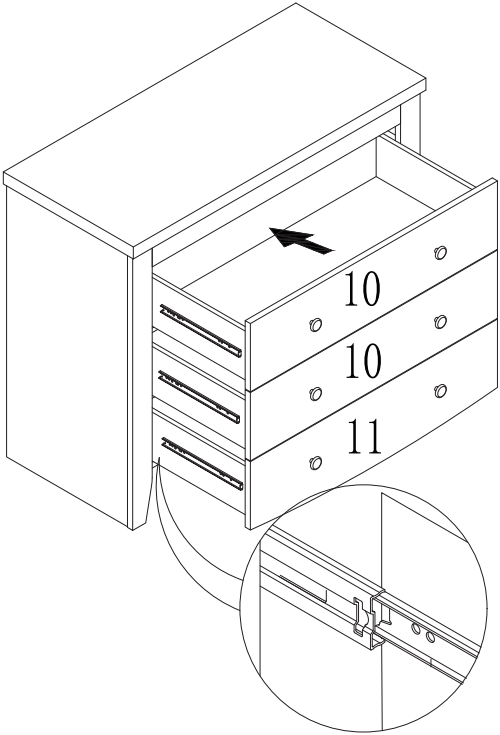


STEP 7:




					
D	Ø12*10	15set	E	M4*14	18pcs
F	M4*30	18pcs	K	12"	3set
J	/	6pcs	I	M4*20mm	6pcs

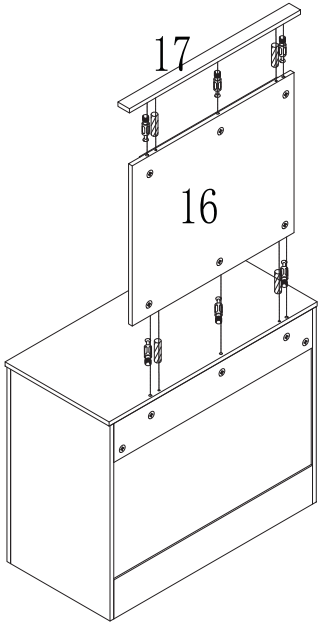


STEP 8:





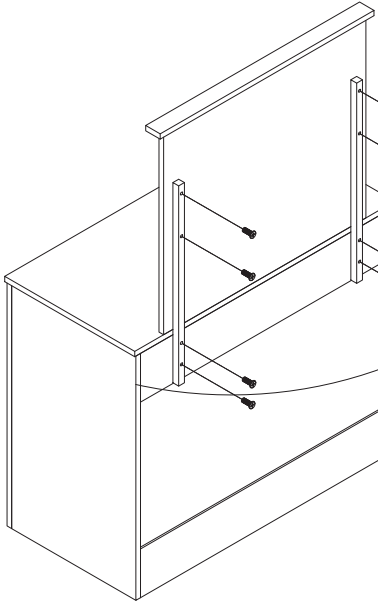
STEP 9:

		
A	M6*40	6pcs
B	Ø15*11.5	6pcs
C	Ø8*30	4pcs






STEP 10:

					
R	20*20*600	2pcs	Q	M6*30mm	8pcs



STEP 11:

		
P	/	2set

Wall fixing: You may need a different type of wall fixing. Please consult your furniture seller due to you may have a different type of wall.

