

Scandi Nordic Shell Chair Assembly Manual

1, Take out all the chair parts and check the quantity



| | | | | | |
|------------------|-----|-----------------------|----|--------------------|----|
| ① Long screws | X14 | ⑥ black metal bracket | X1 | ⑪ Seat Cushion | X1 |
| ② Short screws | X14 | ⑦ Front leg | X1 | ⑫ Backrest cushion | X1 |
| ③ Screw gasket | X10 | ⑧ Back leg | X1 | | |
| ④ Allen key | X1 | ⑨ Backrest board | X1 | | |
| ⑤ Anti-slip pads | X3 | ⑩ Large curved board | X1 | | |

*** Attention:**

- ☐ Screws are divided into two sizes, long and short, and must not be mixed.
- ☐ Electrical Screwdriver is not recommended.

2, Take out the front and back legs and put them together as shown below.



3, Turn over and place the black metal bracket to the hole position, then tighten with 6 short screws and 6 screw gaskets.



* Attention:

☐ Do not tighten the screws at this step, tighten after the next step.

4, Align the large curved board with 8 longer screws, no gasket needed.



* Attention:

- ☐ Do not tighten the screws until after they are all aligned.


5, Align the seat cushion with 4 long screws and 4 gaskets.



ion:

- ☐ The seat cushion has a curvature, and some force is required for alignment.
- ☐ Do not tighten the screws until after they are all aligned.
- ☐ It is recommended to install them diagonally.

6, Align the backrest board with 2 long screws and 4 short screws.

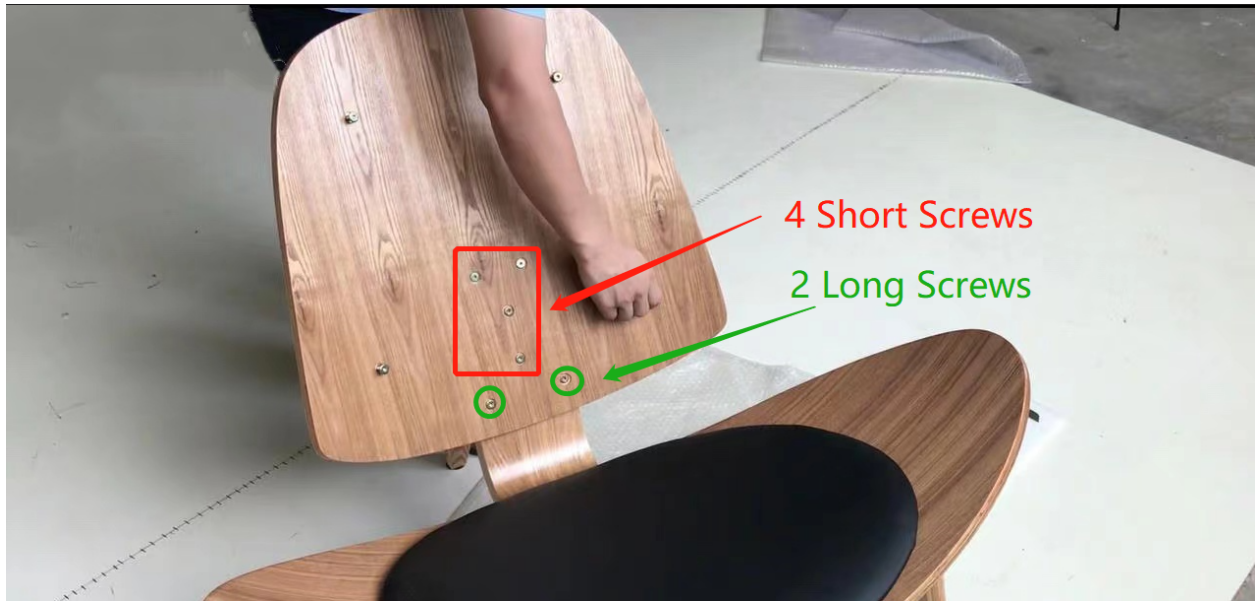

* Attention:

- ☐ Tighten the 4 short screws first, then the 2 long screws.
- ☐ Do not tighten the screws until after they are all aligned.

7, Align the backrest cushion with the 4 short screws. Only screw in partly, leaving some of the thread exposed. Hang the cushion on the 4 screw heads.



* Attention:

- ☐ Do not overtighten the screws of the backrest, there is a risk of screwing through the back panel.

8, Push down on the backrest cushion firmly to lock it in place.

