


Assembly Instructions

Japandi Range

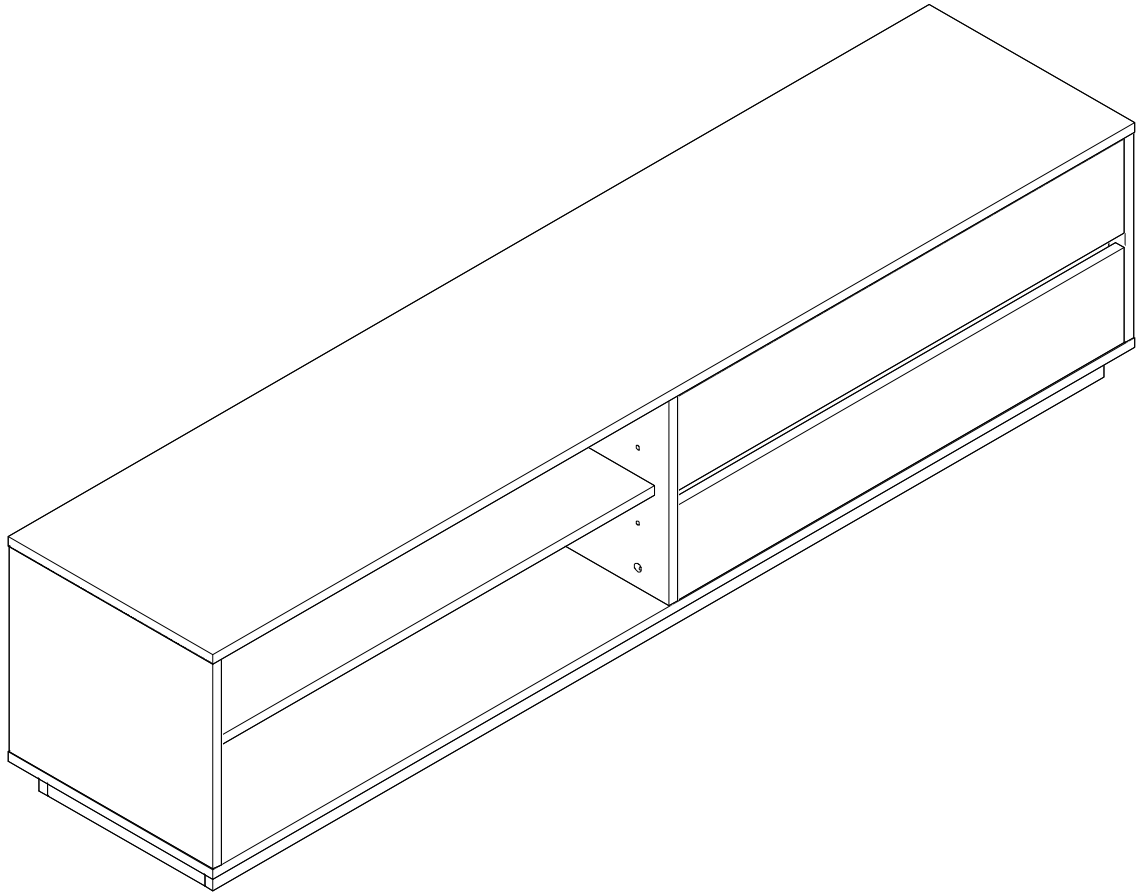

Loft

Product Code









TVM-LOF-JAP-1~9710

Dimensions(W x D x H)


180*40*43cm

Important

Please read through instruction carefully
Before assembly and keep for future reference.

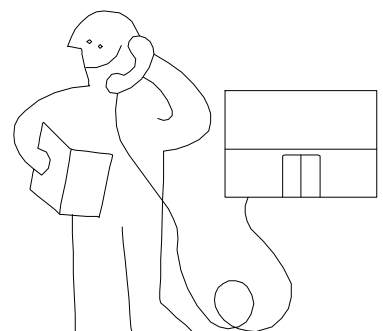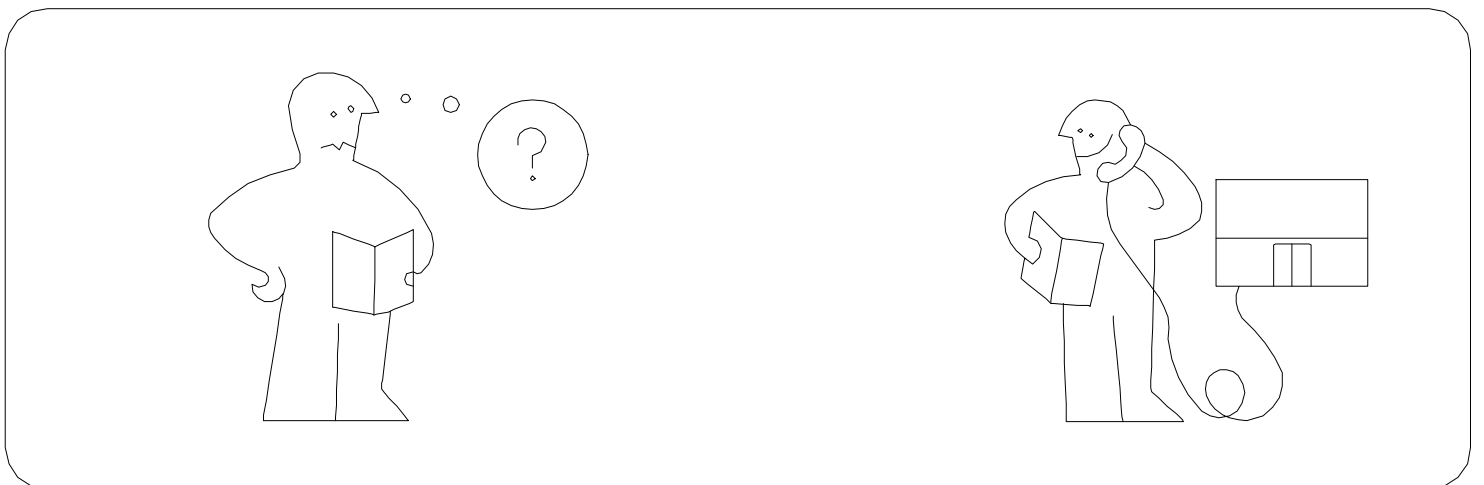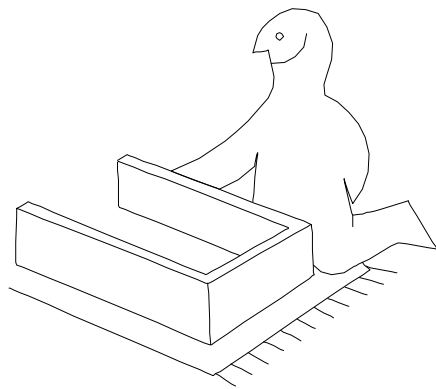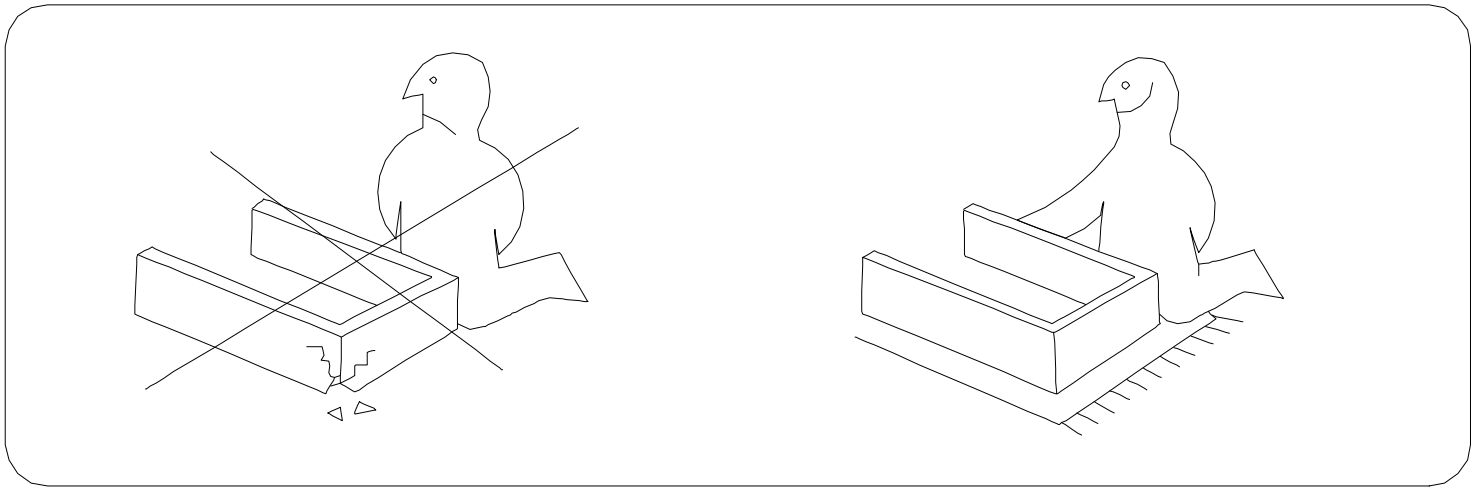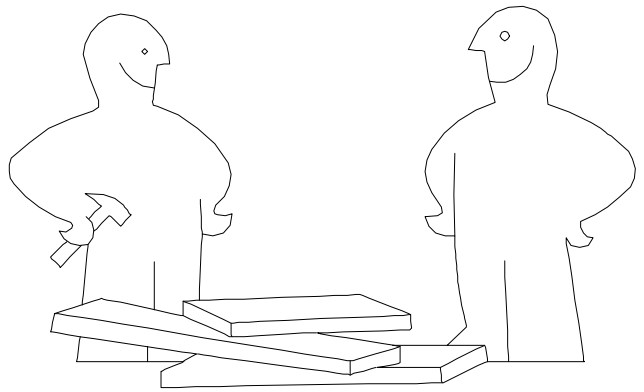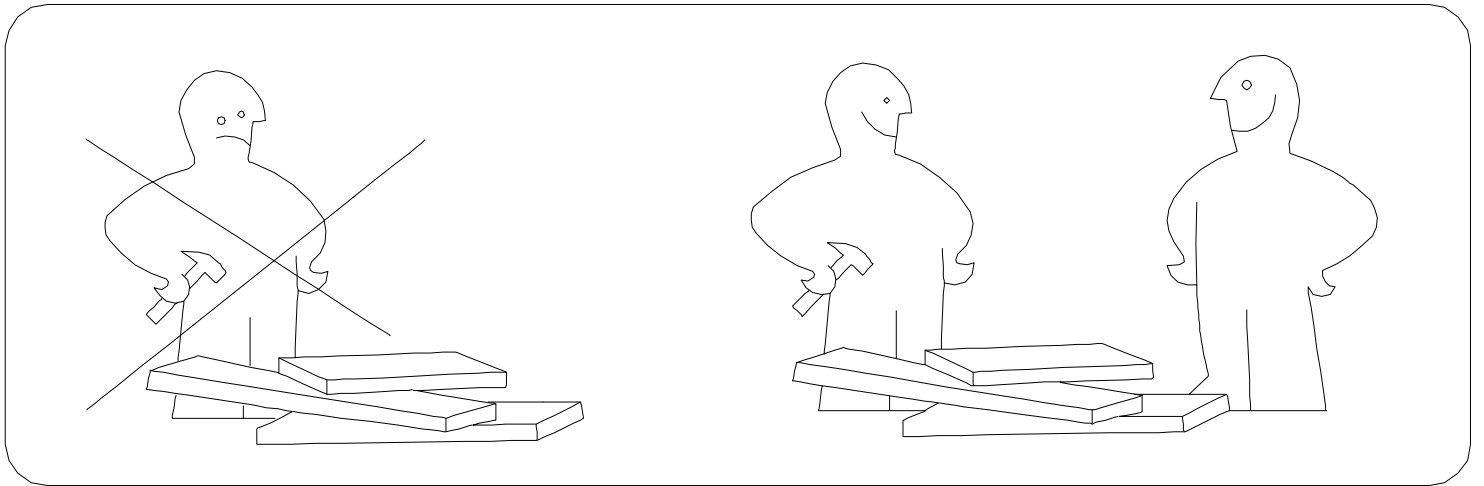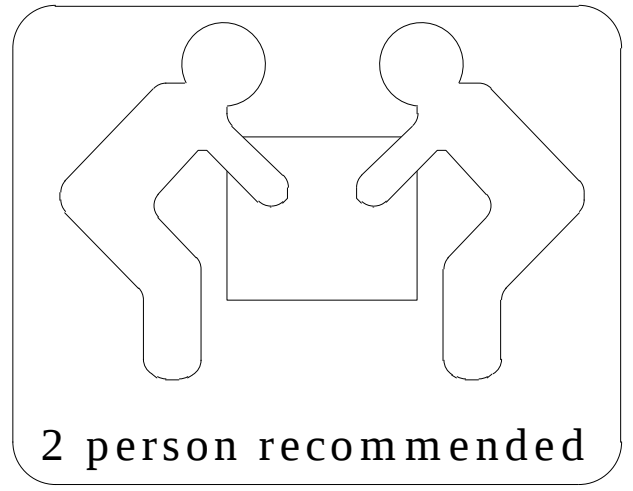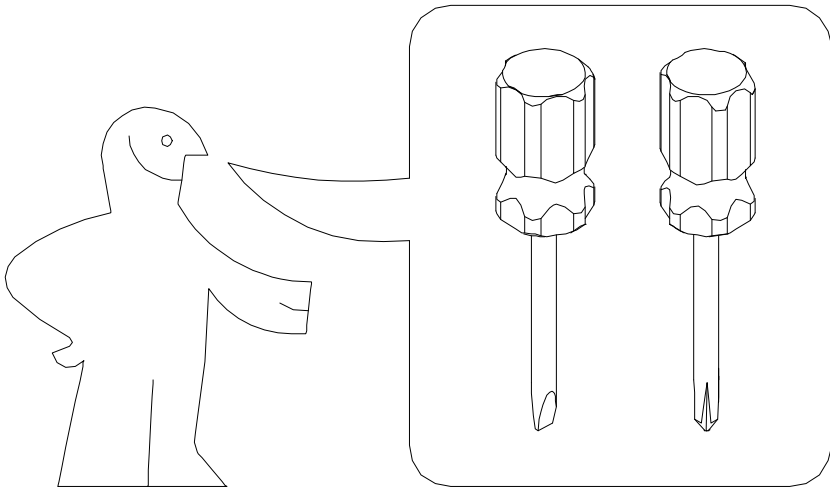


Panel No	Panel Sizes	Quantity		Panel No	Panel Sizes	Quantity
1	1800*400*16	1		10	871*160*16	1
2	1800*400*16	1		11	871*160*16	1
3	318*399*16	1		12	825*80*12	2
4	348*399*16	1		13	338*100*12	2
5	348*399*16	1		14	350*80*12	2
6	885*358*5	1		15	350*80*12	2
7	885*358*5	1		16	835*348*5	2
8	872*350*16	1		17	1740*50*16	2
9	875*60*16	1		18	308*50*16	3

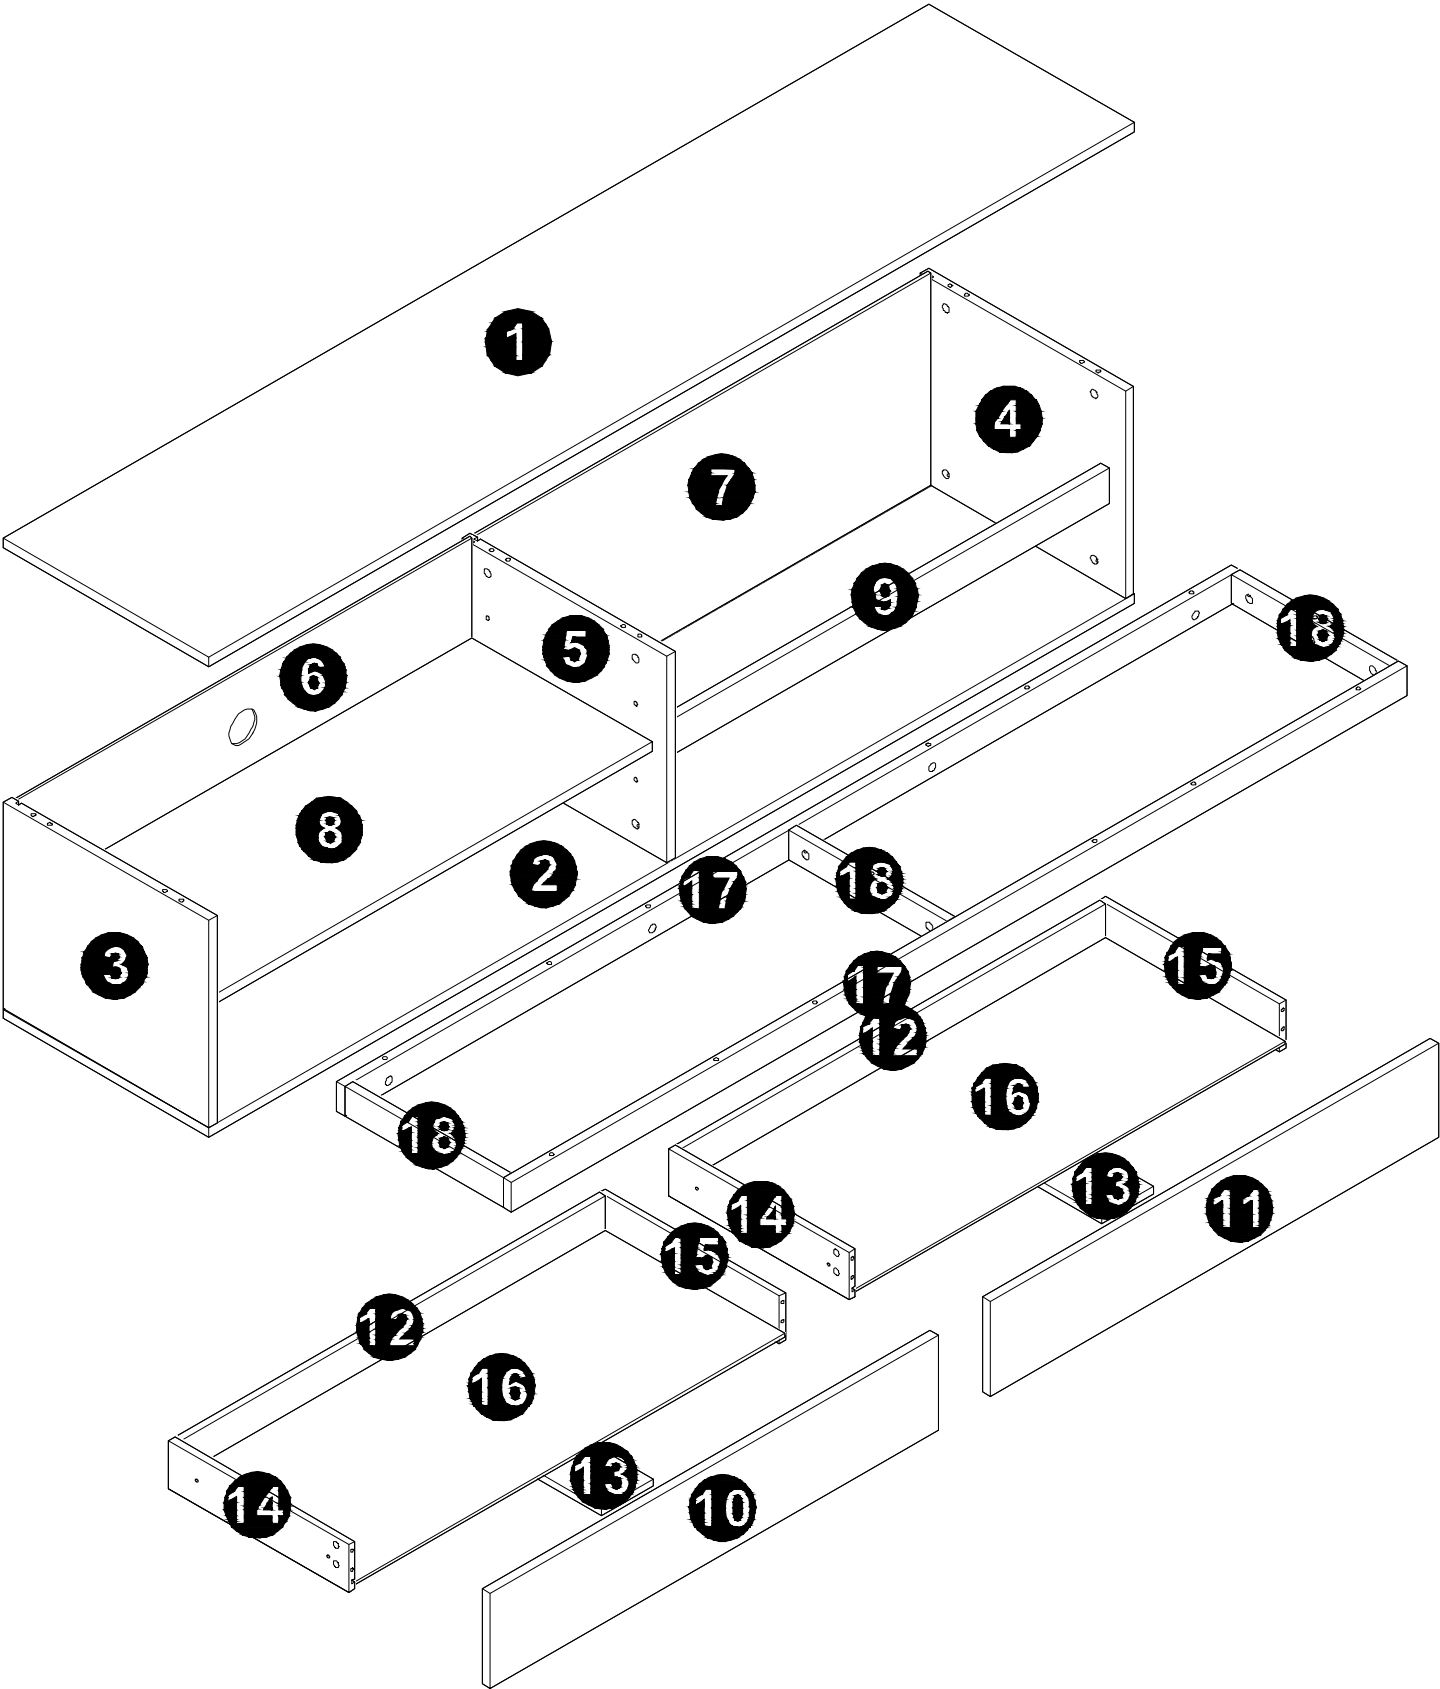


Fittings



A=31




B=18

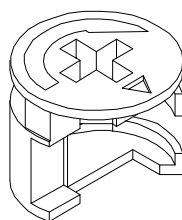


C=31




D=51

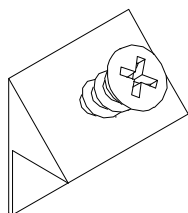


E=8

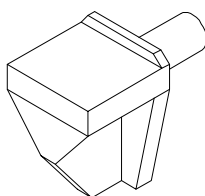

L=4

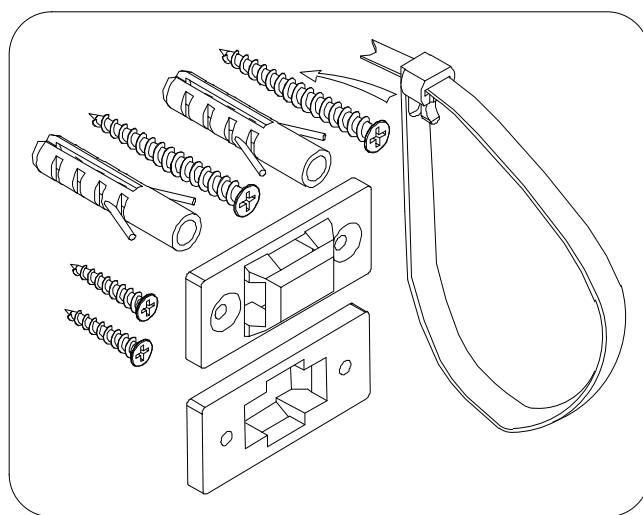


F=1

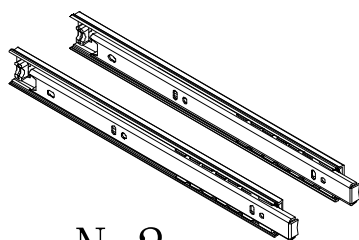

N=2



O=20




P=20






M3. 5*12

V1=16


STEP 1

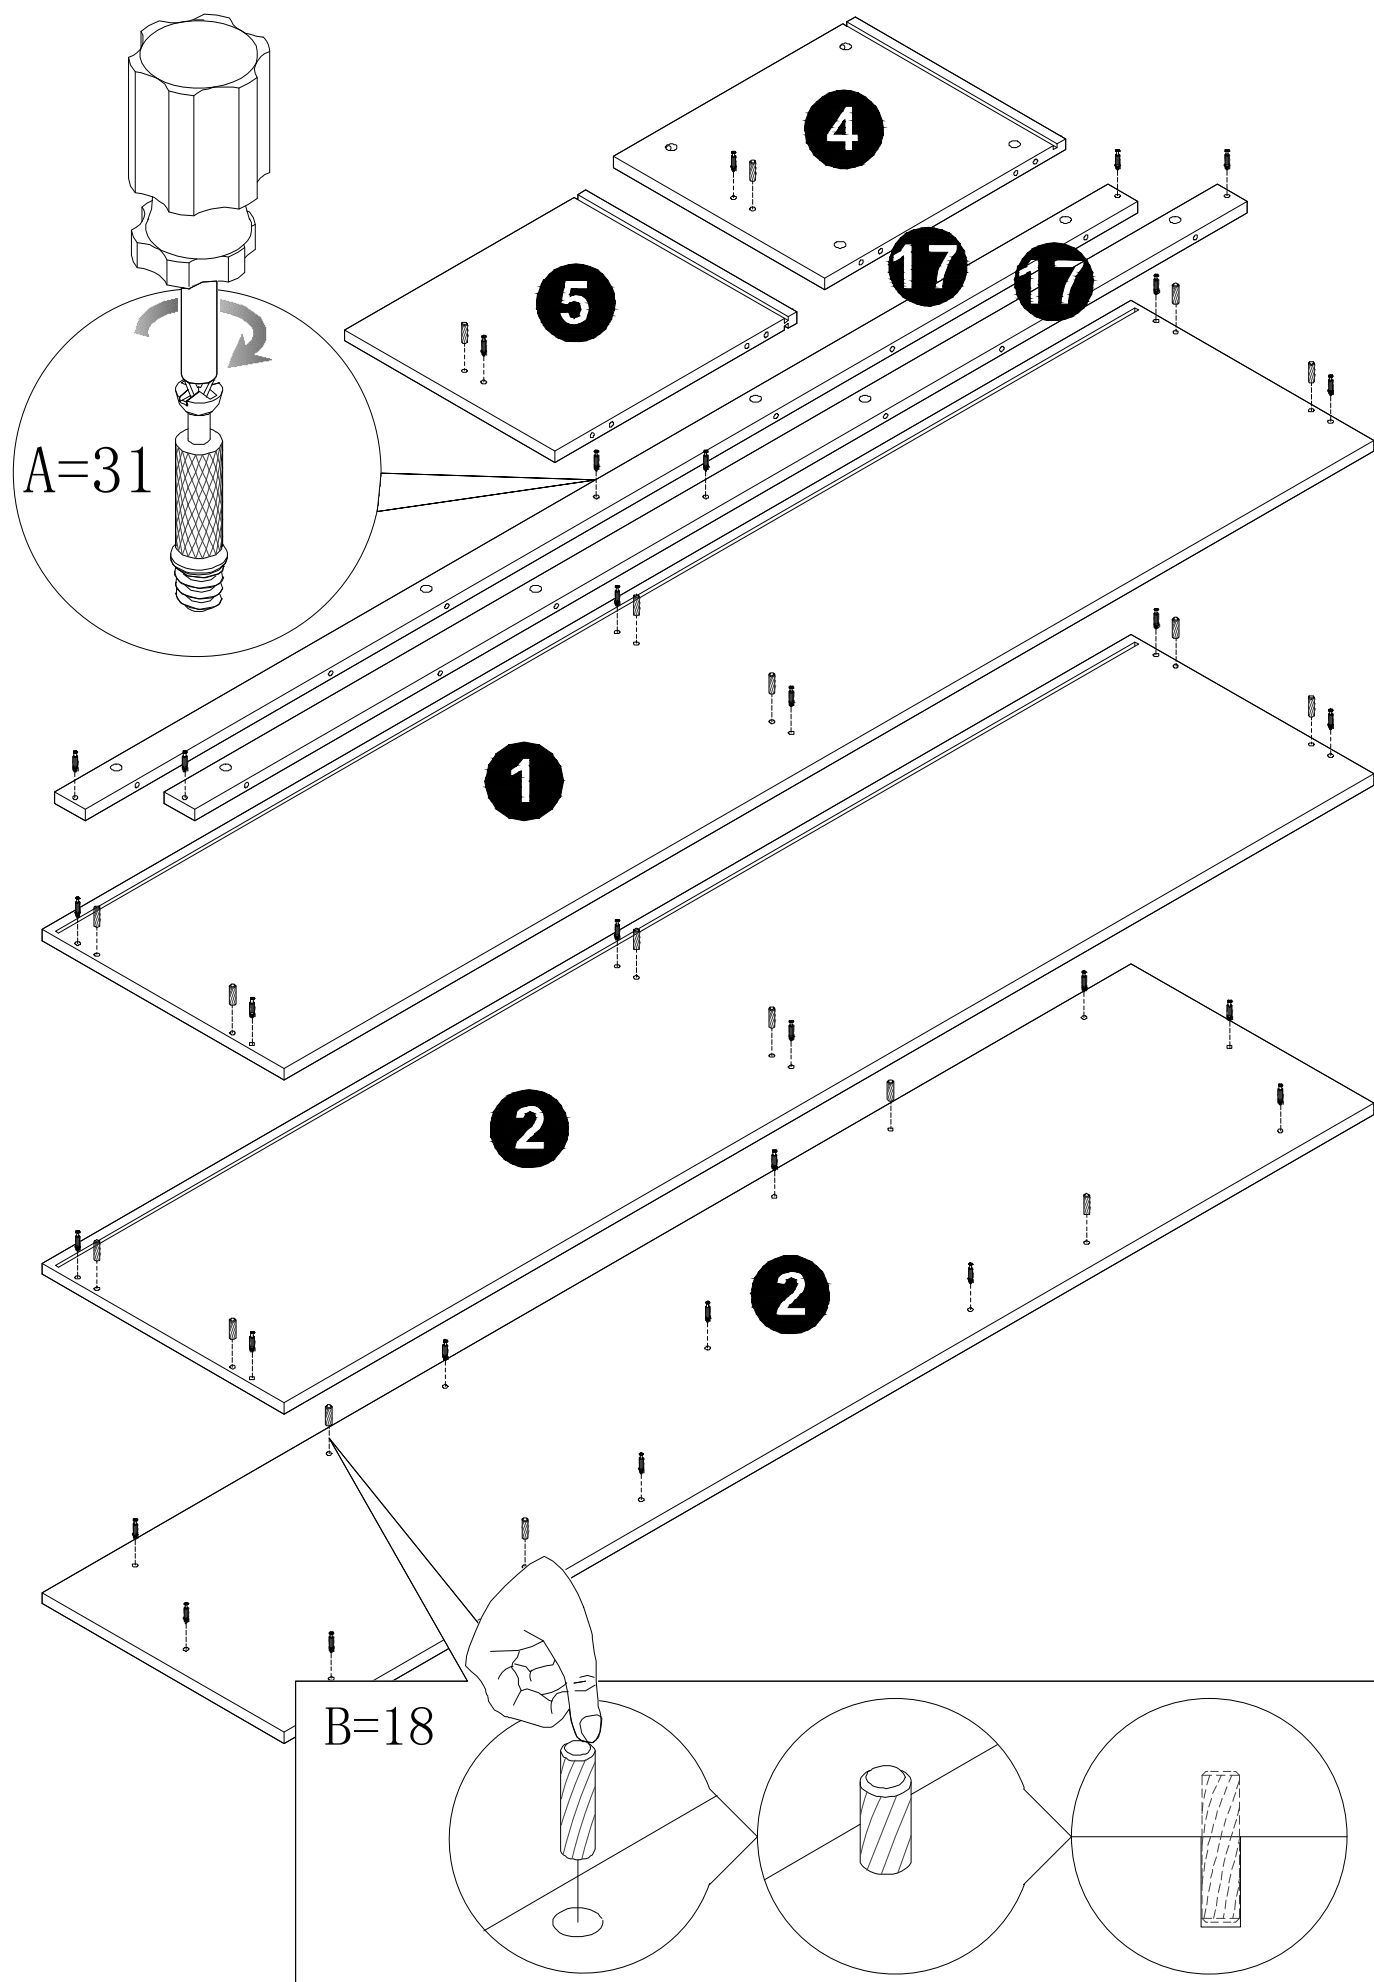



STEP2

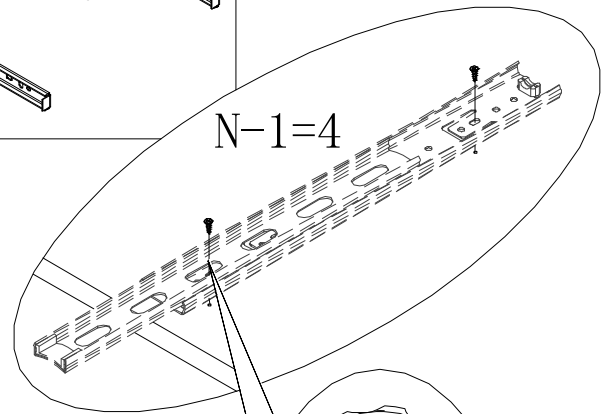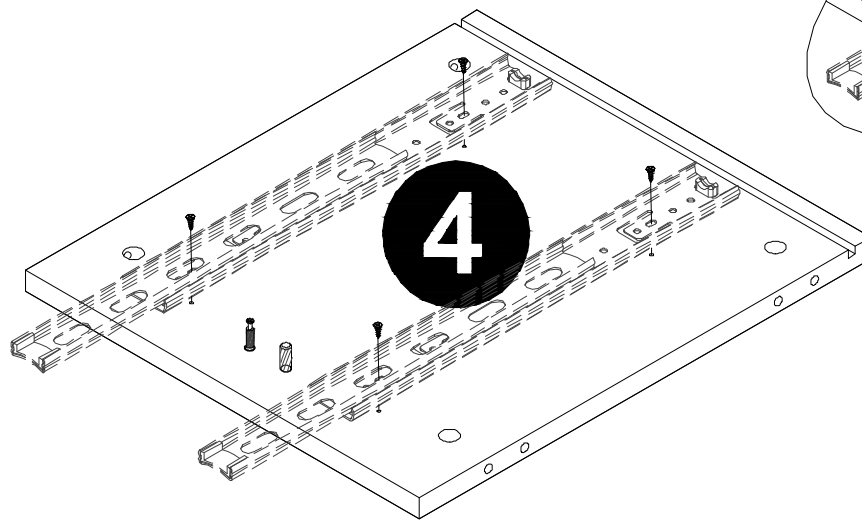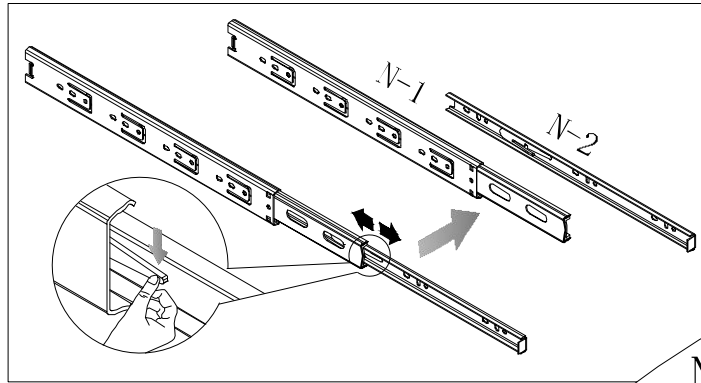

$N-1=4$

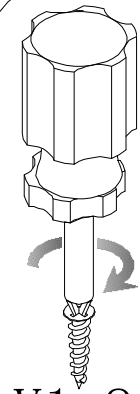

$V1=8$

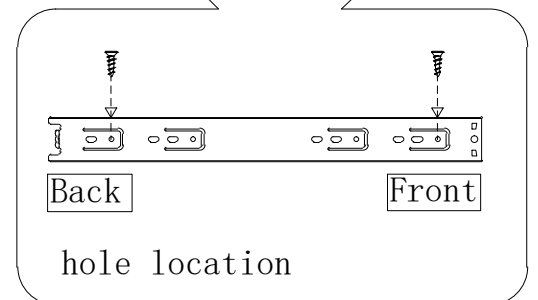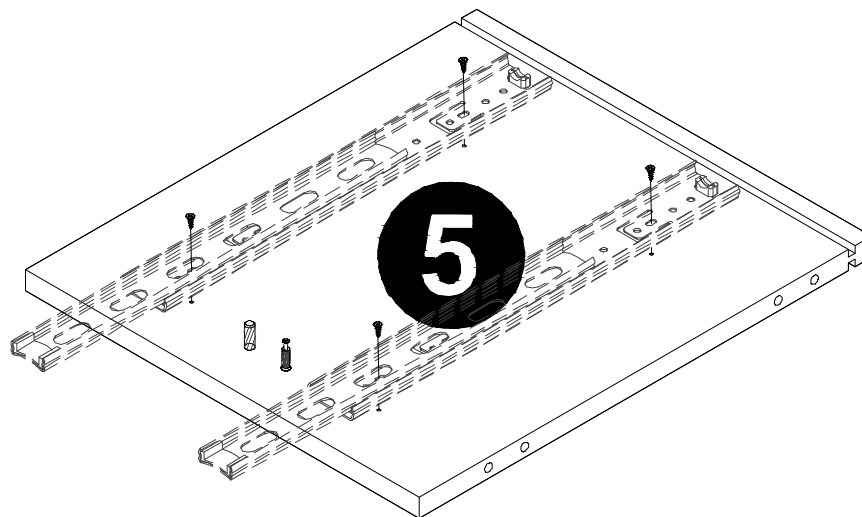


Back


Front

hole location


STEP3

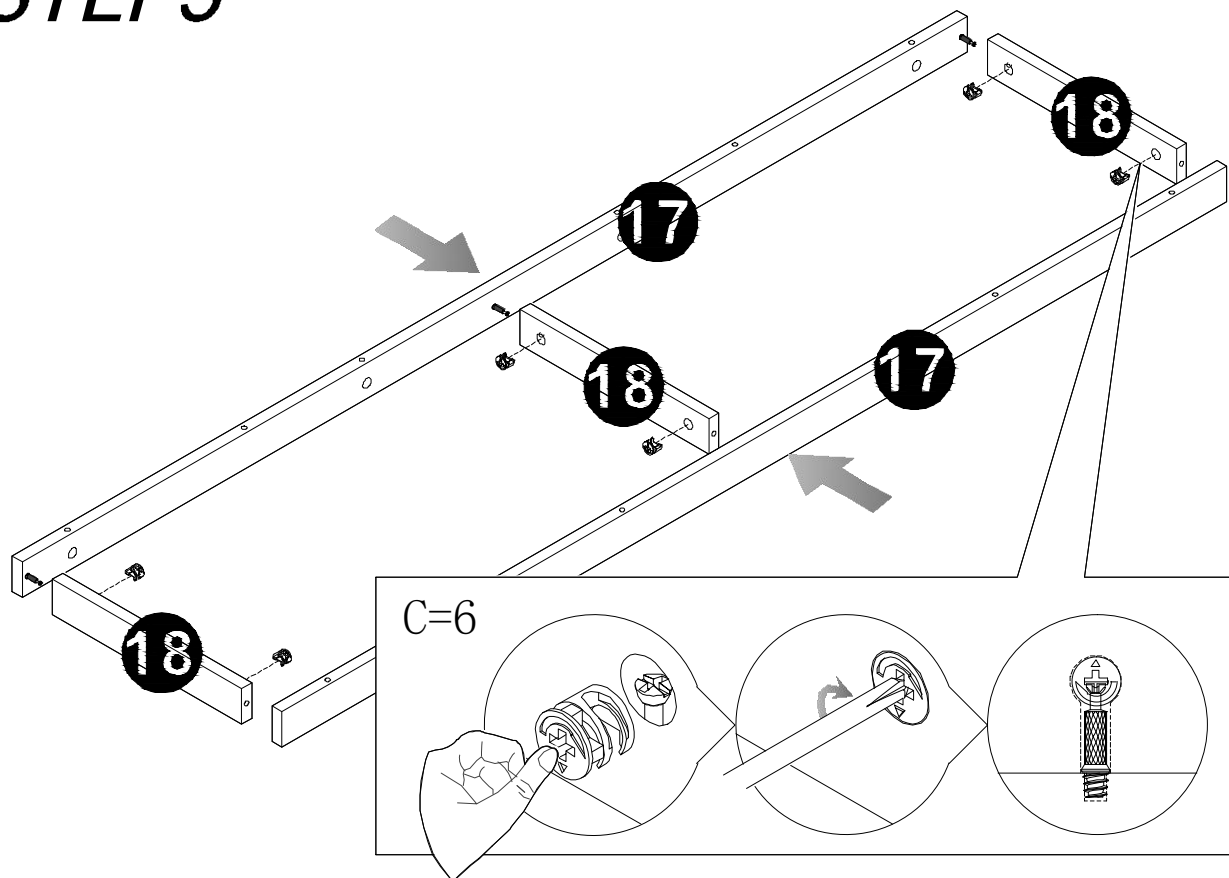


STEP4

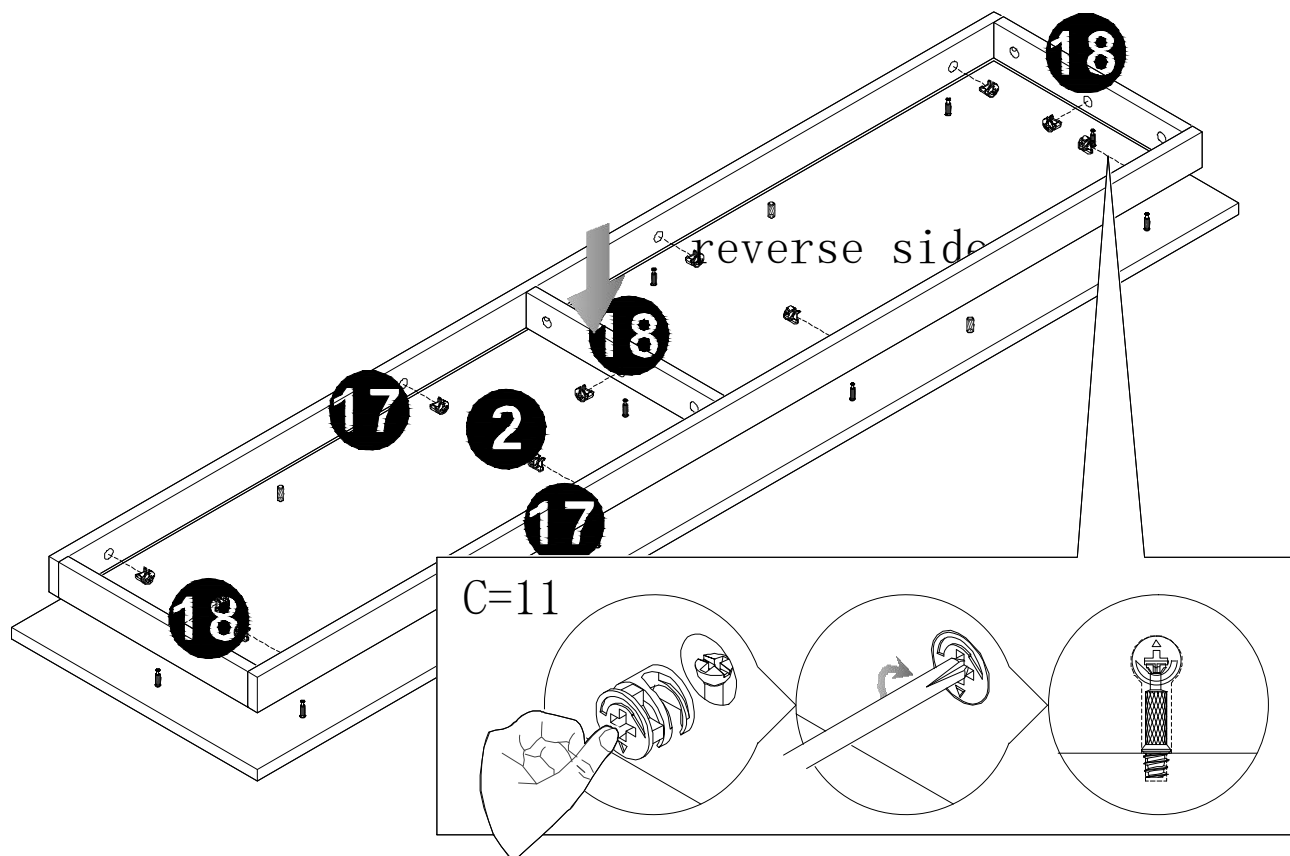


STEP5

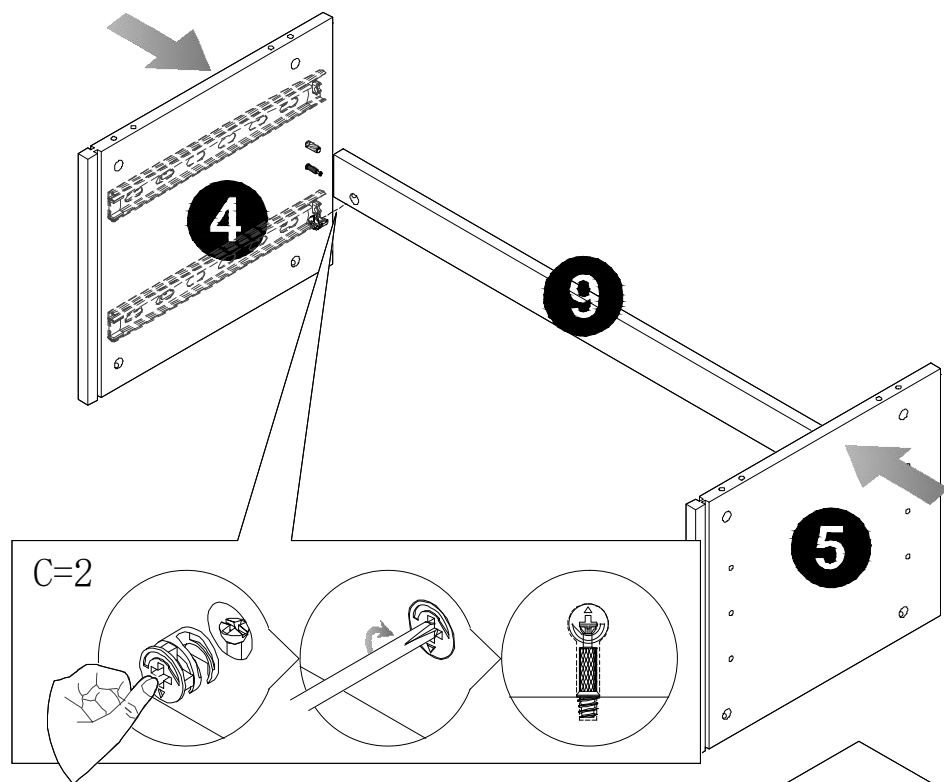


STEP6

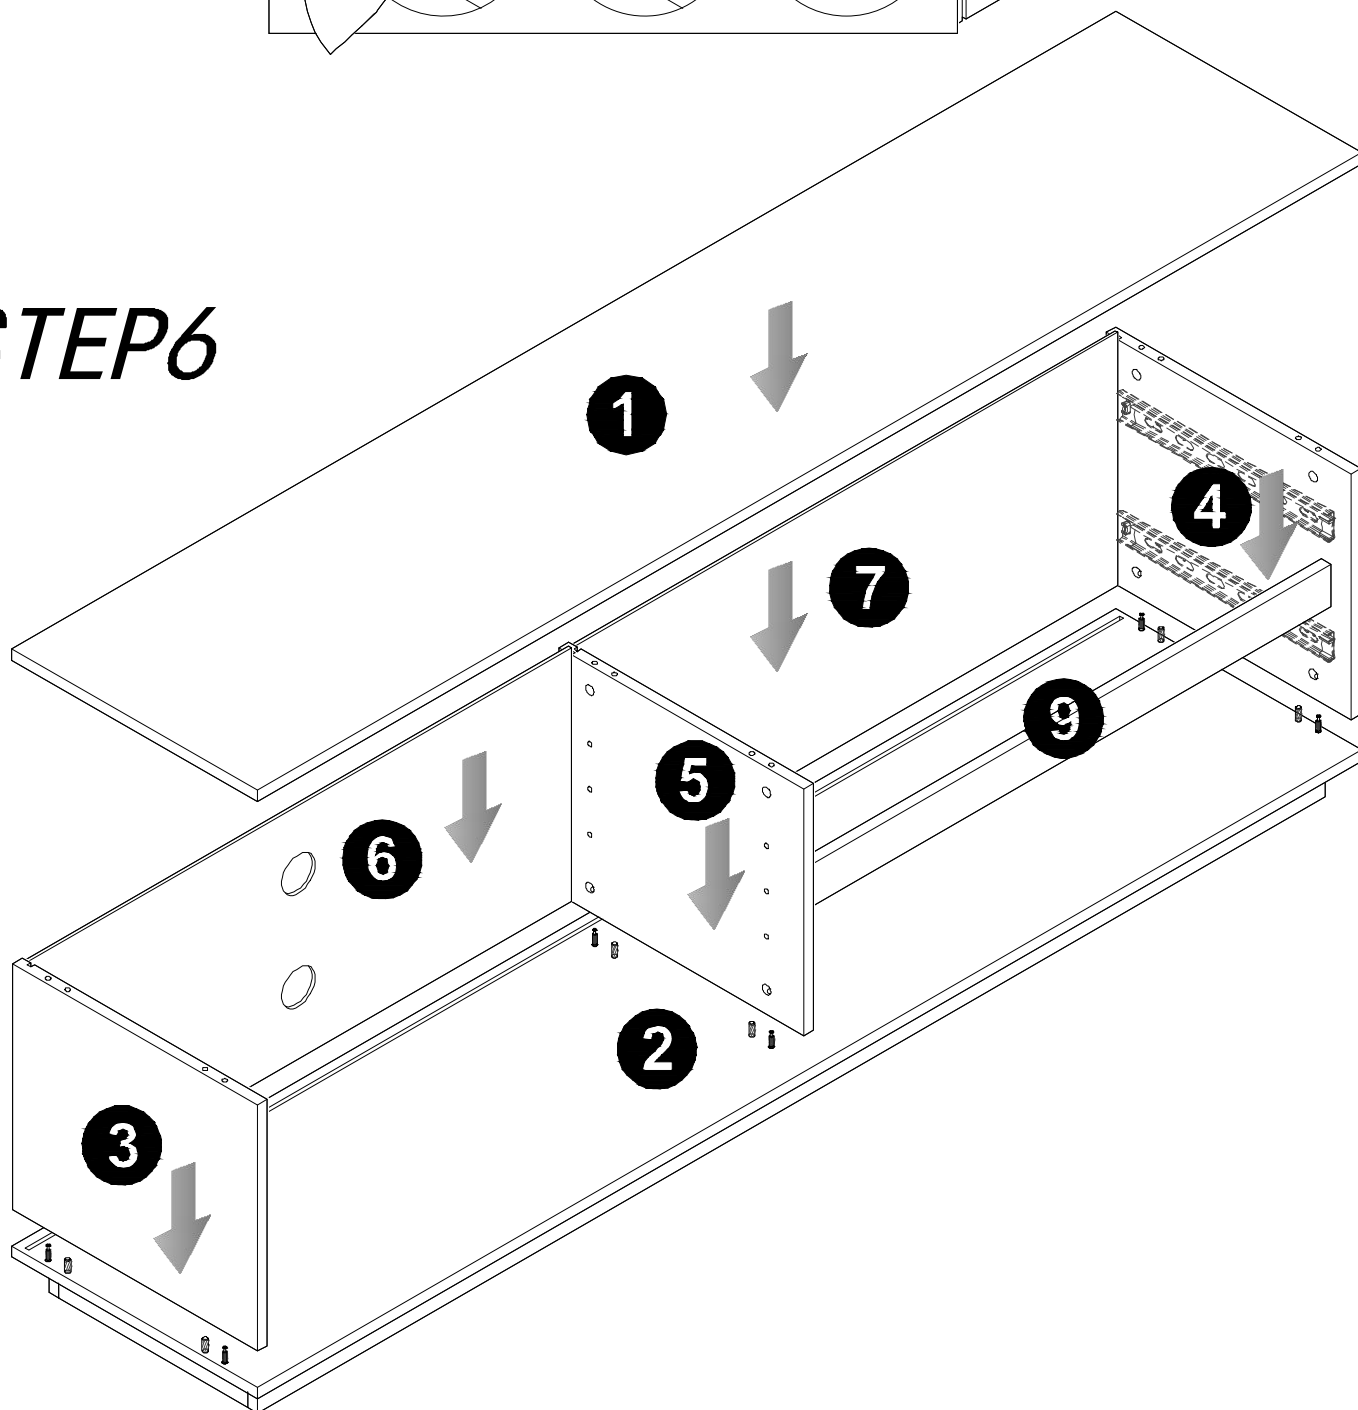


STEP7

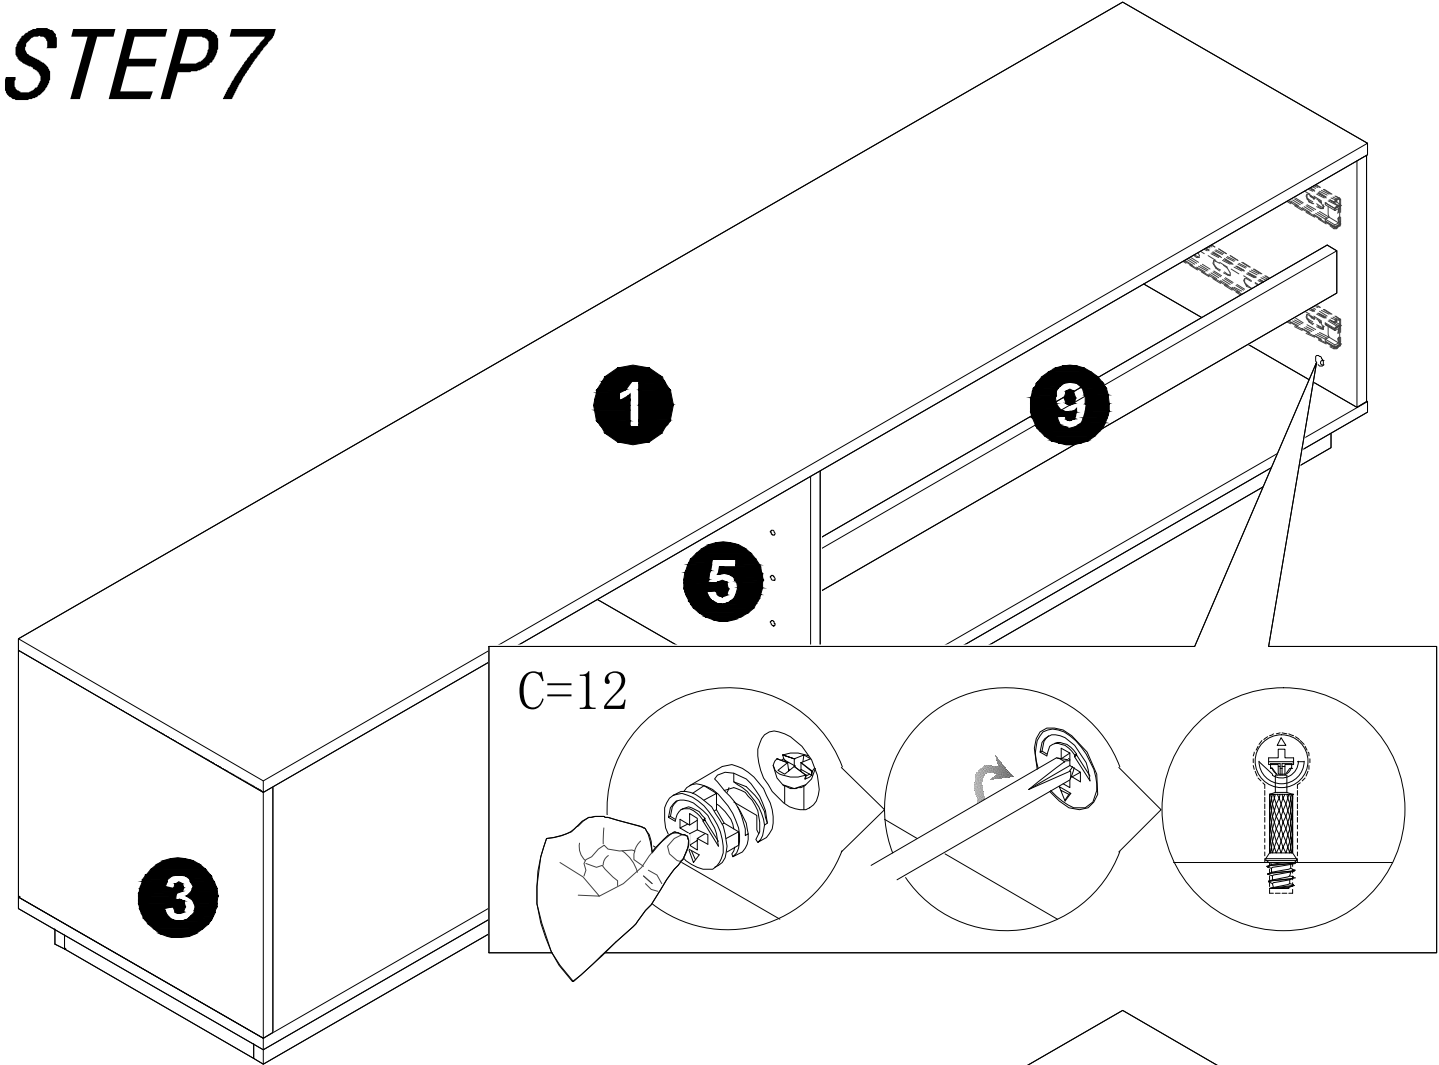


STEP8

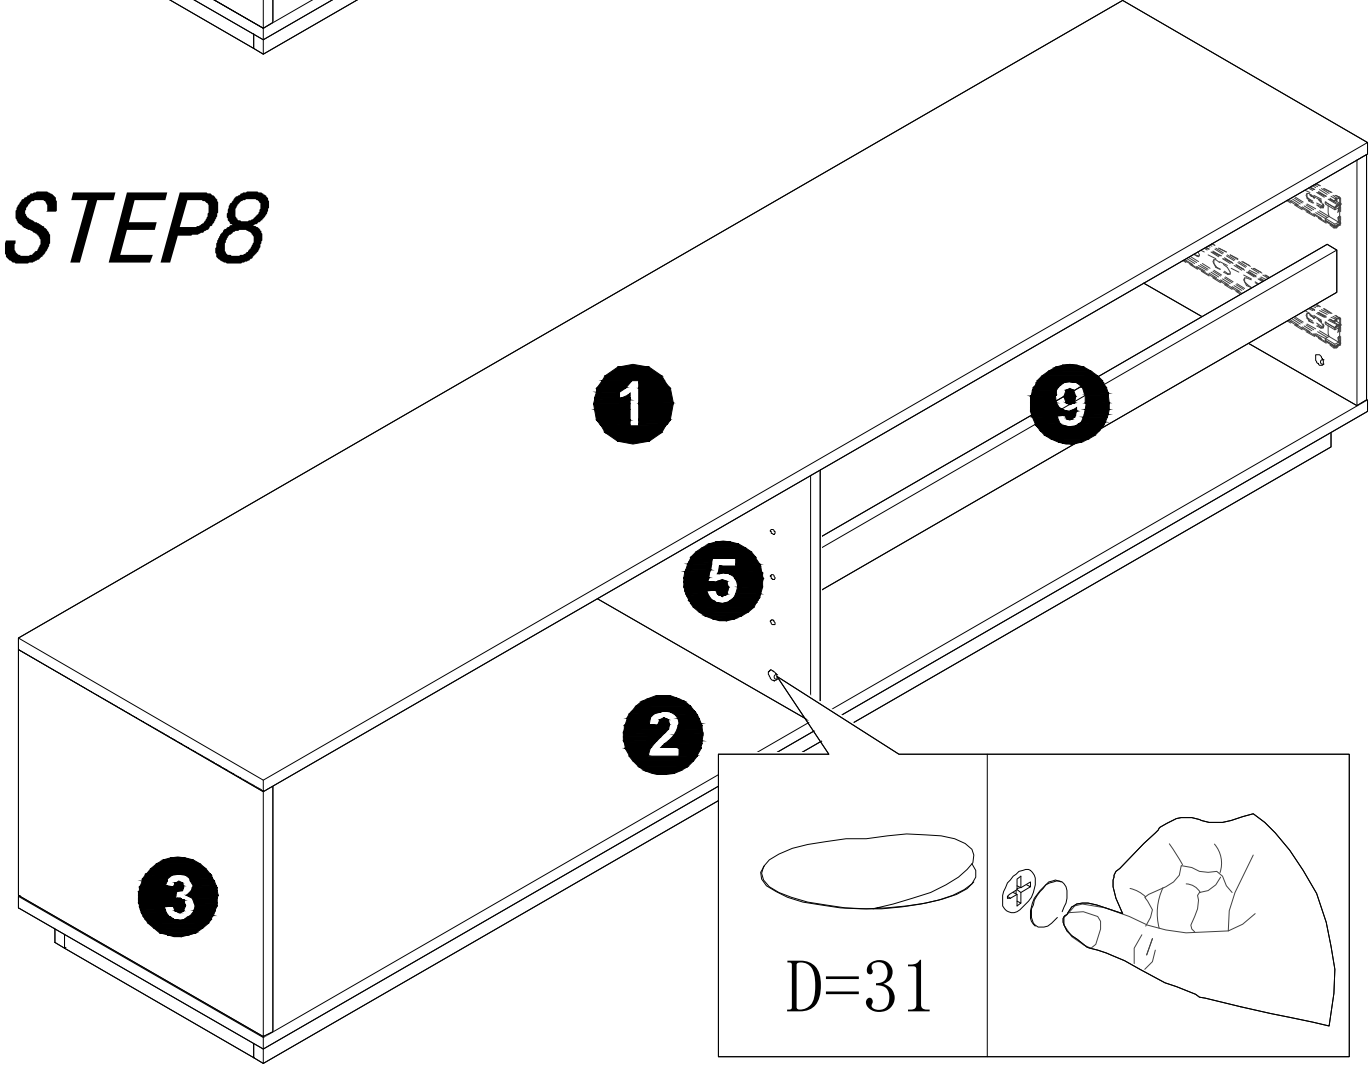

STEP 9

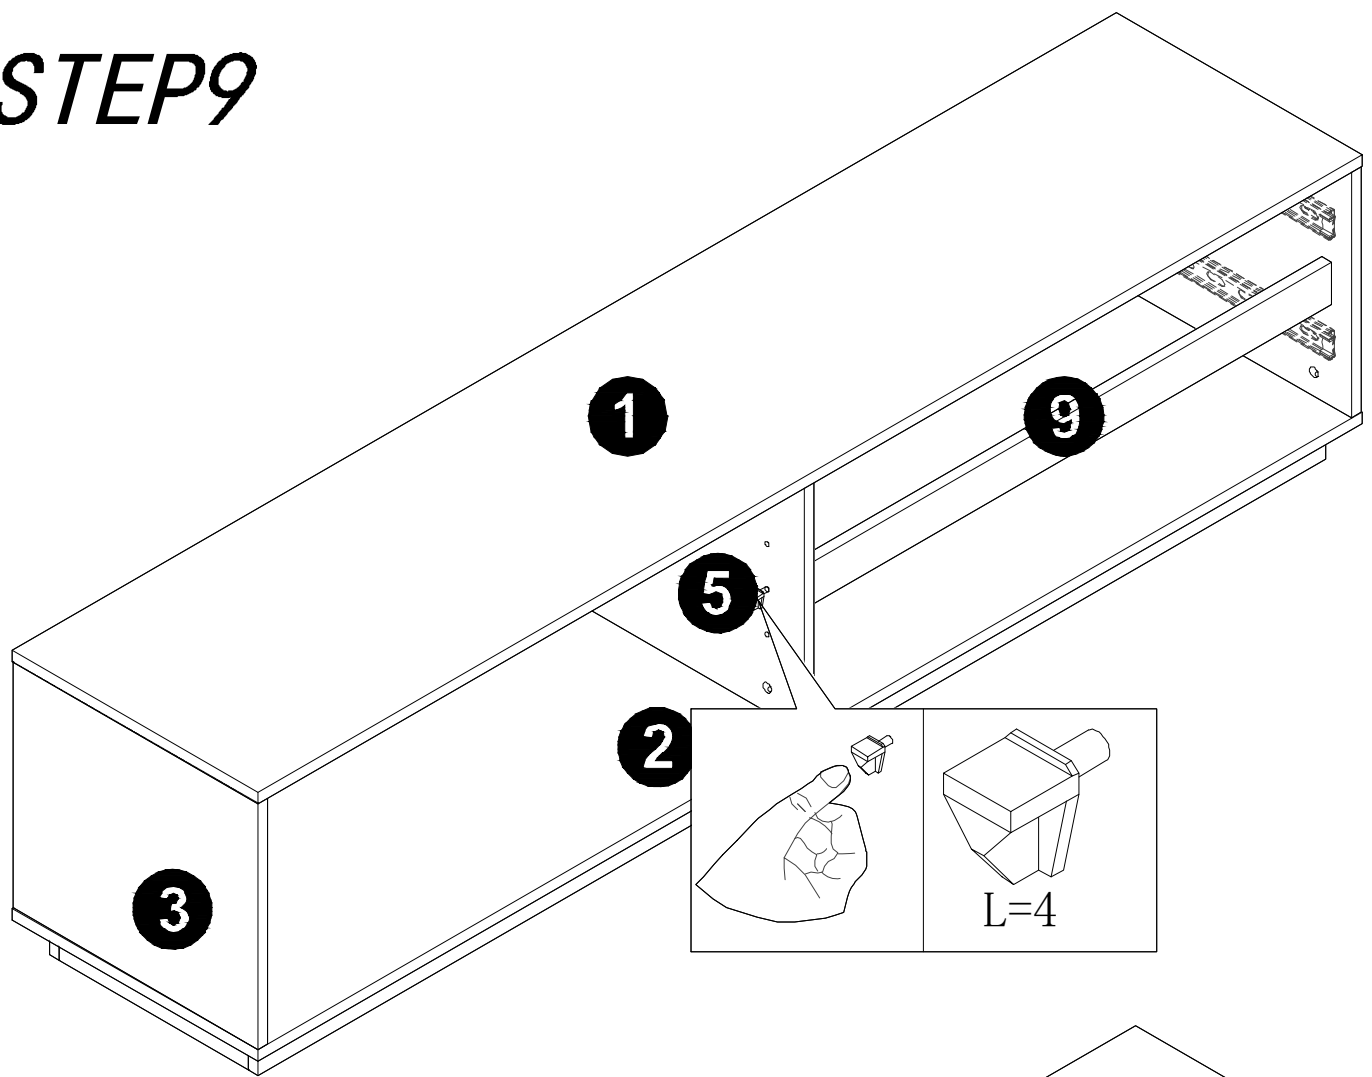


STEP 10

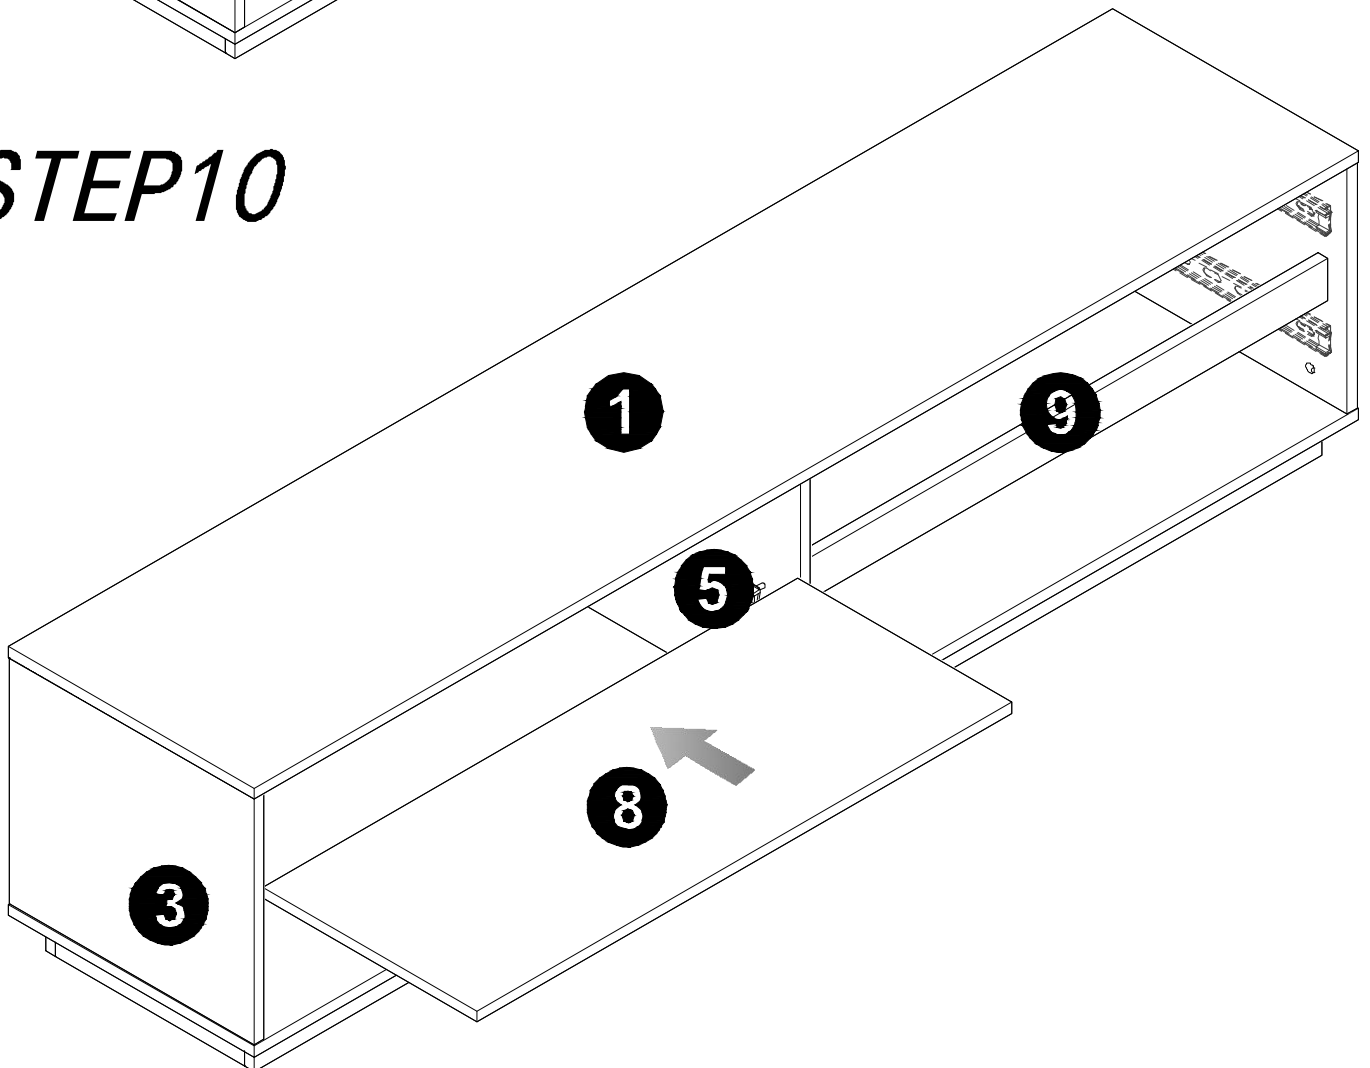


STEP 11


11-1

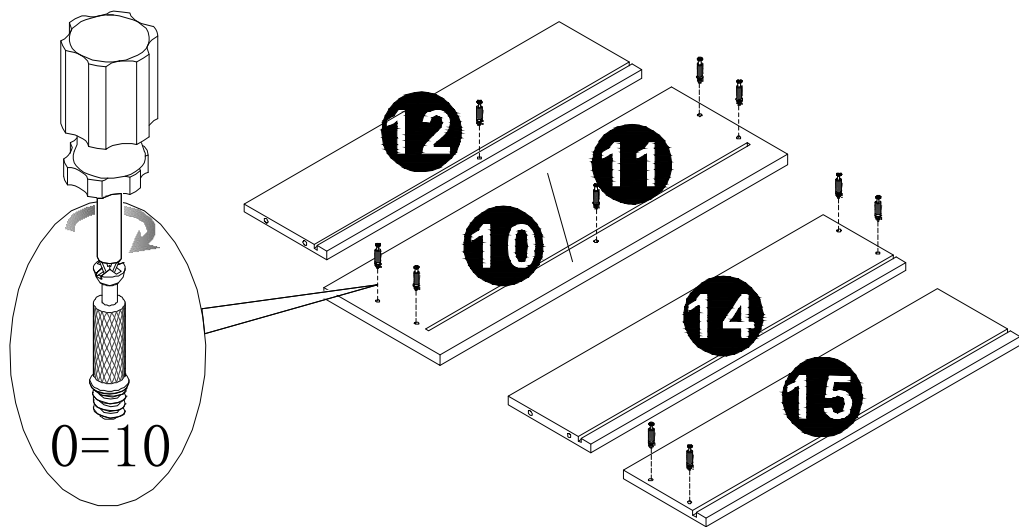

11-2

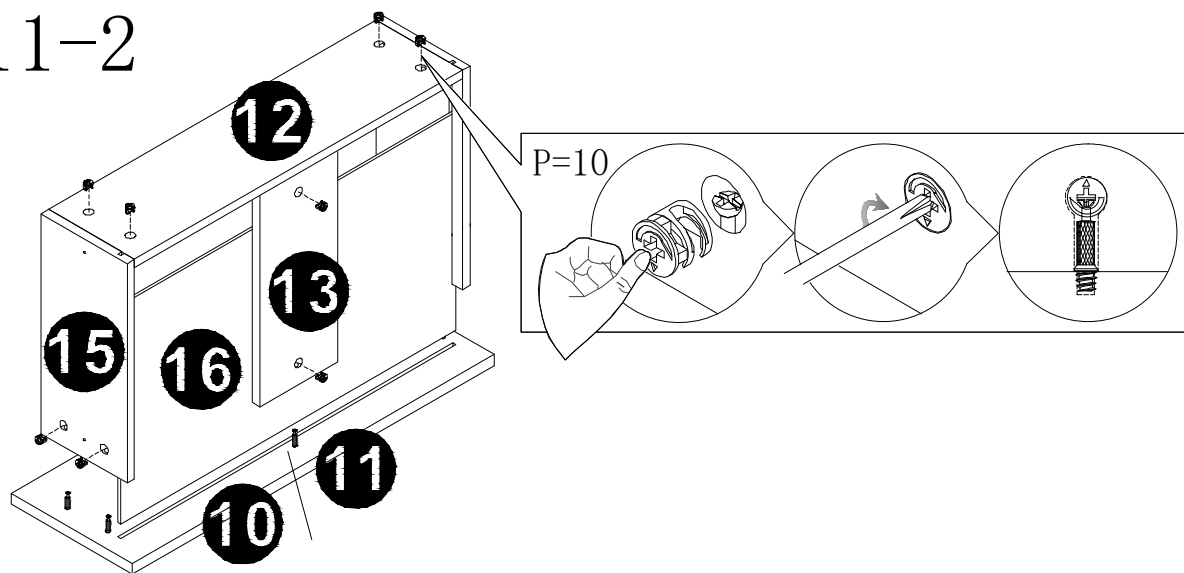


11-3

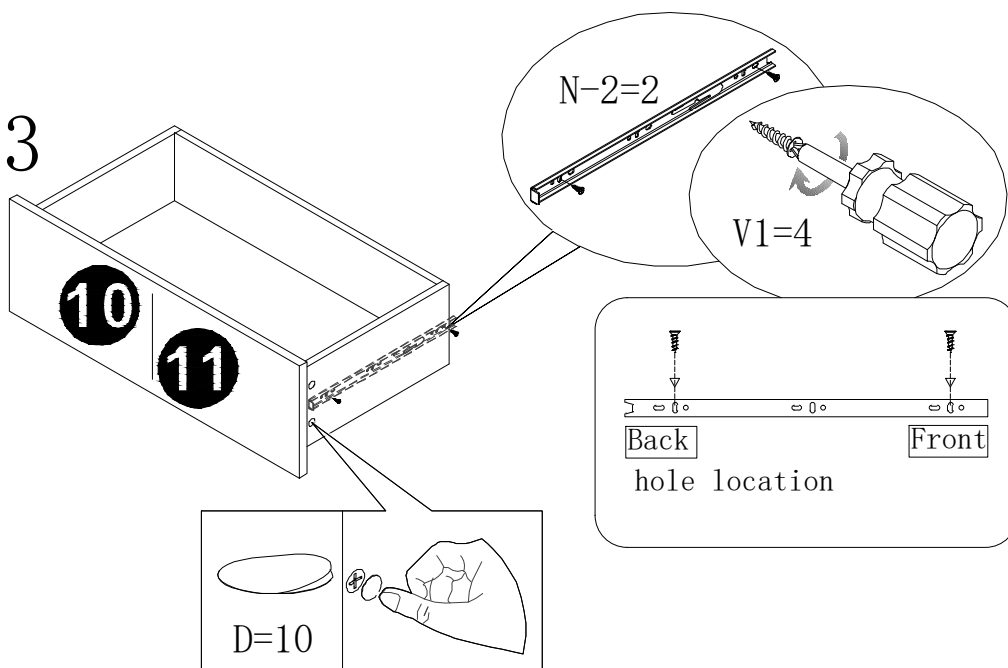


X2


STEP12

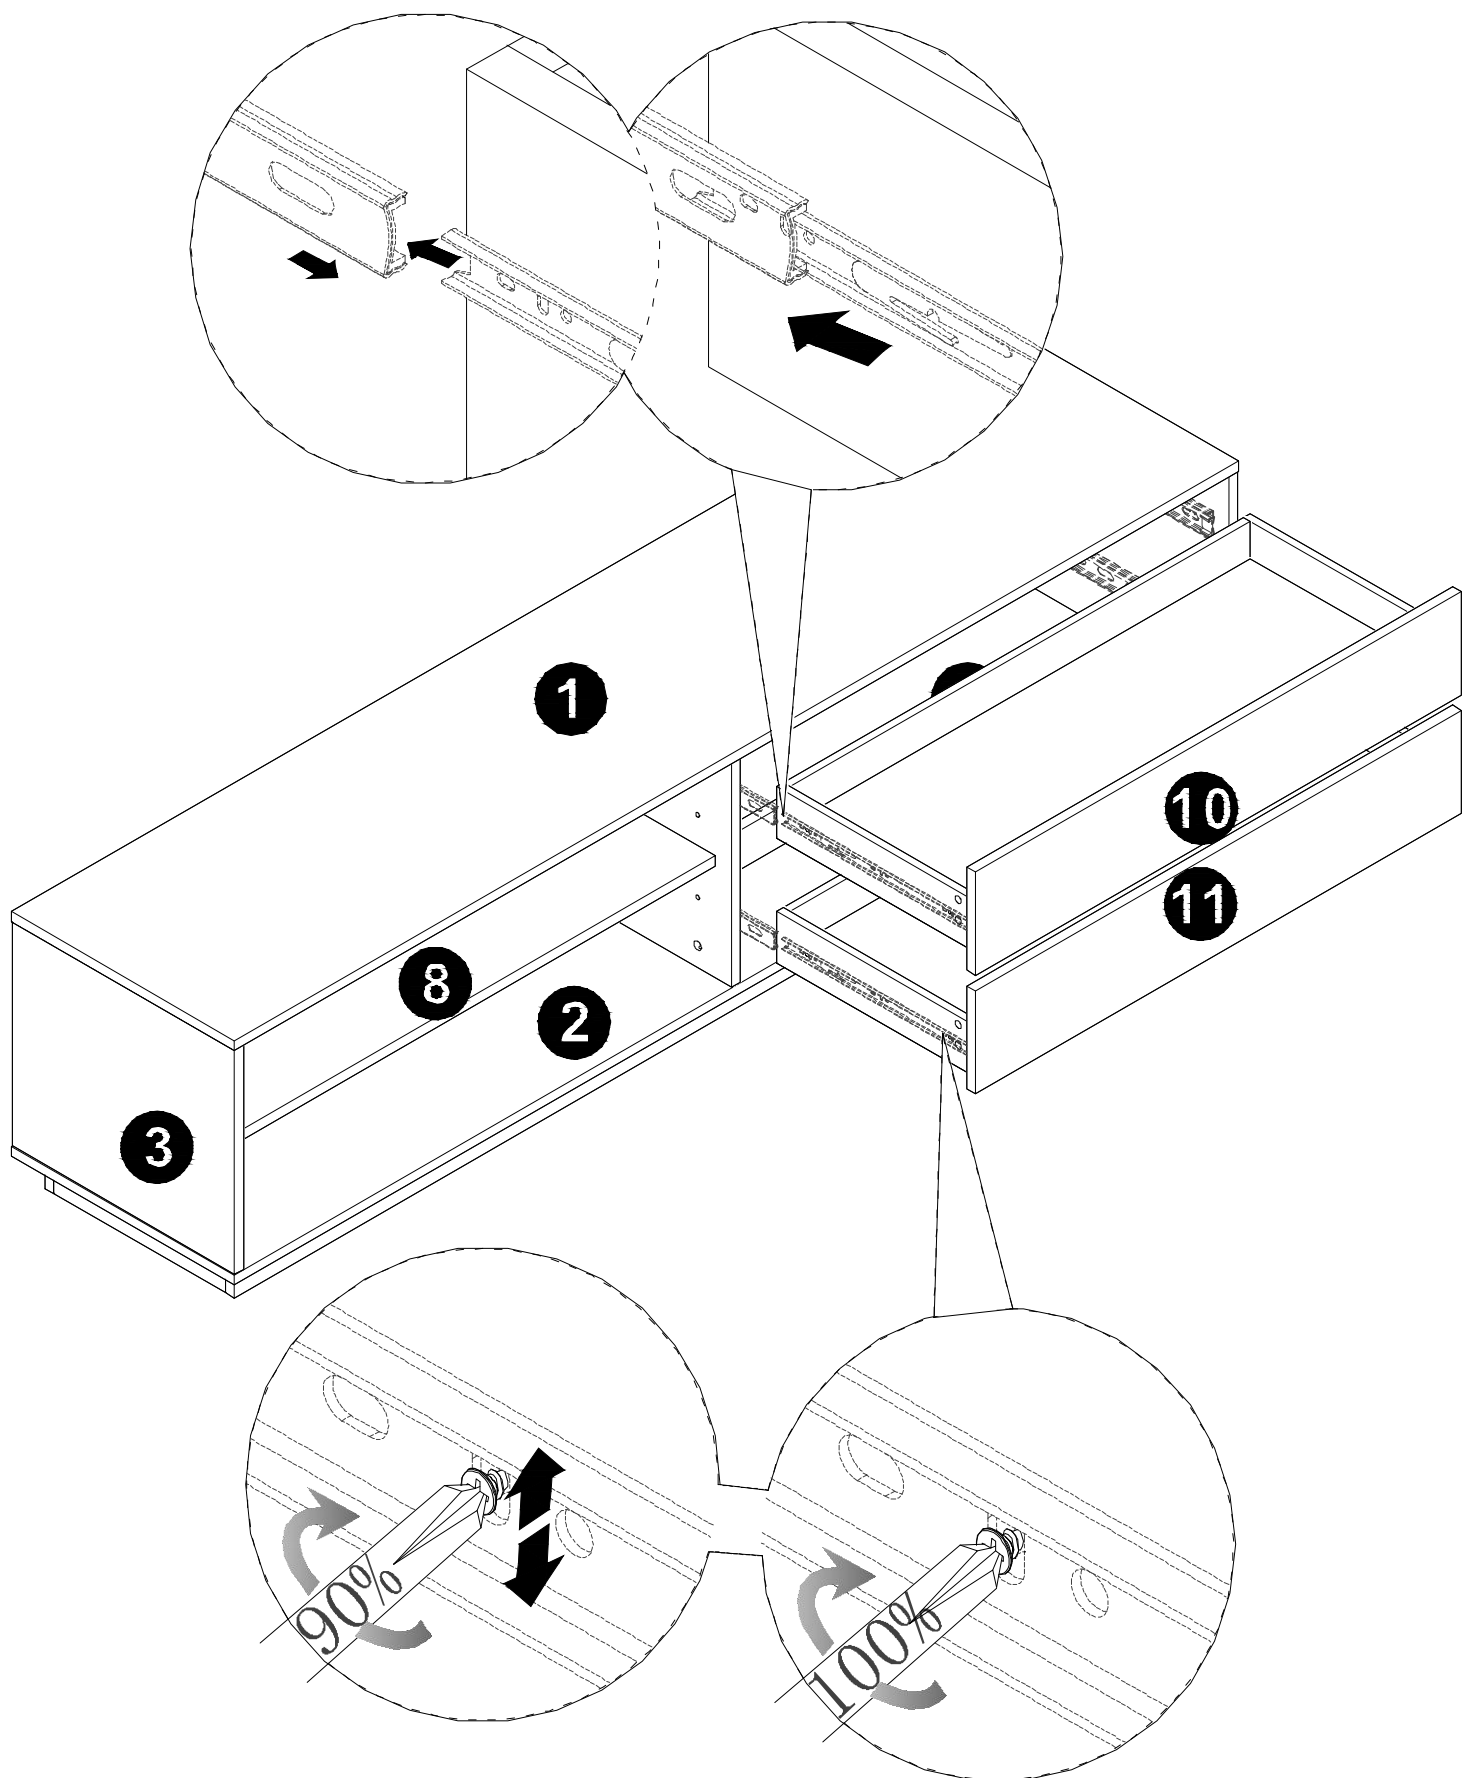


STEP13

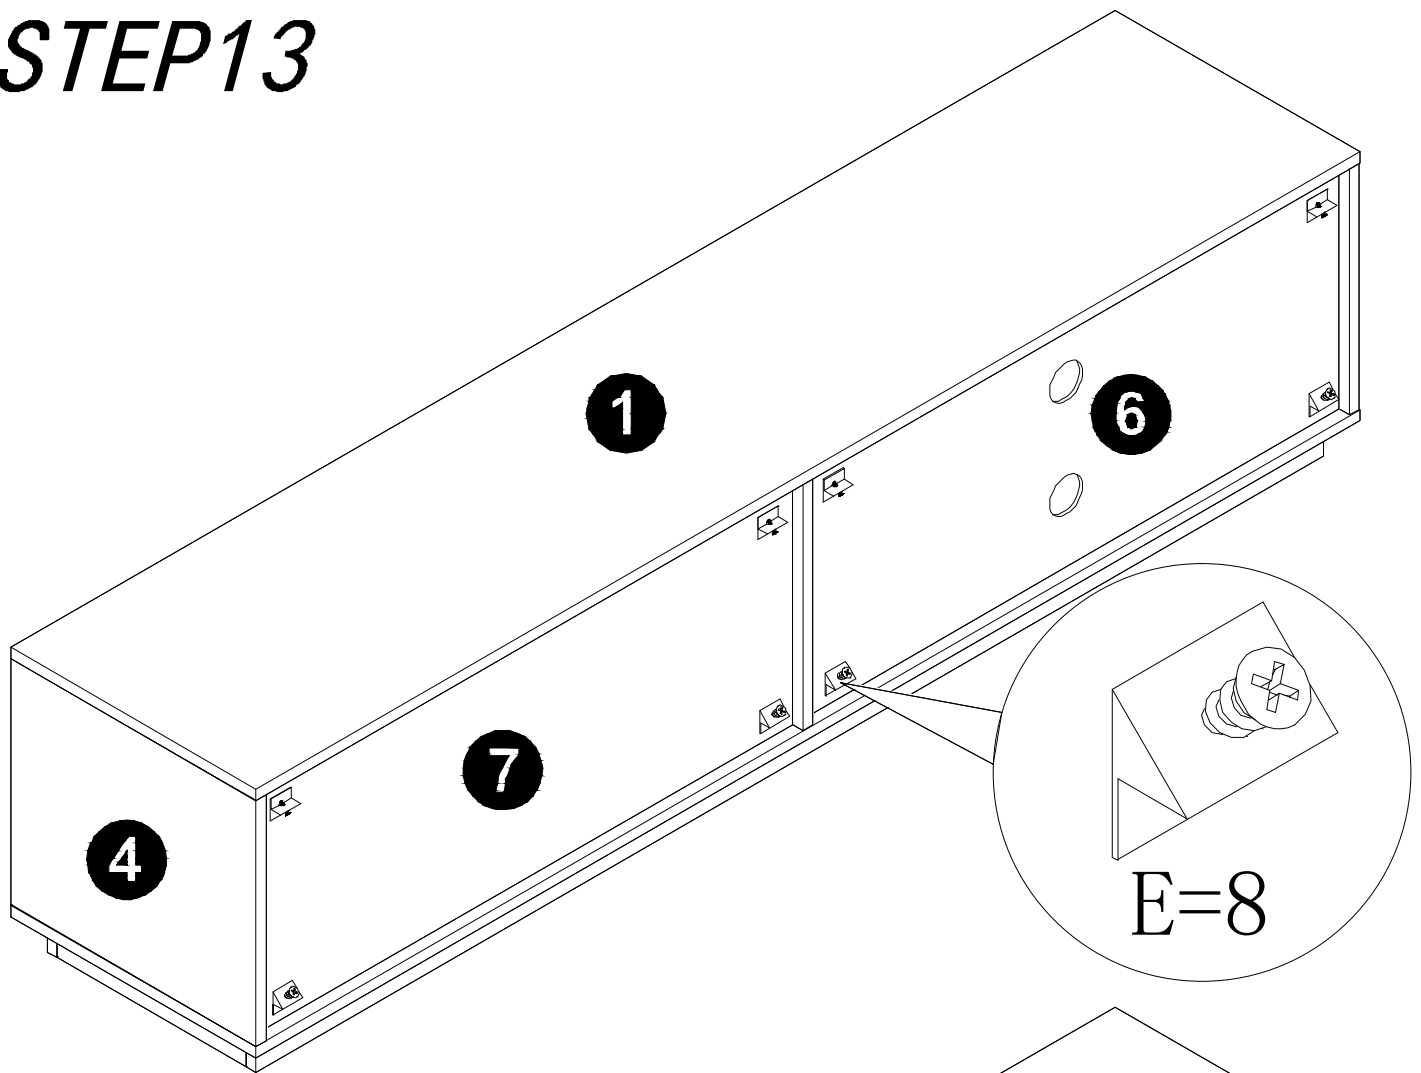

STEP14

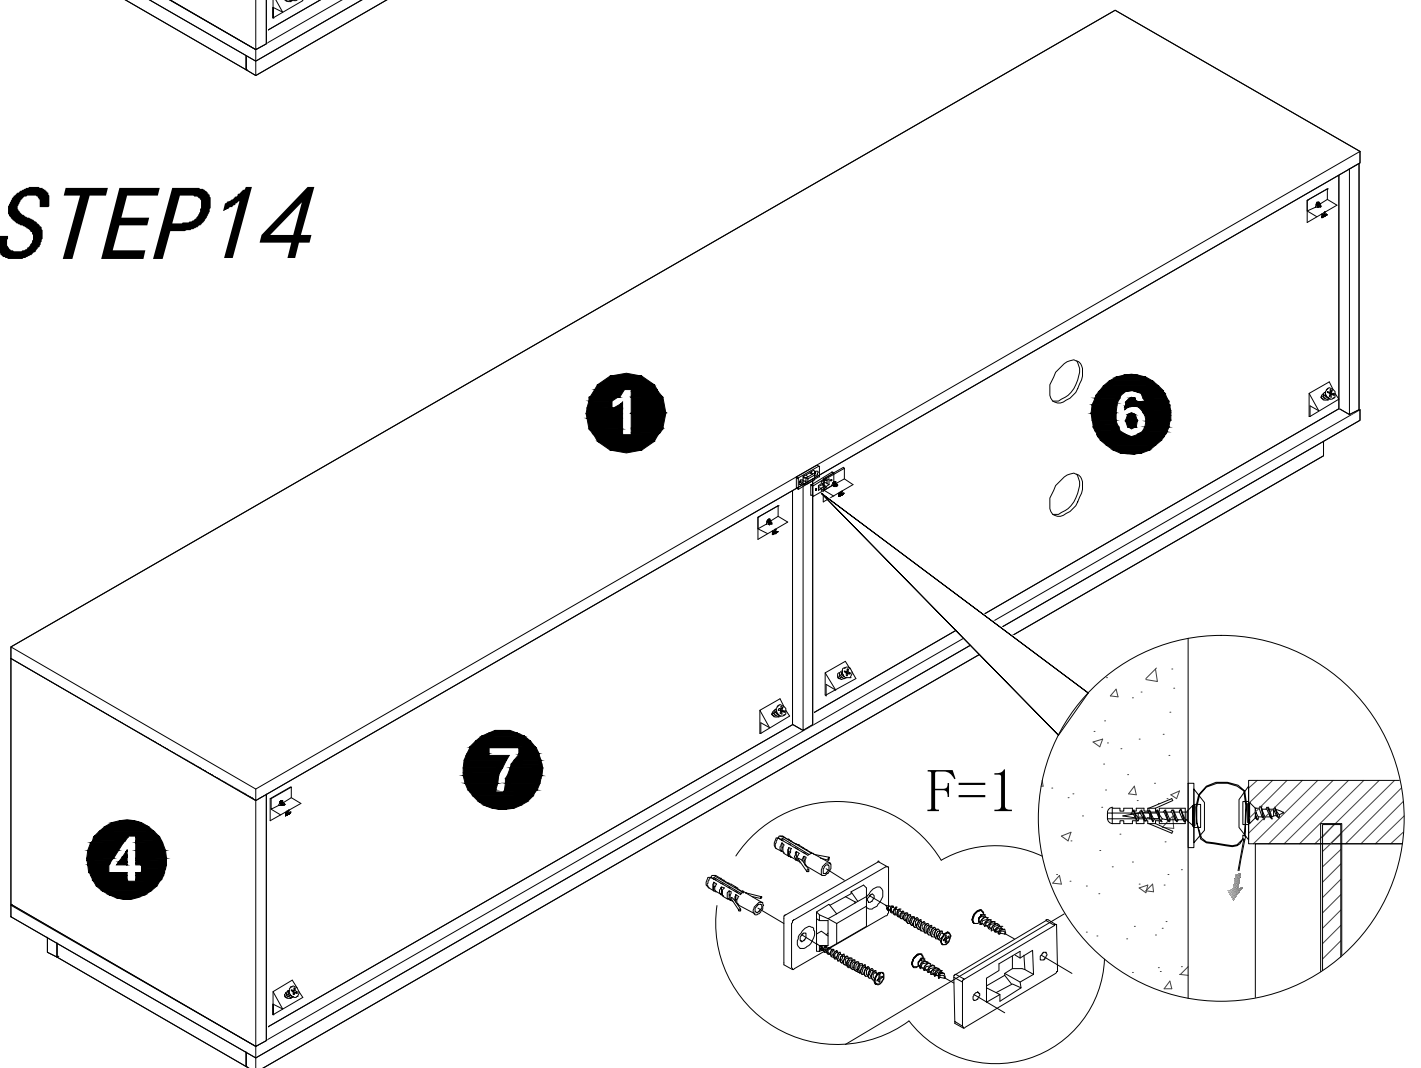

STEP15

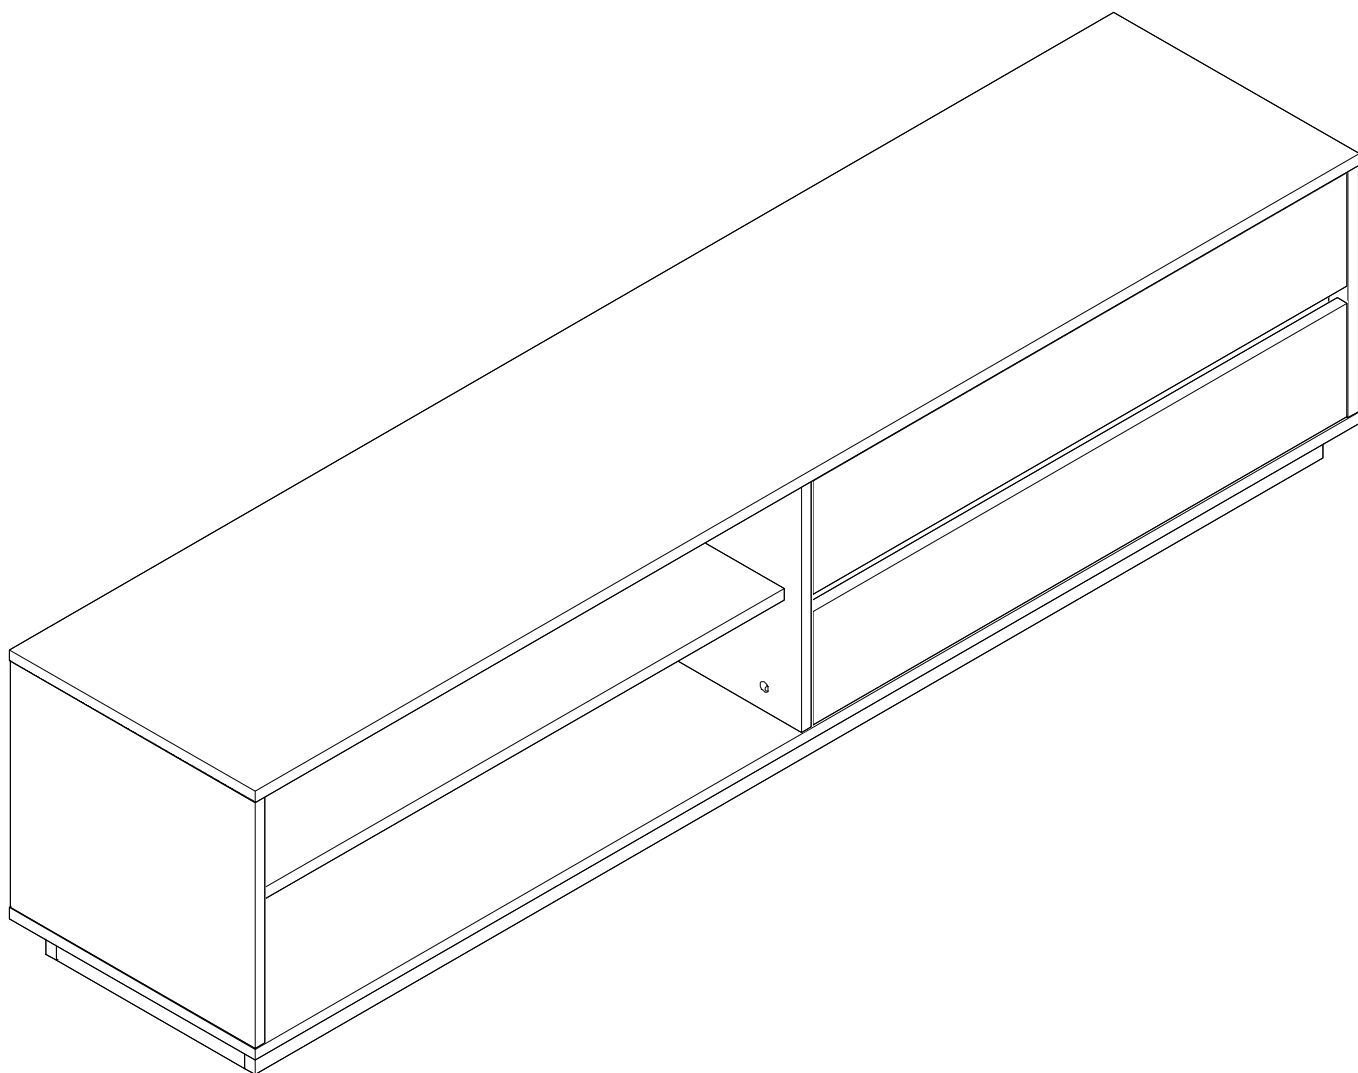

FINISH