


Assembly Instructions

Hansan Range

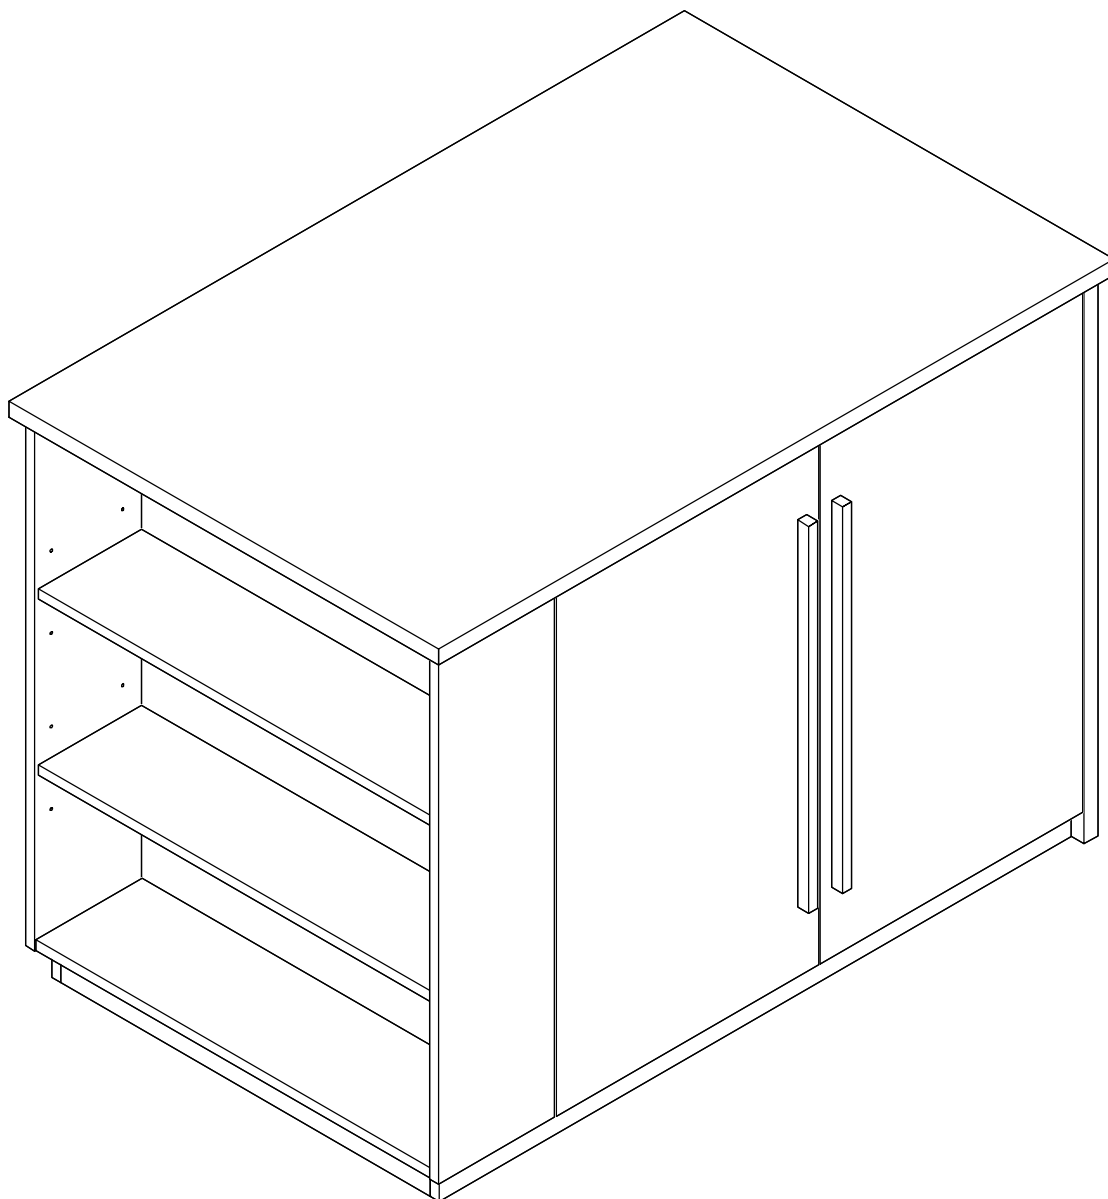

Loft

Product Code





KIC-LOF-HAN-2~9724

Dimensions(W x D x H)

126*77*90cm


Important

Please read through instruction carefully
Before assembly and keep for future reference.

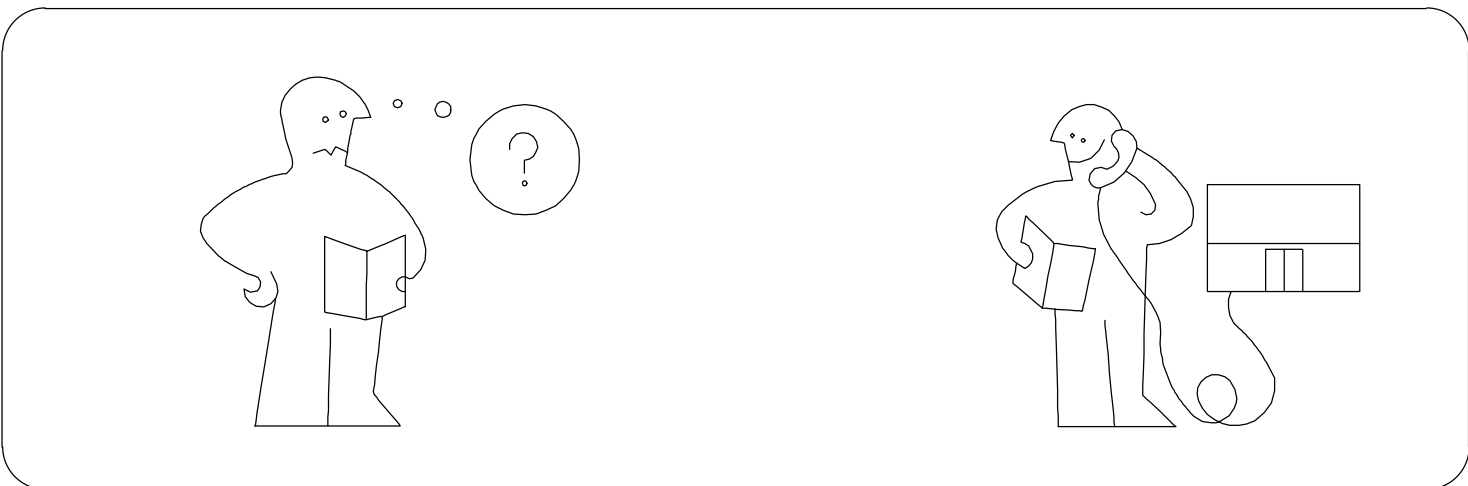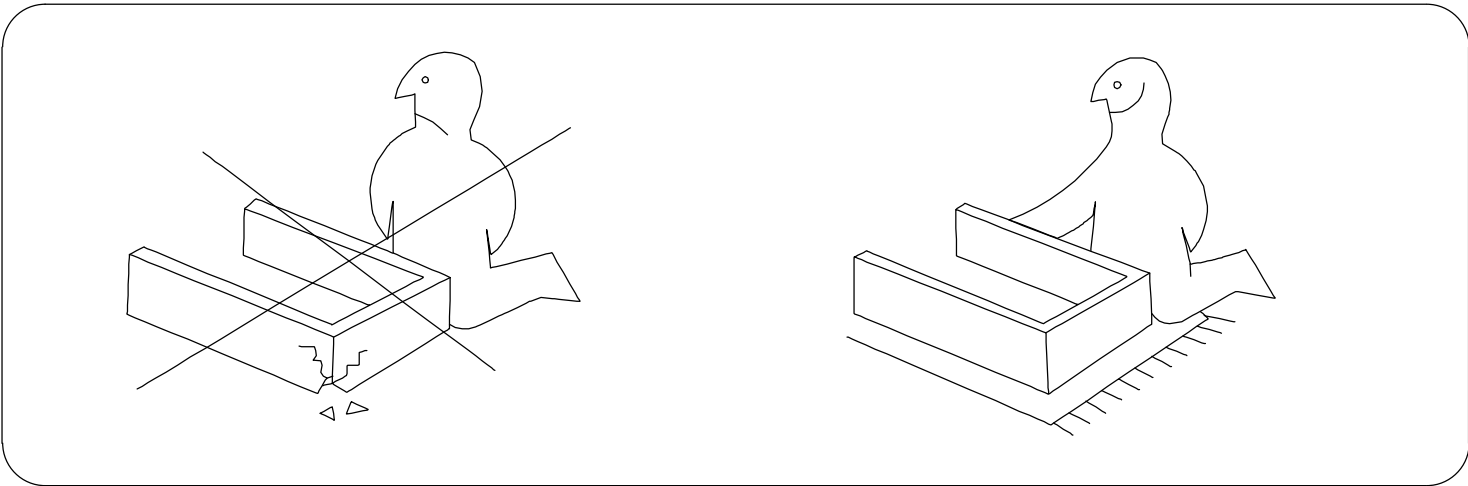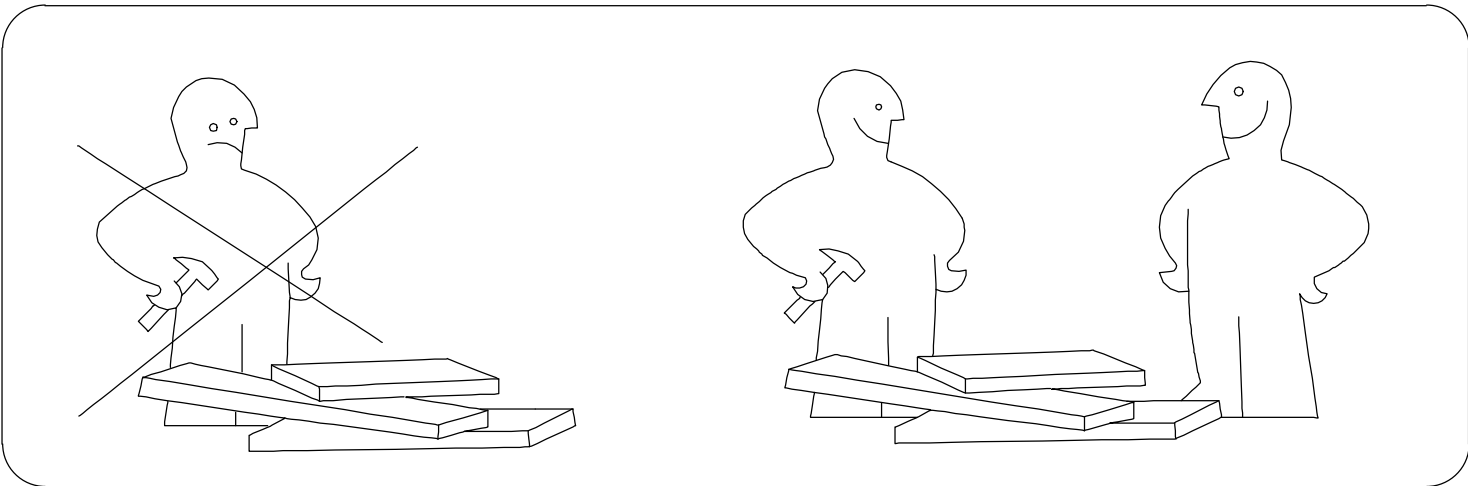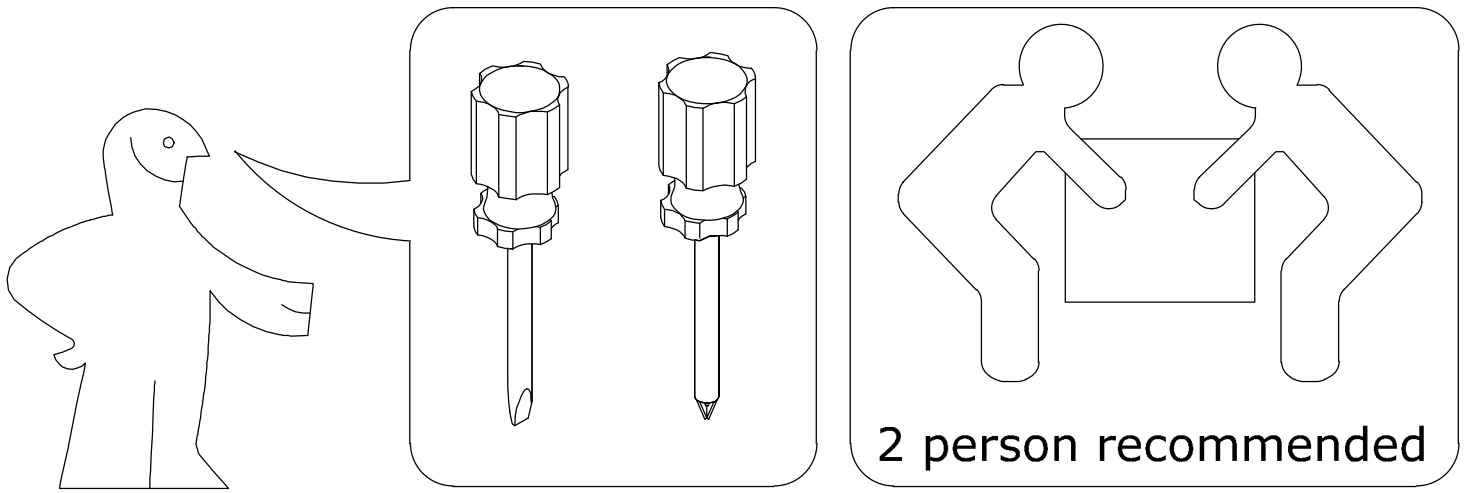


Panel No	Panel Sizes	Quantity
1	1210*770*25	1
2	870*740*25	1
3	870*948*16	1
4	820*208*16	1
5	820*208*16	1
6	819*708*16	1
7	708*190*16	1
8	948*372*16	1
9	706*185*16	2

Panel No	Panel Sizes	Quantity
10	946*365*16	1
11	818*470*16	2
12	1132*51*16	1
13	970*51*16	1
14	662*51*16	1
15	662*51*16	1
16	162*51*16	1
17	600*20*16	2

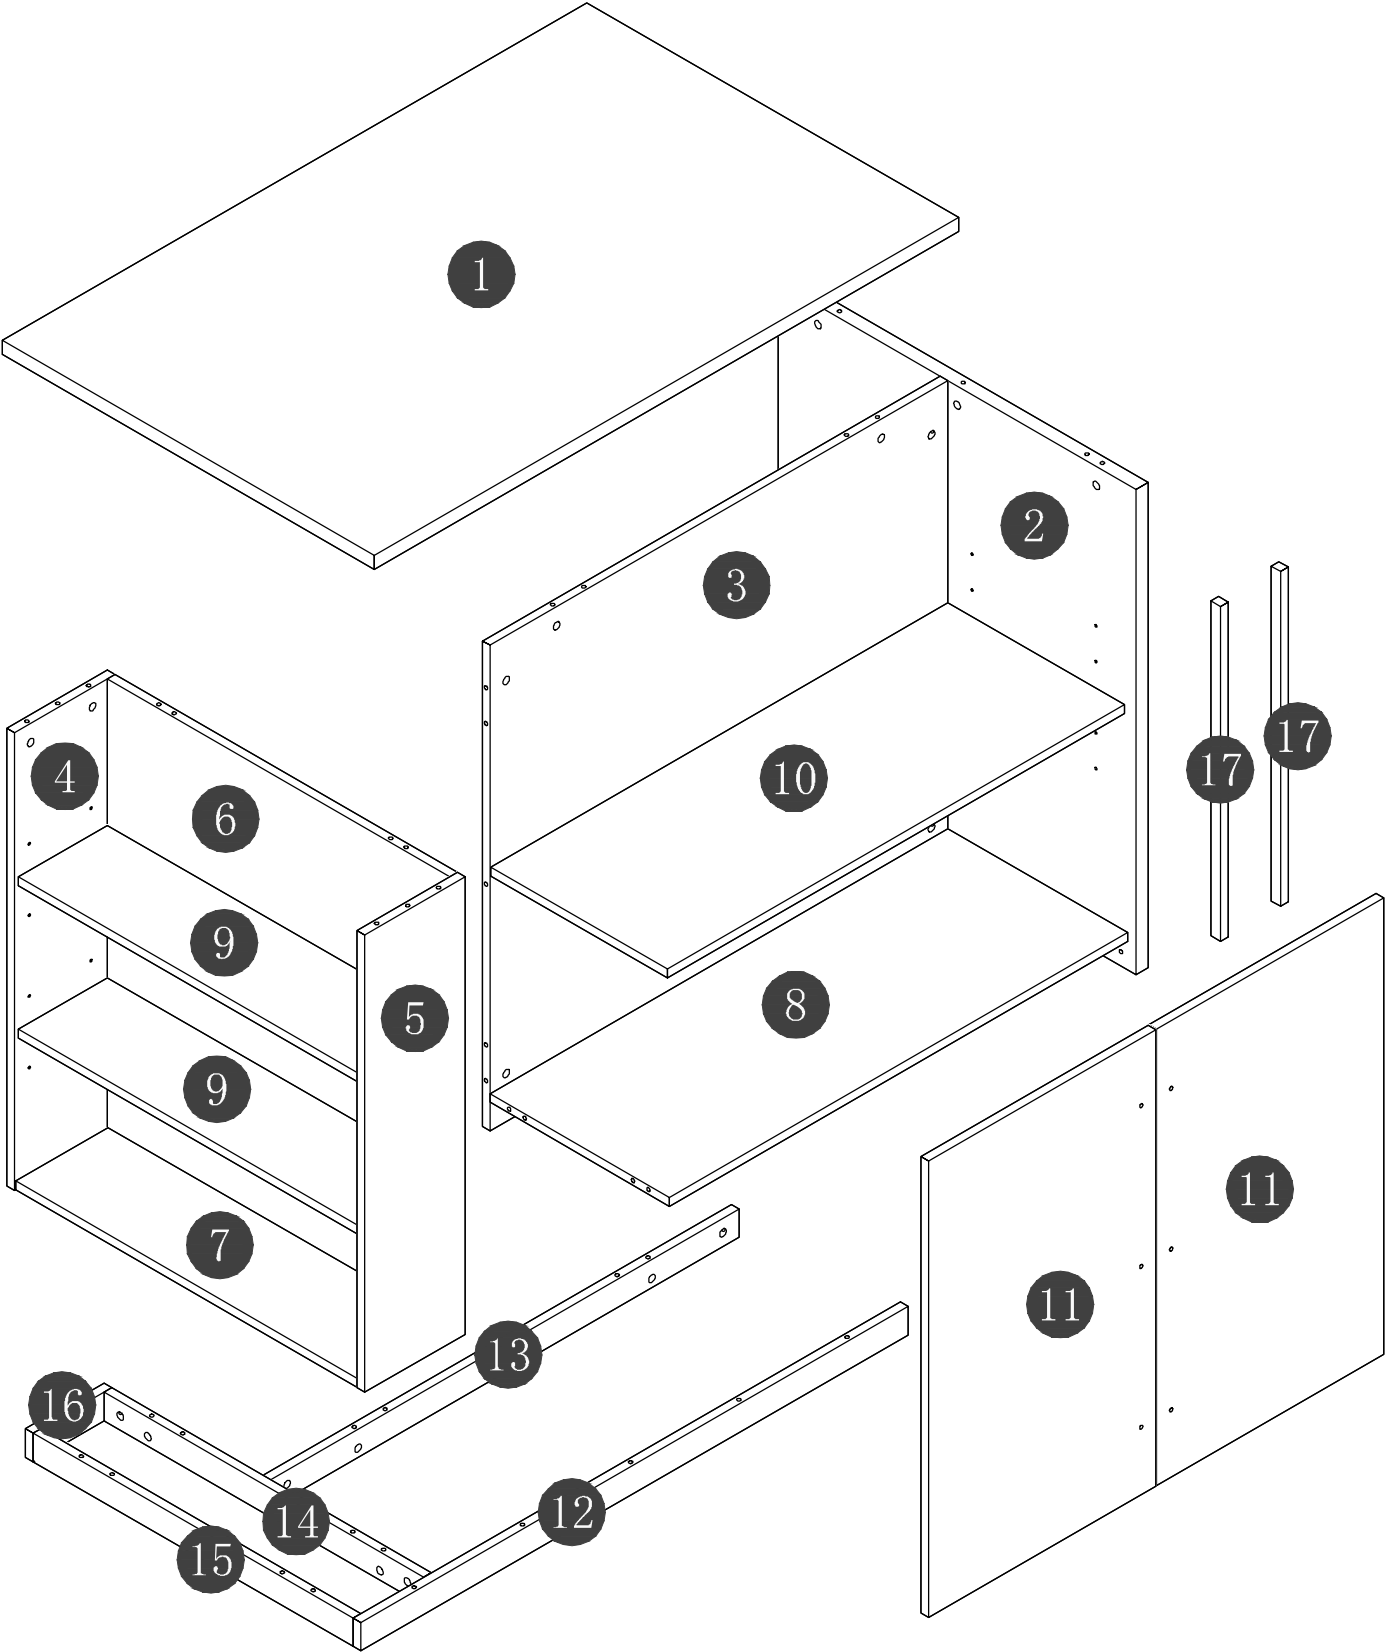


Fittings




M6*40

A=45



$\Phi 8*30$

B=34

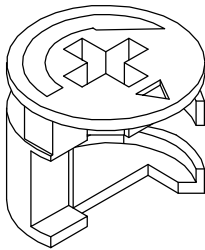


$\Phi 15*12$

C=45




$\Phi 21$


D=45

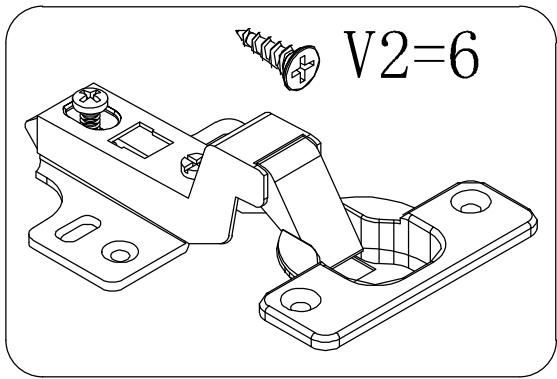

I3=4

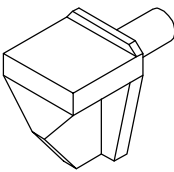


L=12

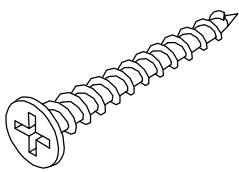



M4*25

V1=6


STEP 1

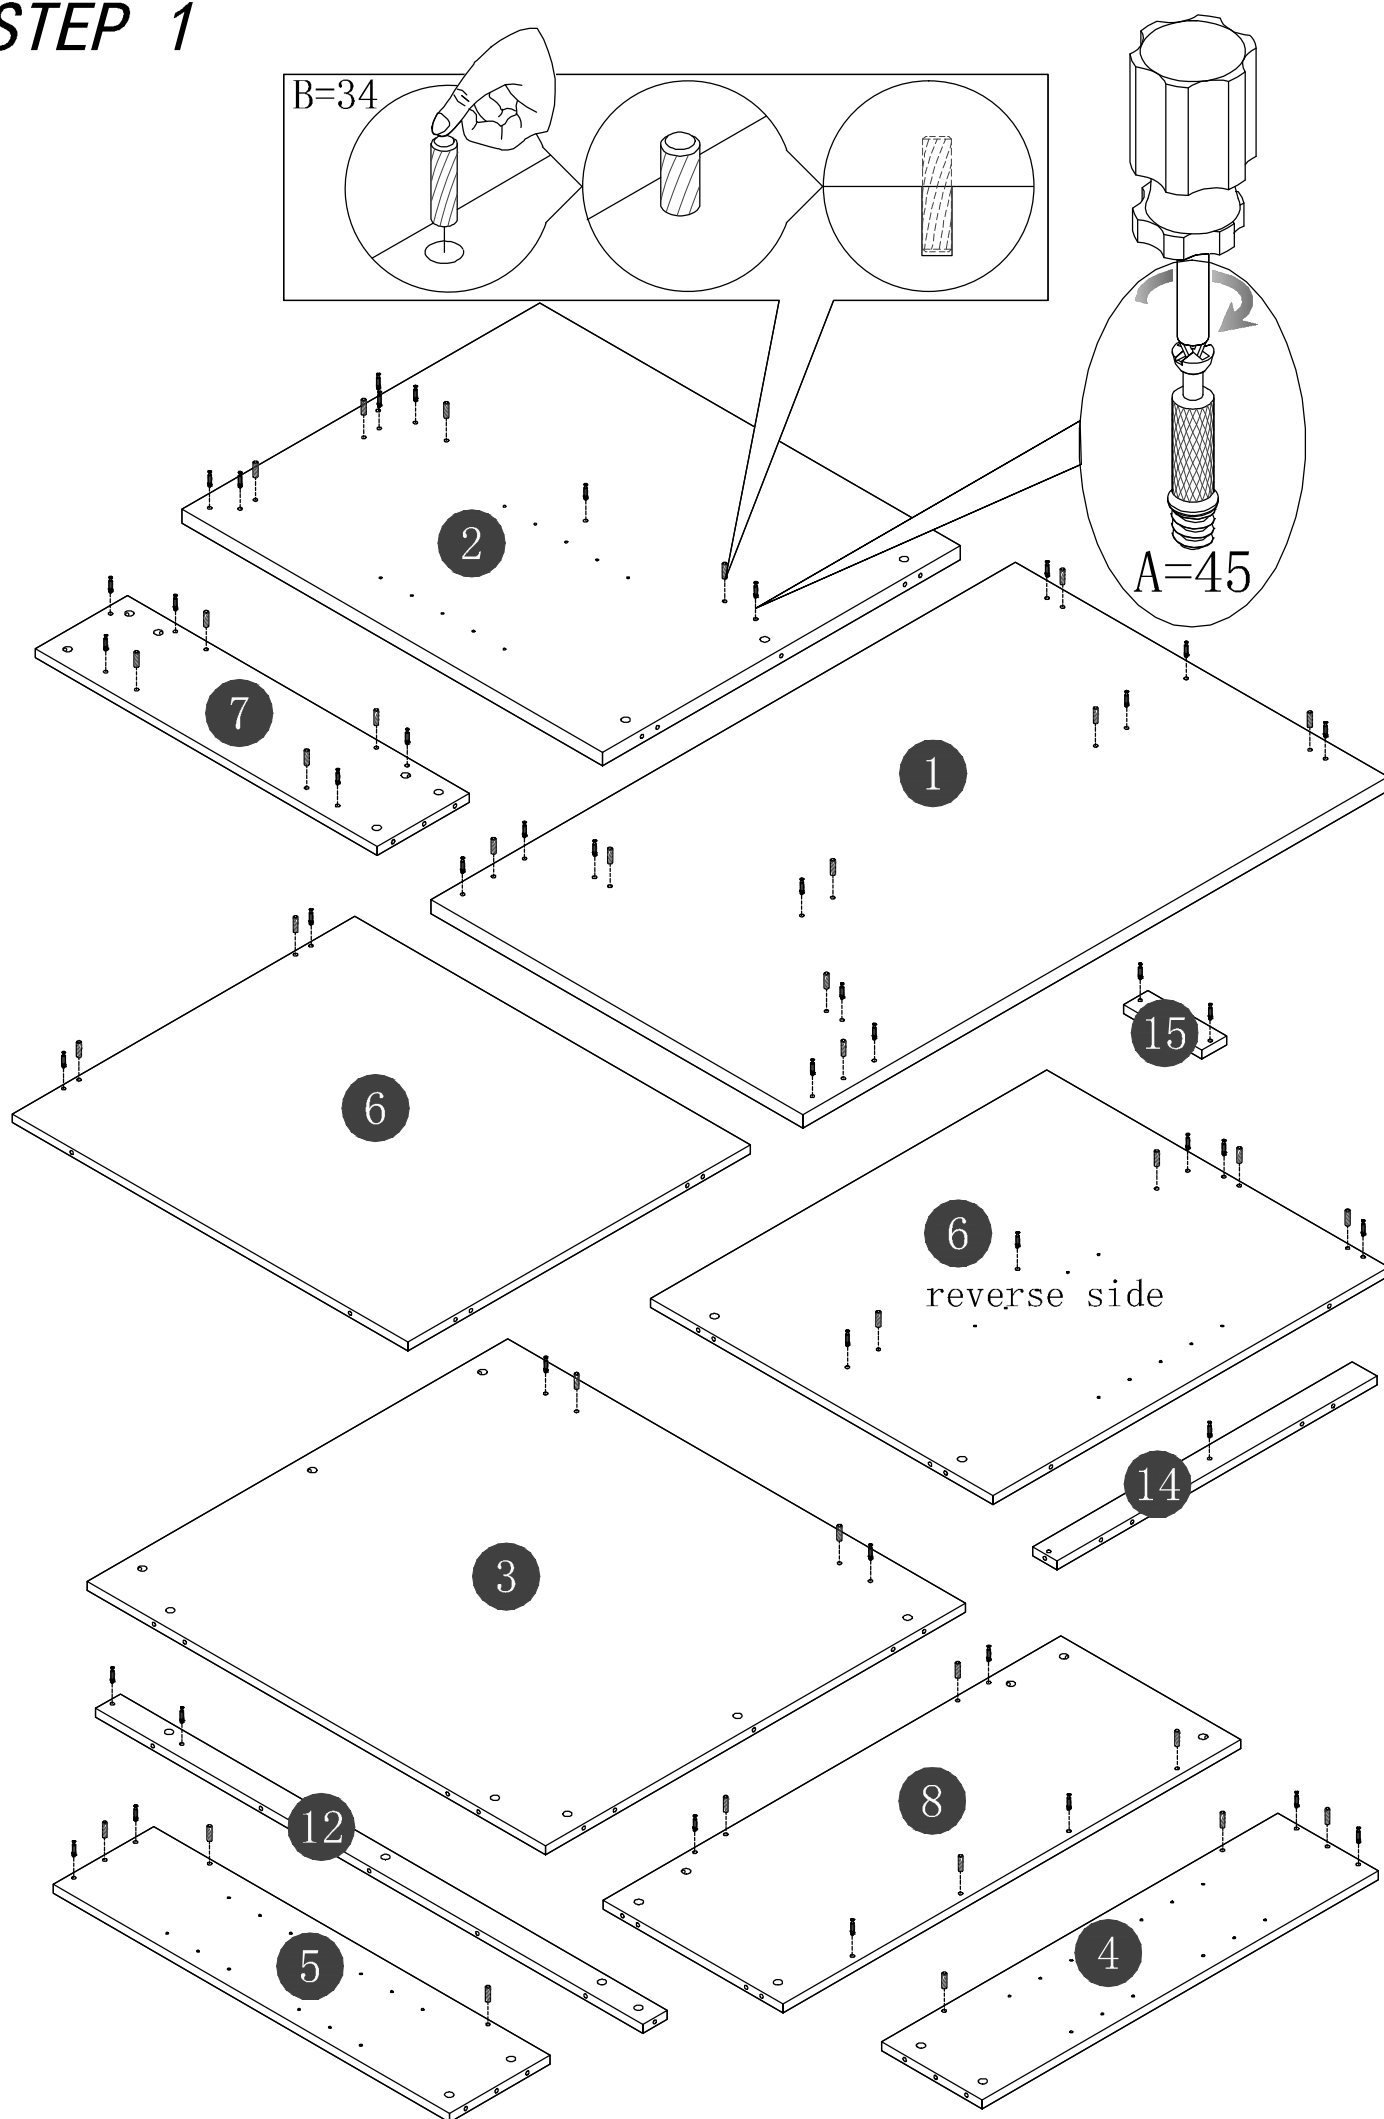



STEP 2

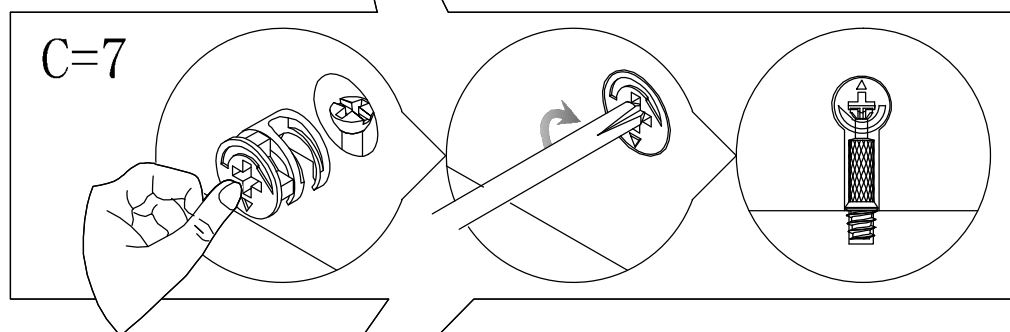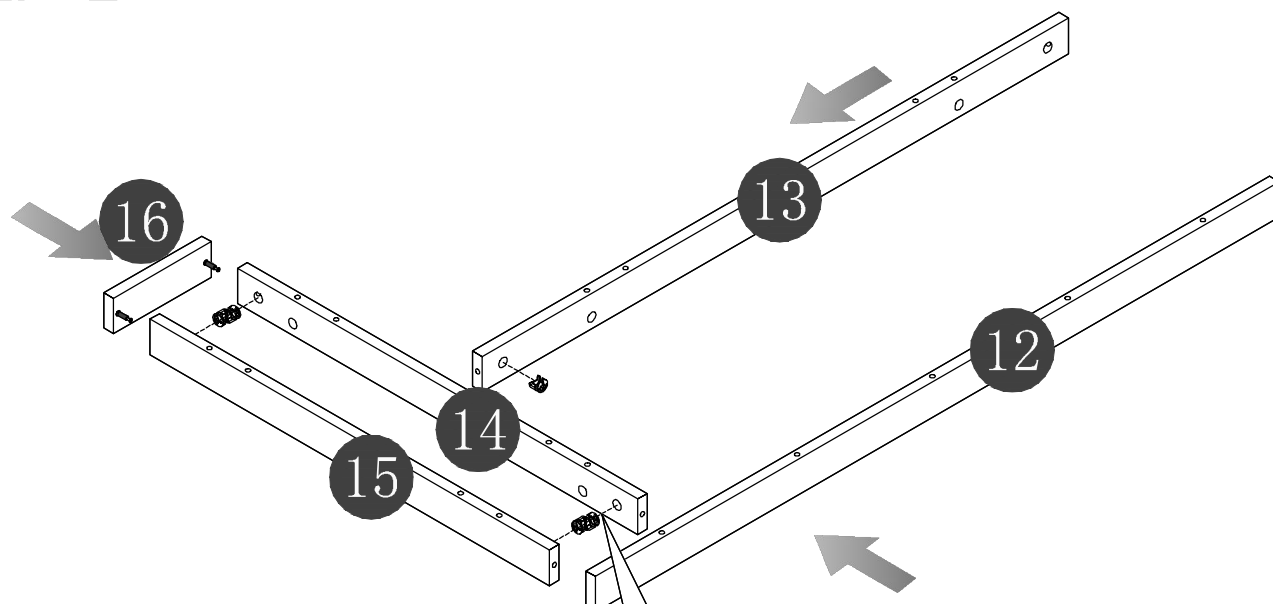


STEP 3

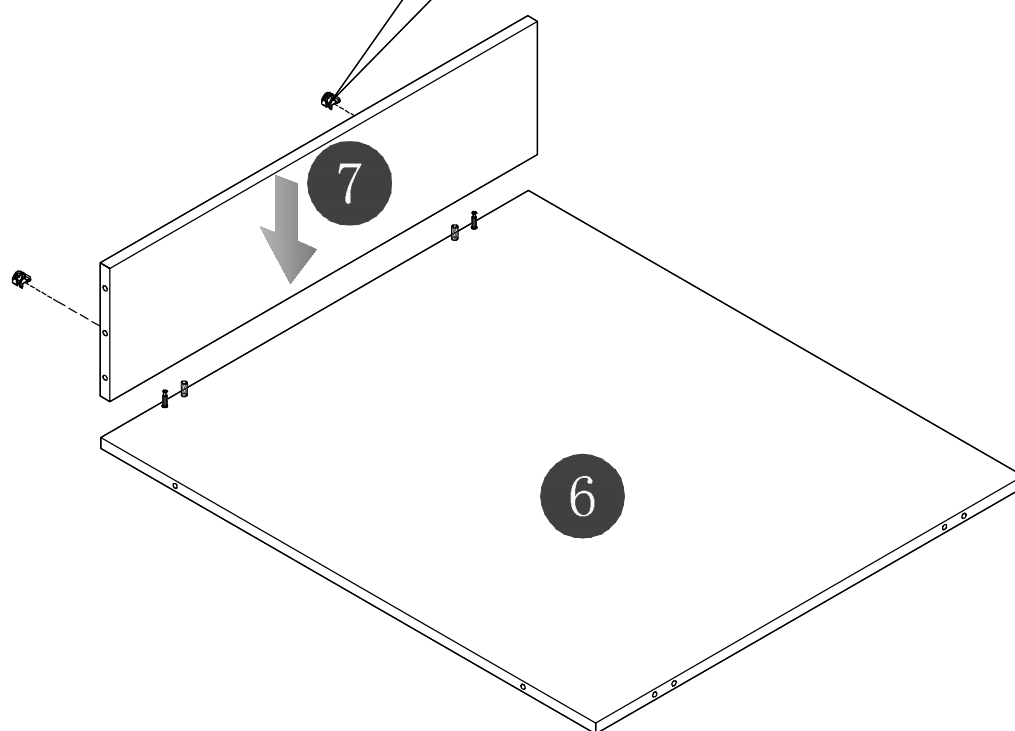


STEP 4

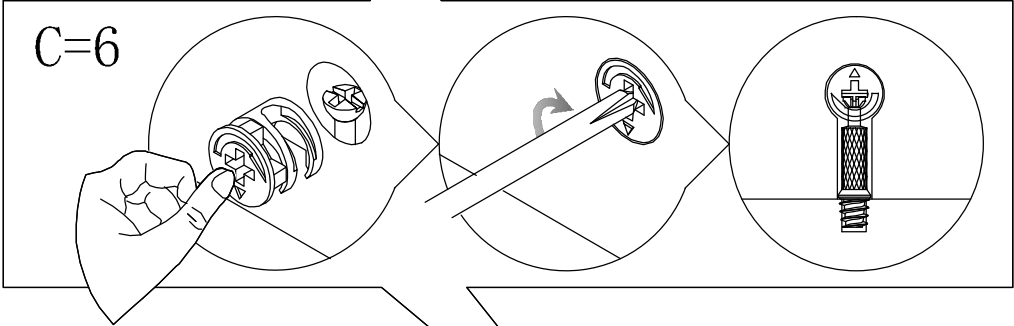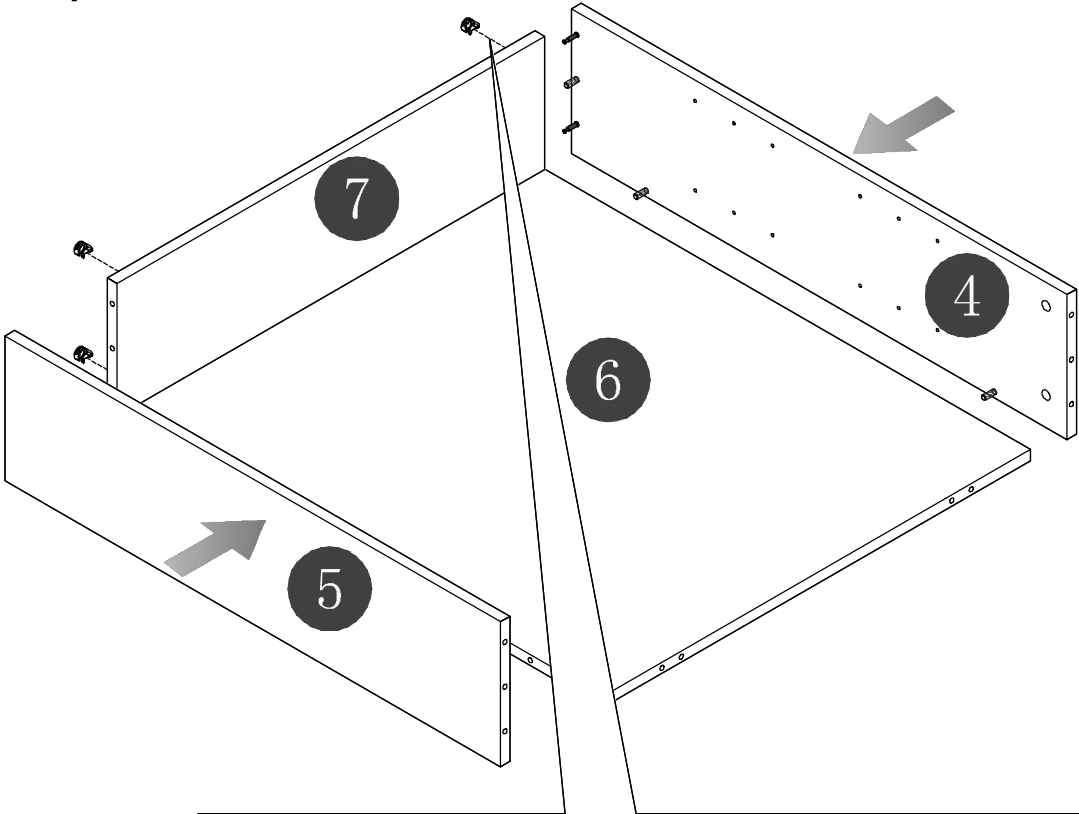


STEP 5

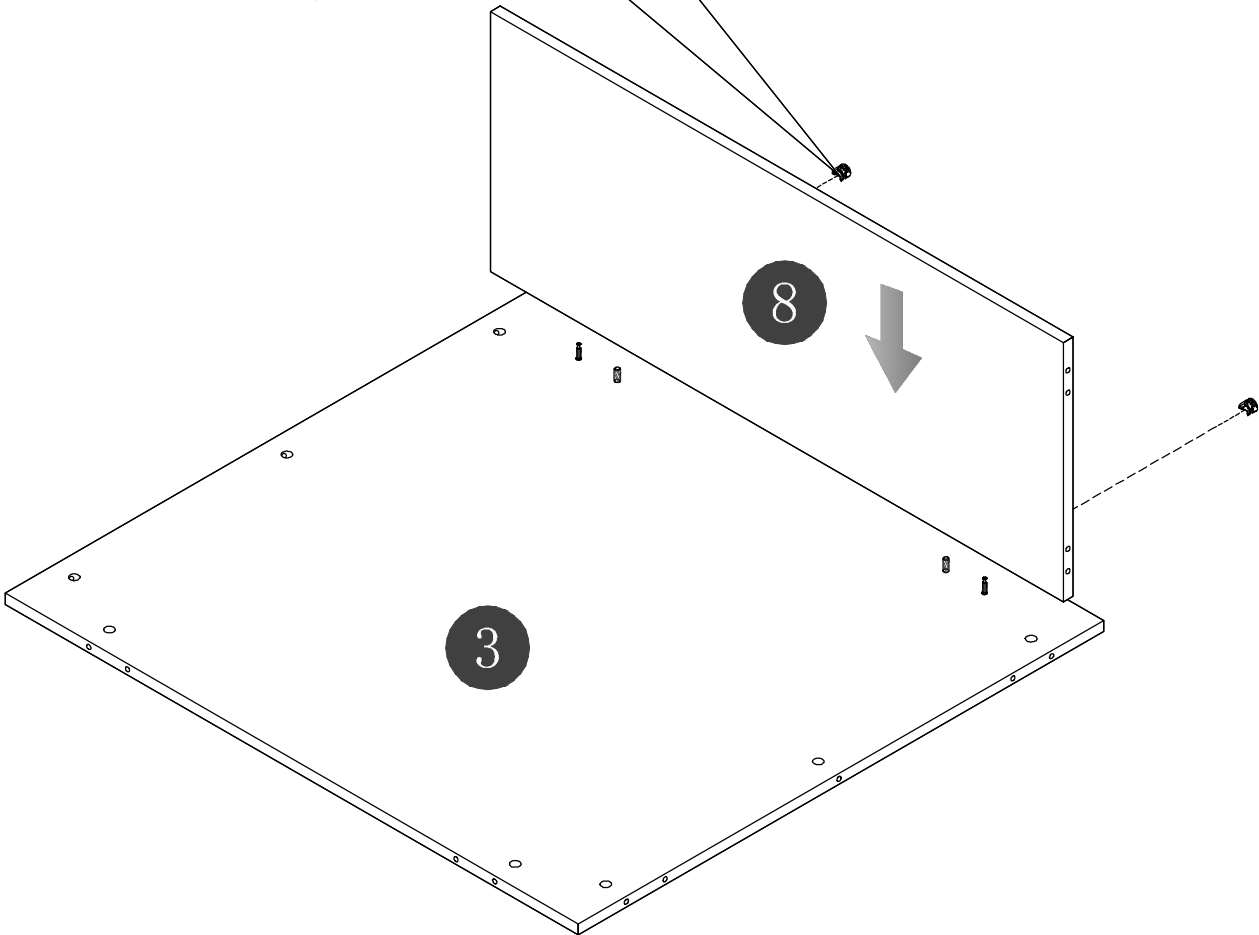


STEP 6

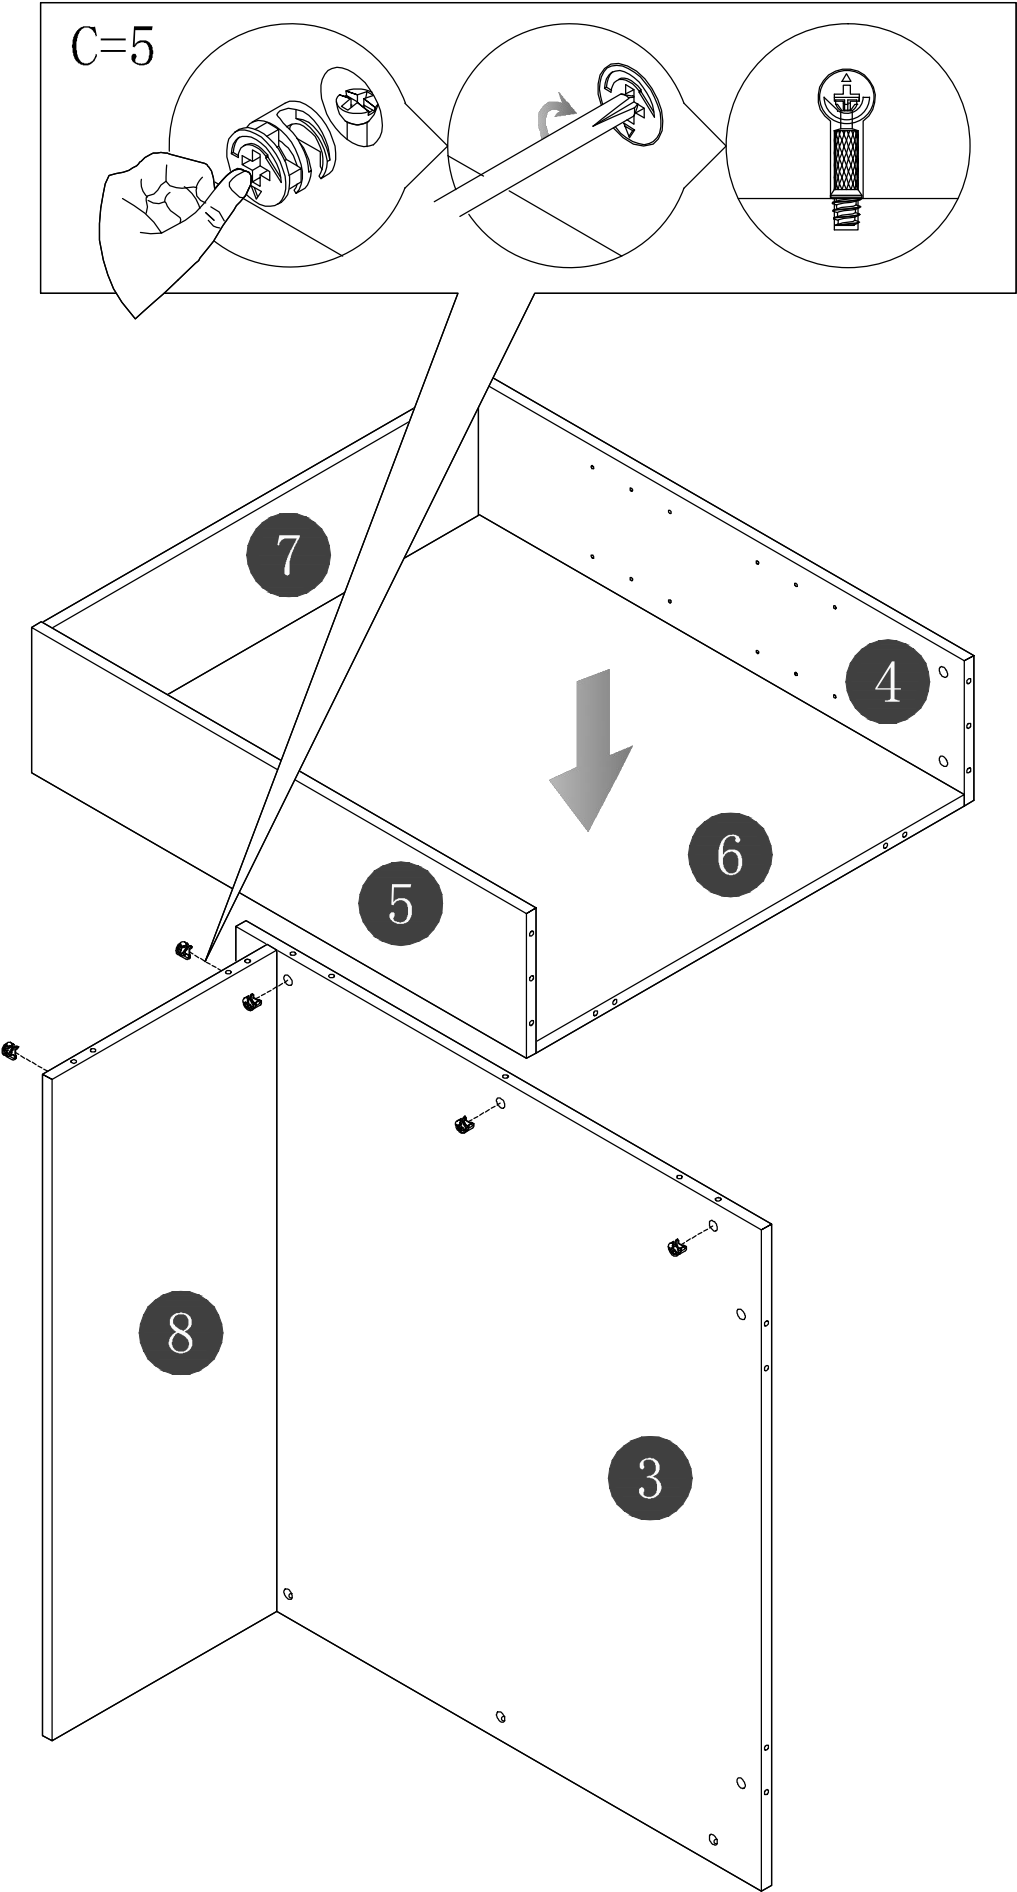


STEP 7

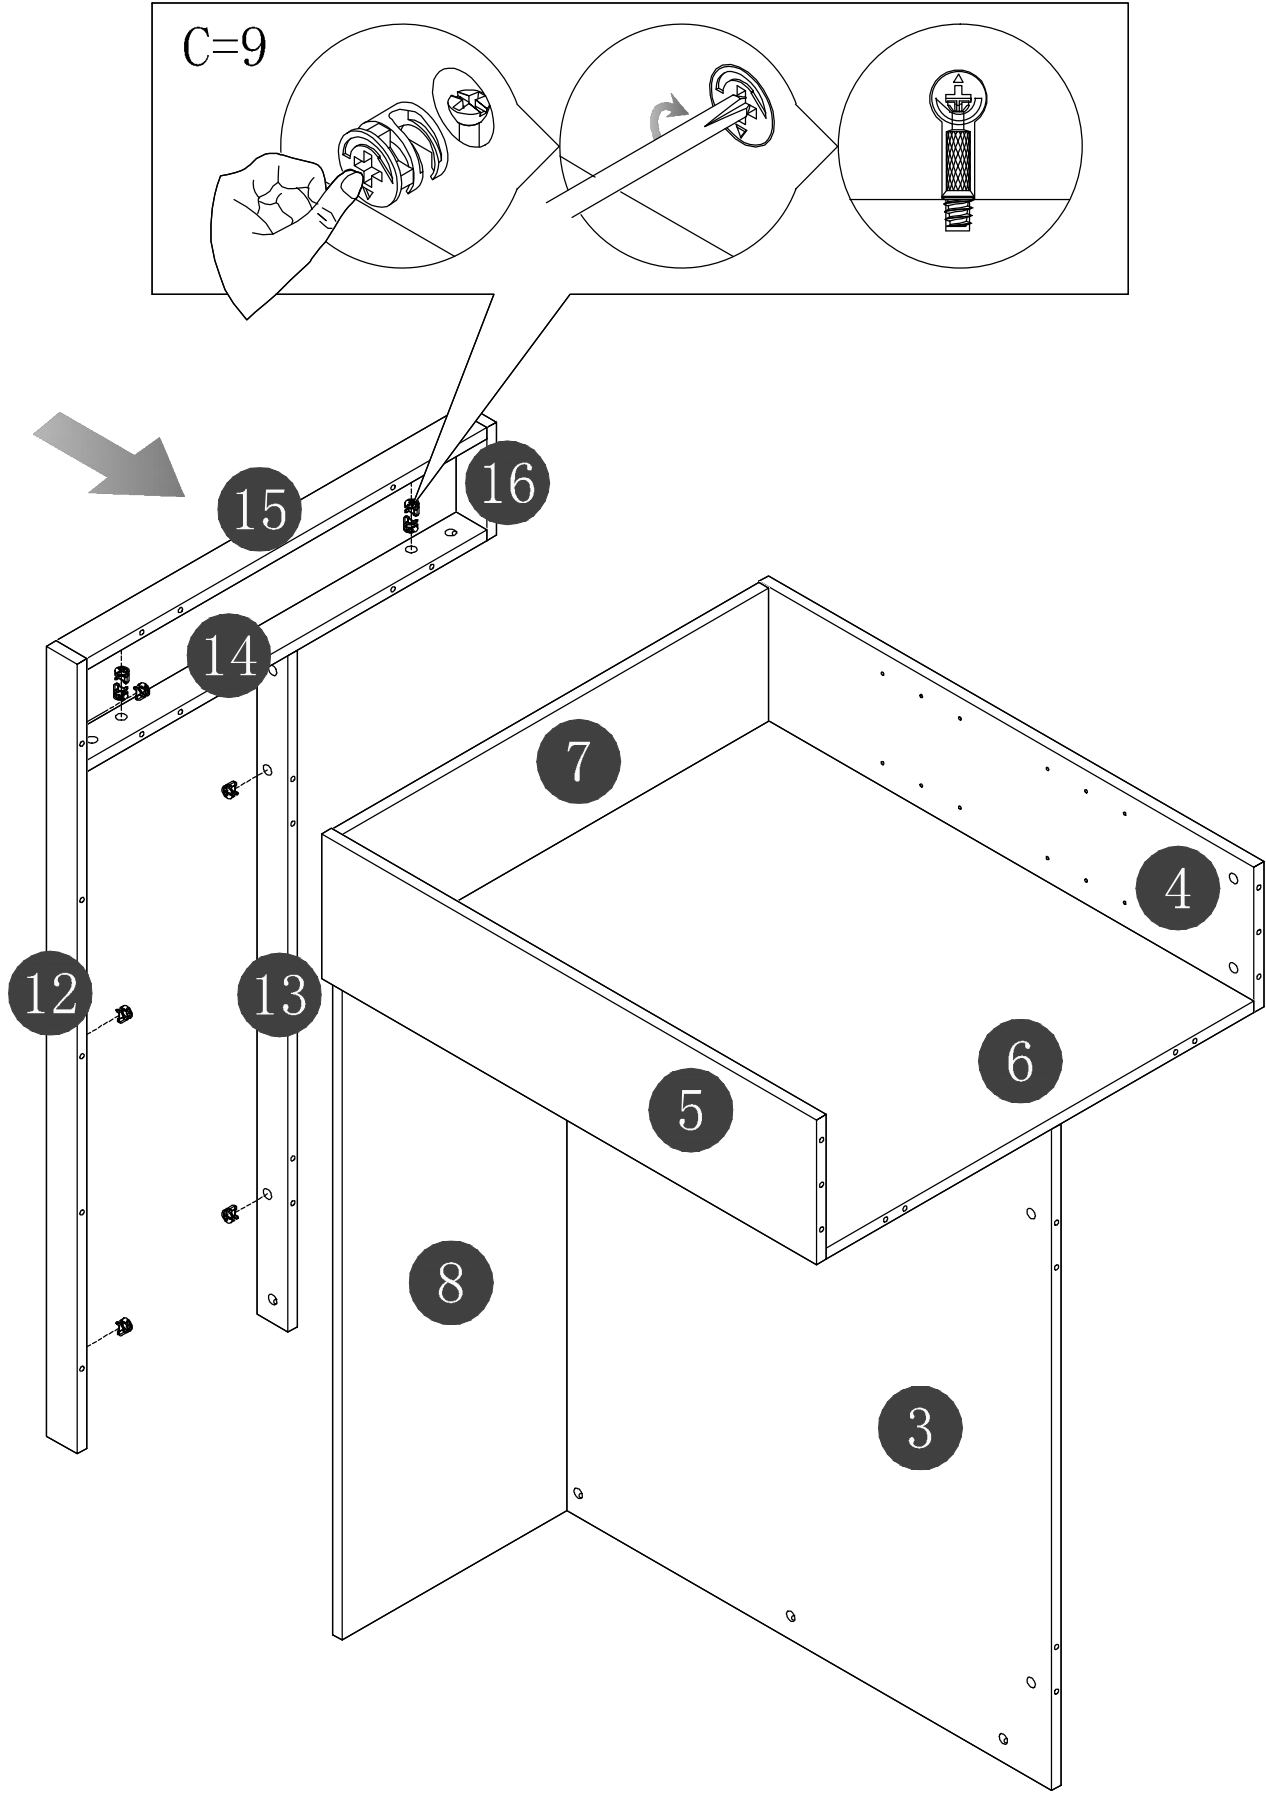


STEP 8

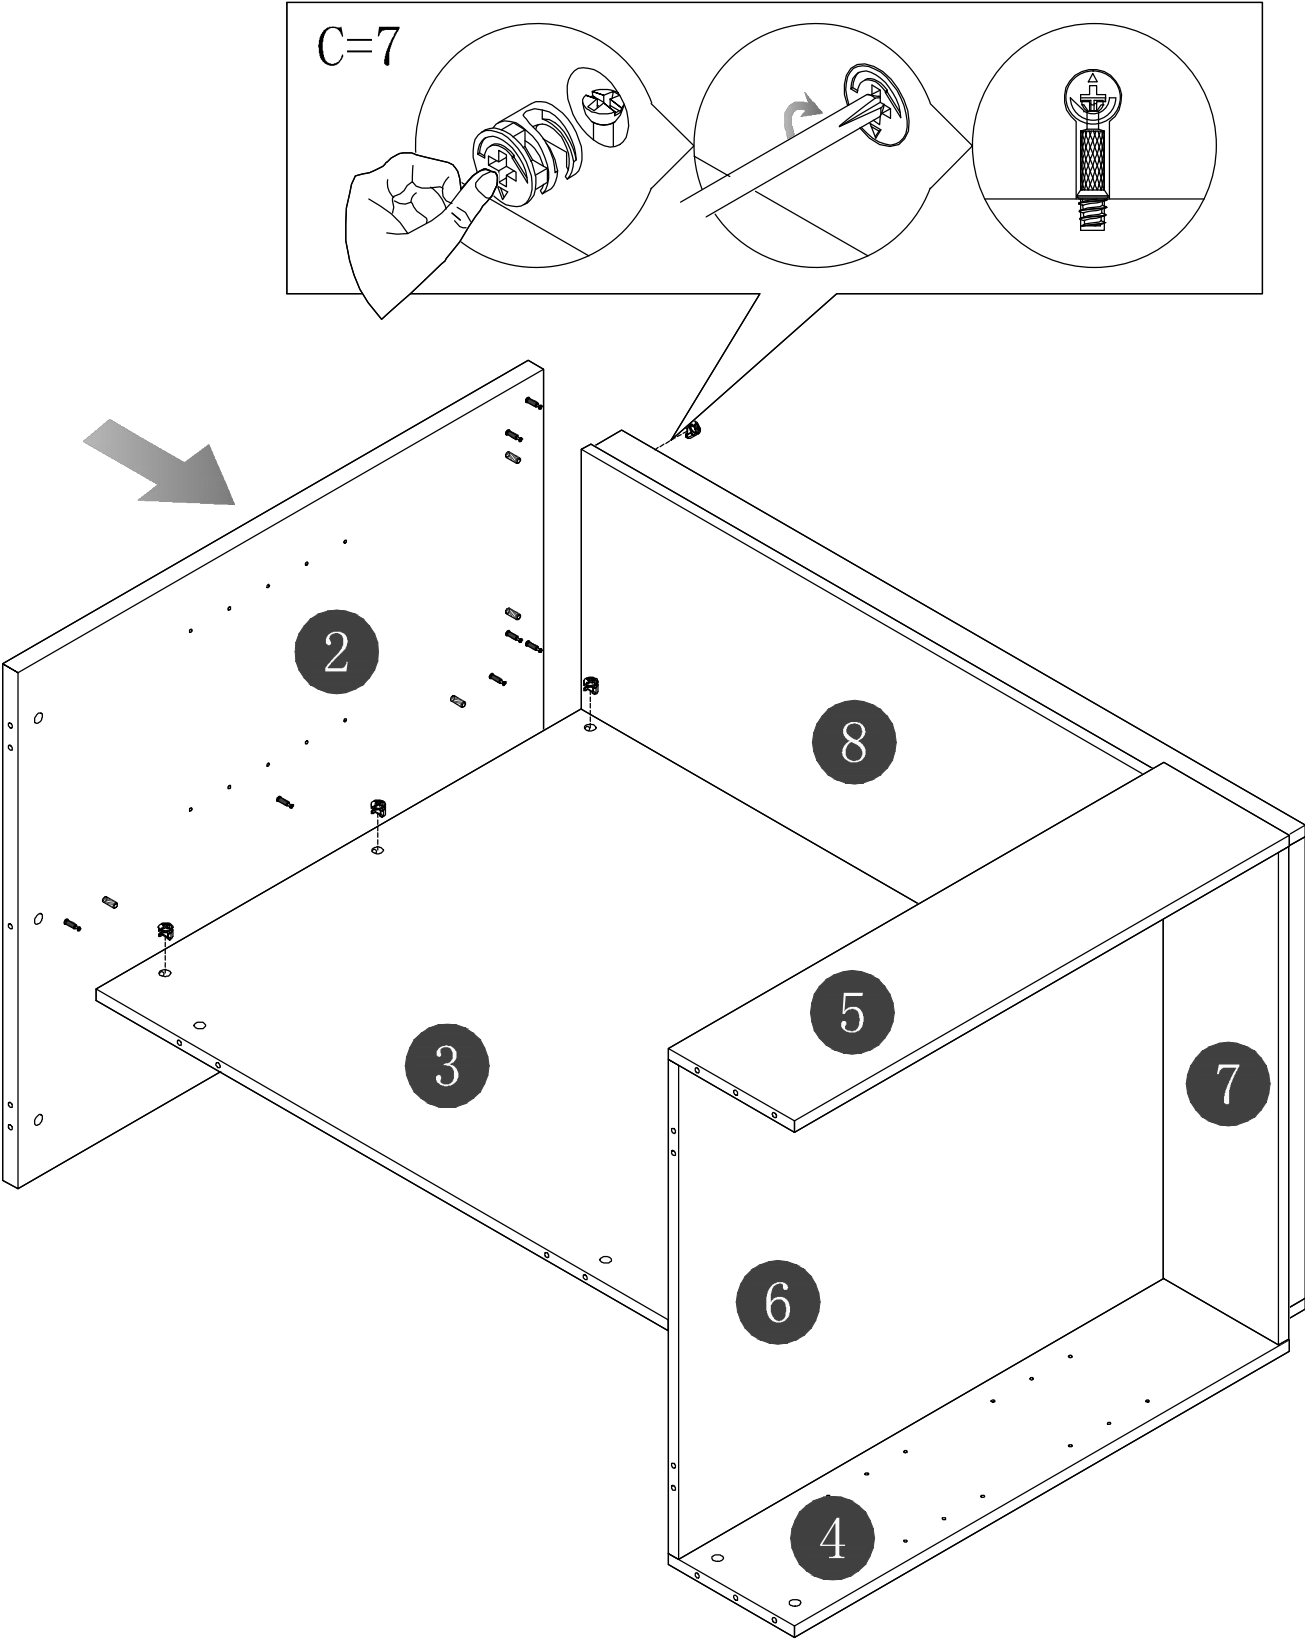


STEP 9

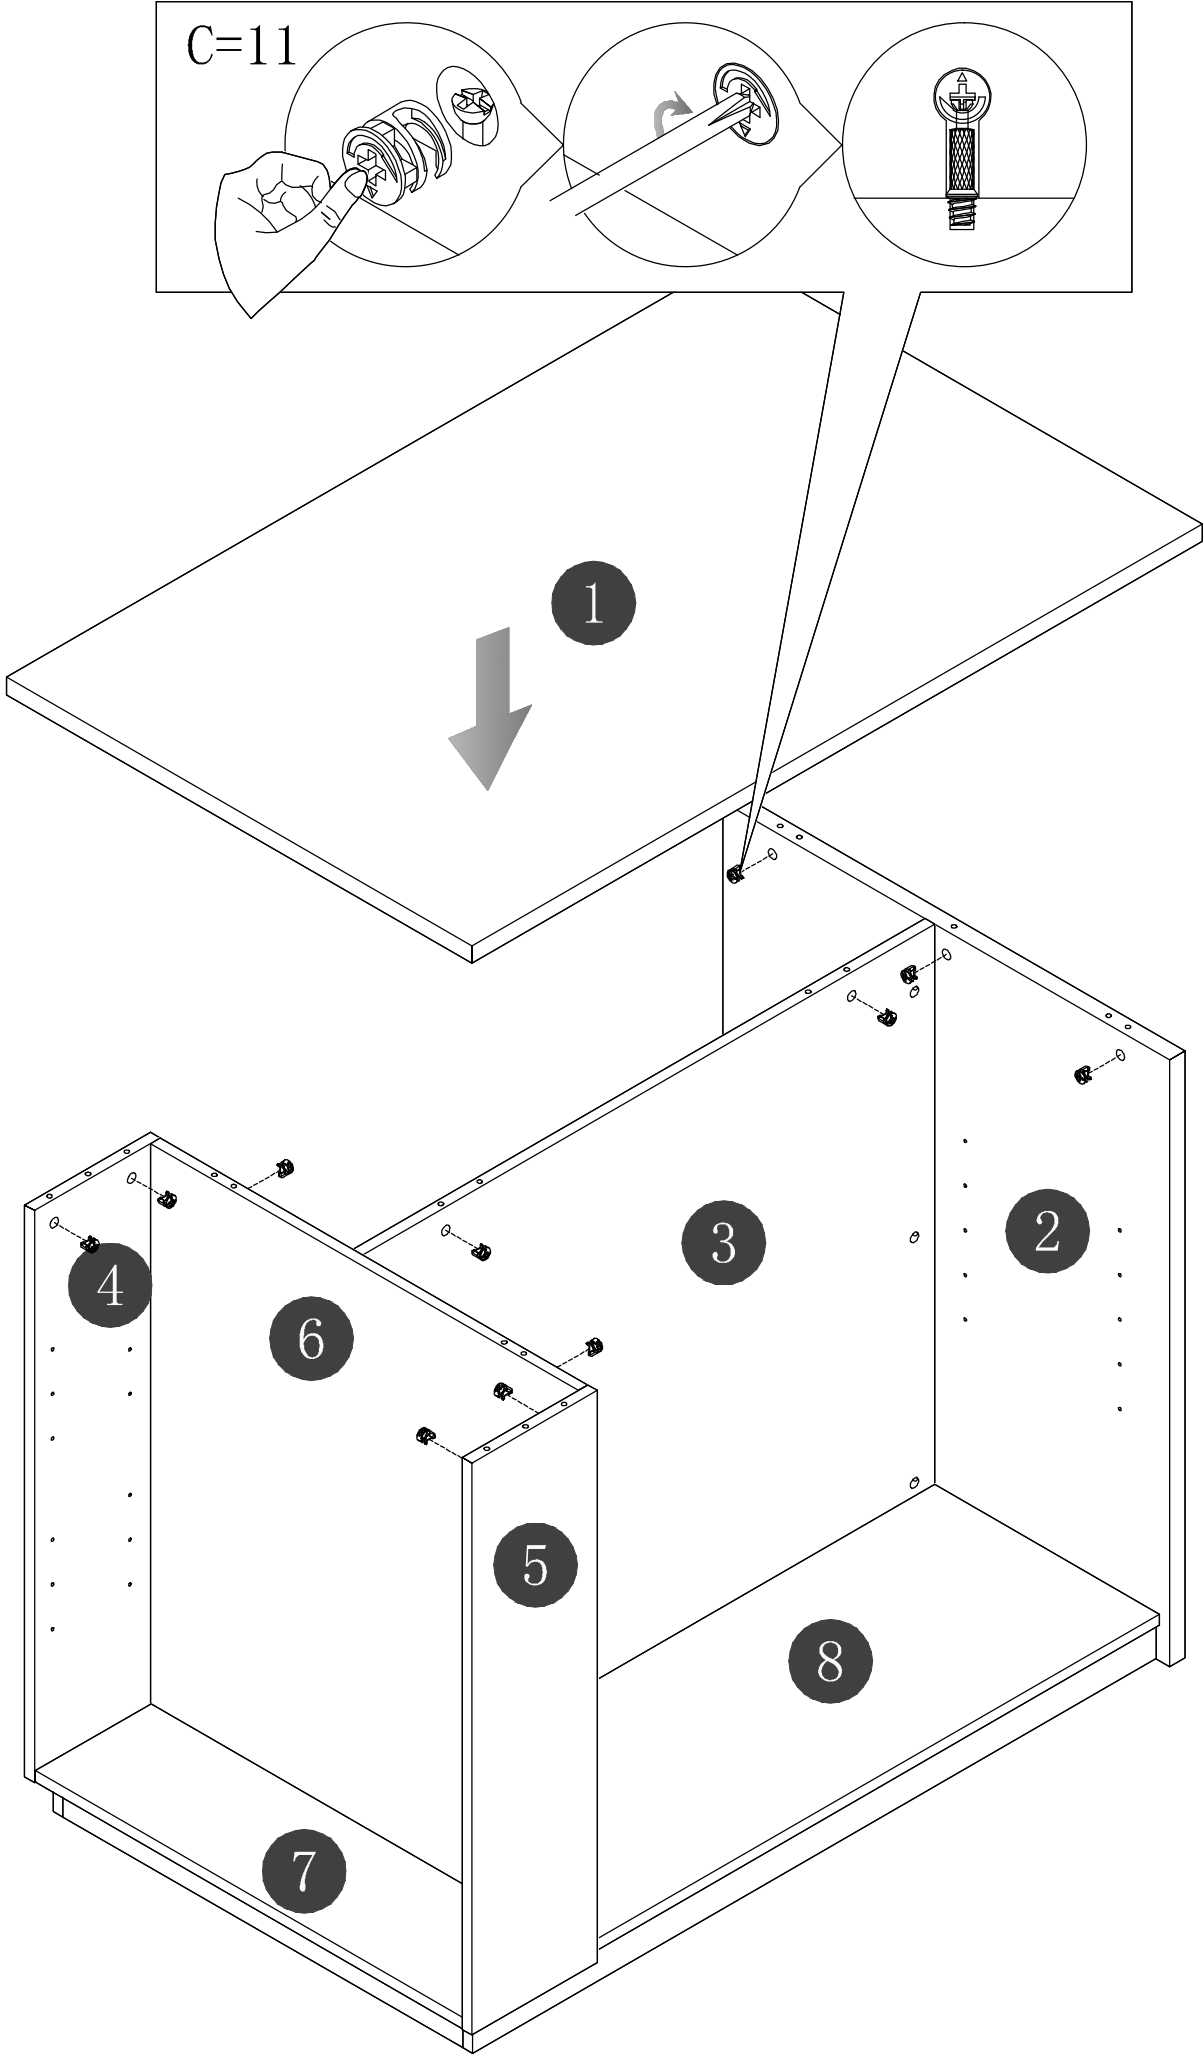


STEP 10

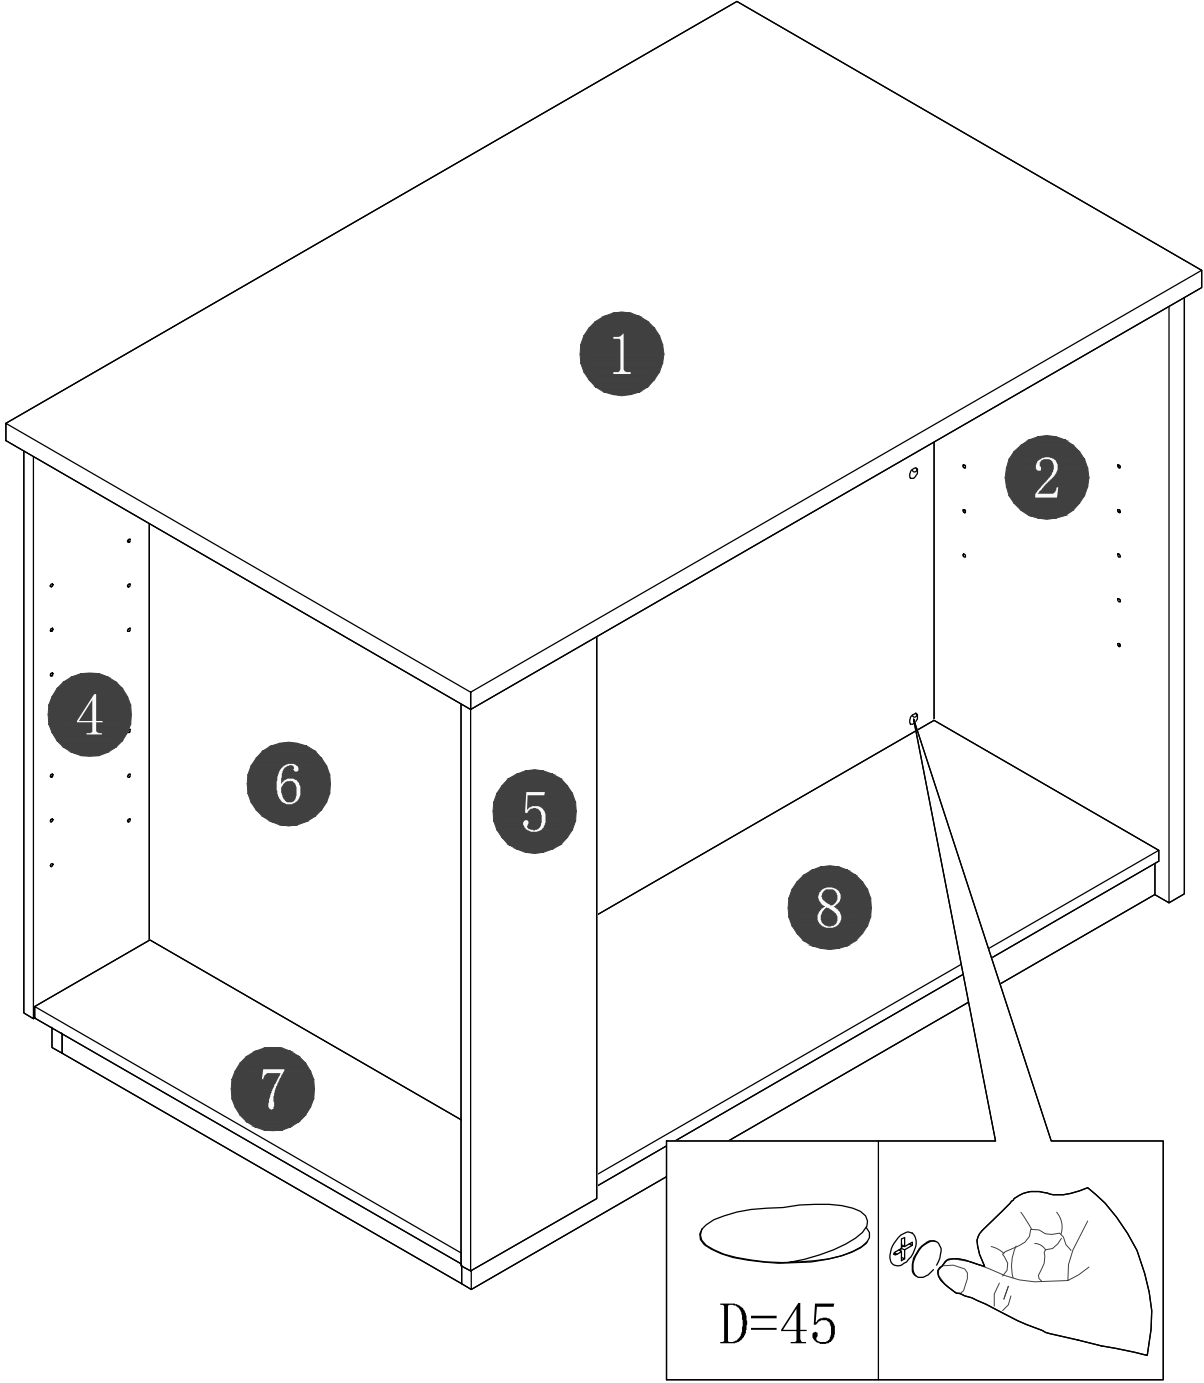


STEP 11

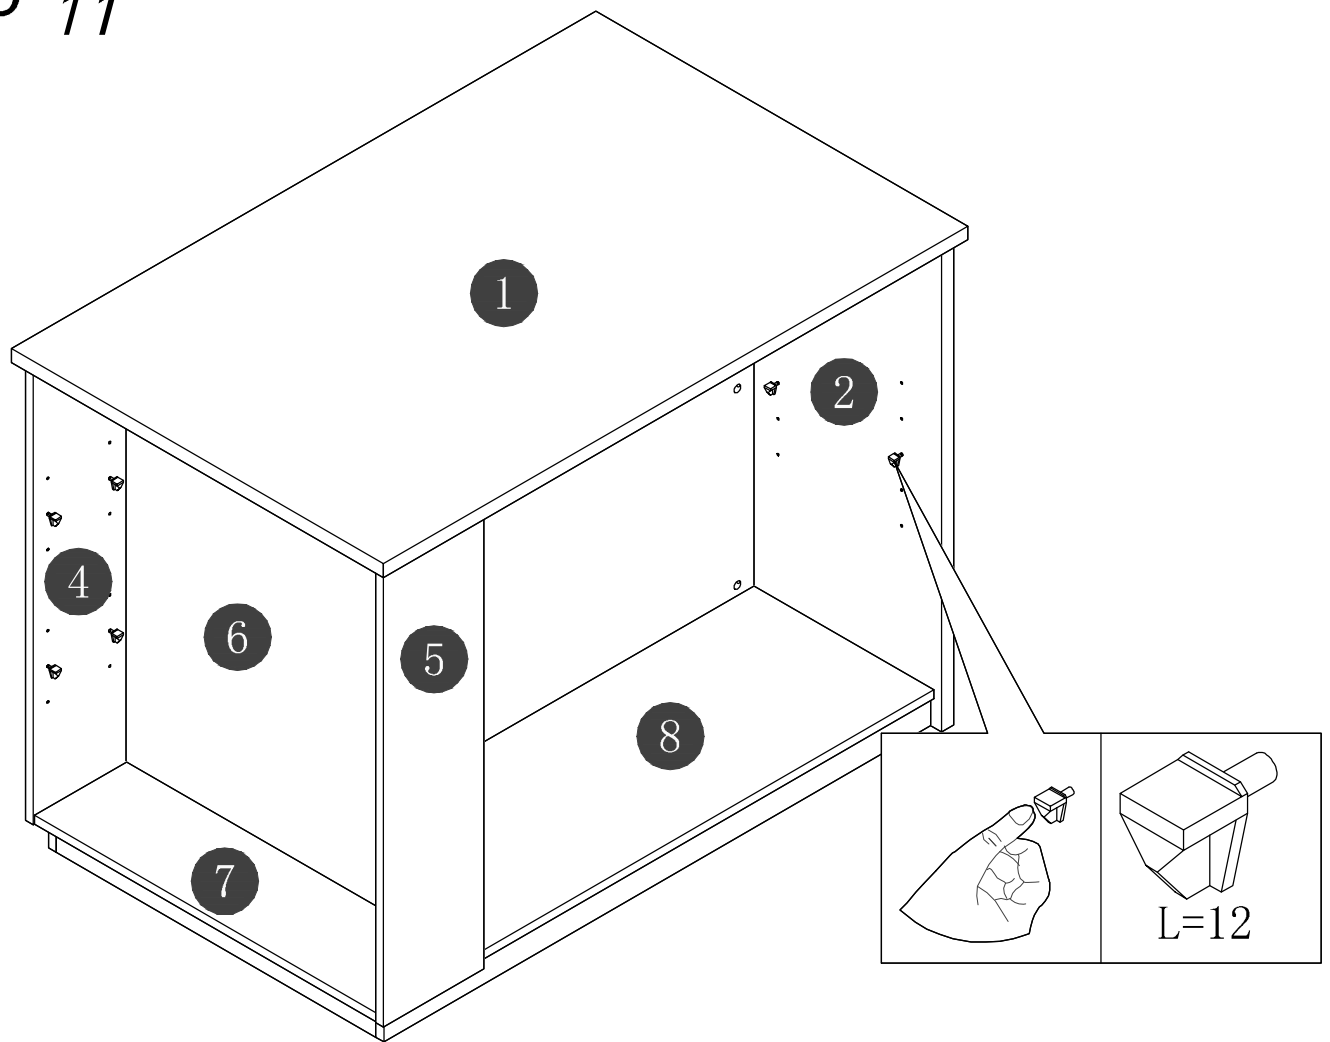


STEP 12

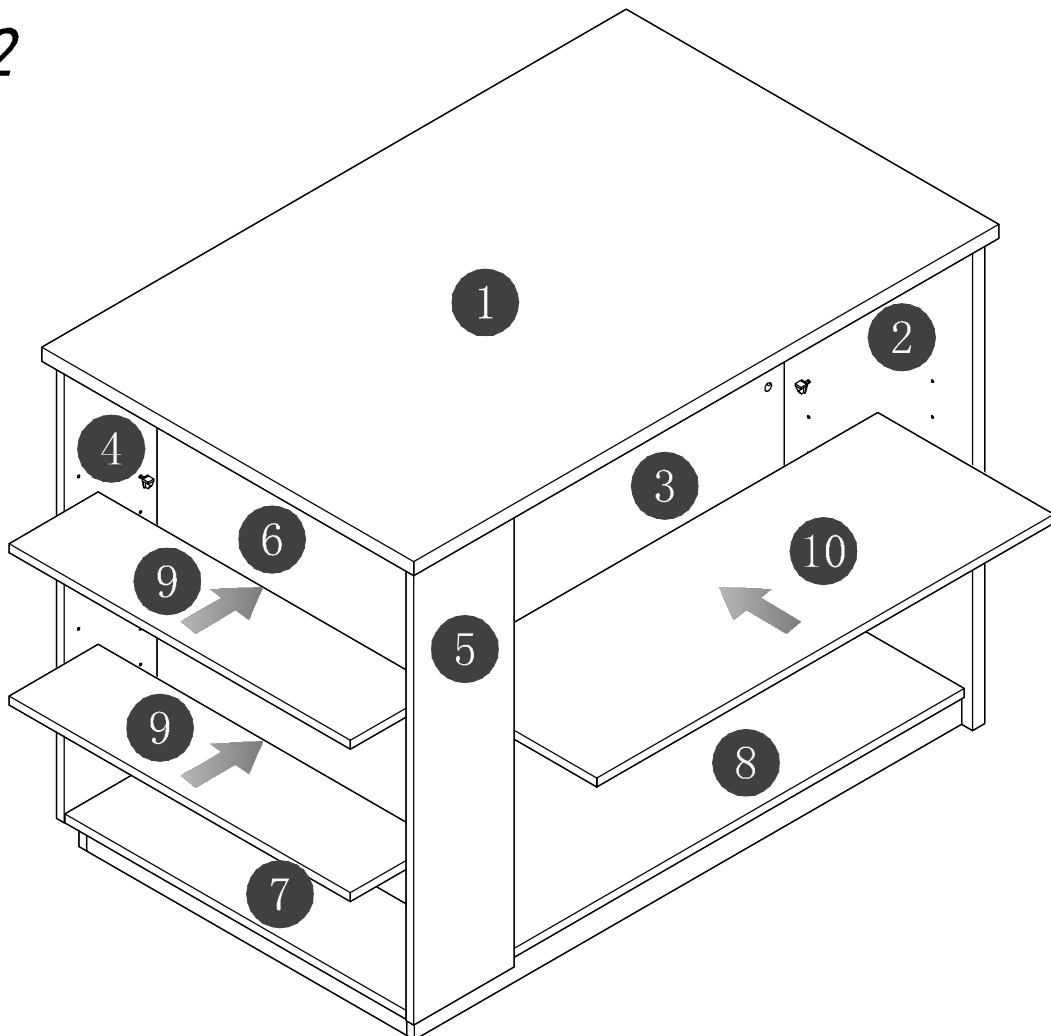





STEP 13

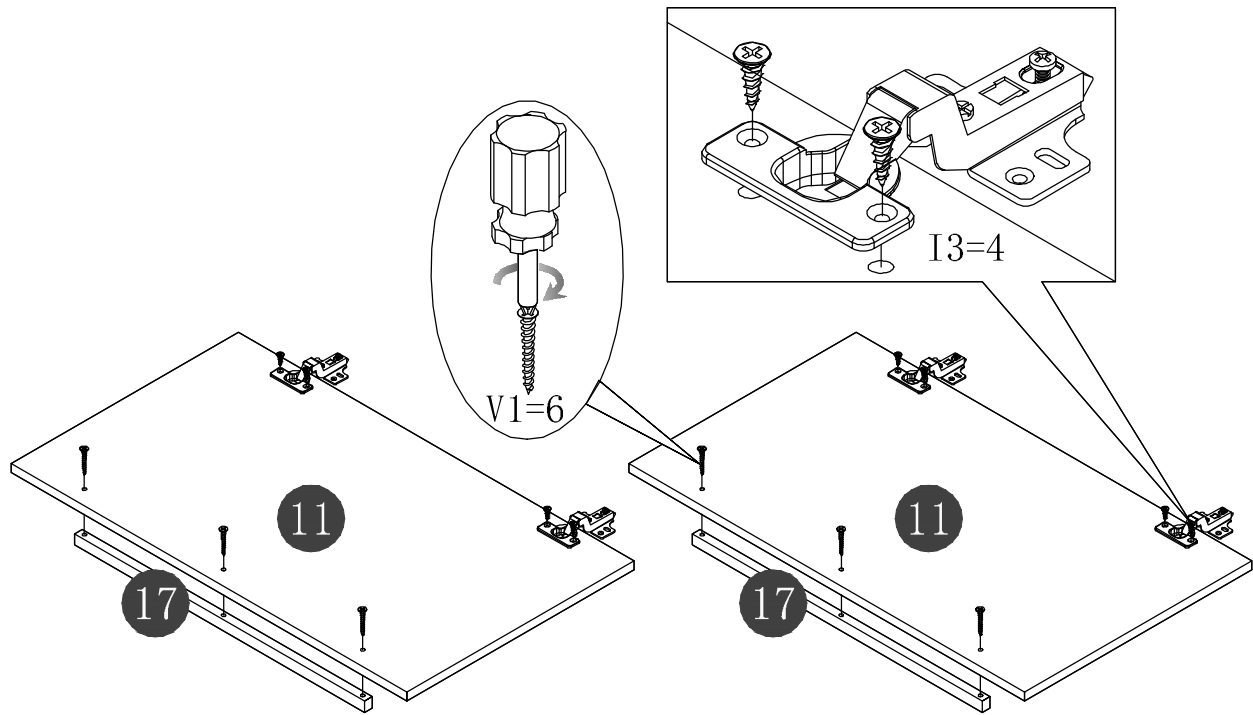


STEP 14

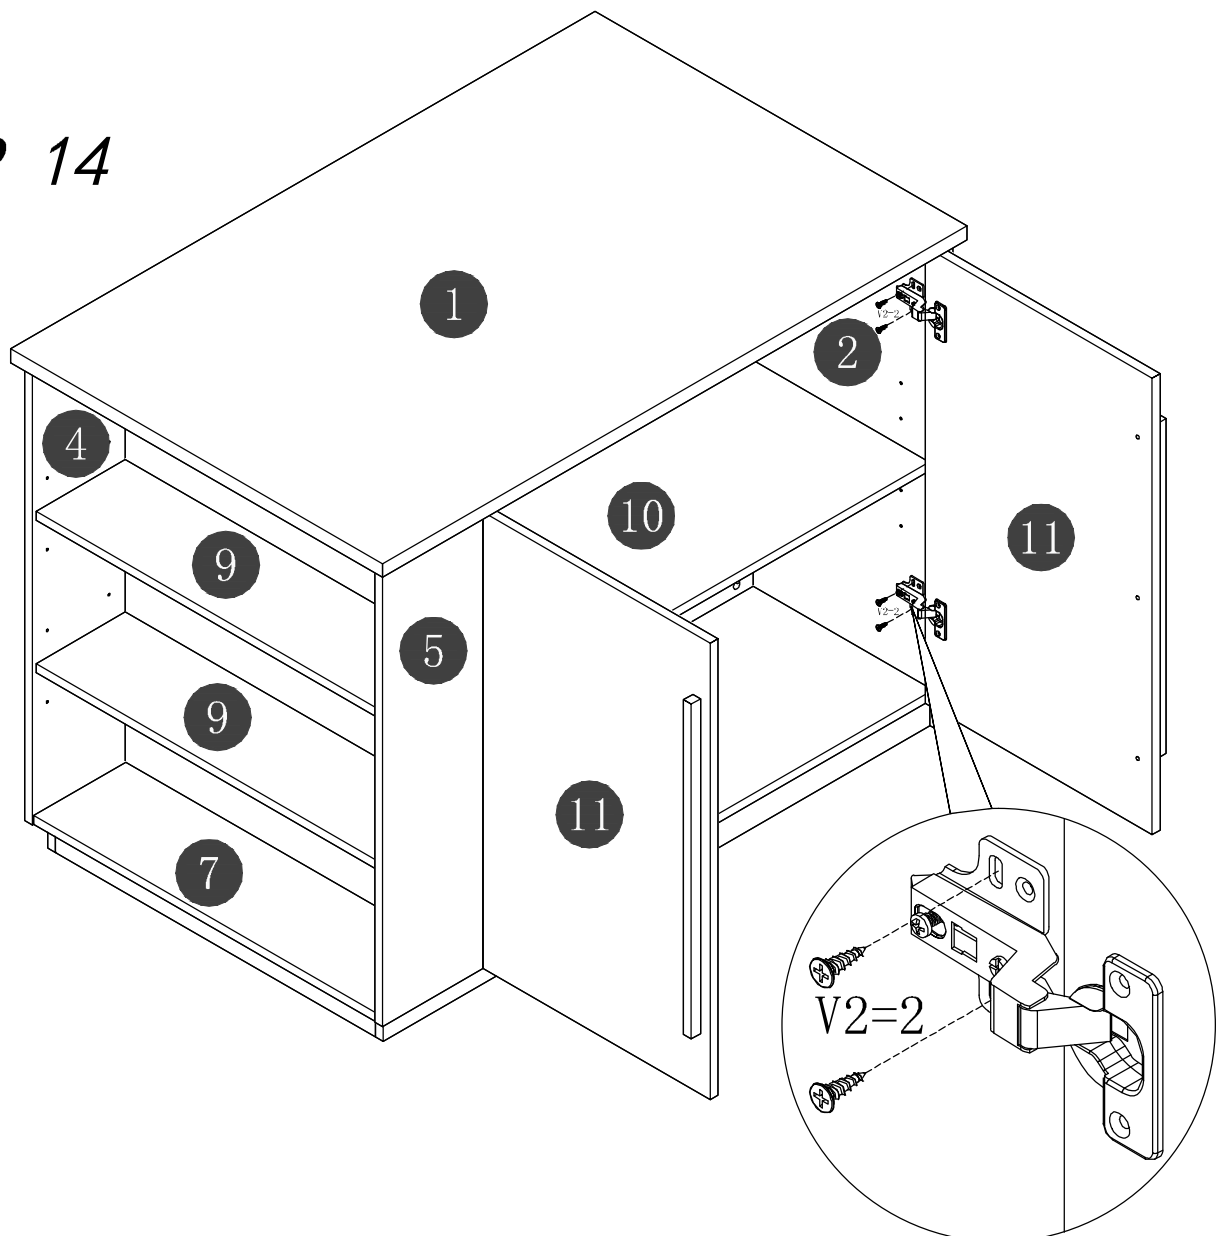

STEP 15

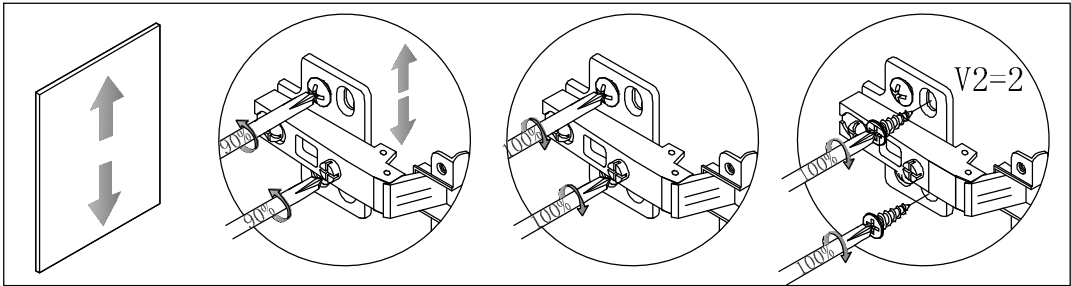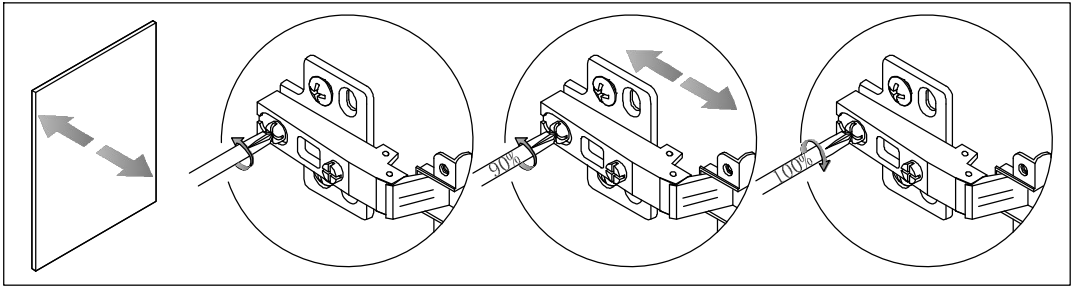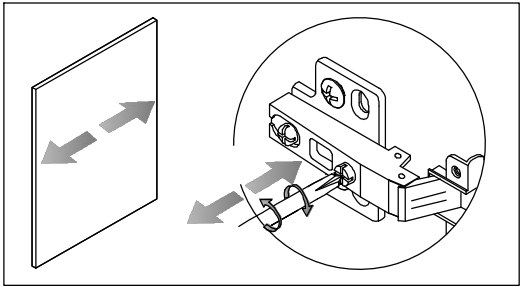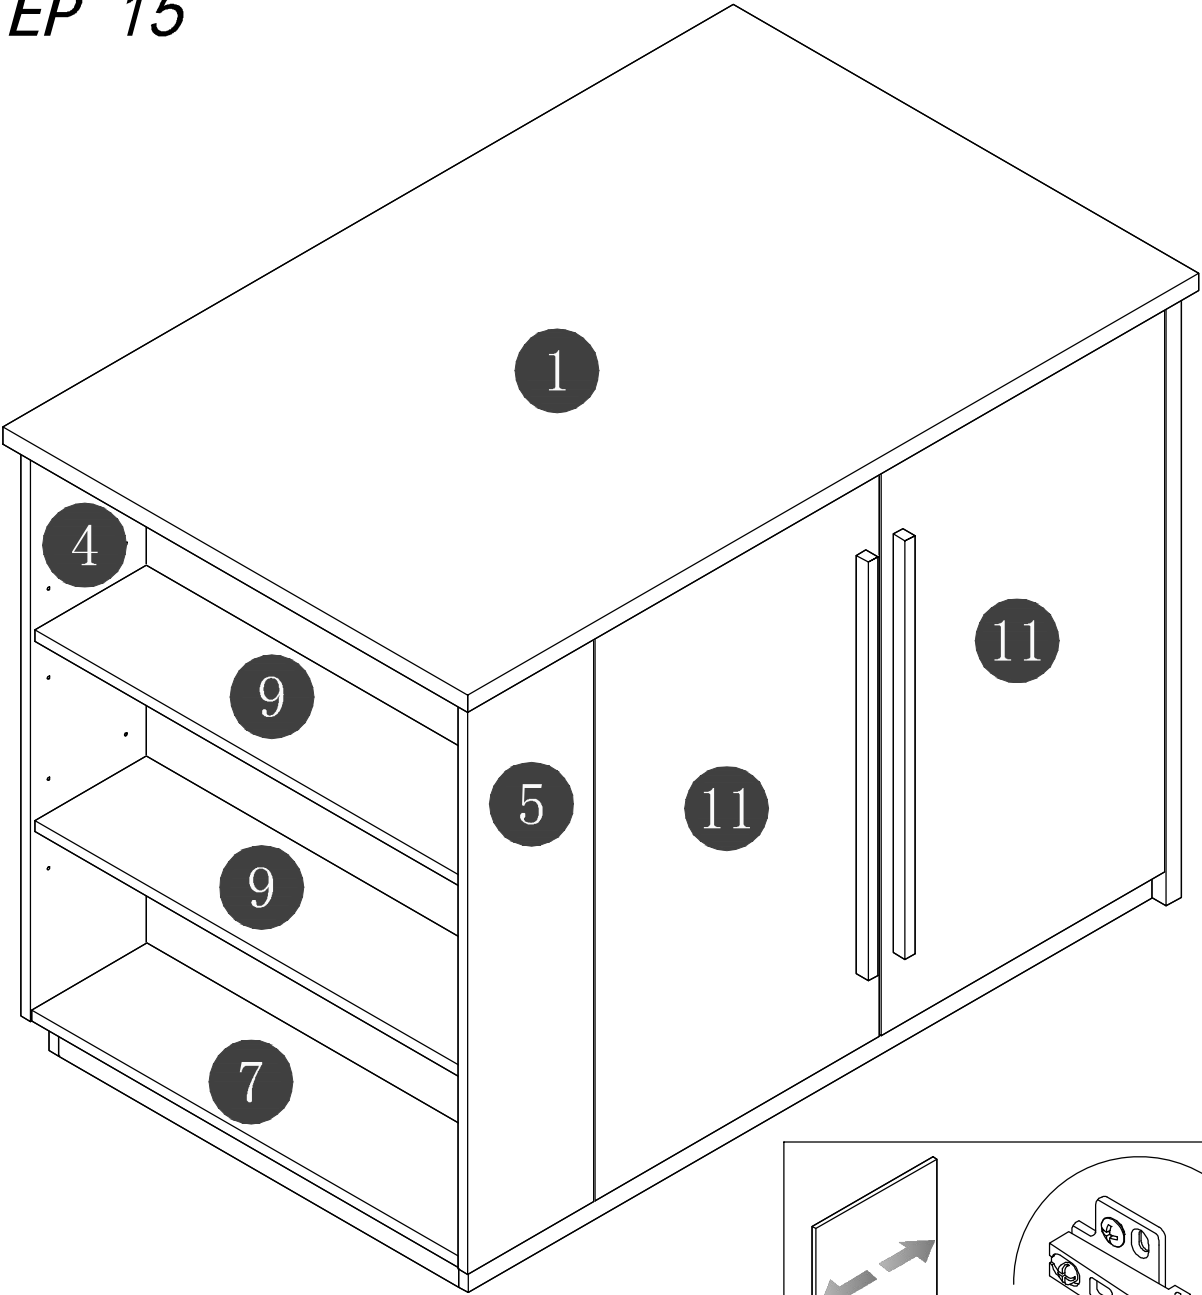

STEP 15

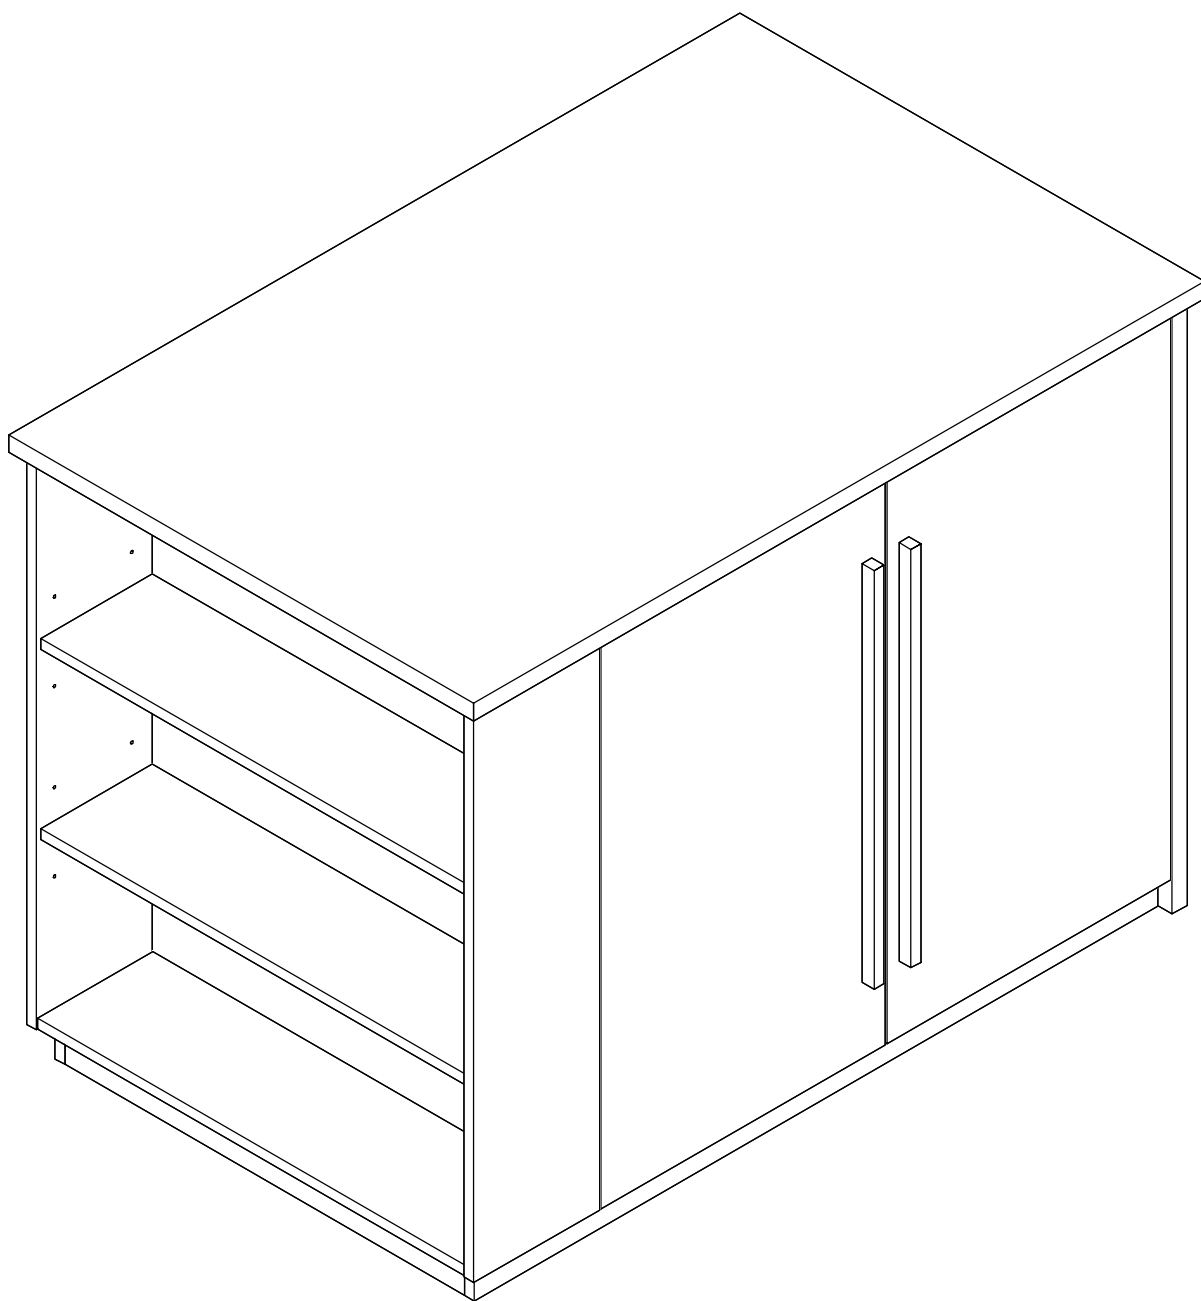

Finish