


Assembly Instructions

Nordic Range

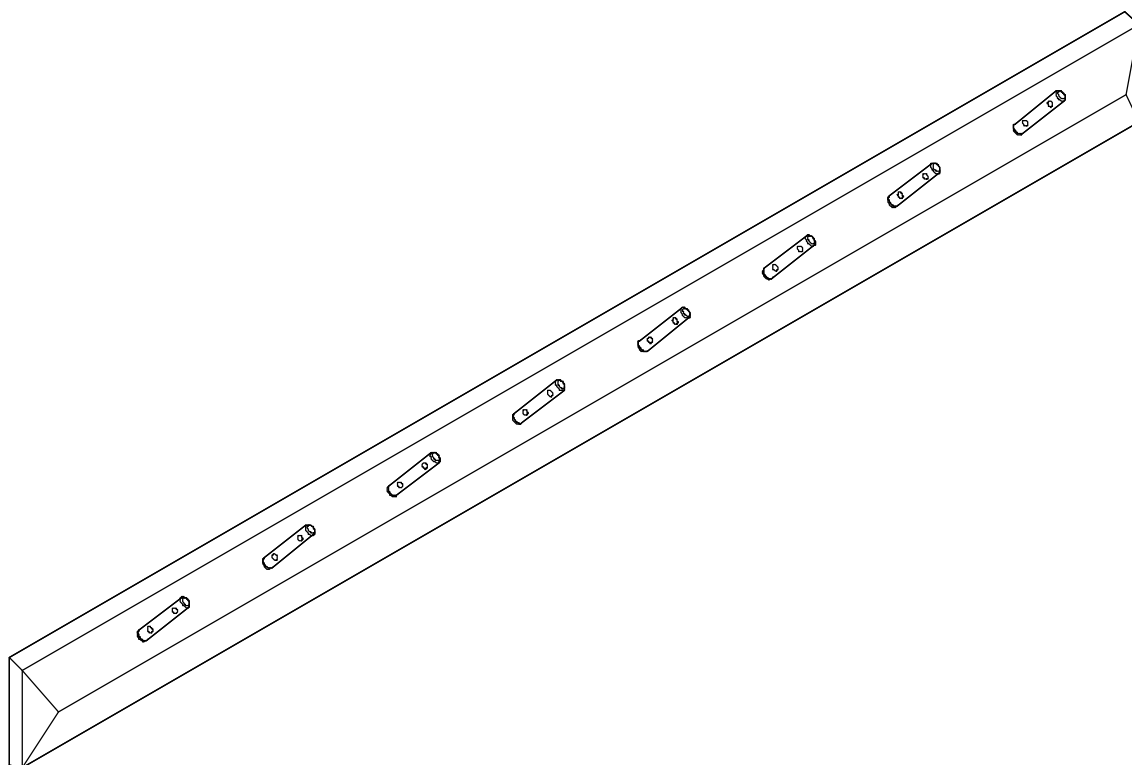

Loft

Product Code









HAN-LOF-NOR-1~9728

Dimensions(W x D x H)


100*2*8cm

Important


Please read through instruction carefully
Before assembly and keep for future reference.

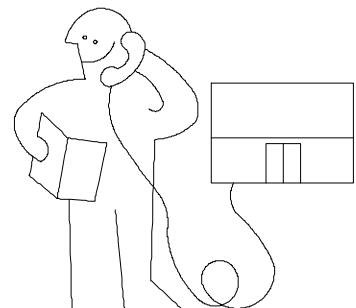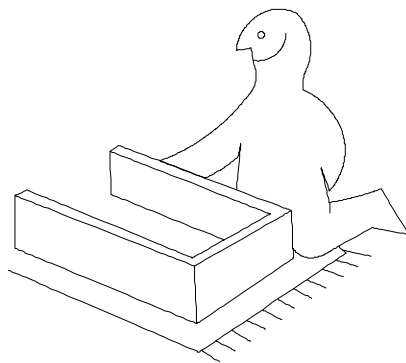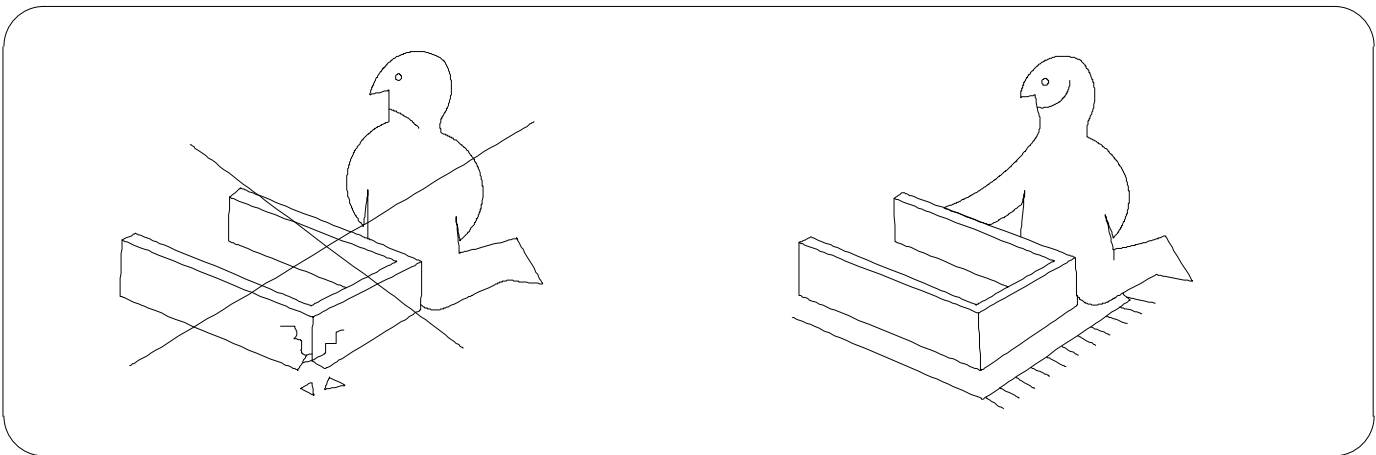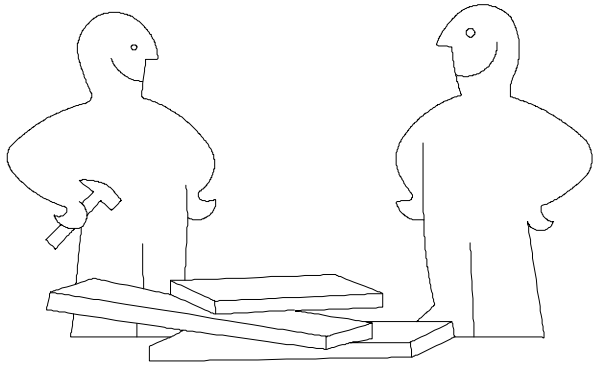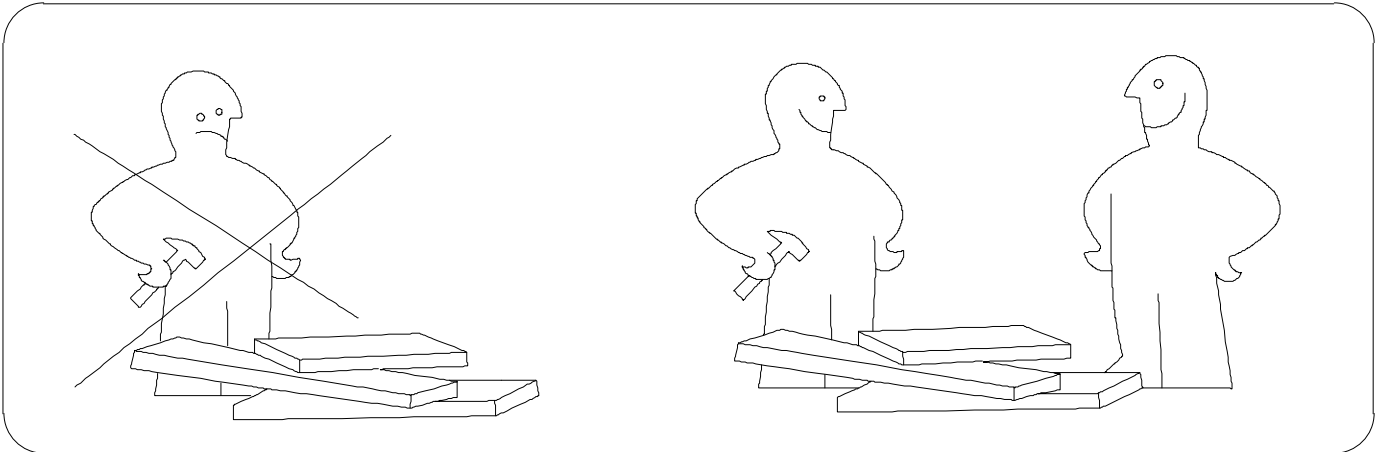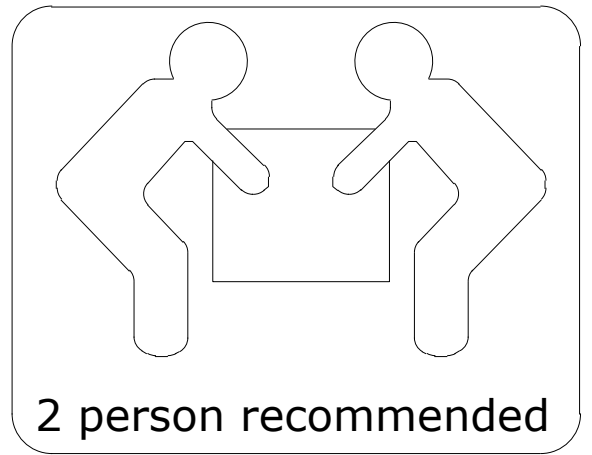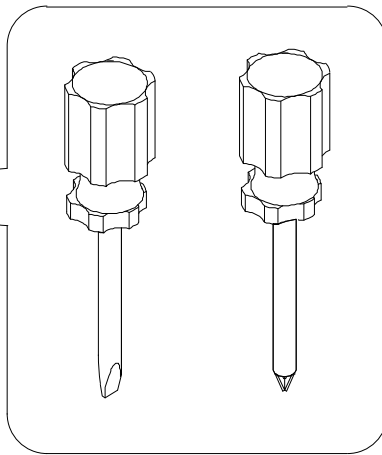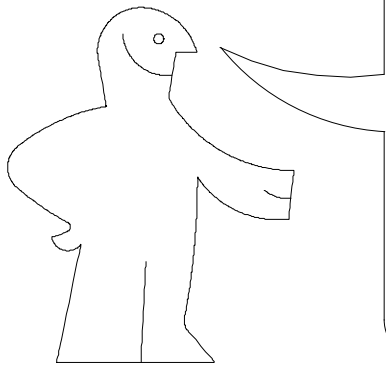

Panel No	Panel Sizes	Quantity
1	1000*83*23	1
2	50*Φ12	8



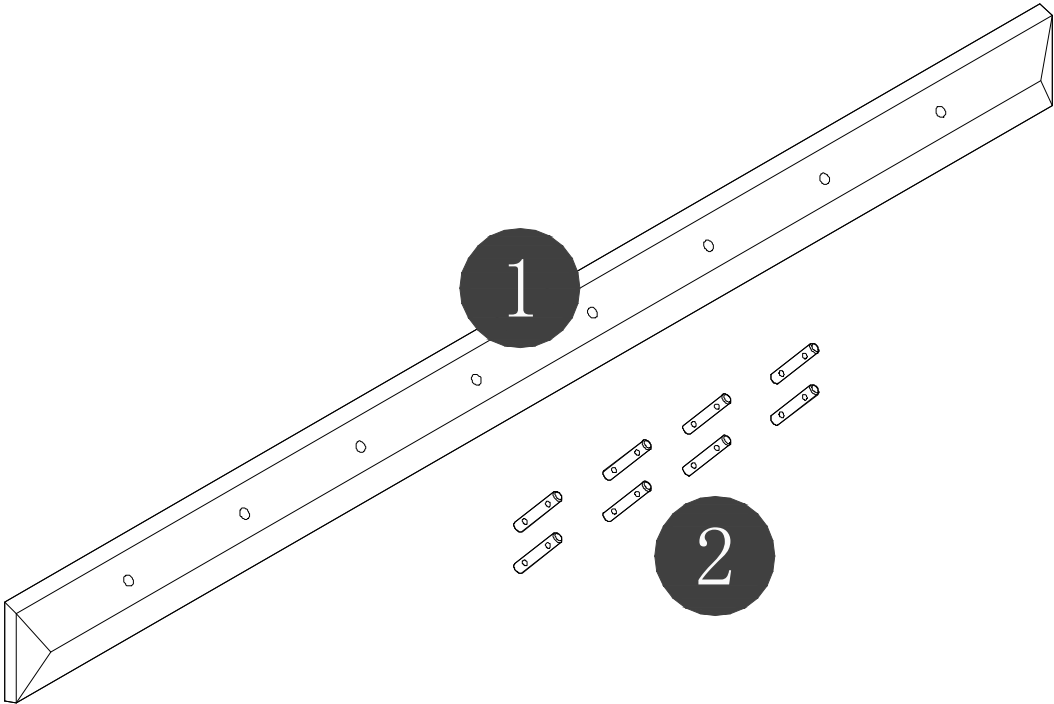


Fittings

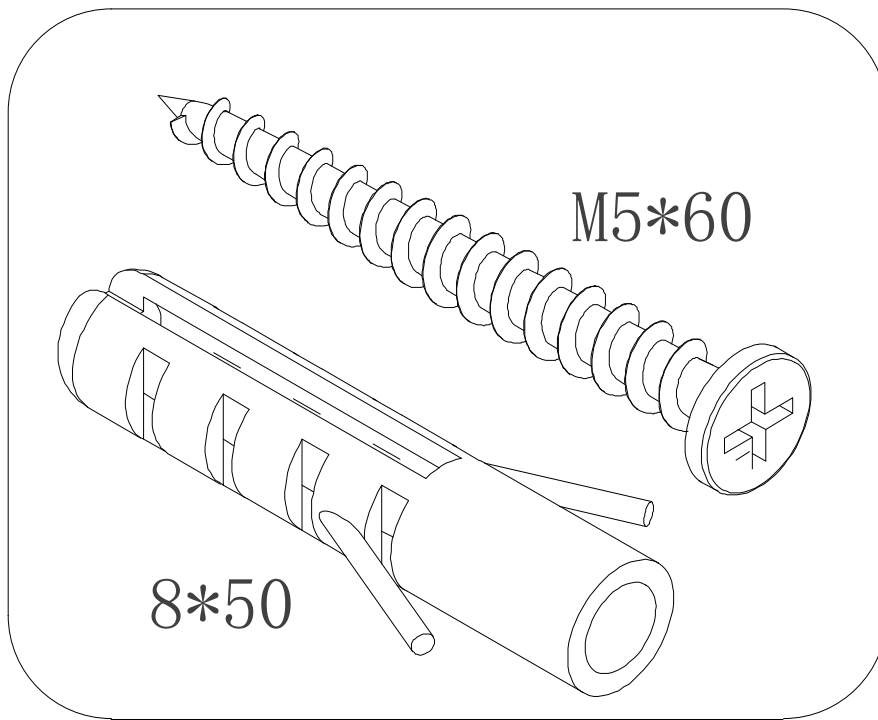

F=2


STEP 1

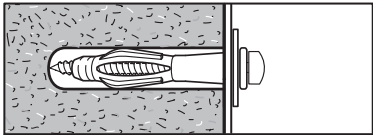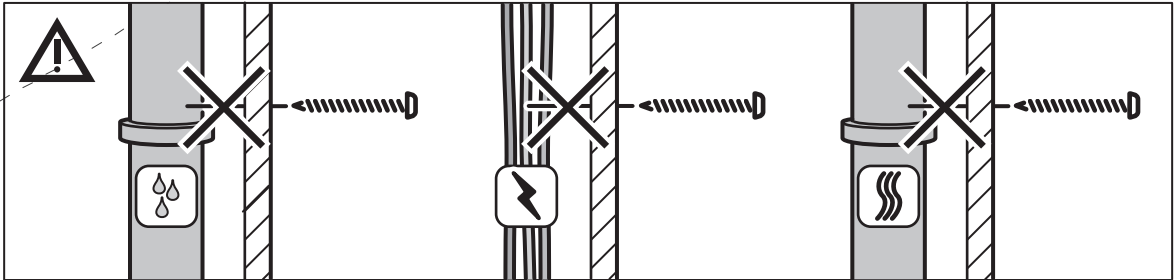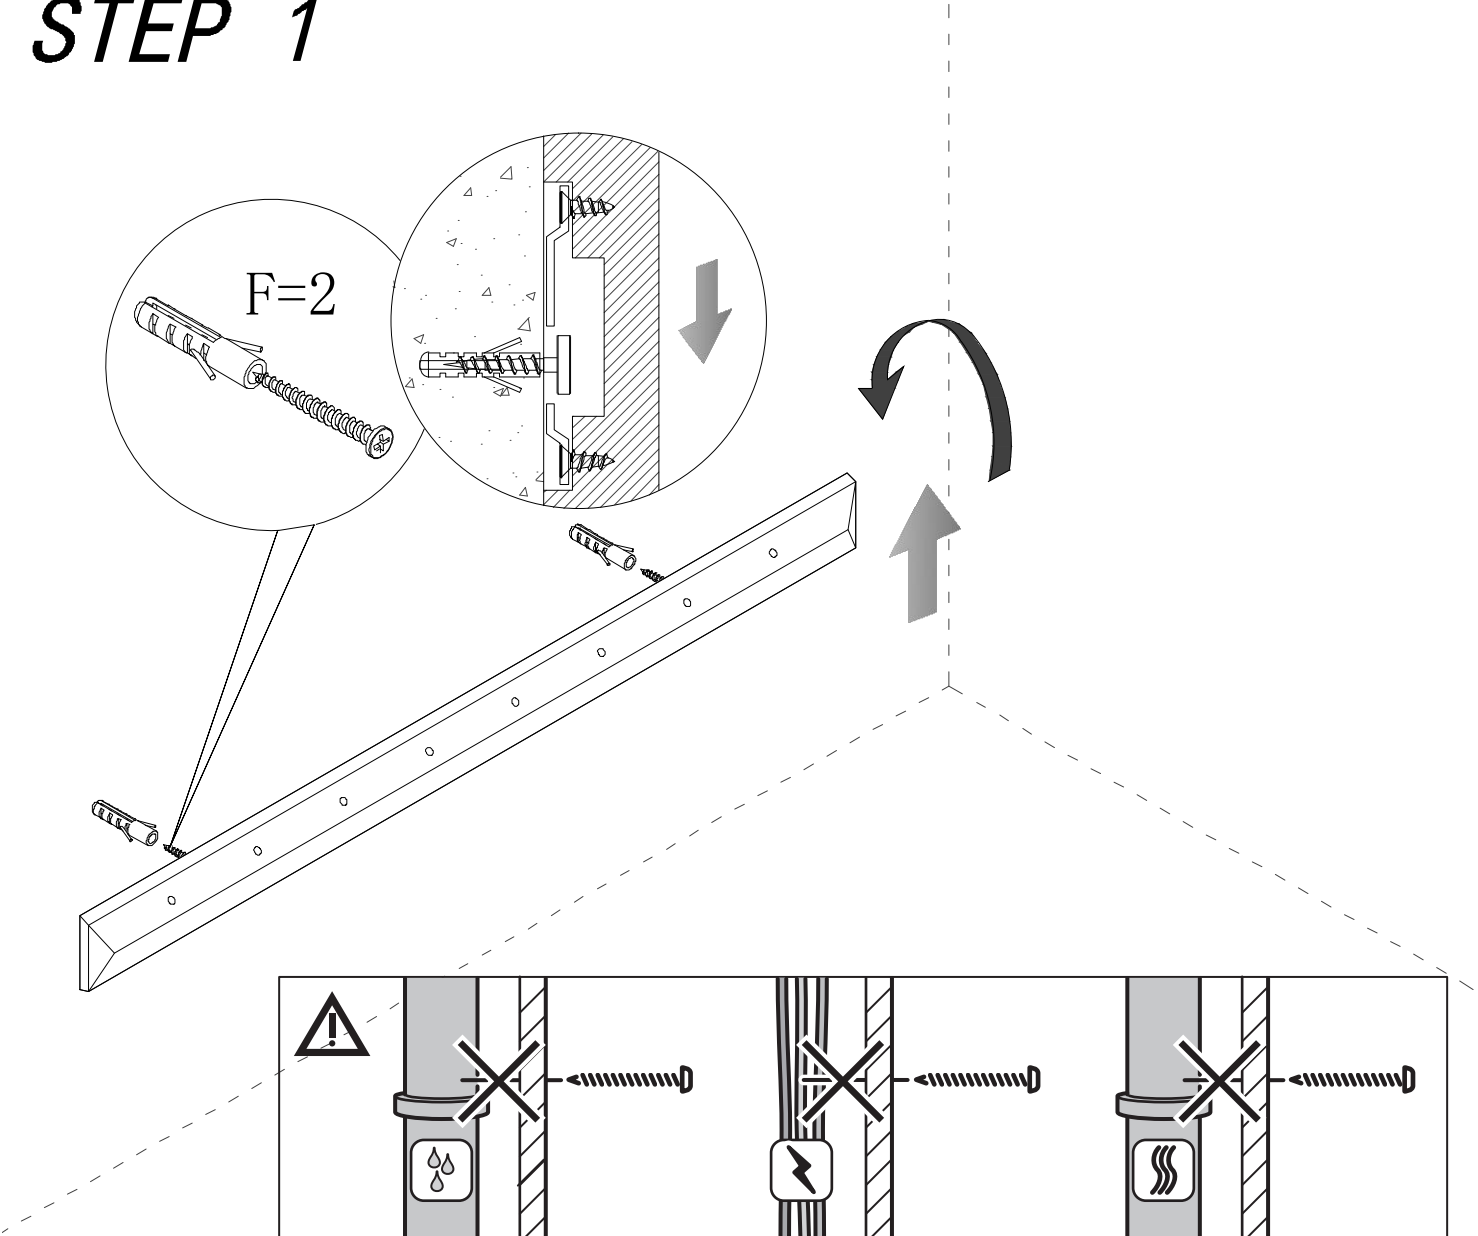


Ø 8 mm
(5/16")





1



2

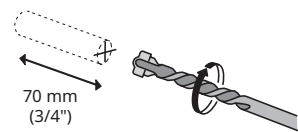

3

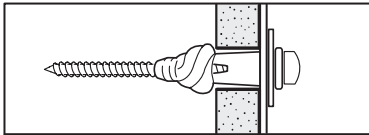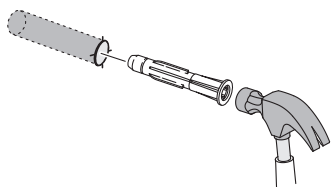


Ø 8 mm
(5/16")





1



2

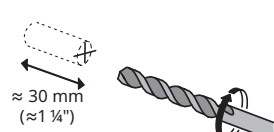


3

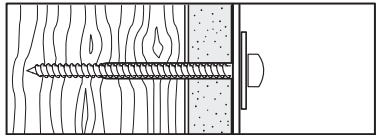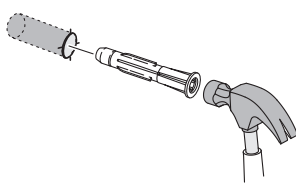


Ø 3 mm
(1/8")



1




2

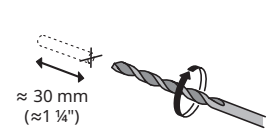


3



STEP 2

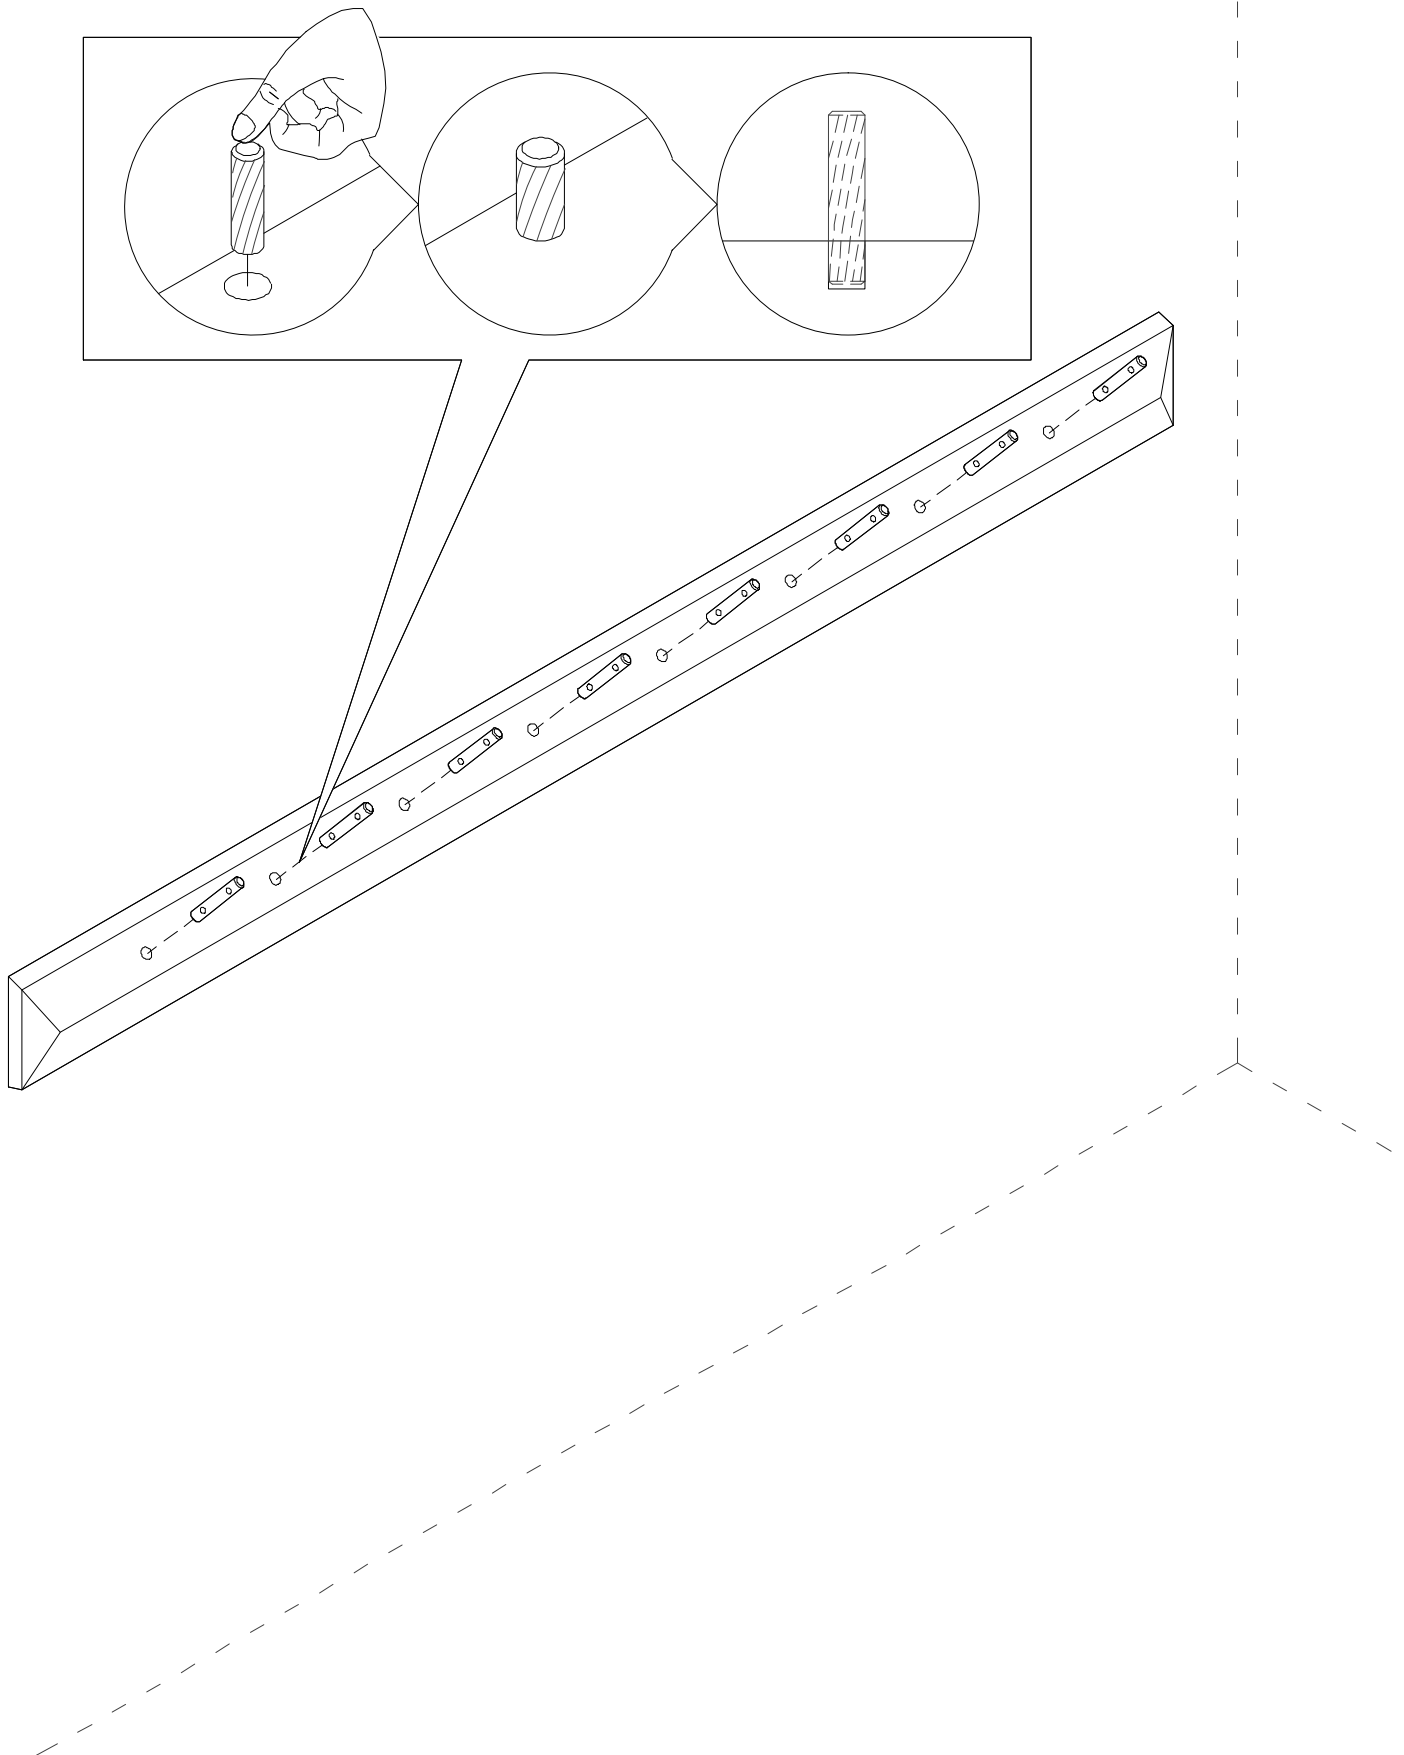

STEP 3

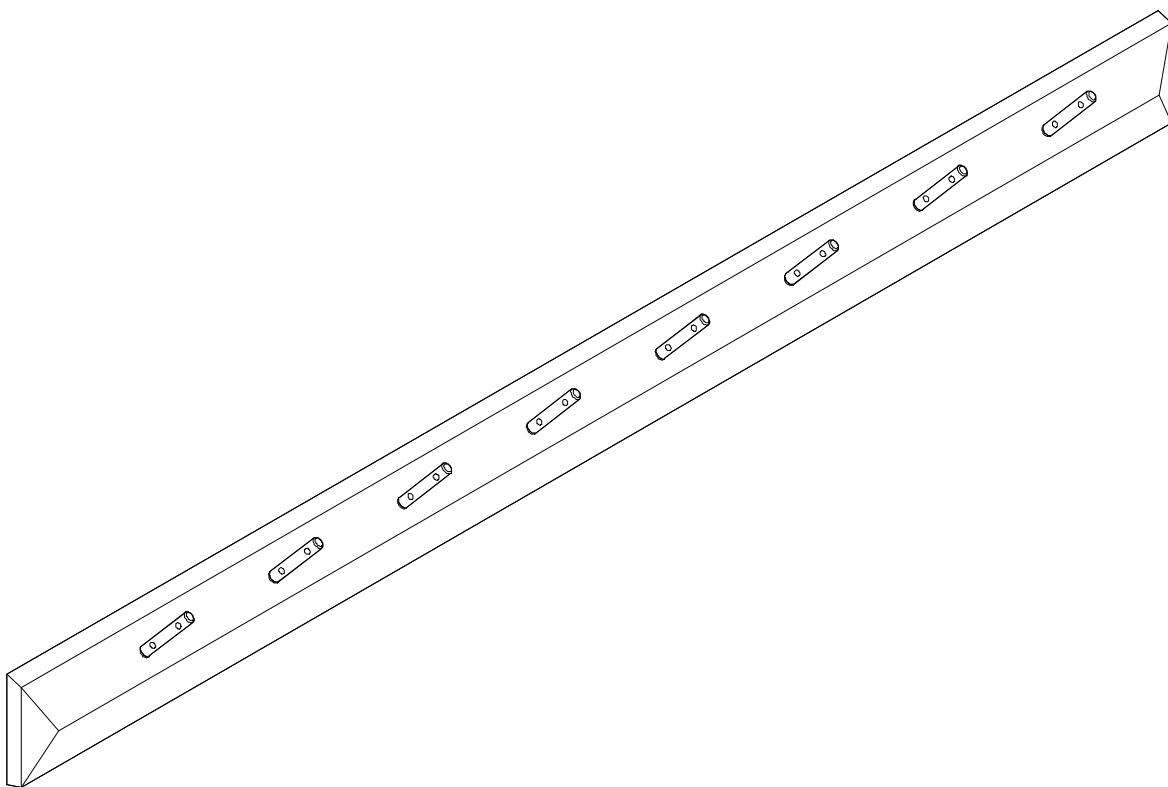

Finish