


Assembly Instructions

Nordic Range

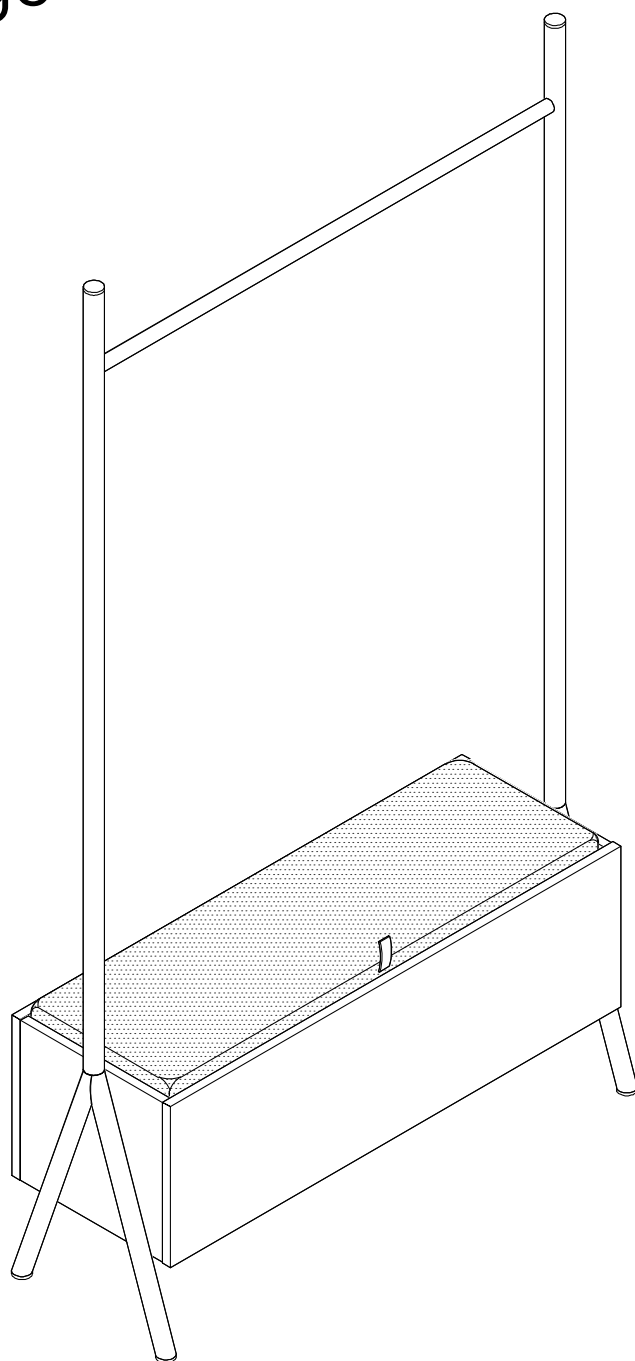

Loft

Product Code




CLR-LOF-NOR-2~9729

Dimensions(W x D x H)







97*32*180cm

Important

Please read through instruction carefully
Before assembly and keep for future reference.

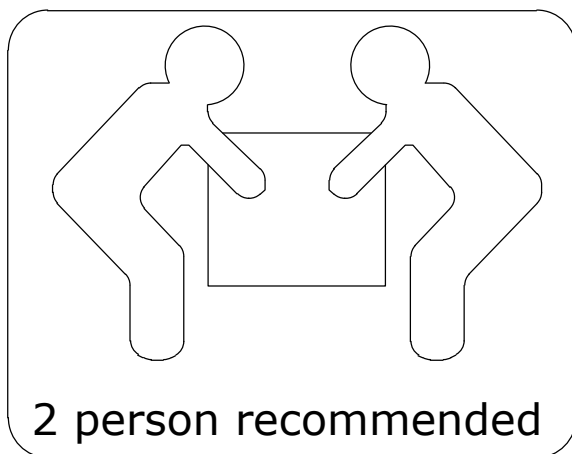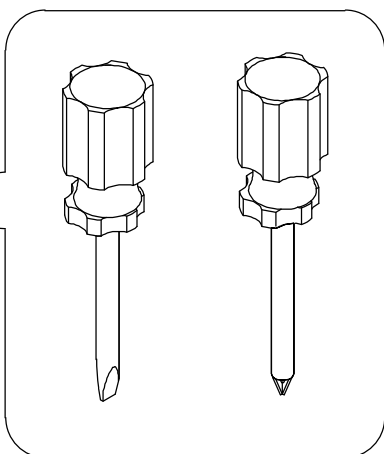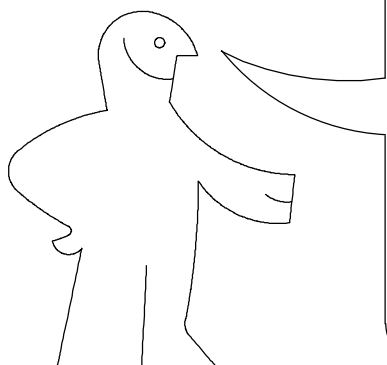


2 person recommended

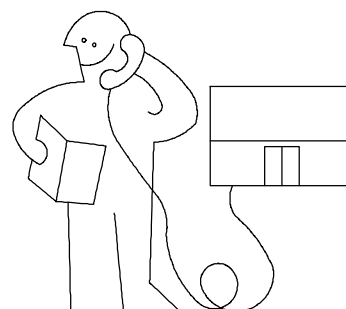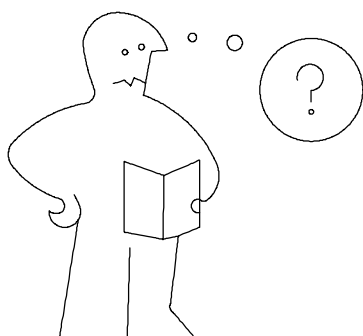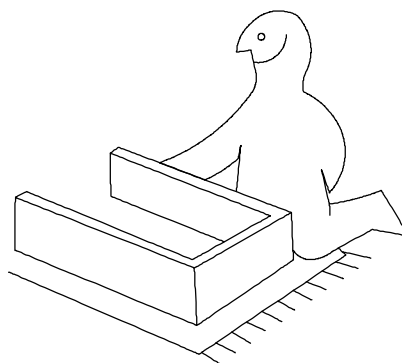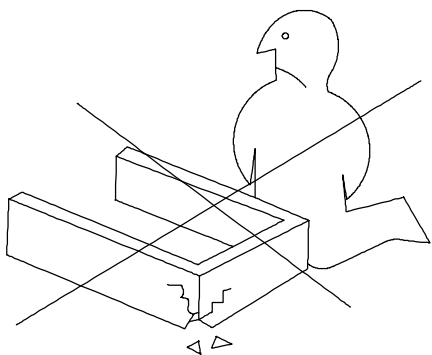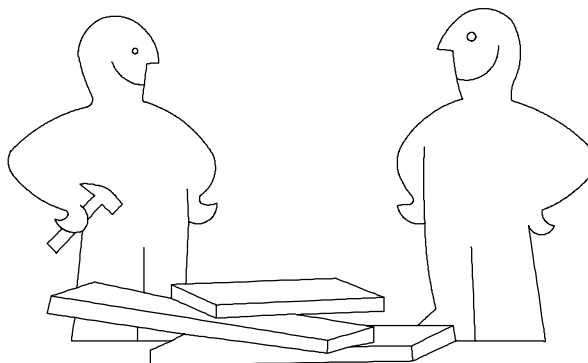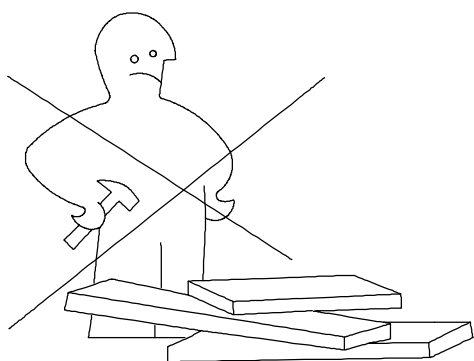

Panel No	Panel Sizes	Quantity
1	908*280*16	1
2	908*280*16	1
3	278*288*16	1
4	278*288*16	1


Panel No	Panel Sizes	Quantity
5	874*288*16	1
6	868*283*48	1
7	873*40*16	1

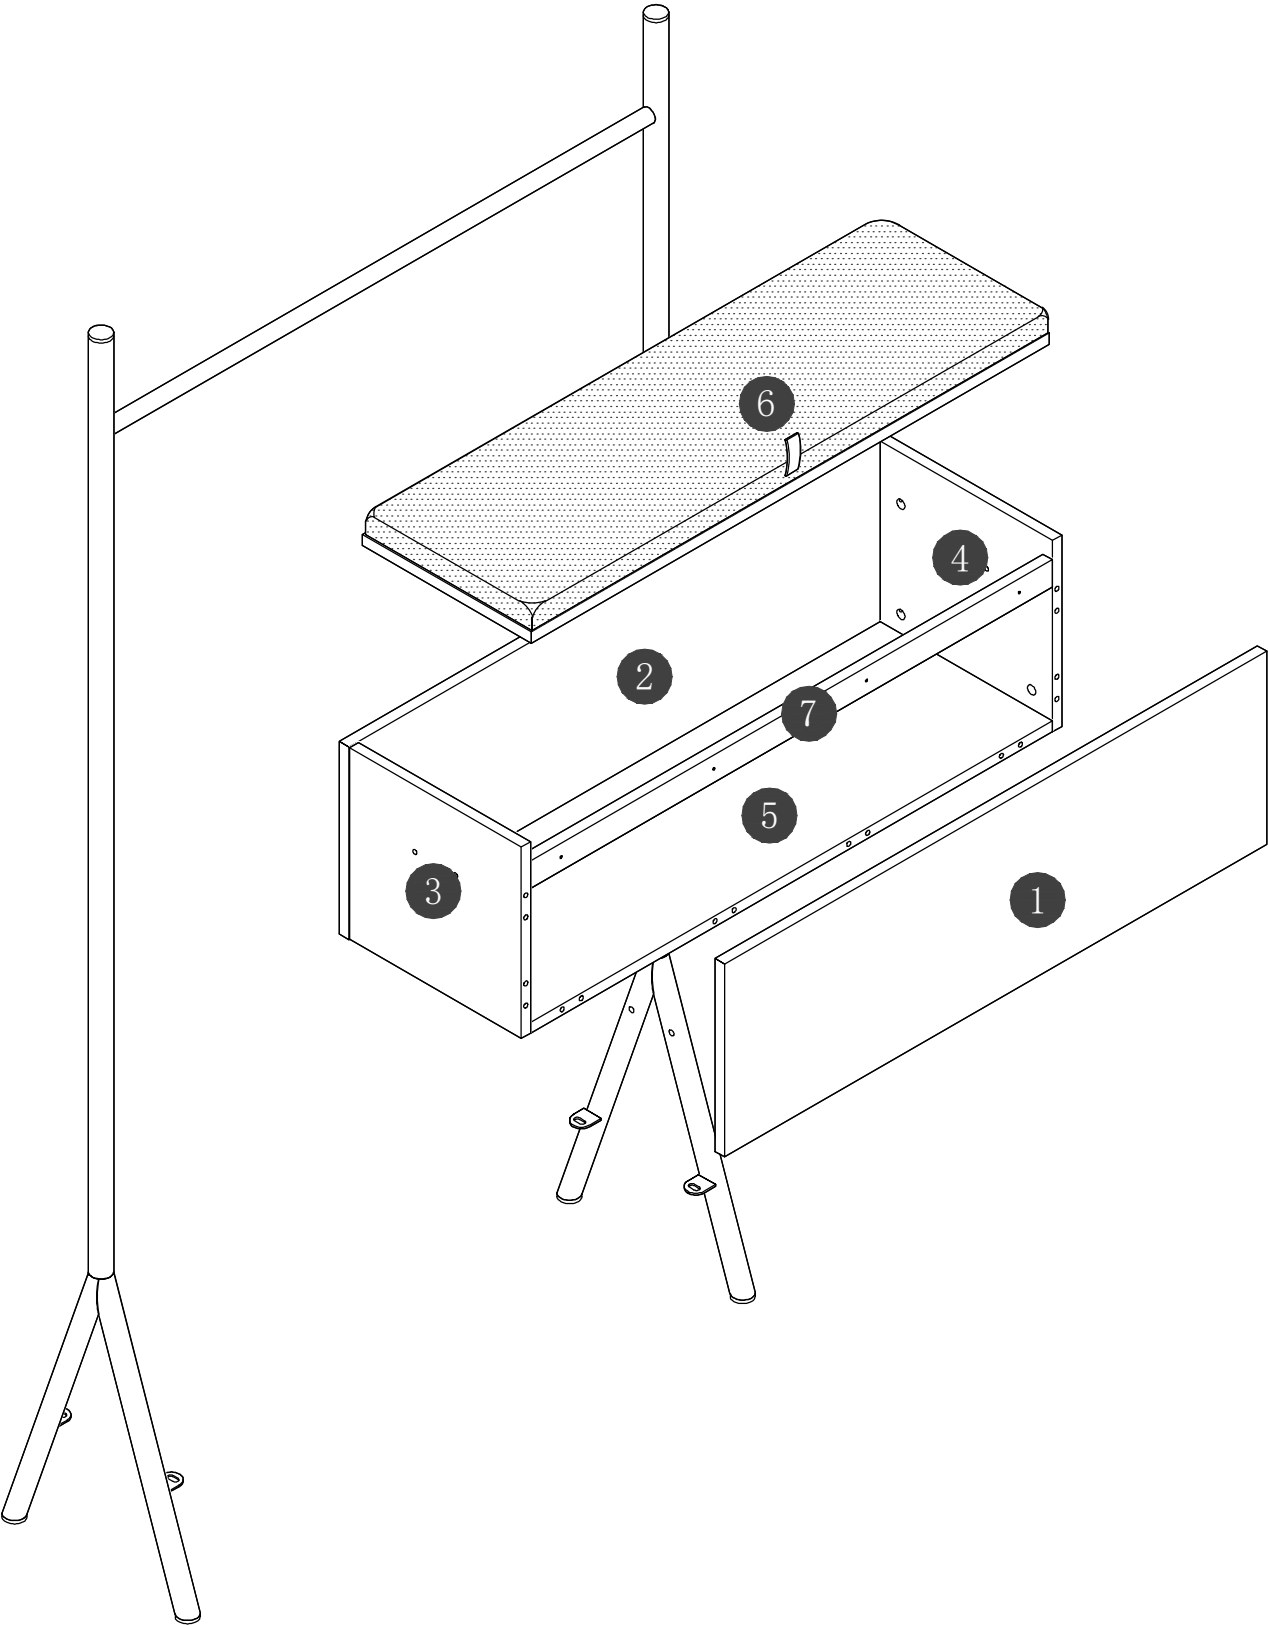


Fittings



A=22




B=20

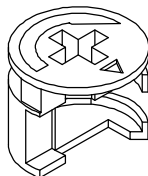


C=22



D=22

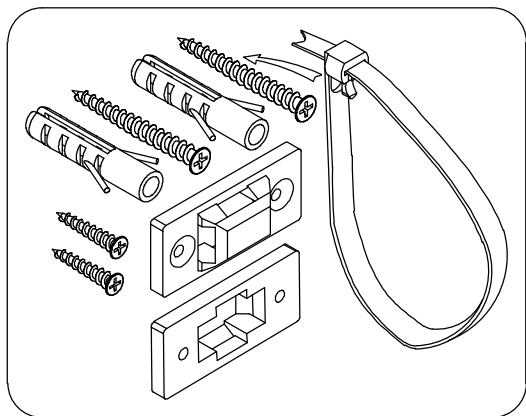

F=1



M6*16

G1=6




M6*30

G2=4




H=1

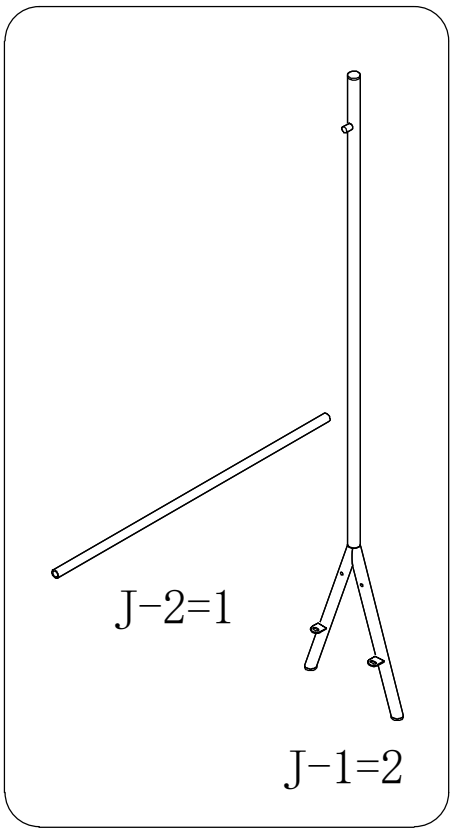


J-2=1

J-1=2

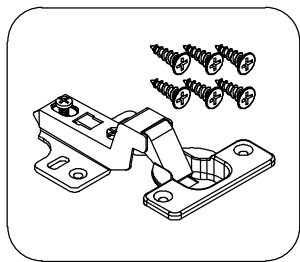


I3=2

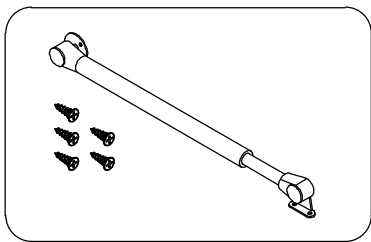


S=1




Z1=4



Z2=4

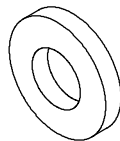


Z3=4




M4*25

V=4


STEP 1

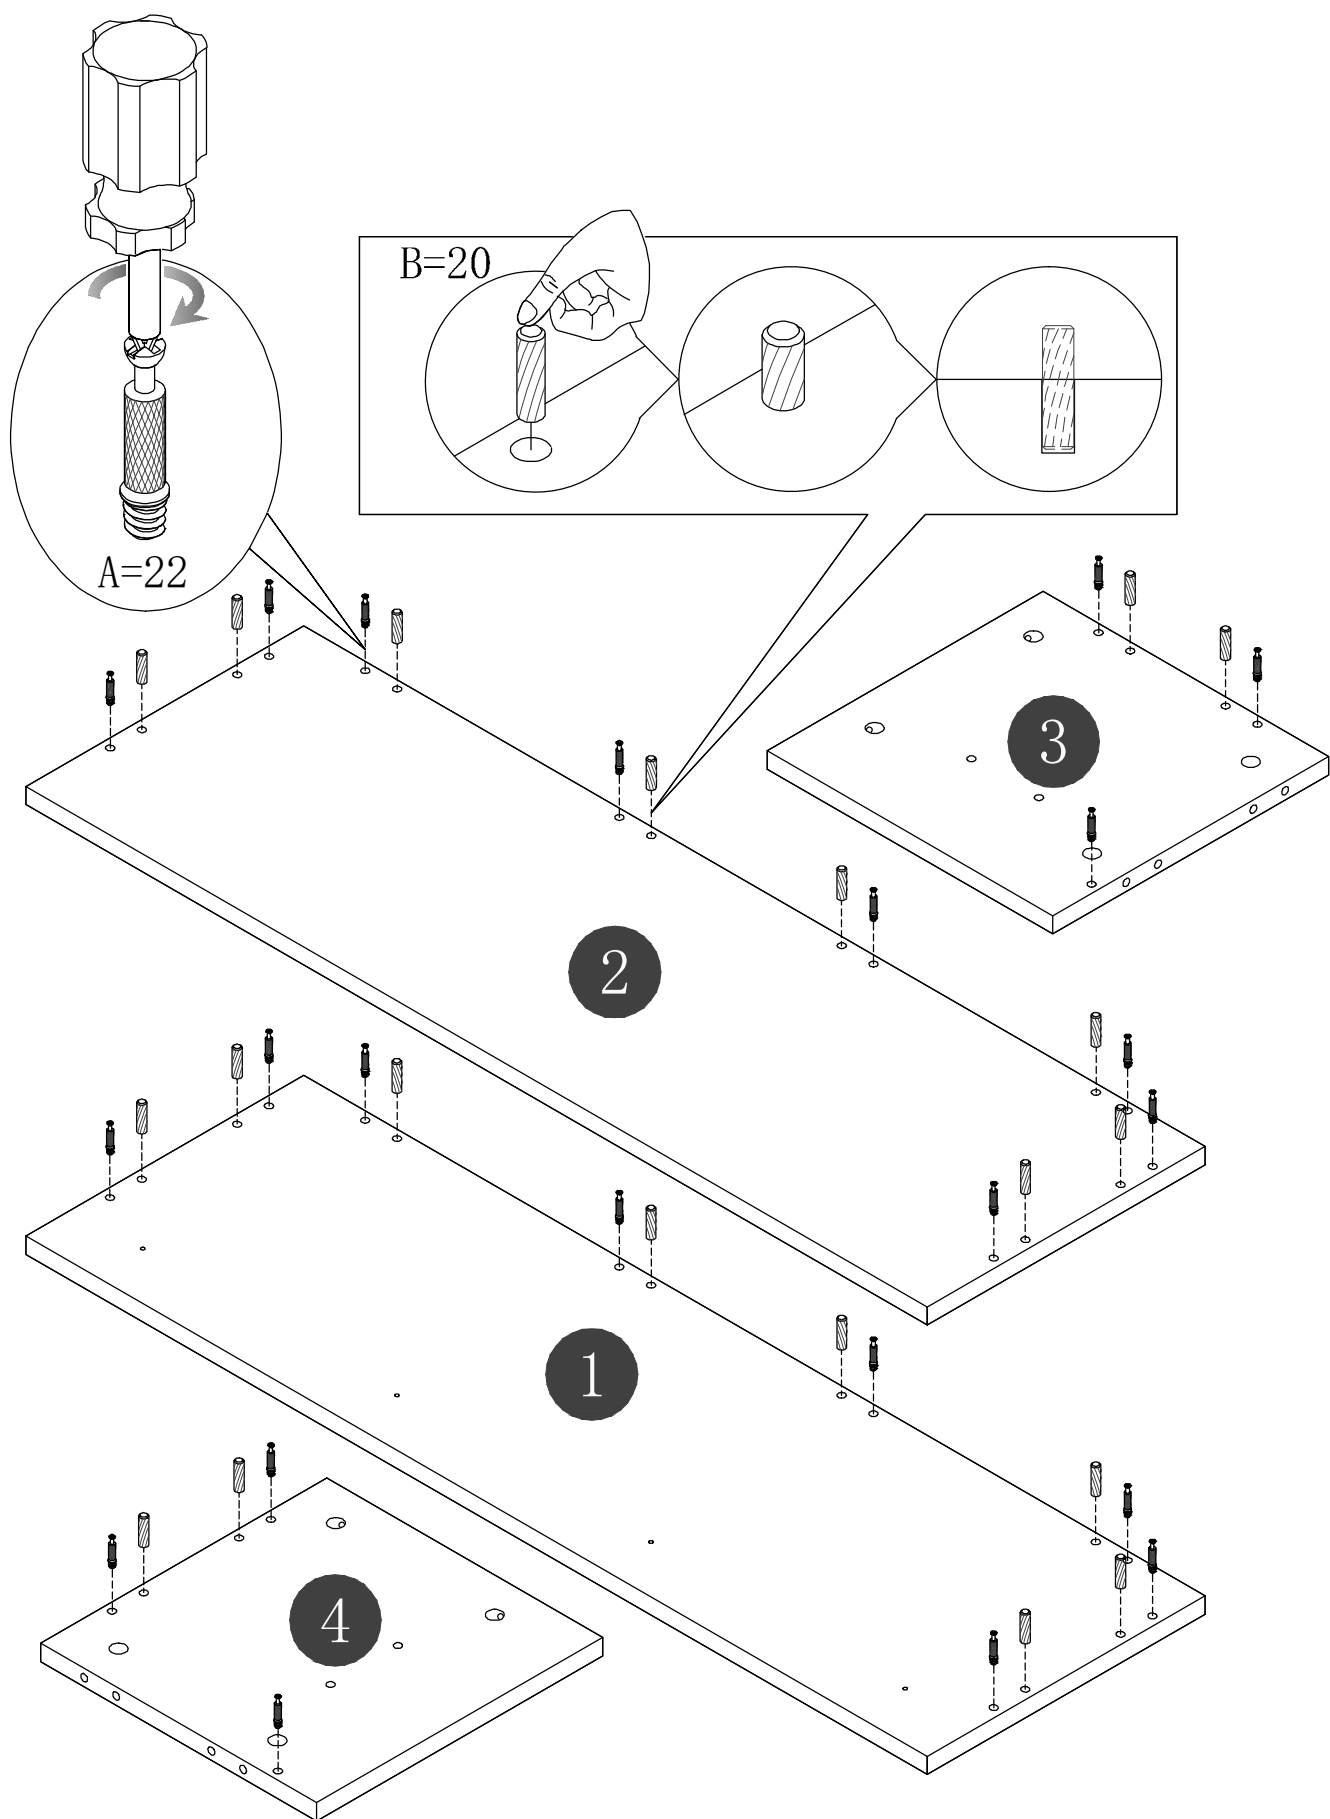


STEP 2

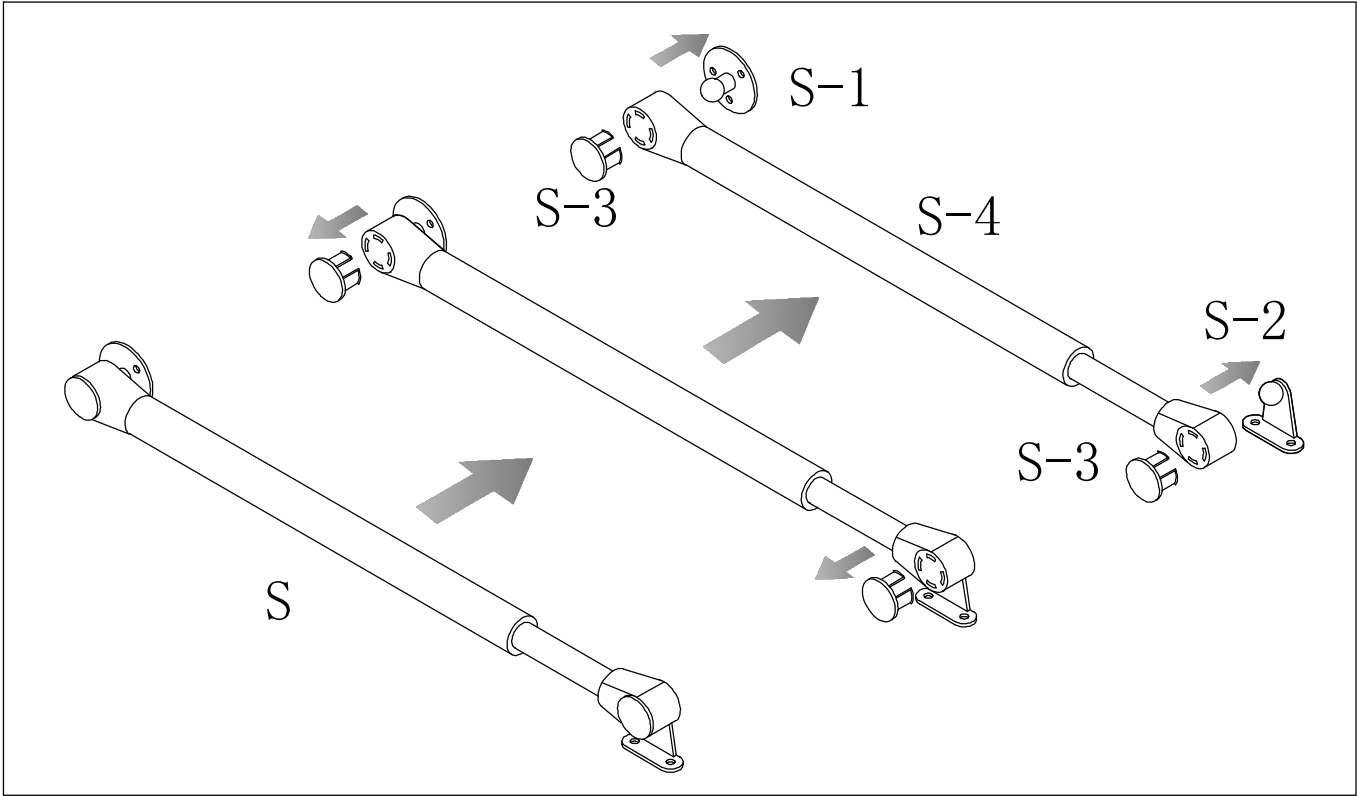


STEP 3

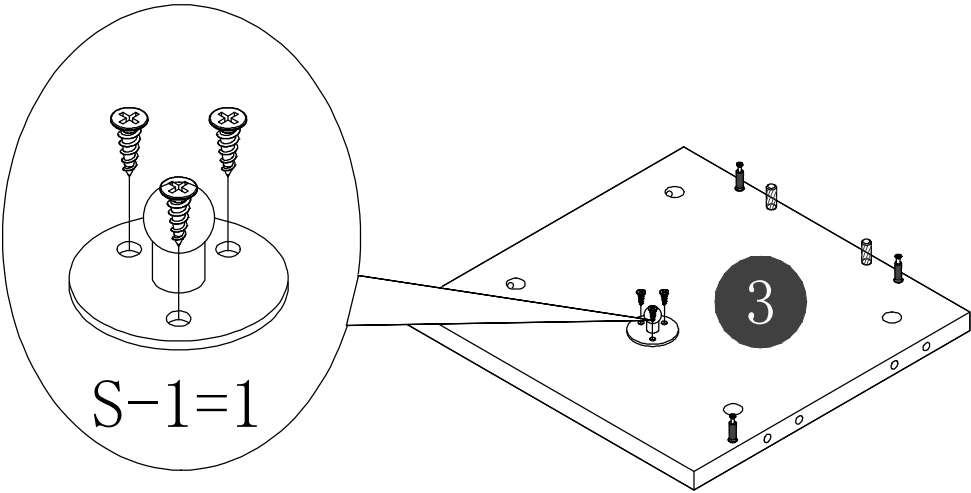


STEP 4

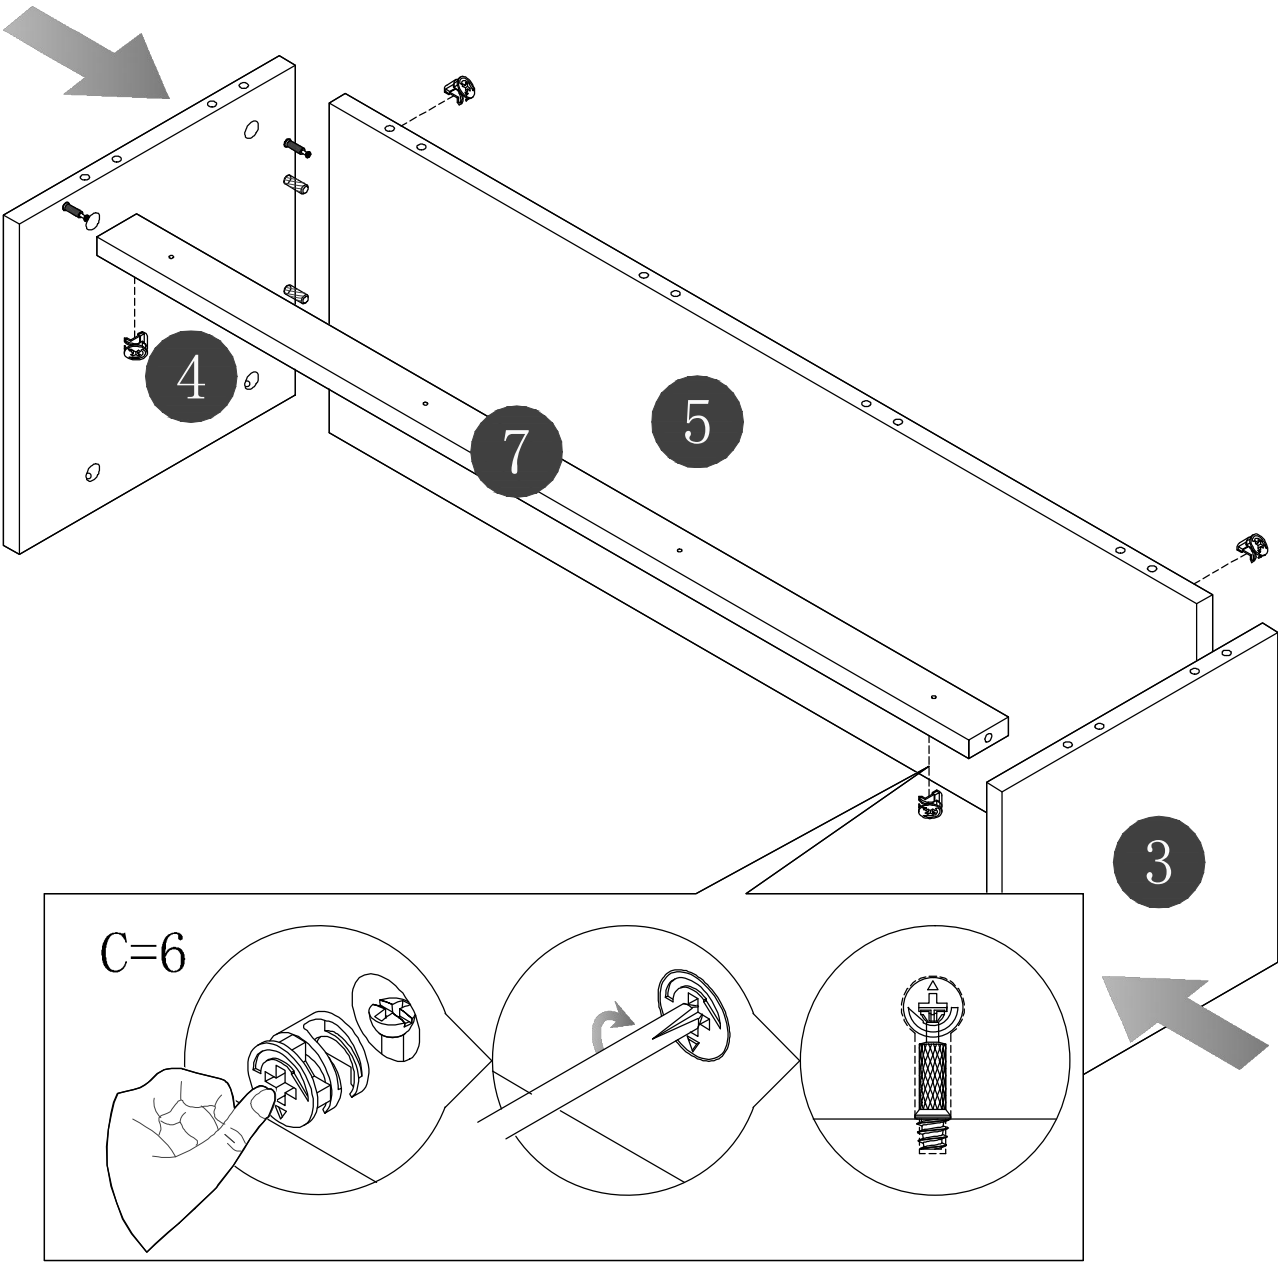


STEP 5

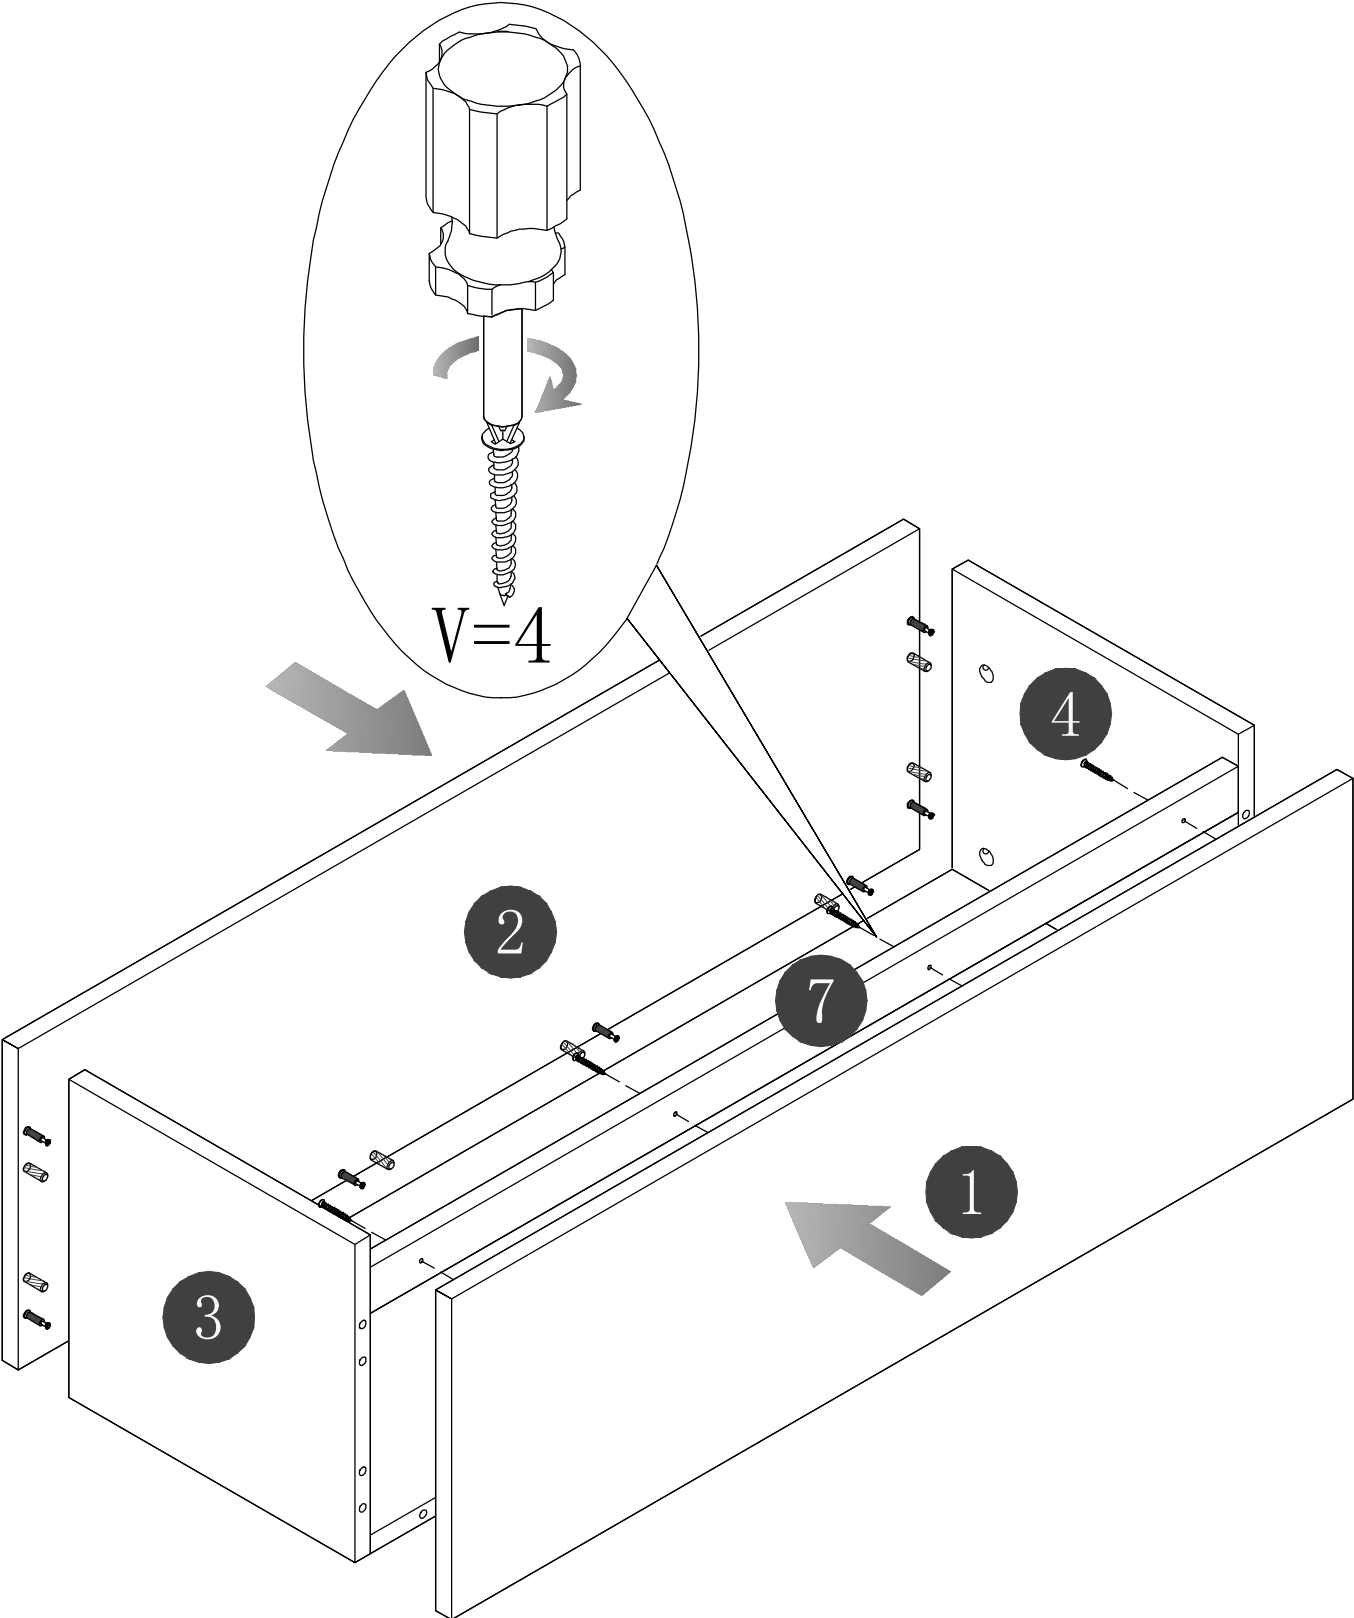


STEP 6

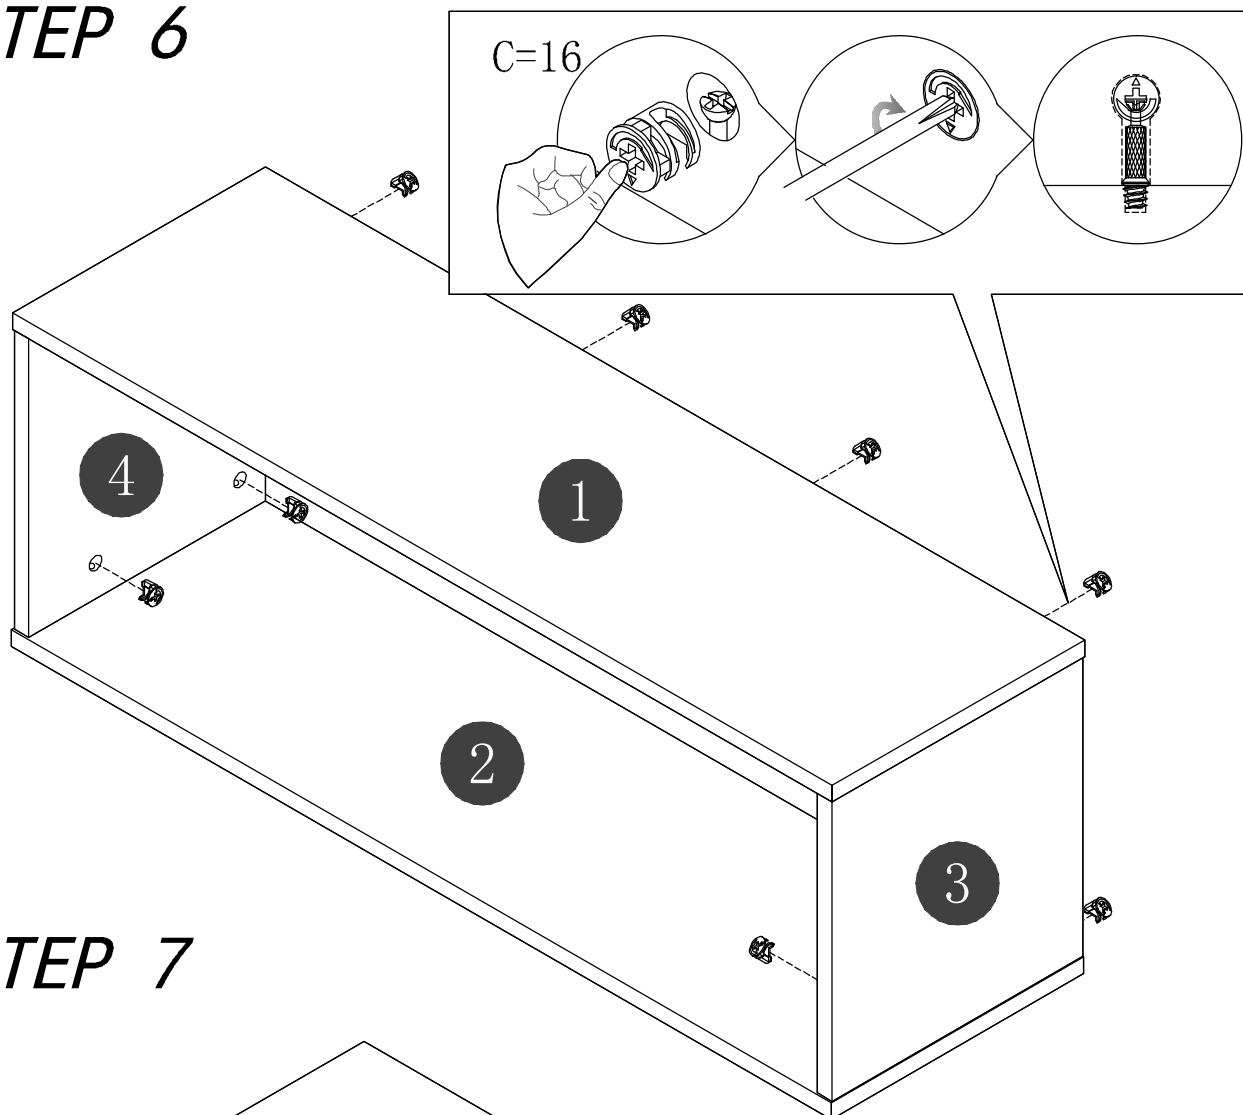


STEP 7

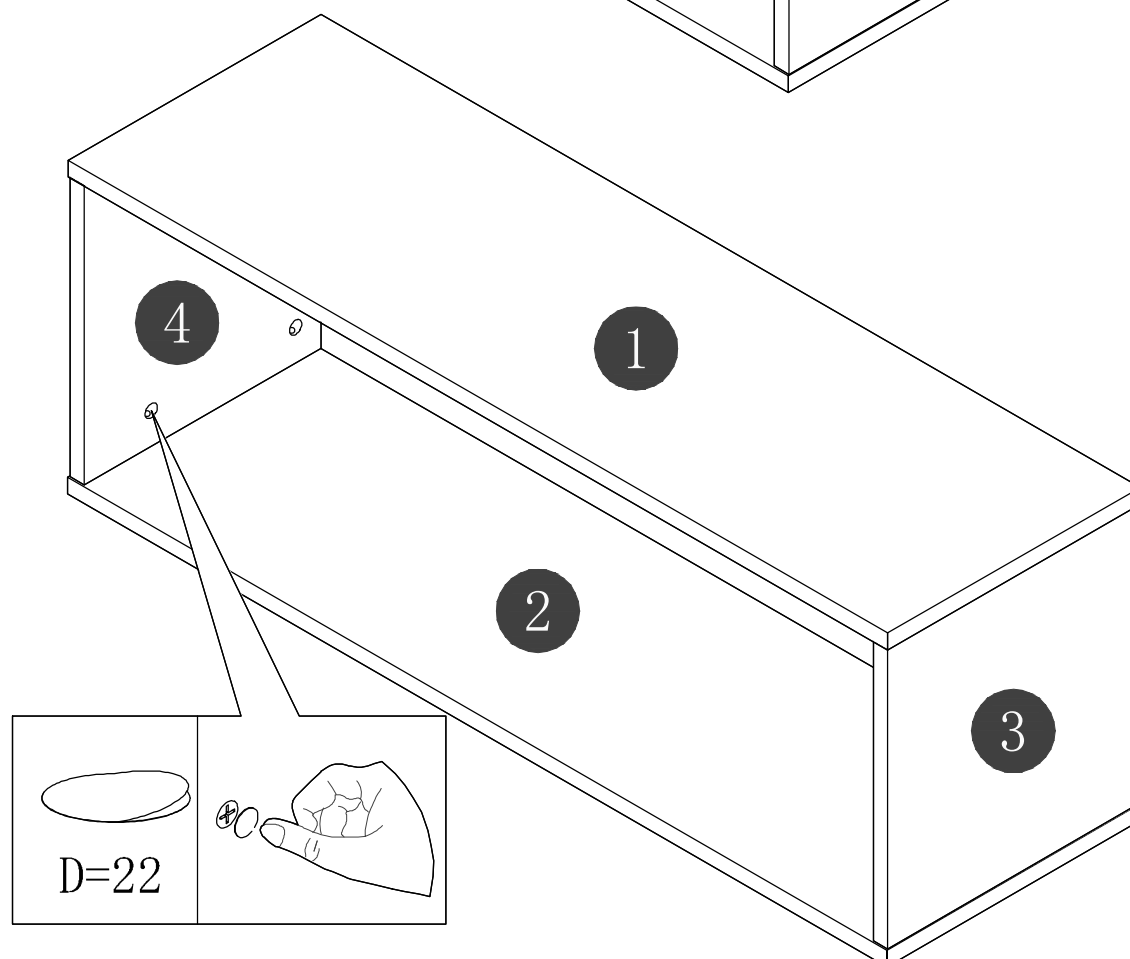


STEP 8

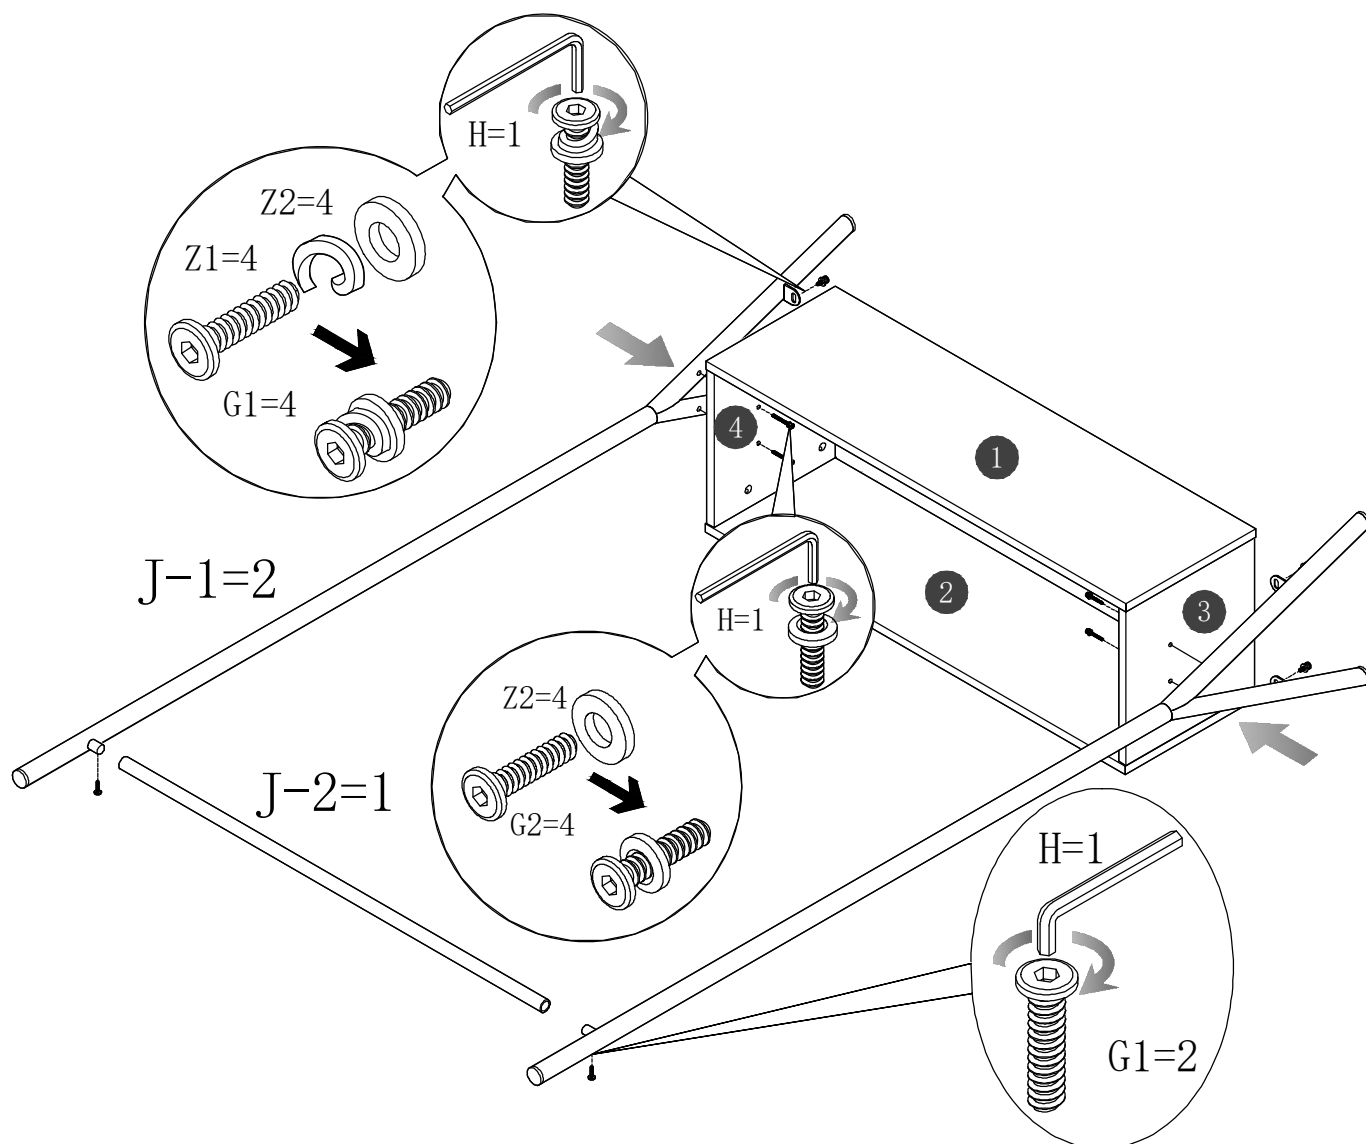


STEP 9

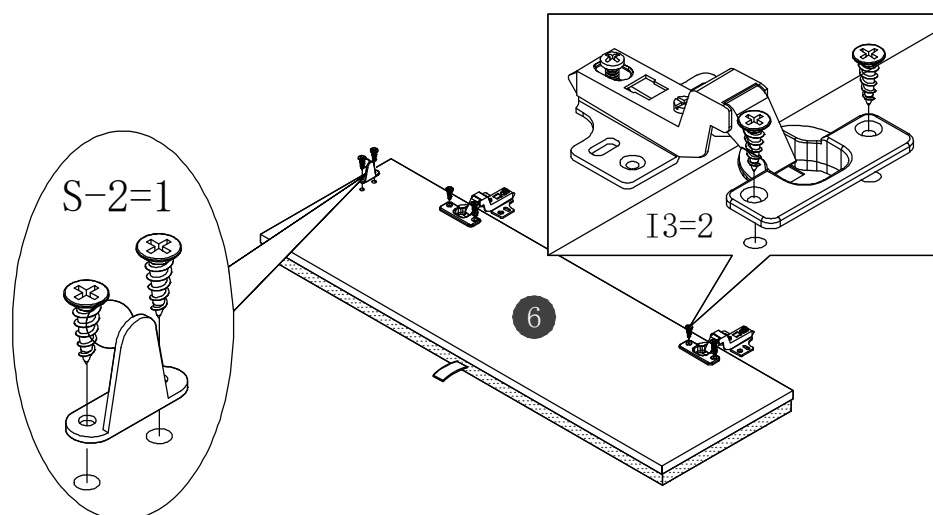


STEP 10

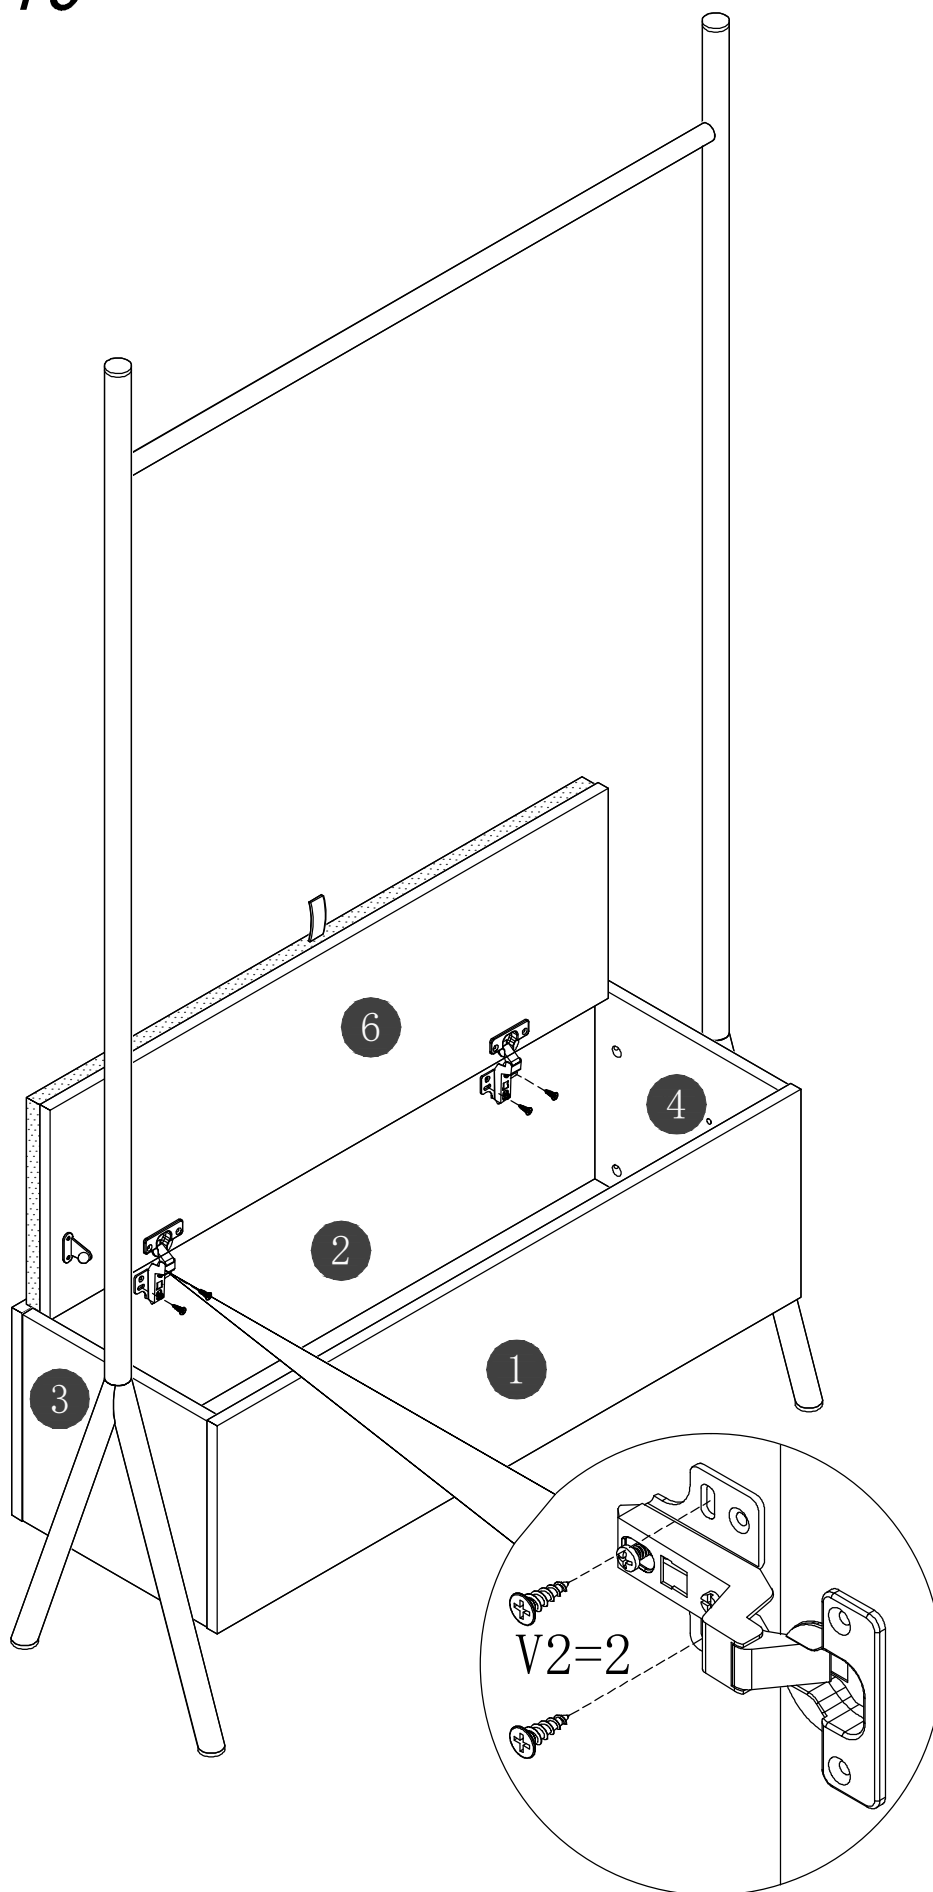


STEP 11

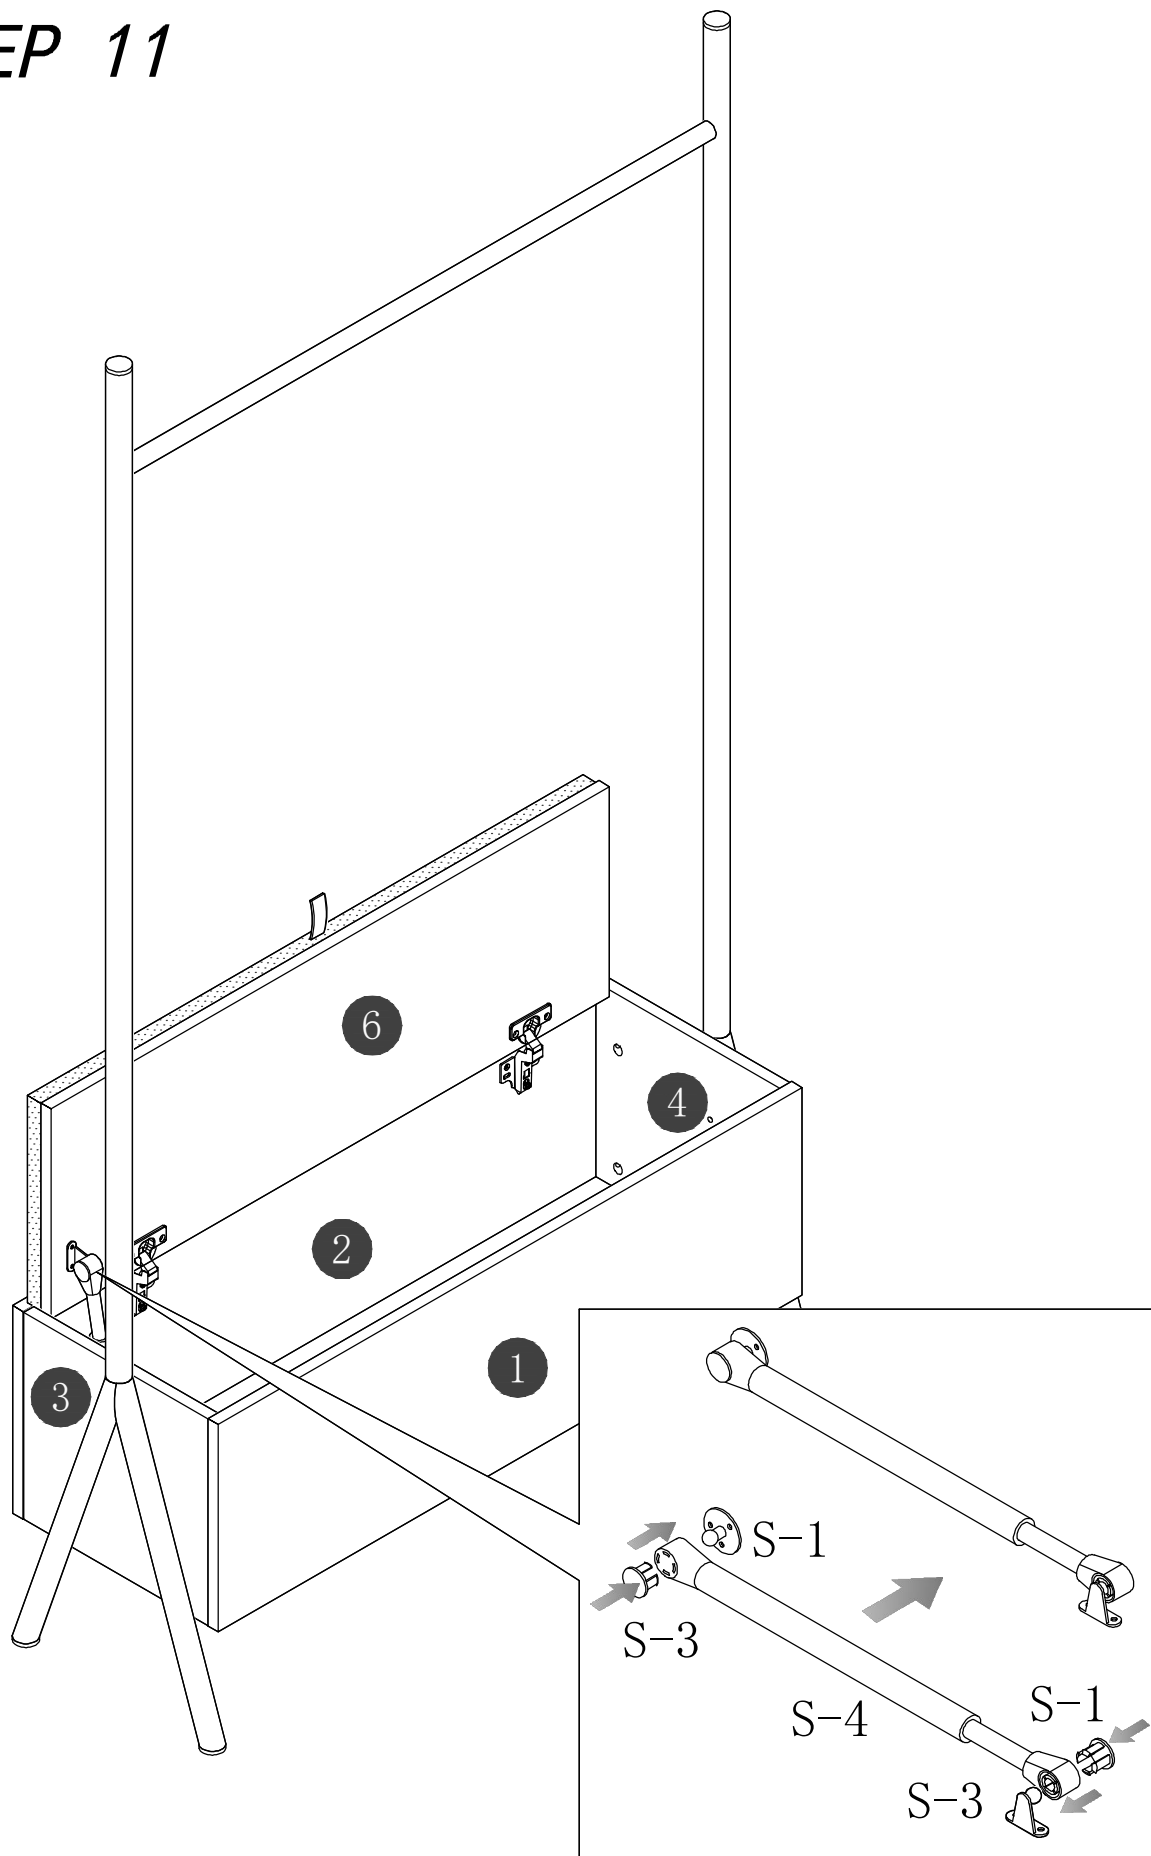


STEP 12

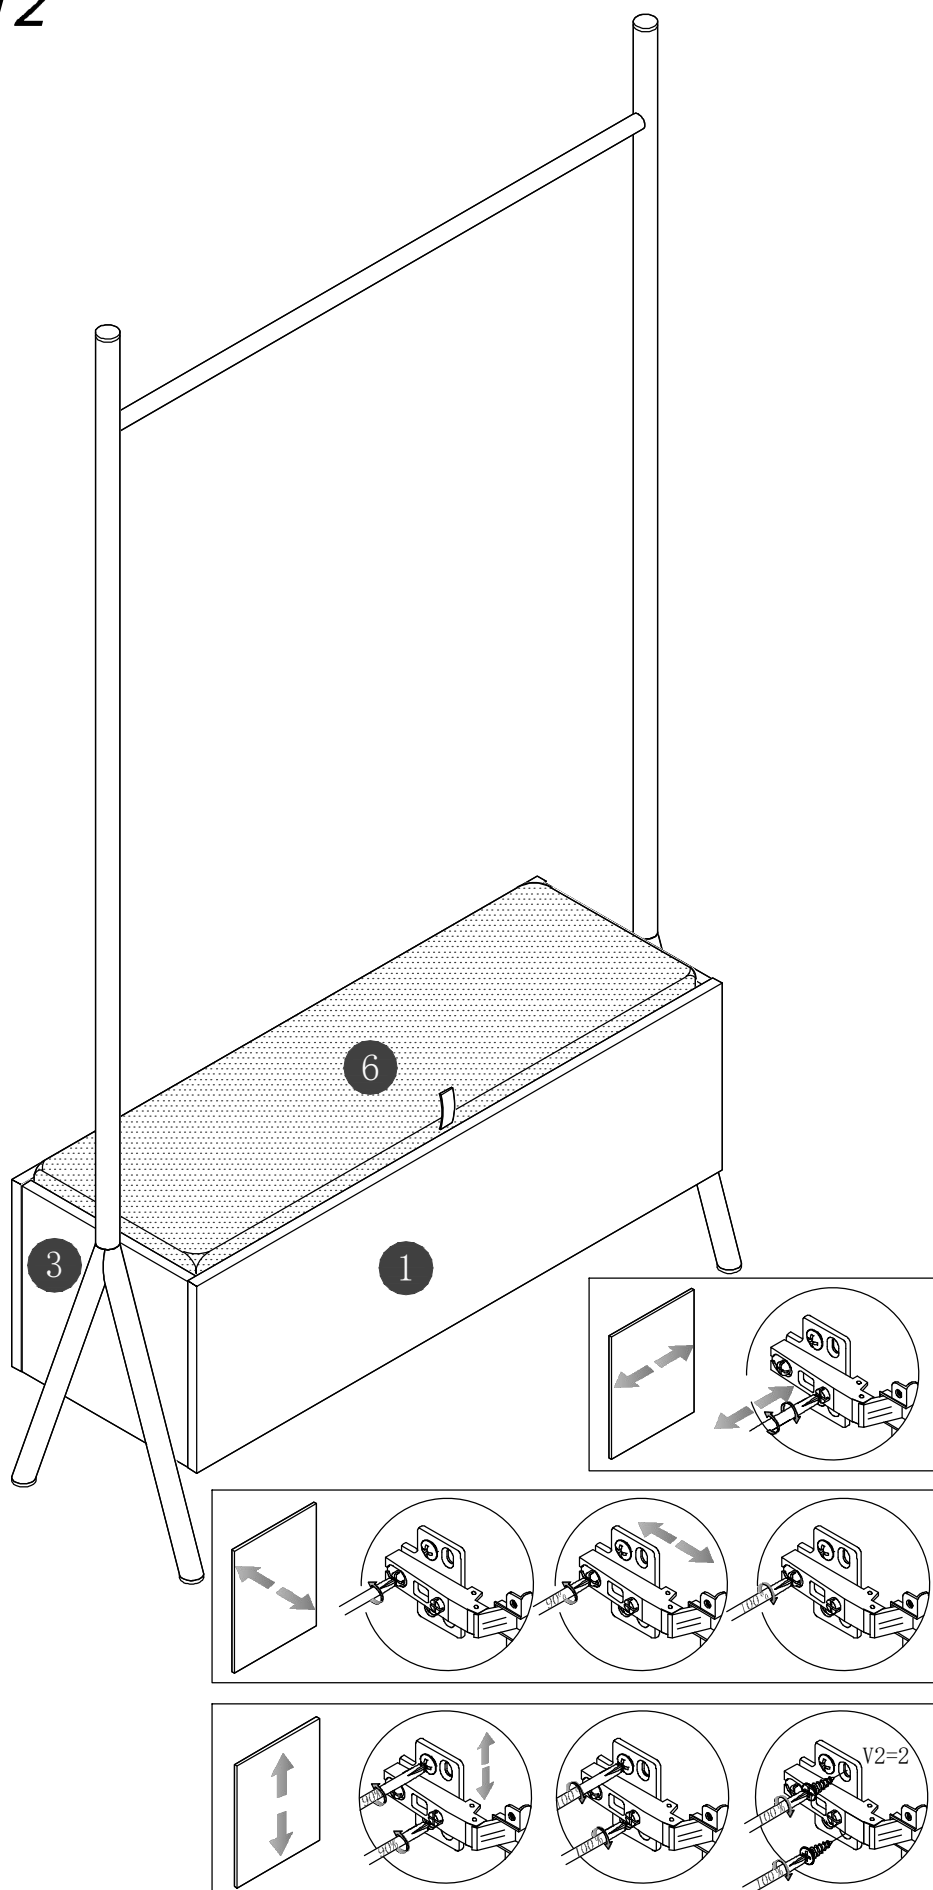

STEP 13

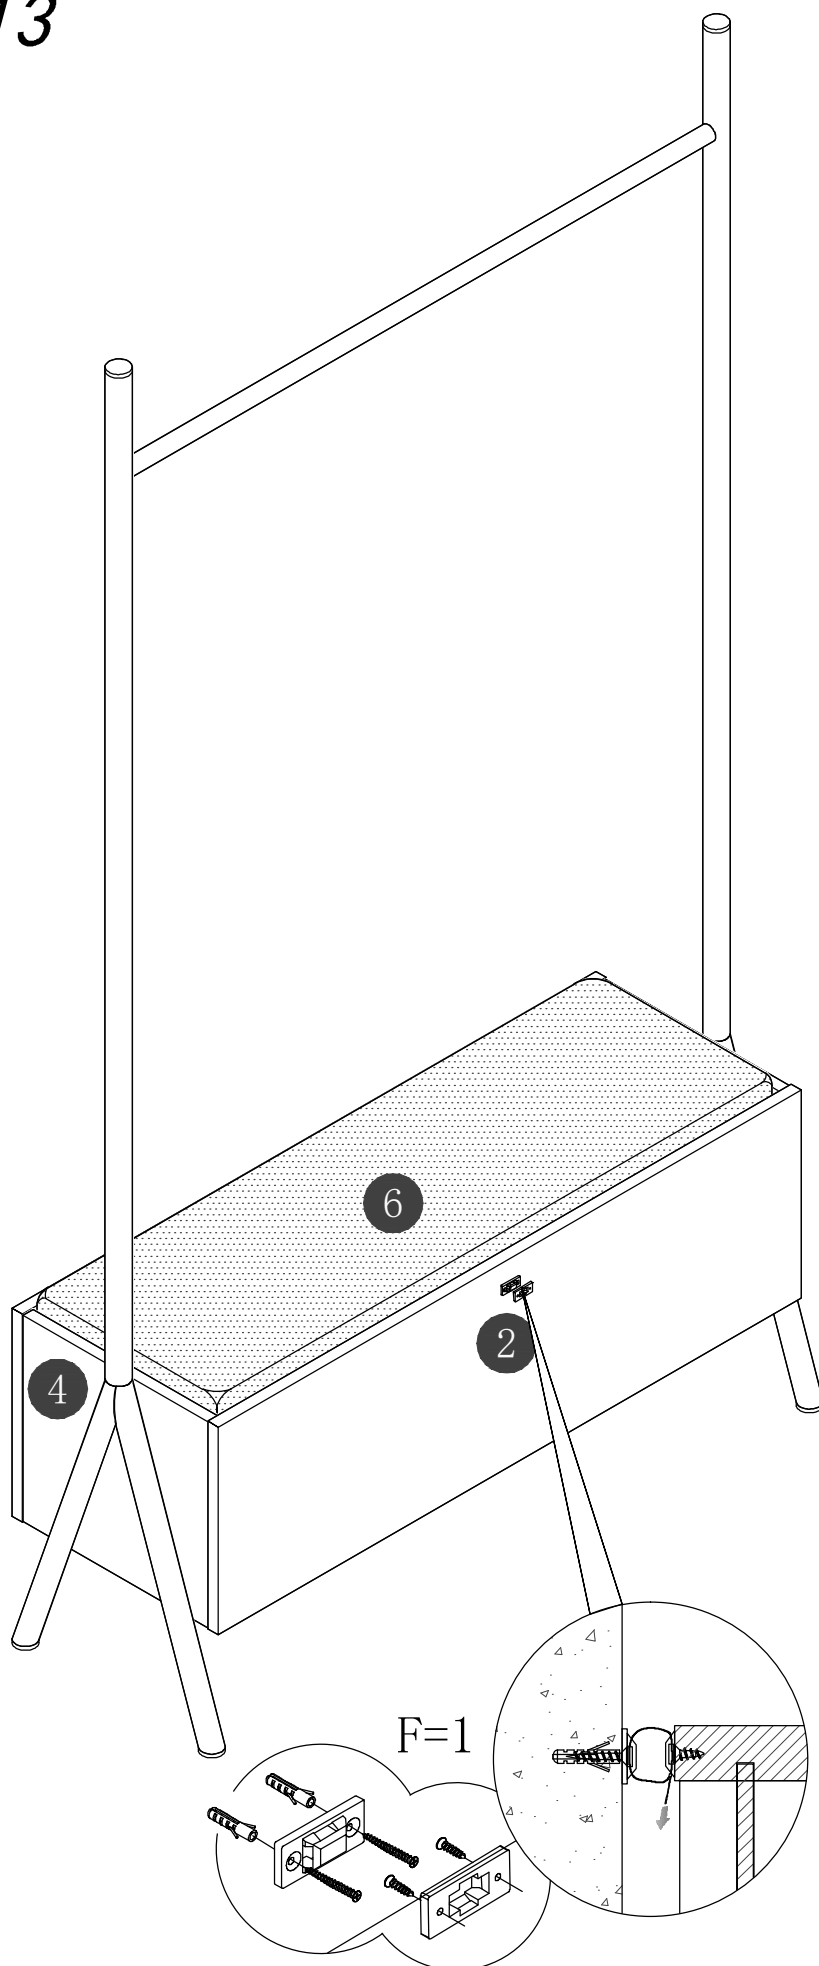

STEP 14

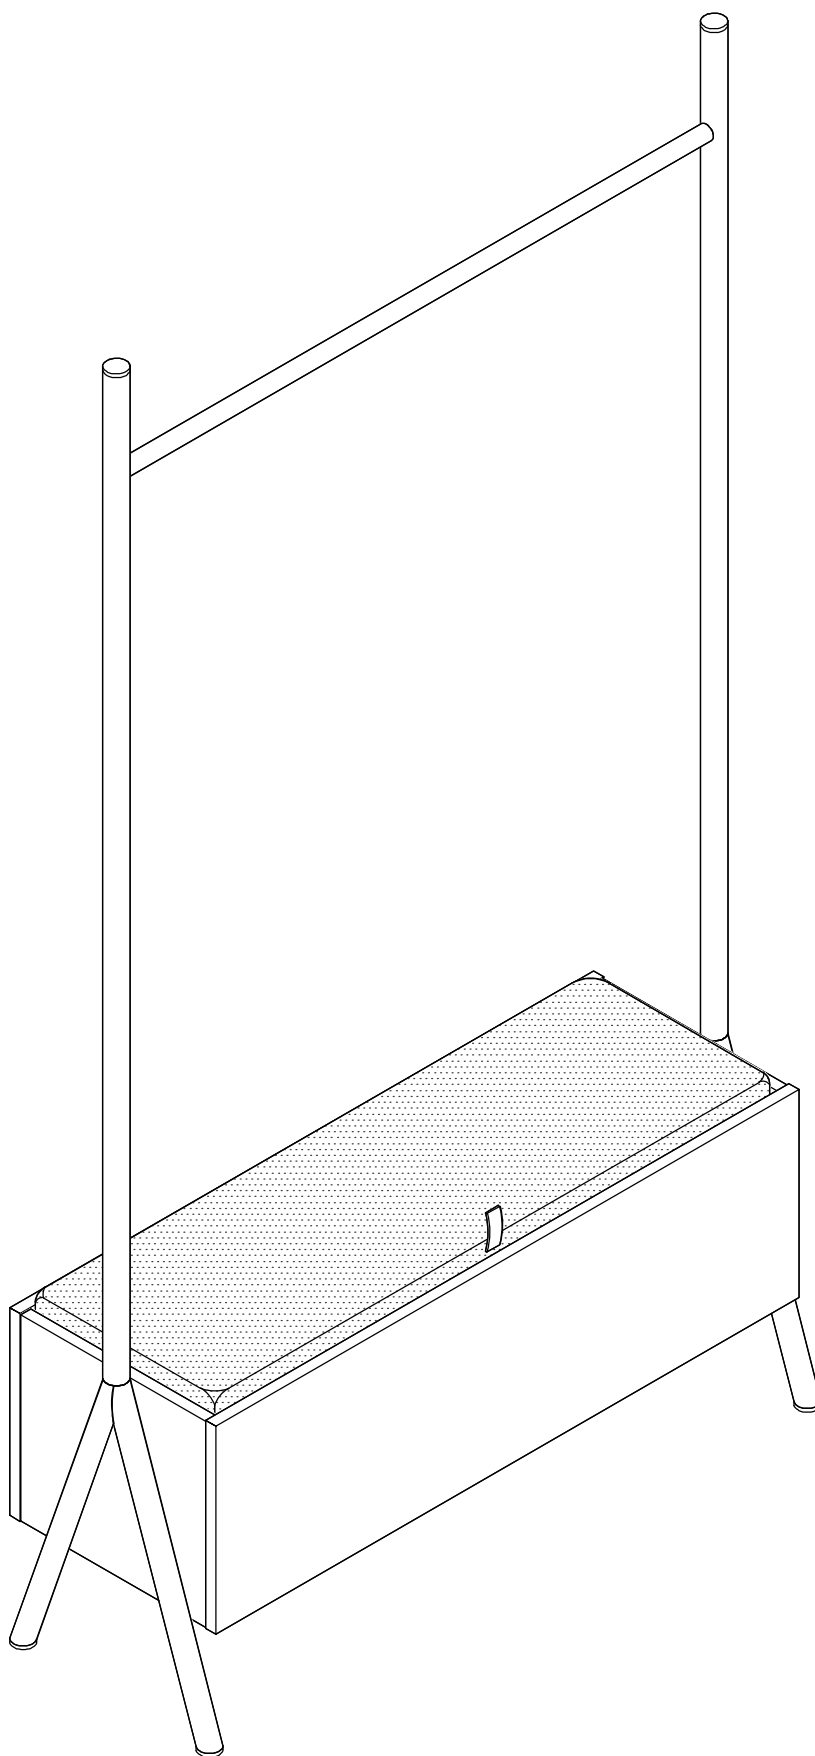

Finish