


ASSEMBLY INSTRUCTION

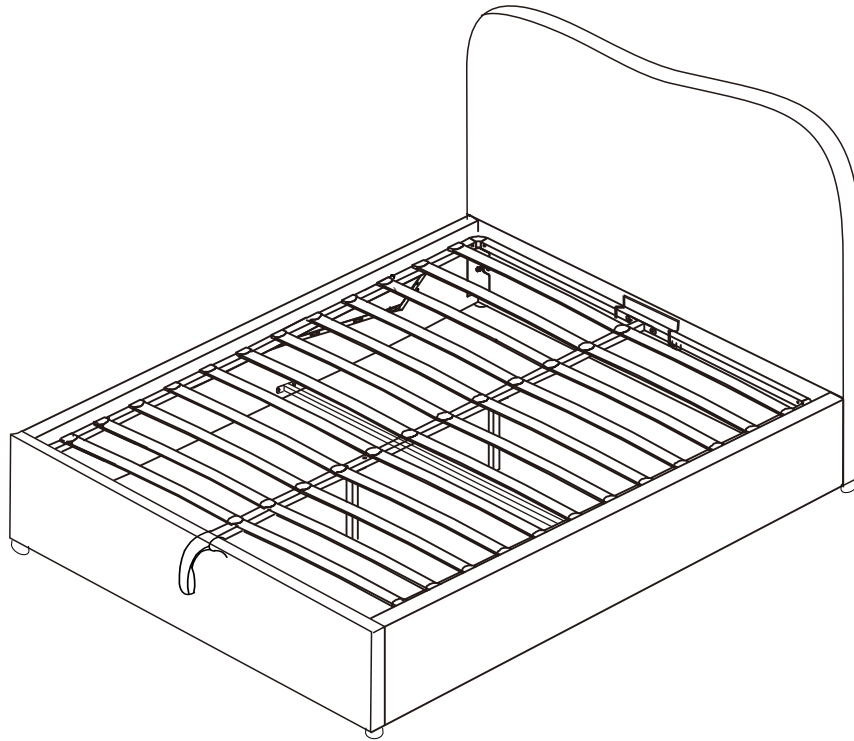

IMPORTANT PLEASE READ BEFORE YOU CONTINUE

The product you've purchased will give you many years of reliable use when assembled and cared for properly. Please follow these guidelines for safe assembly, maintenance, and cleaning.

DO NOT use power tools to assemble this product.
Using power tools may cause damage, make the product unsafe, and **will void any warranty or claim.**

Maintenance:


Over time, and depending on how often the product is used, some fittings may loosen slightly. This is completely normal for flat-pack furniture. Simply check and **tighten any fixings** from time to time to keep everything secure.

Cleaning & Care:







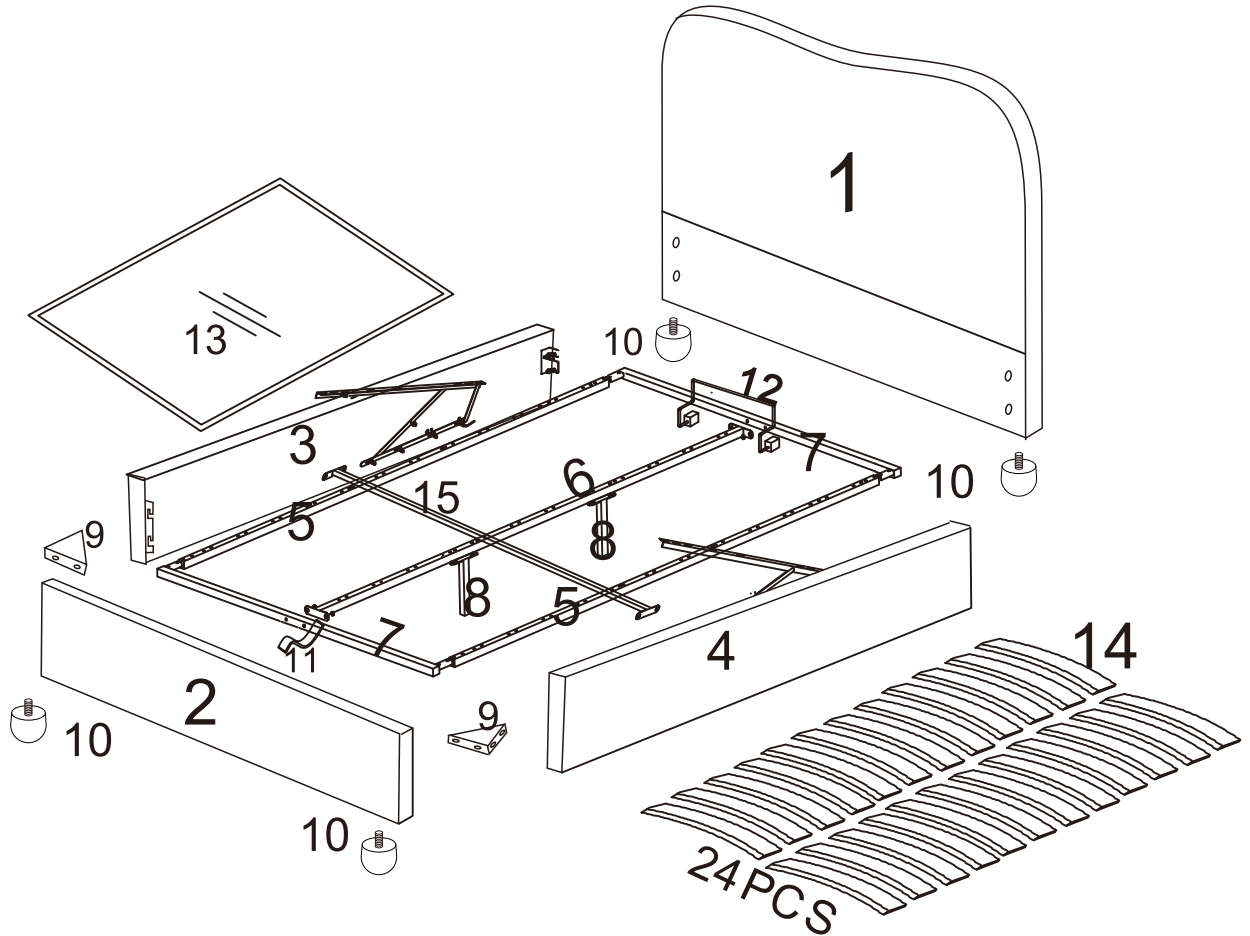


- Wipe with a **damp (not wet)** cloth.
 - Use a **dry duster** or **standard furniture polish** for regular cleaning.
- Avoid using abrasive or chemical cleaners.

■■ **WARNING:** Use of power tools to assemble this product will invalidate any warranty or claim and may damage the product, making it unsafe.

PART LIST




HARDWARE LIST


LABEL	PICTURE	DESCRIPTION	QTY
A		M8*20 BOLT	28PCS
B		M8*45 BOLT	14 PCS
C		OPEN SPANNER	1PC
D		NUT	14 PCS
E		M8 WASHER	22PCS
F		SOCKET SPANNER	1 PC
G		ALLEN KEY	1 PC
H			24PCS
I			12PCS

STEP 1



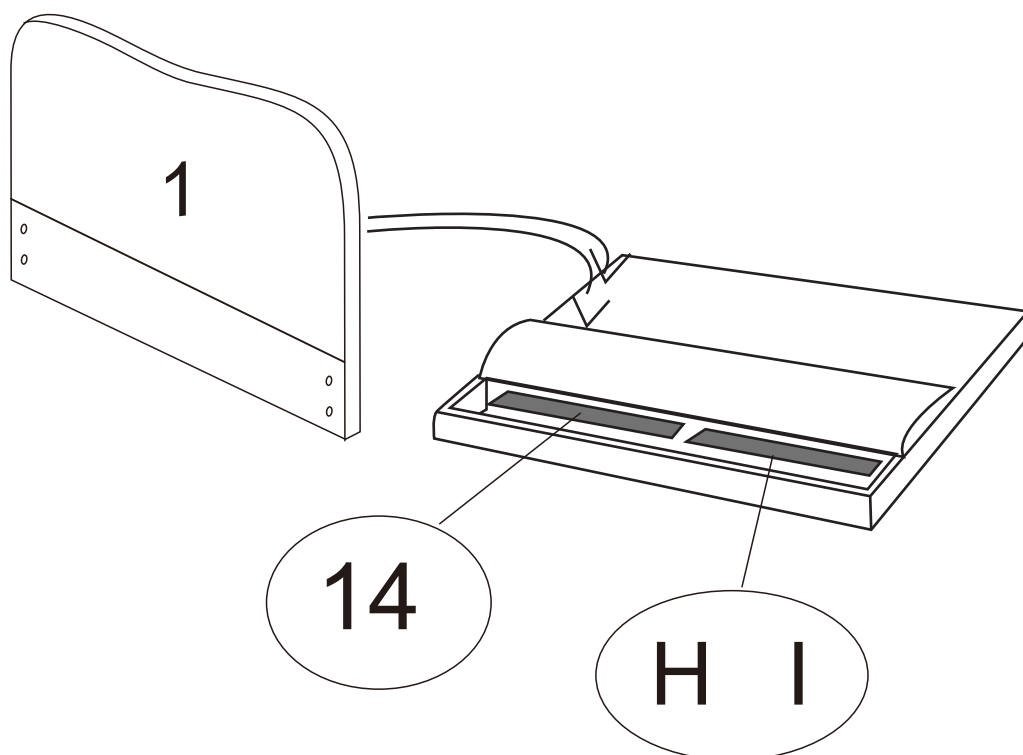

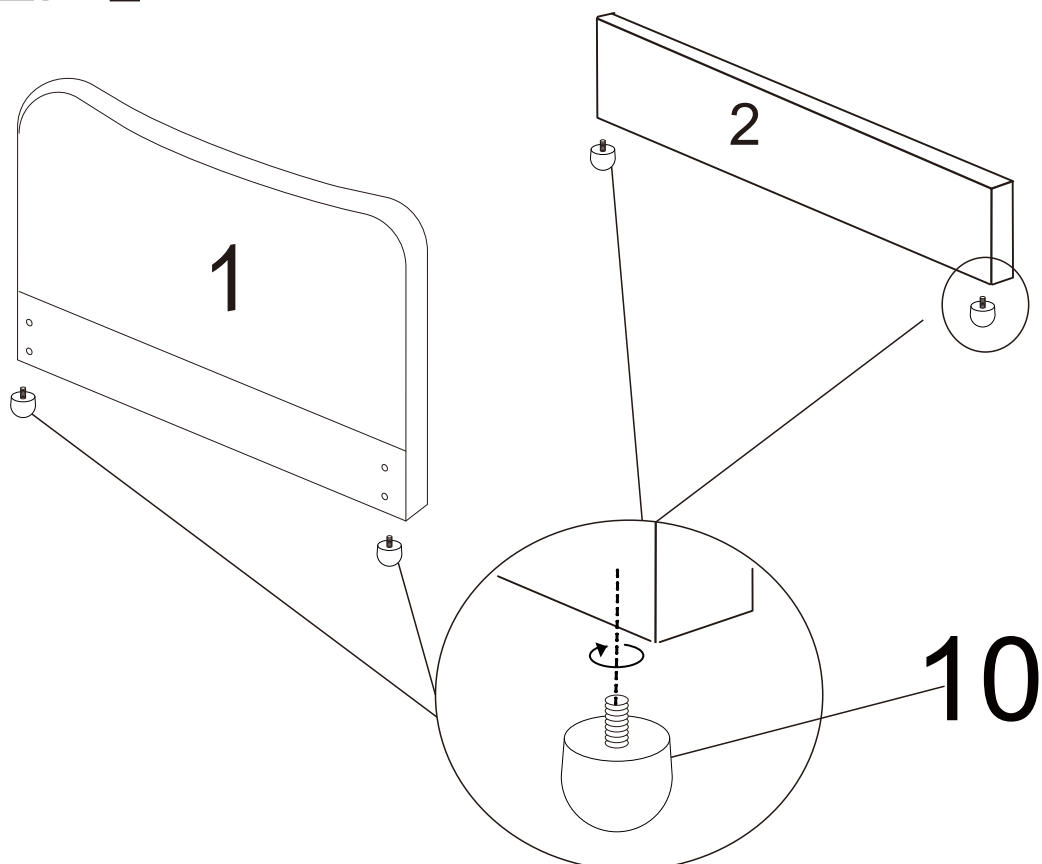

The bed slats (14) and plastic caps (H & I) are in the back of the headboard. Please take them out before you assemble the bed.




STEP 2






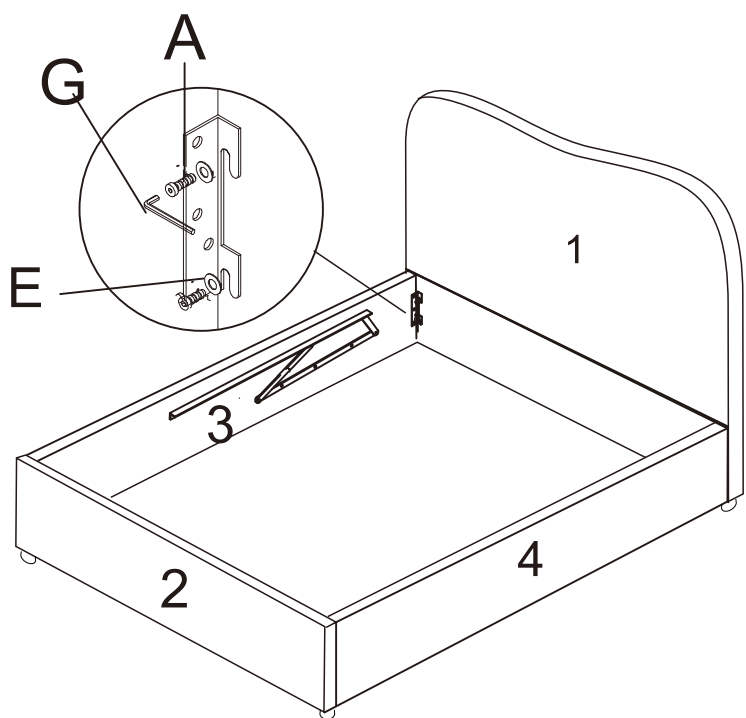
STEP 3

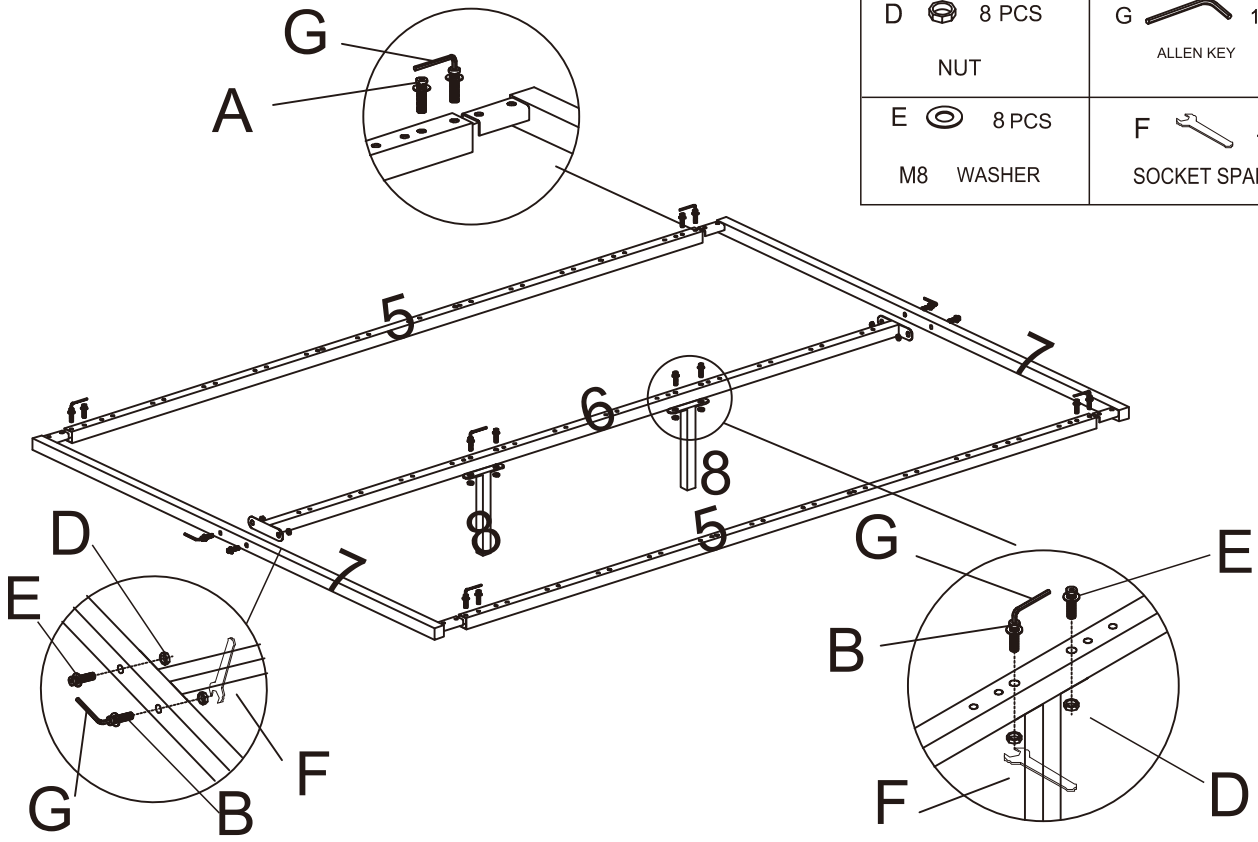A  8 PCS M8*20 BOLT	B  8 PCS M8*45 BOLT
D  8 PCS NUT	G  1 PC ALLEN KEY
E  8 PCS M8 WASHER	F  1 PC SOCKET SPANNER




STEP 4

A  8 PCS M8*20 BOLT	G  1 PC ALLEN KEY
E  8 PCS M8 WASHER	





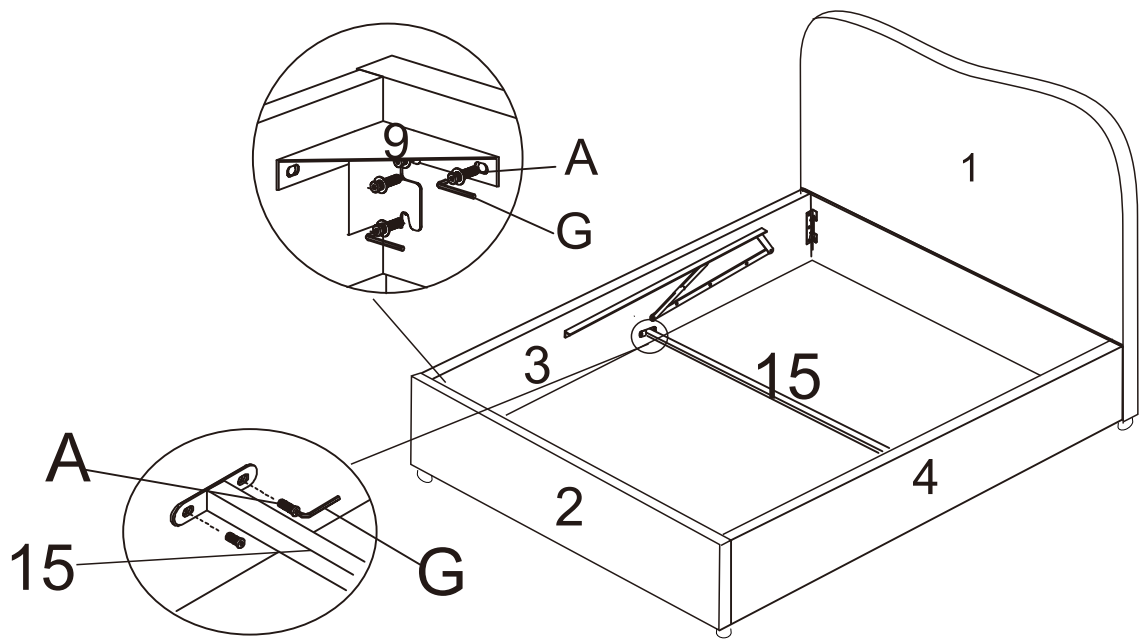


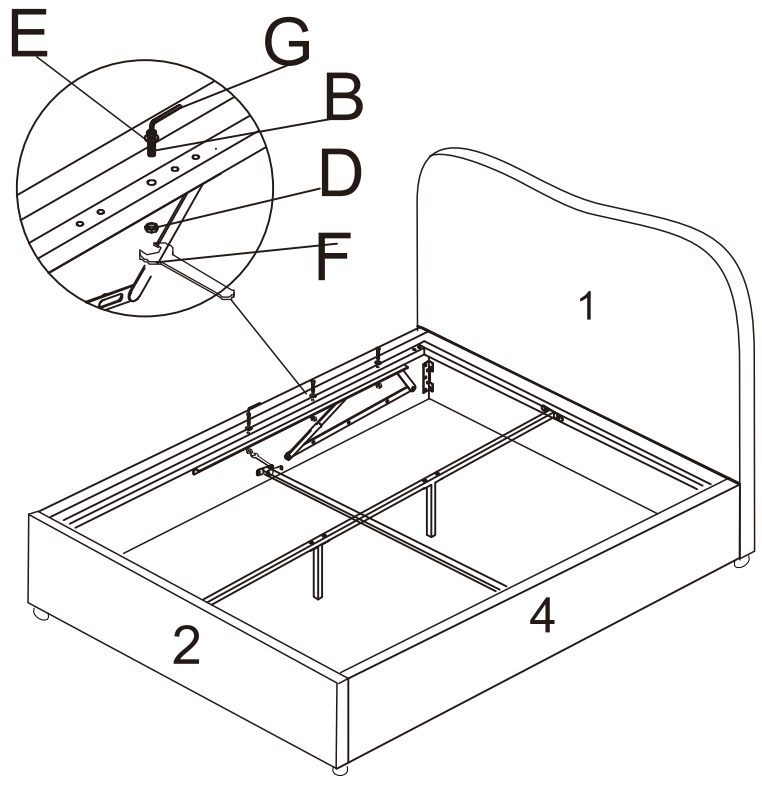
STEP 5

A  12 PCS M8*20 BOLT	G  1 PC ALLEN KEY
--	---



STEP 6


B  6 PCS M8*45 BOLT	E  6 PCS M8 WASHER
D  6 PCS NUT	G  1 PC ALLEN KEY
F  1 PC SOCKET SPANNER	



STEP 7

Carefully turn the bed frame over so the bottom side is facing up.


Attach the non-woven fabric (Part 13) to the bottom of the bed frame.

 This step requires two people to turn the bed over safely.



STEP 8

H		24PCS
I		12PCS

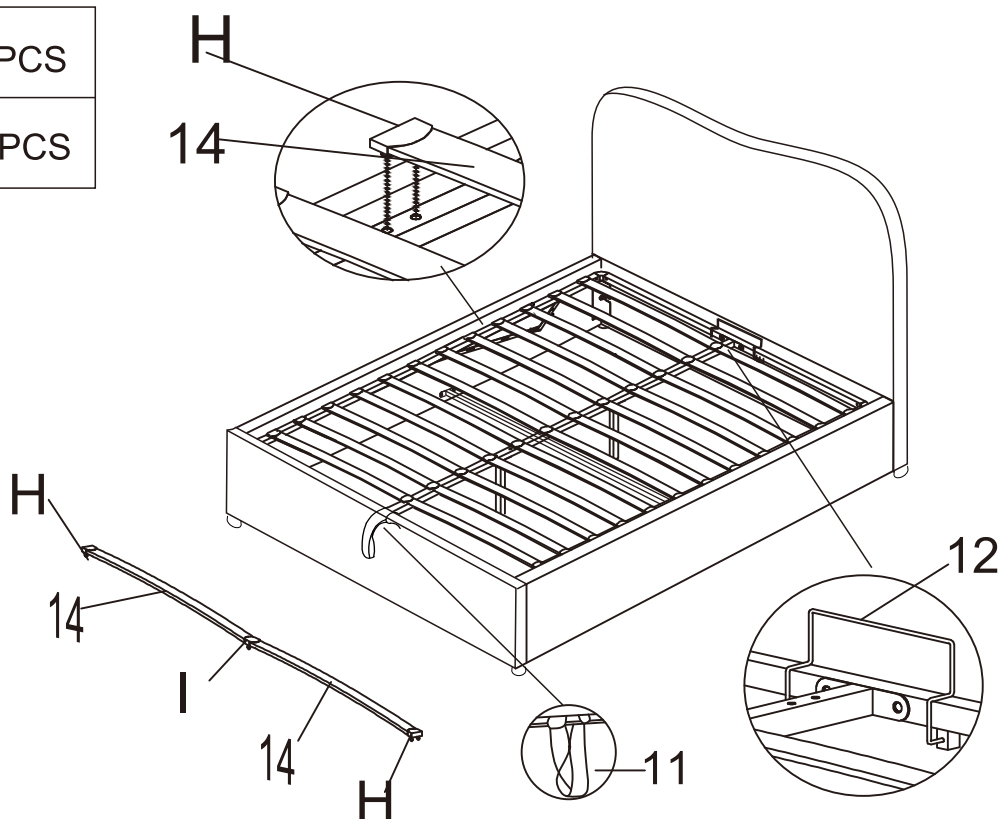

STEP 9

