


# ASSEMBLY INSTRUCTION

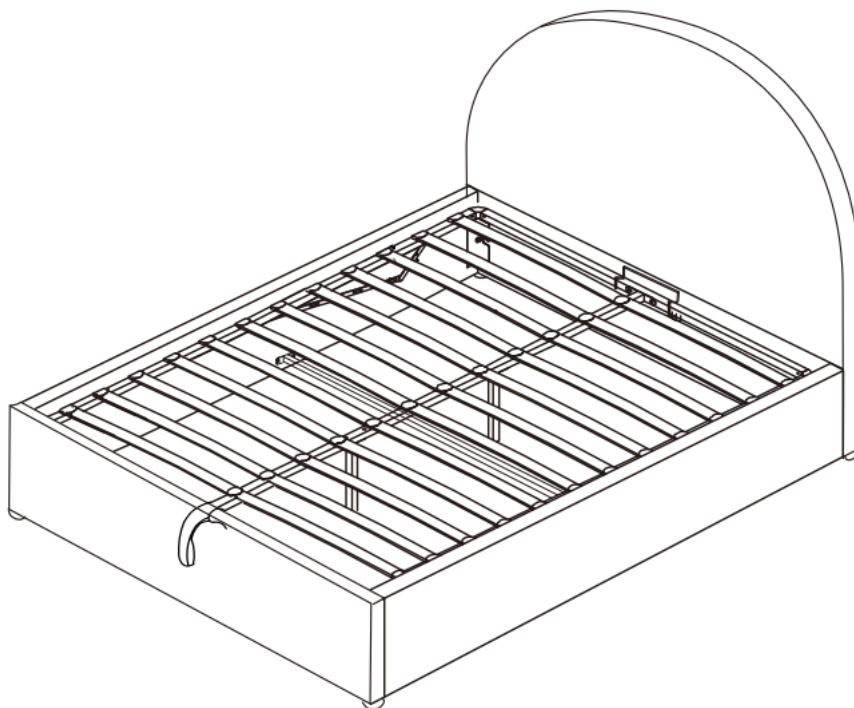

## IMPORTANT PLEASE READ BEFORE YOU CONTINUE

The product you've purchased will give you many years of reliable use when assembled and cared for properly. Please follow these guidelines for safe assembly, maintenance, and cleaning.

**DO NOT use power tools** to assemble this product.

Using power tools may cause damage, make the product unsafe, and **will void any warranty or claim.**

### **Maintenance:**


Over time, and depending on how often the product is used, some fittings may loosen slightly. This is completely normal for flat-pack furniture. Simply check and **tighten any fixings** from time to time to keep everything secure.

### **Cleaning & Care:**







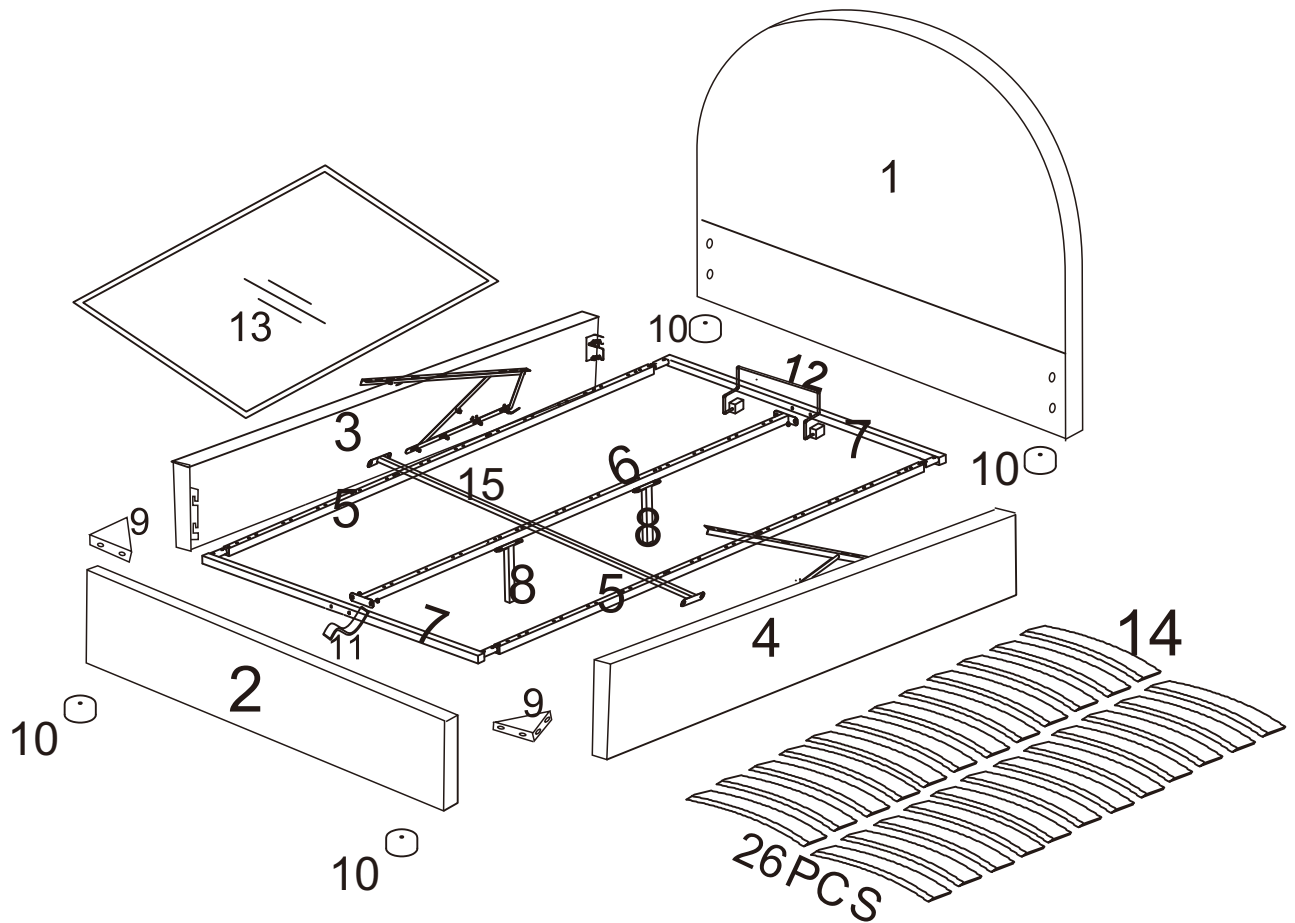



- Wipe with a **damp (not wet)** cloth.
  - Use a **dry duster** or **standard furniture polish** for regular cleaning.-
- Avoid using abrasive or chemical cleaners.

■■ **WARNING:** Use of power tools to assemble this product will invalidate any warranty or claim and may damage the product, making it unsafe.



# PART LIST




## HARDWARE LIST





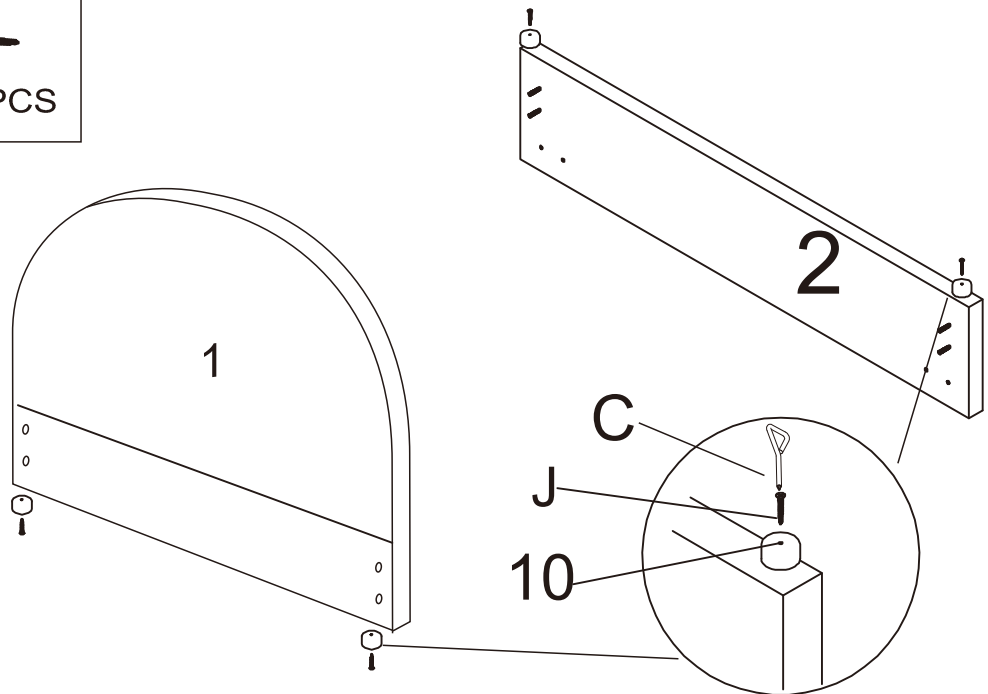

LABEL	PICTURE	DESCRIPTION	QTY
A		M8*20 BOLT	28PCS
B		M8*45 BOLT	14PCS
C		OPEN SPANNER	1PC
D		NUT	14 PCS
E		M8 WASHER	22PCS
F		SOCKET SPANNER	1 PC
G		ALLEN KEY	1 PC
H			26PCS
I			13PCS
J		4x30	4 PCS


# STEP 1

<b>C</b>	<b>J</b>
	
1PC	4 PCS






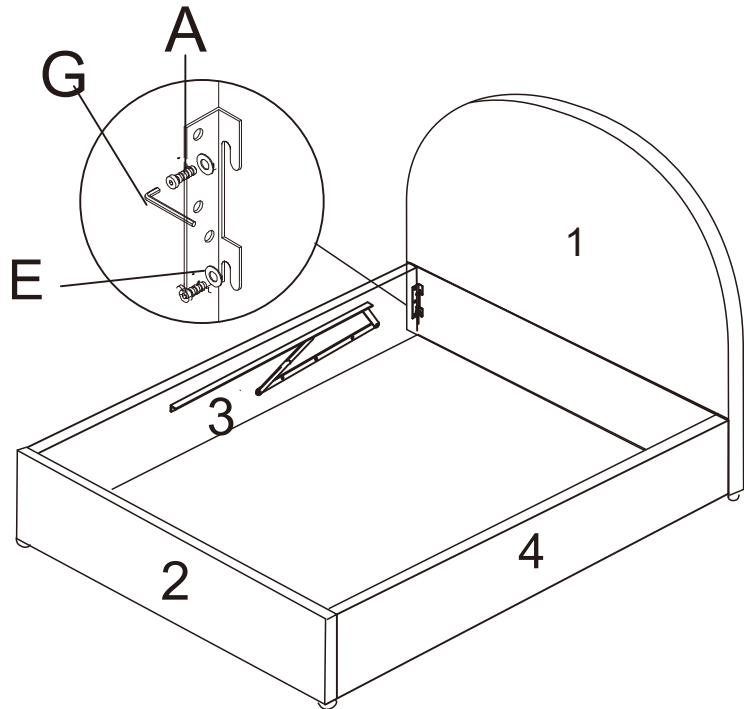
# STEP 2
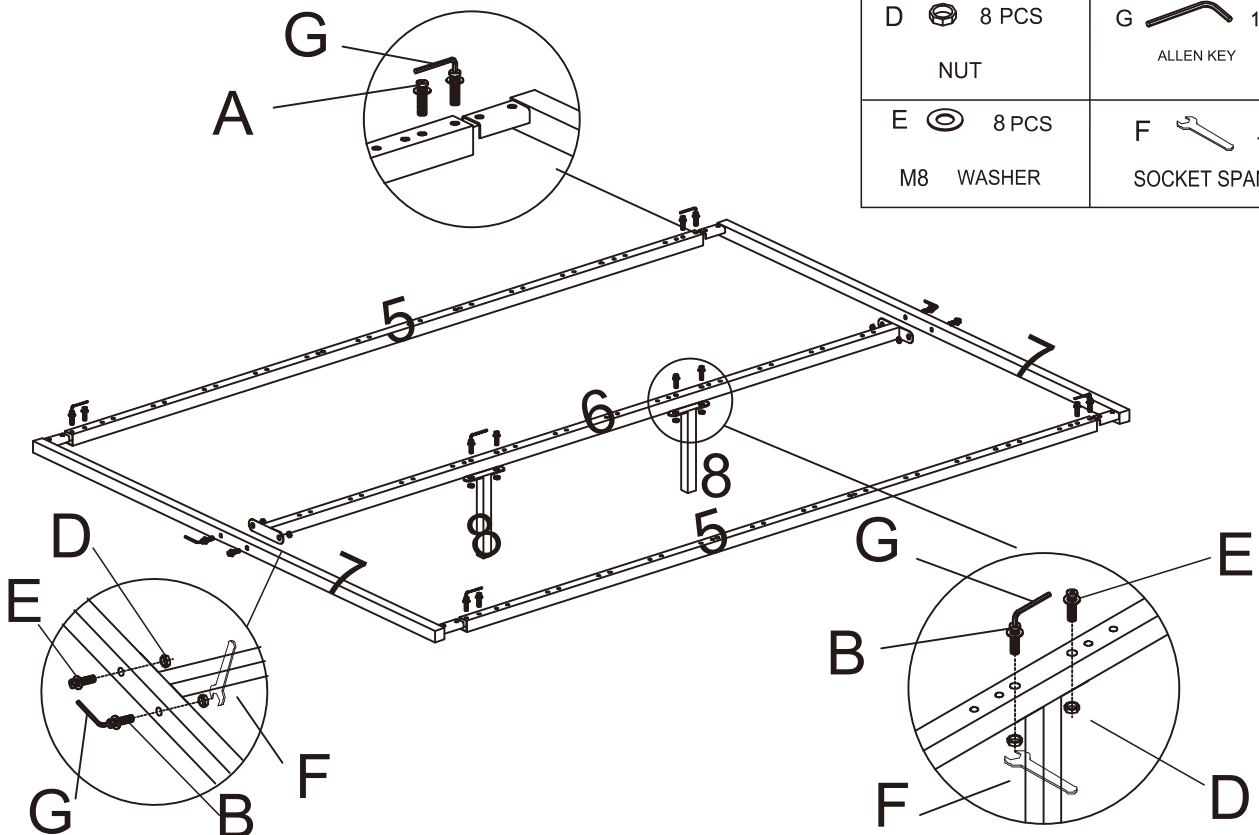
<b>A</b>  8PCS M8*20 BOLT	<b>B</b>  8 PCS M8*45 BOLT
<b>D</b>  8 PCS NUT	<b>G</b>  1 PC ALLEN KEY
<b>E</b>  8 PCS M8 WASHER	<b>F</b>  1 PC SOCKET SPANNER






## STEP 3

<b>A</b>  8 PCS M8*20 BOLT	<b>G</b>  1 PC ALLEN KEY
<b>E</b>  8 PCS M8 WASHER	





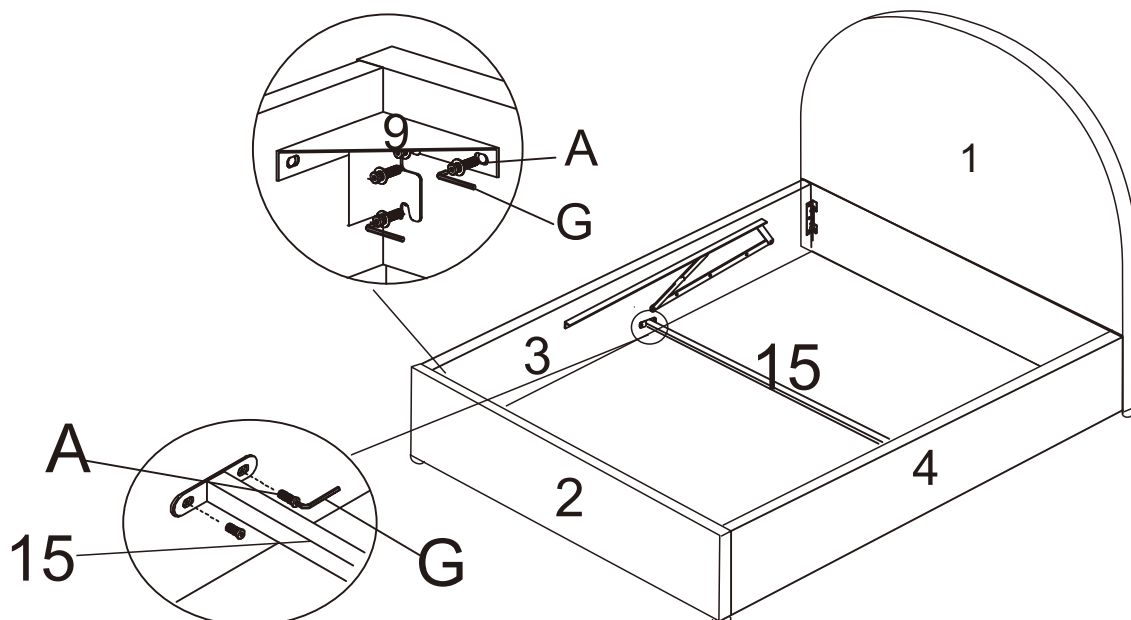


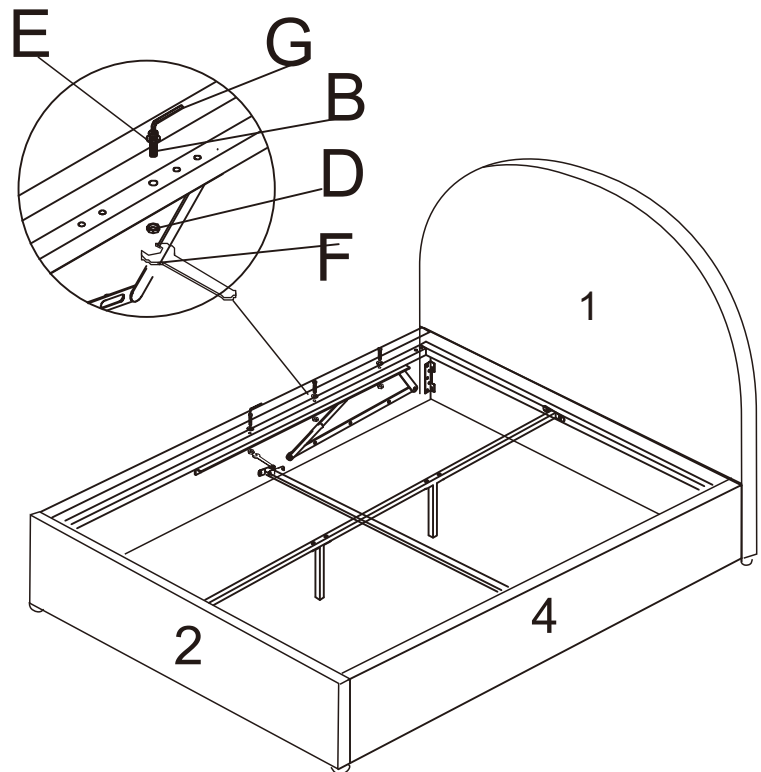
## STEP 4

<b>A</b>  12 PCS M8*20 BOLT	<b>G</b>  1 PC ALLEN KEY
---	--



## STEP 5


B  6 PCS M8*45 BOLT	E  6 PCS M8 WASHER
D  6 PCS NUT	G  1 PC ALLEN KEY
F  1 PC SOCKET SPANNER	




## STEP 6



Carefully turn the bed frame over so the bottom side is facing up.


Attach the non-woven fabric (Part 13) to the bottom of the bed frame.

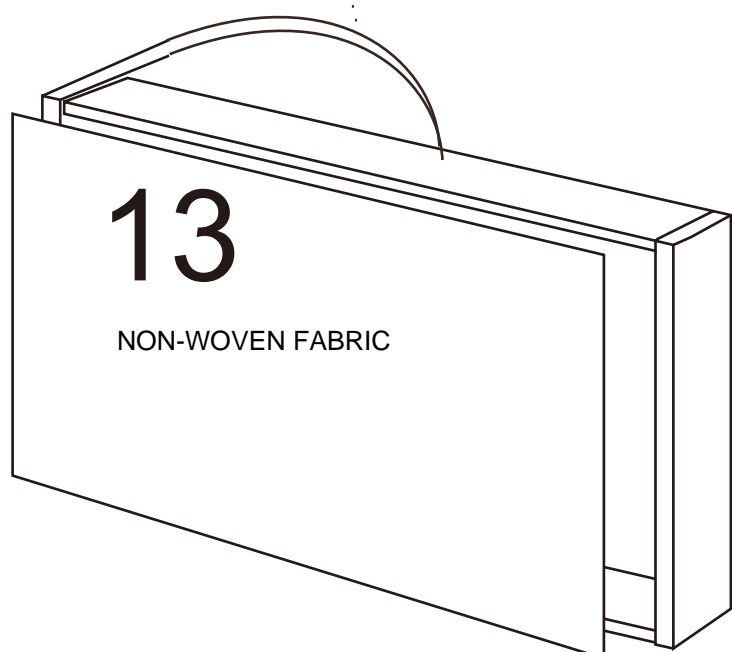 This step requires two people to turn the bed over safely.




# STEP 7

H		26PCS
I		13PCS

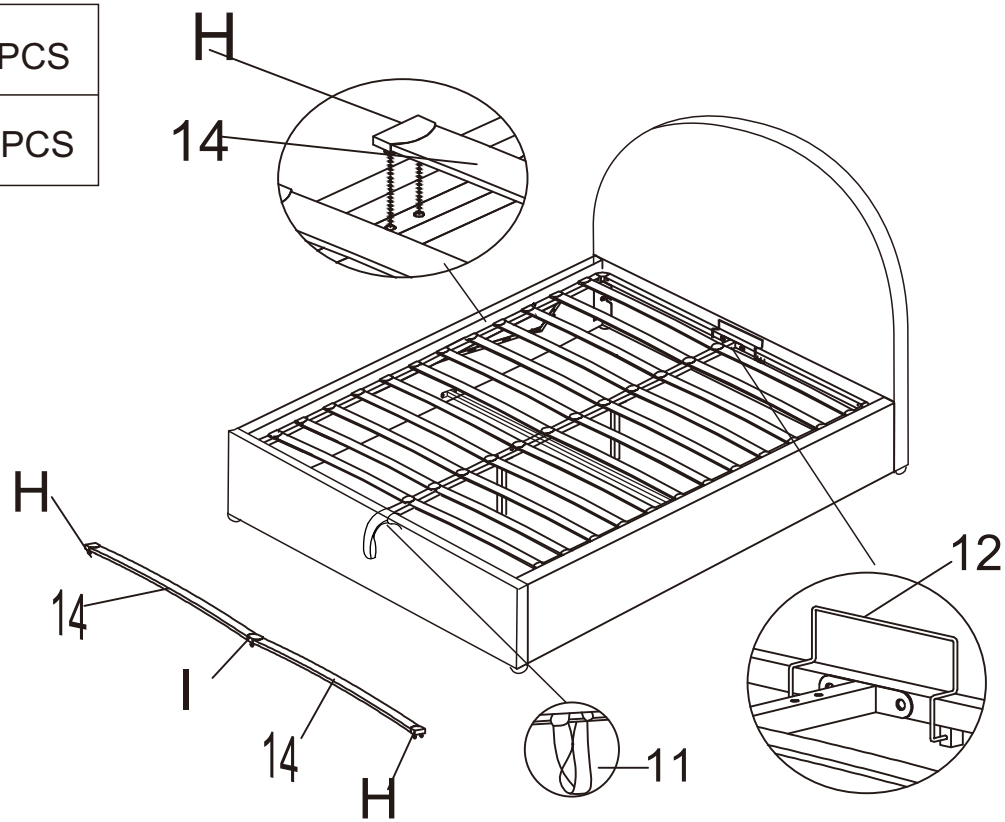

# STEP 8

C		1PC
OPEN SPANNER		

