

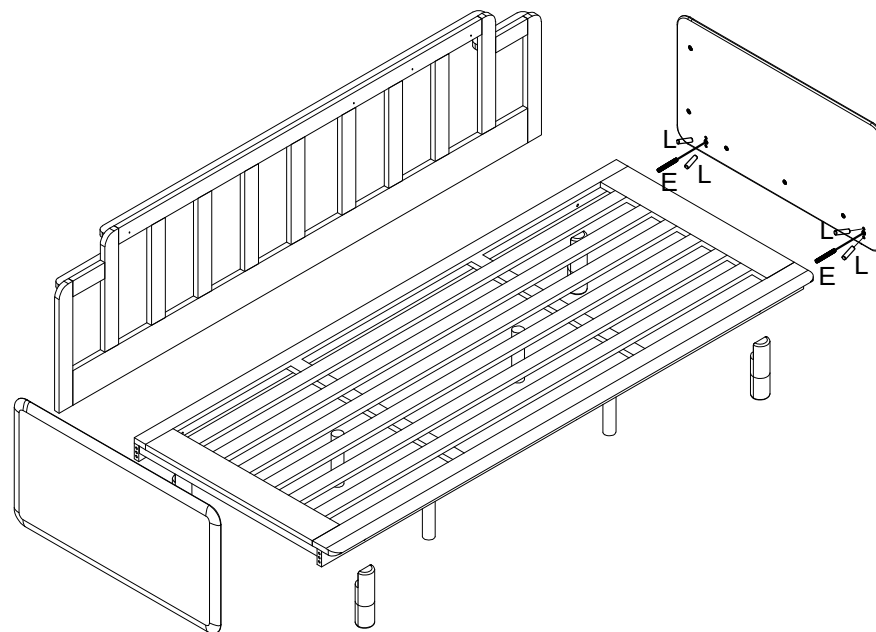



卢森堡沙发 (F款) 组装图

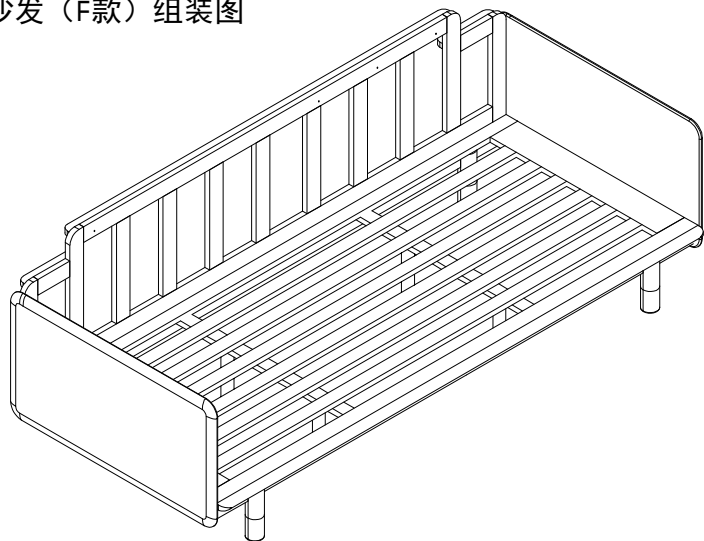


A×38	B×38	C×4	D×4	E×4	F×4	G×26	H×1	Q×1	L×8	S×4 (M8×40)

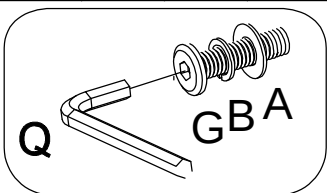

1

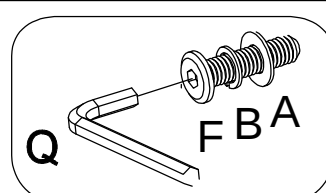

2

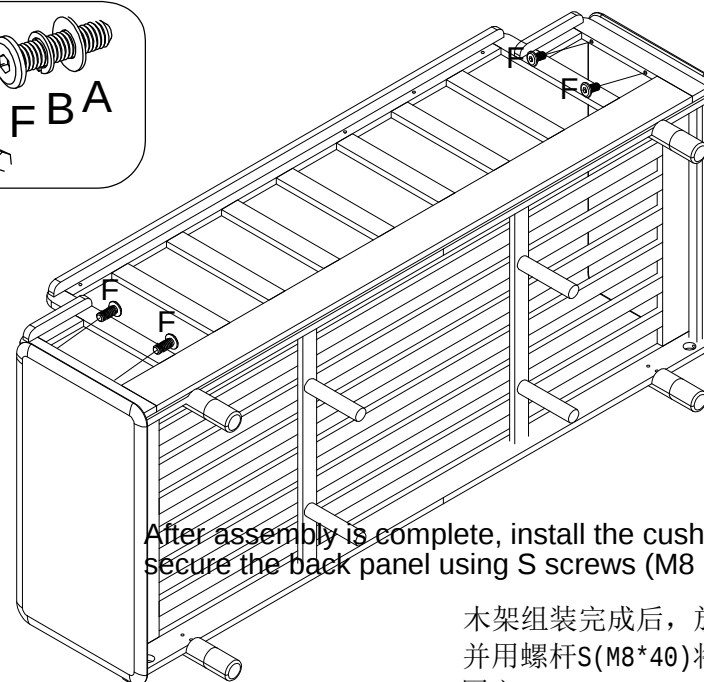


After assembly is complete, install the cushions and secure the back panel using S screws (M8 × 40).

木架组装完成后，放上软包，并用螺杆S(M8×40)将软包靠背固定

CABD





卢森堡沙发（F款）组装图

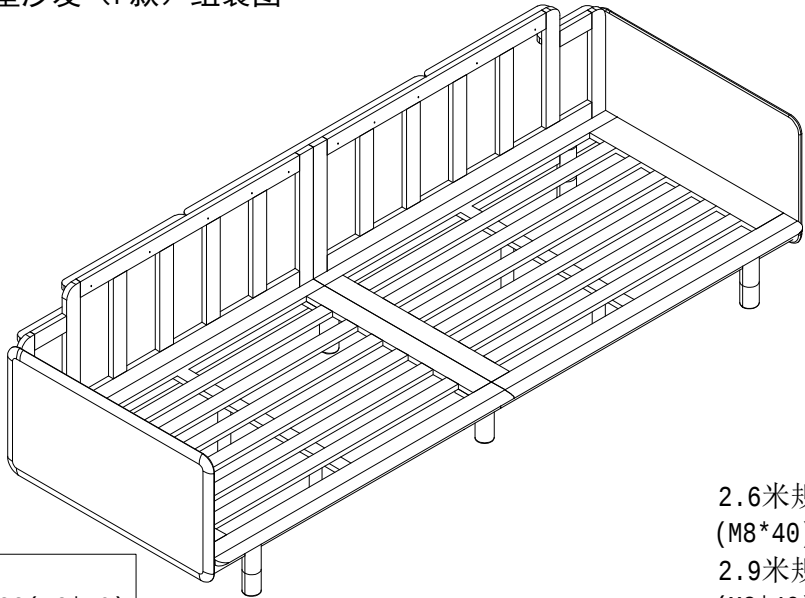


2.6米规格S螺杆
(M8*40)=20
2.9米规格S螺杆
(M8*40)=22

S×20/22(M8*40)

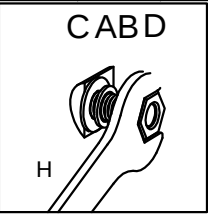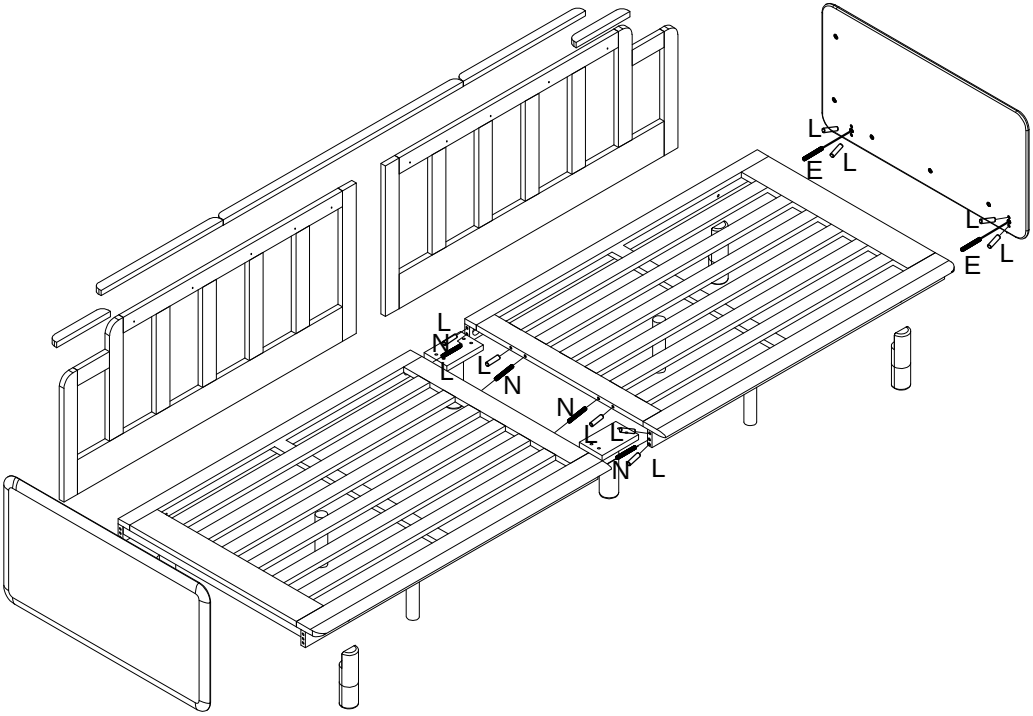


CABD

H

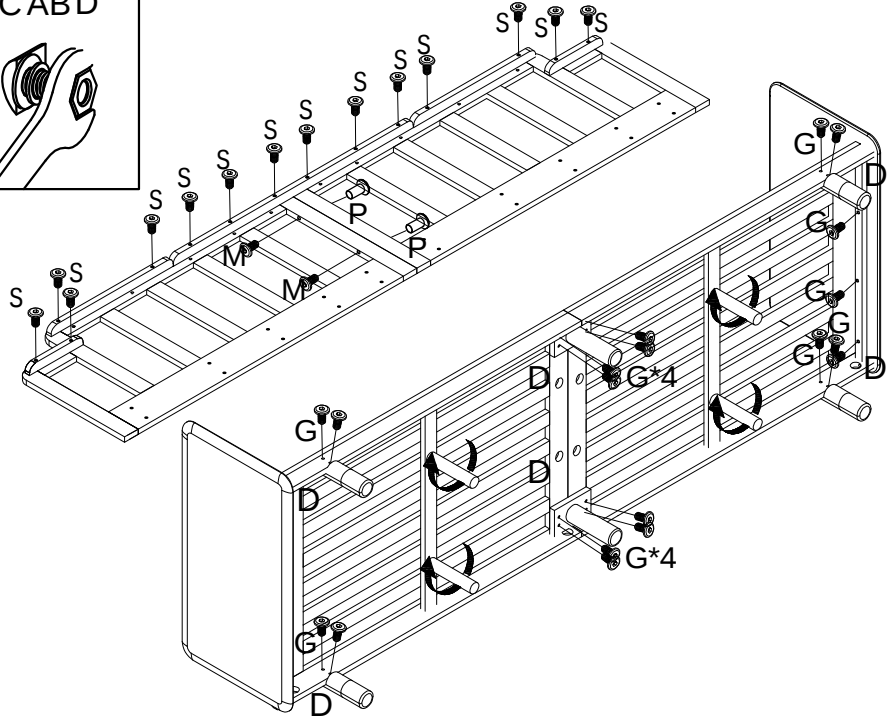

1

2

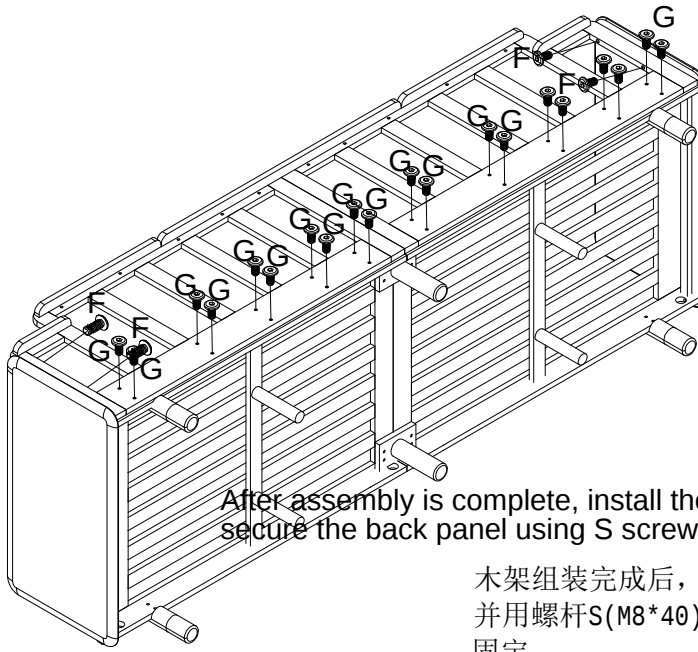

After assembly is complete, install the cushions and secure the back panel using S screws (M8 × 40).

木架组装完成后，放上软包，并用螺杆S(M8*40)将软包靠背固定