



# LINSY 林氏家居






## 安装示意图 Installation diagram

产品名称 Product name	BY009-A/B/C/D/E 电脑椅 BY009-A/B/C/D/E Office Chair	产品规格 Product Specifications	630*630*864/956MM
----------------------	---	--------------------------------	-------------------

安装工具 Tools required	安装人数 No. of people required
	



## 五金表 Hardware List

编号 Component number	名称 Component name	图示 Sketch Map	数量 No. of component
Ⓐ	5mm六角扳手 hexagonal wrench(5mm)		1
Ⓑ	内六角螺丝(6*50)mm Hexagon socket screws (50mm*6pcs)		6
Ⓒ	(6x16)mm垫片 screw washers (16mm*6pcs)		6
Ⓓ	50PU椅轮 PU Casters (Diam.50mm*5pcs)		5
Ⓔ	三级气压棒 Grade 3 gas spring (1pcs)		1

扫一扫获取安装视频教程



第一步：扫码自动跳转林氏公众号页面  
Step 1:Scan the code,autimatically jump to LINSY official account page.

第二步：下拉页面至安装视频位置  
Step 2:Drop down the page to assembling vedio.


## 部件表 Component name

编号 Component number	名称 Component name	规格 Component Specifications	数量 No. of component	材质 Component material
①	椅背 Back		1	涤纶面料+ PP玻纤材质 polyester fabric+ PP with glass fiber
②	坐垫 Seat		1	12MM厚实 木多层板+原 生海棉+涤纶 弹性布+PP 玻纤材质 12mm Plywood+ Pure cutting foam+100% polyester elastic fabric + PP with glass fiber
③	椅脚 Base	310#	1	PP+玻纤材质 Diam.310mm in PP with glass fiber

## STEP 1


产品名称 BY009-A/B/C/D/E 电脑椅  
Product name BY009-A/B/C/D/E Office Chair

## 安装示意图 Installation diagram

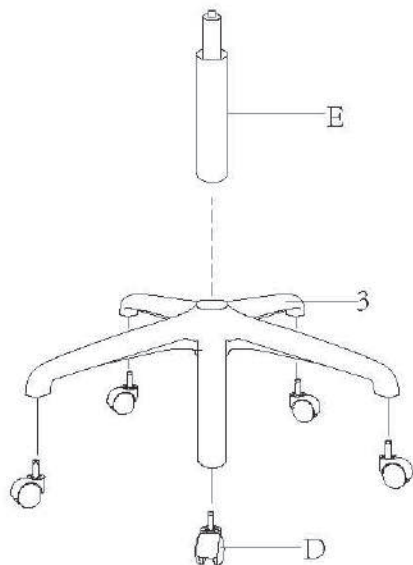


把椅轮分别装入椅脚的五个脚孔，再将气压棒装入椅脚的中心孔。  
The gas lift must be placed from top to bottom into the base.

## STEP 3

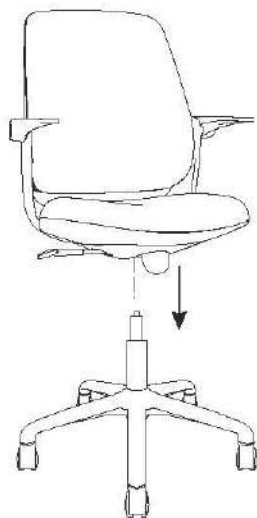

气杆的顶端对准底盘的孔位对接,完成安装。  
The top of the gas lift is aligned with the hole in the mechanism to complete the installation.

## STEP 2

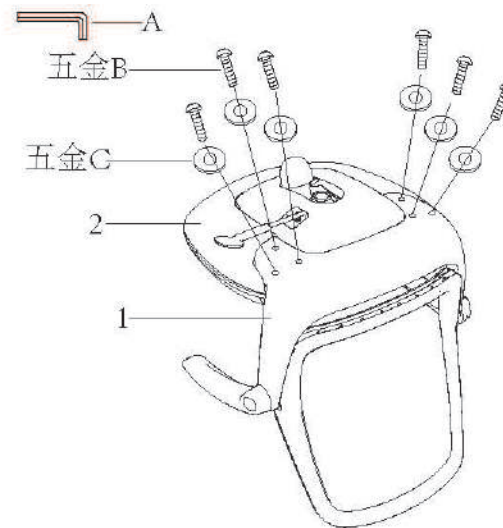

将椅背放置在座垫的承台位，使用五金B、C通过椅背对准座垫的孔位锁紧固定。  
The seat back is placed on the cushion cap position of the seat cushion, and the hardware B、C is used to align the seat back with the hole position lock of the seat cushion.

## STEP 4

