



# LINSY 林氏家居






## 安装示意图 Installation diagram

|                      |   |                                |                   |
|----------------------|---|--------------------------------|-------------------|
| 产品名称<br>Product name | BY009-A/B/C/D/E 电脑椅<br>BY009-A/B/C/D/E Office Chair | 产品规格<br>Product Specifications | 630*630*864/956MM |
|----------------------|---|--------------------------------|-------------------|

|   |   |
|---|---|
| 安装工具<br>Tools required  | 安装人数<br>No. of people required  |
|  |  |



## 五金表 Hardware List

| 编号<br>Component number | 名称<br>Component name                                  | 图示<br>Sketch Map  | 数量<br>No. of component |
|------------------------|---|---|------------------------|
| Ⓐ                      | 5mm六角扳手<br>hexagonal wrench(5mm)                      |  | 1                      |
| Ⓑ                      | 内六角螺丝(6*50)mm<br>Hexagon socket screws<br>(50mm*6pcs) |  | 6                      |
| Ⓒ                      | (6x16)mm垫片<br>screw washers<br>(16mm*6pcs)            |  | 6                      |
| Ⓓ                      | 50PU椅轮<br>PU Casters<br>(Diam.50mm*5pcs)              |  | 5                      |
| Ⓔ                      | 三级气压棒<br>Grade 3 gas spring (1pcs)                    |  | 1                      |

扫一扫获取安装视频教程



第一步：扫码自动跳转林氏公众号页面  
Step 1:Scan the code,autimatically jump to LINSY official account page.

第二步：下拉页面至安装视频位置  
Step 2:Drop down the page to assembling vedio.

## 部件表 Component name


| 编号<br>Component number | 名称<br>Component name | 规格<br>Component Specifications | 数量<br>No. of component | 材质<br>Component material   |
|------------------------|----------------------|--------------------------------|------------------------|--|
| ①                      | 椅背<br>Back           |                                | 1                      | 涤纶面料+<br>PP玻纤材质<br>polyester fabric+ PP with glass fiber   |
| ②                      | 坐垫<br>Seat           |                                | 1                      | 12MM厚实<br>木多层板+原<br>生海棉+涤纶<br>弹性布+PP<br>玻纤材质<br>12mm<br>Plywood+<br>Pure cutting<br>foam+100%<br>polyester<br>elastic fabric<br>+ PP with<br>glass fiber |
| ③                      | 椅脚<br>Base           | 310#                           | 1                      | PP+玻纤材质<br>Diam.310mm<br>in PP with<br>glass fiber   |

## STEP 1

|              |                              |
|--------------|------------------------------|
| 产品名称         | BY009-A/B/C/D/E 电脑椅          |
| Product name | BY009-A/B/C/D/E Office Chair |


## 安装示意图

### Installation diagram

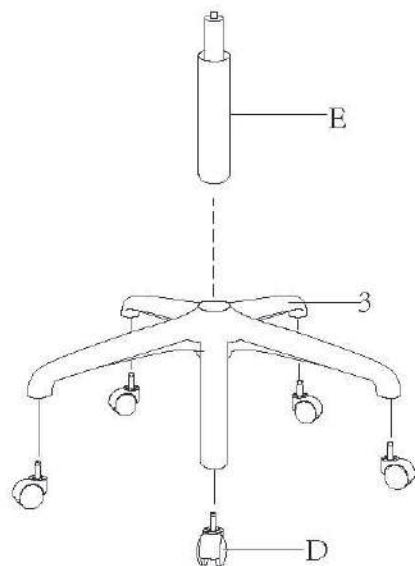


把椅轮分别装入椅脚的五个脚孔，再将气压棒装入椅脚的中心孔。  
The gas lift must be placed from top to bottom into the base.

## STEP 3

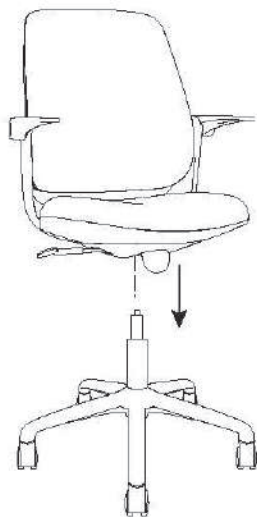

气杆的顶端对准底盘的孔位对接,完成安装。  
The top of the gas lift is aligned with the hole in the mechanism to complete the installation.

## STEP 2

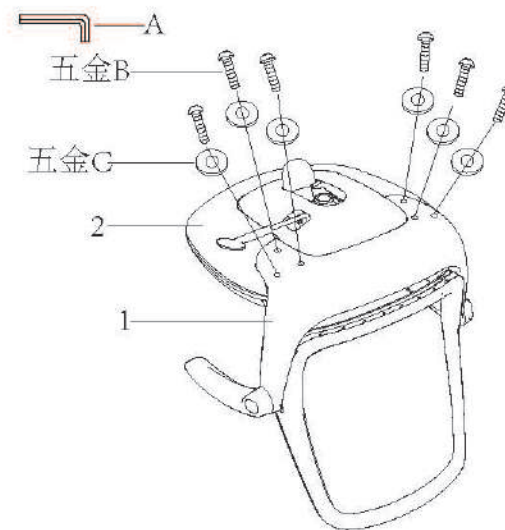

将椅背放置在座垫的承台位，使用五金B、C通过椅背对准座垫的孔位锁紧固定。  
The seat back is placed on the cushion cap position of the seat cushion, and the hardware B、C is used to align the seat back with the hole position lock of the seat cushion.

## STEP 4

