LINSY 林氏家居

安装示意图/Assembly Instruction

产品名称 Model NO.	C03M-A
产品规格 Specification	700*388*366mm
安装工具 Tool	安装人数 Installer

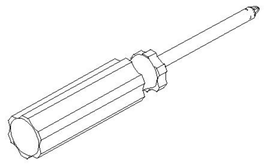

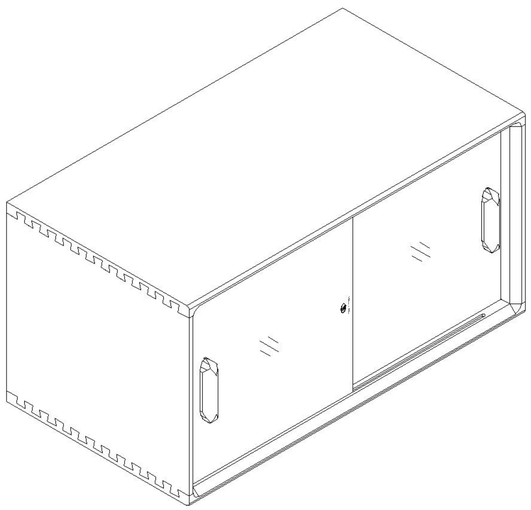

五金表/Hardware list

(A)* 1 脚钉 Foot nails	(B)* 2 铁床条 Hardware piece	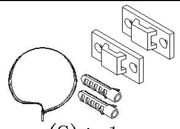 (C)* 1 防倒器 Anti-fall device	 (D)* 2 门板玻璃(338*328*5mm) Door panel glass
(E)* 1 拉手螺丝-M4x15mm pulling screw	(F)* 1 透明防撞垫片Ø10x1.5 Transparent anti-collision gasket		

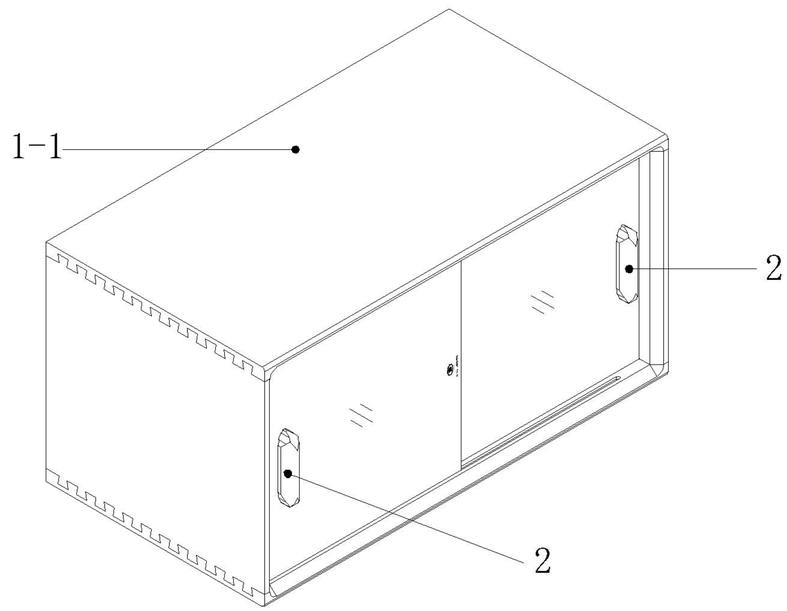

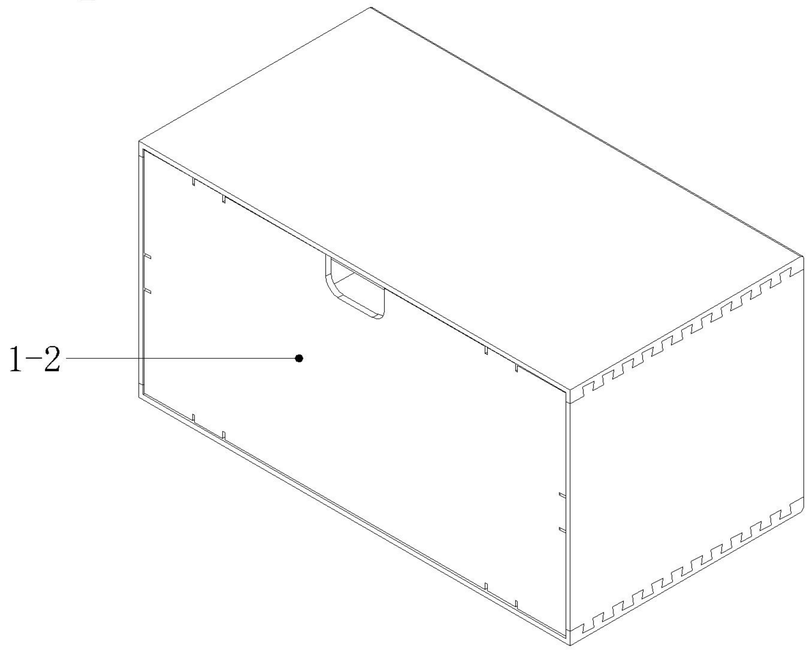

部件表/Parts List

编号NO.	名称Name	规格（mm）Specification	数量QTY	材质Material
①	整装柜子 Packaged cabinet	700*380*360	1	实木 Wood
1-1	上柜 Upper cabinet	700*380*360	1	实木 Wood
1-2	背板 Back board	684*342*9	1	实木 Wood
②	拉手 Handle	110*25*20	2	实木 Wood

CO3M-A

安装方法/
Installation method

1

(A)*4

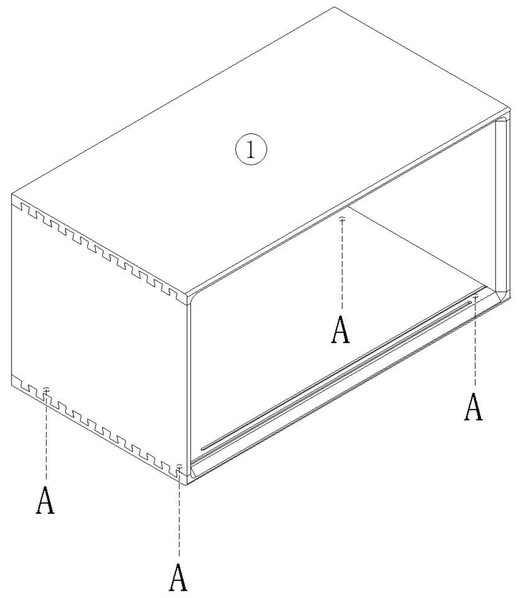

注意：柜体用于叠高搭配使用时不需安装五金A
Note: When the cabinet is used for stacking height, hardware A is not required

2

(D)*2

(E)*4

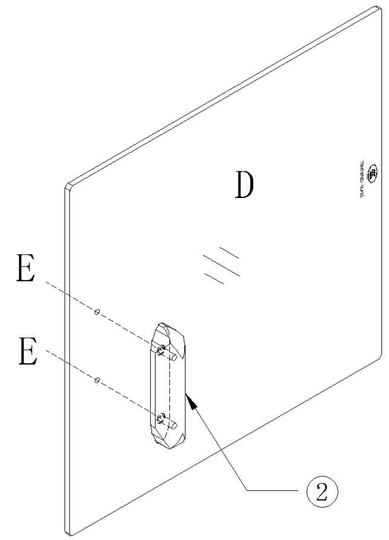

X2

3

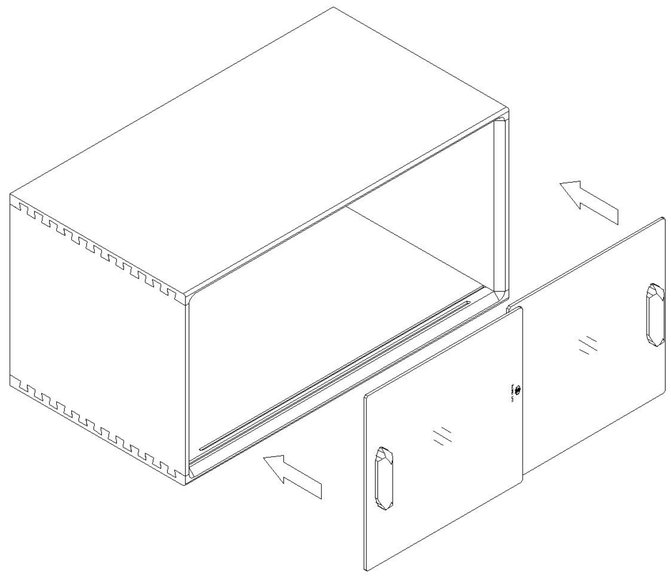

4

(F)*4

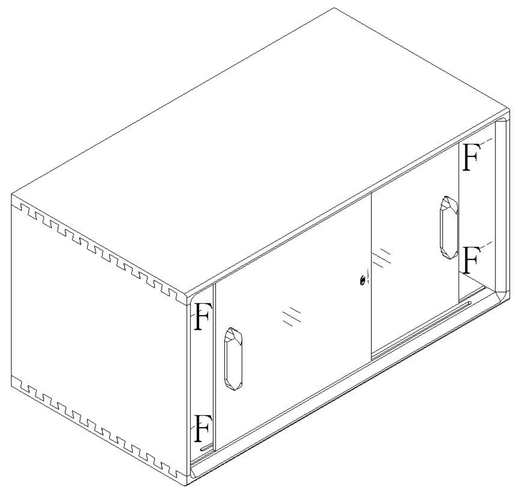

CO3M-A

安装方法/ Installation method

5

(C)*1

墙体
Wall

步骤1
step1

步骤2
step2

C

C

1

注意：
安装防倒器前需先把其中一颗背板螺丝卸出
Attention:Before installing the anti fall device, one of the back plate screws needs to be removed first

6

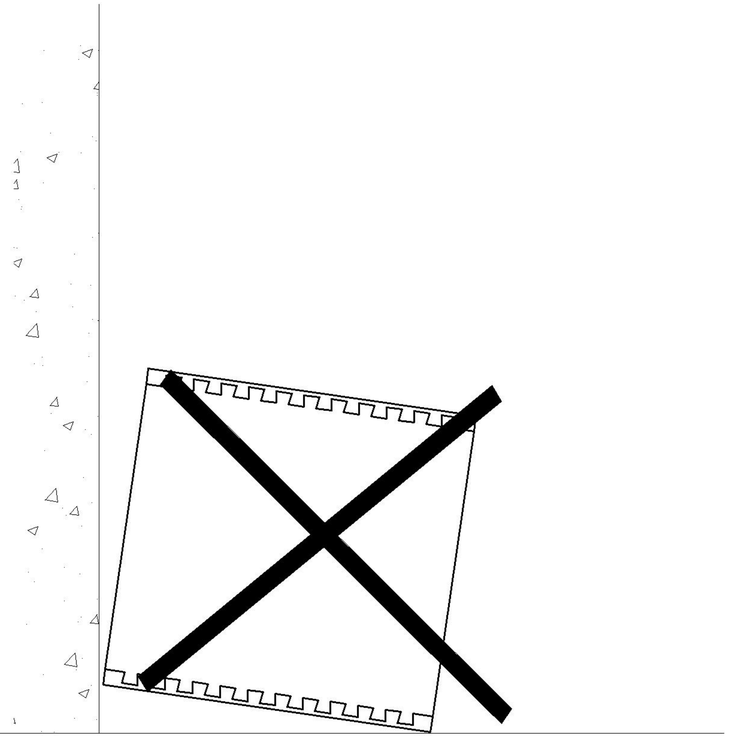

7

(B)*2

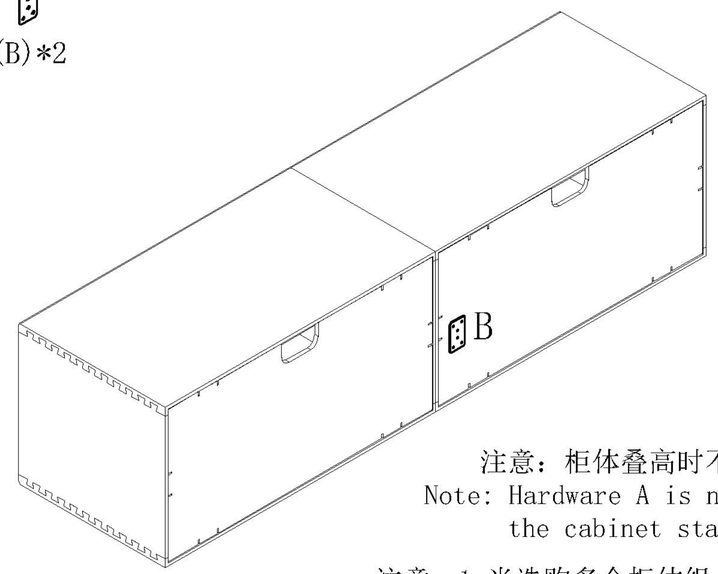

注意：须安装防倒器
Note: An anti-tip device must be installed

或者
or

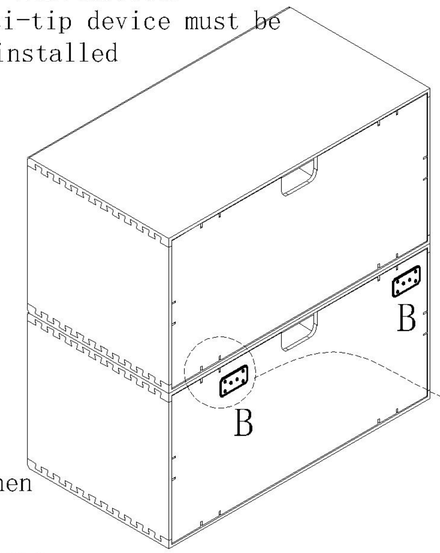

注意：柜体叠高时不需安装五金A
Note: Hardware A is not required when the cabinet stack is high
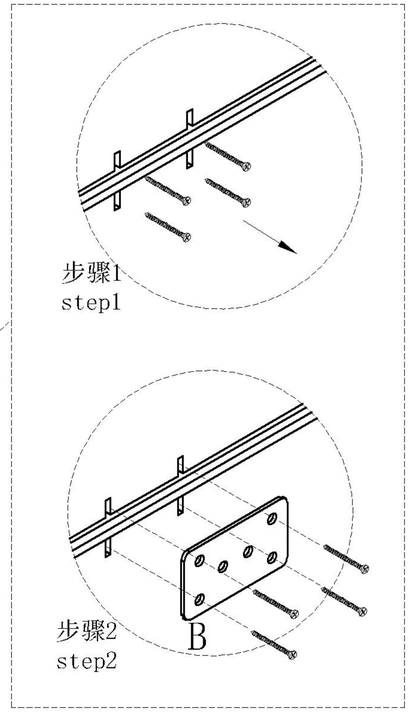
注意：1.当选购多个柜体组合摆放时需安装五金B
2.安装五金B前需先把背板螺丝卸下，再用卸下的背板螺丝锁紧五金B
Attention:
1. When selecting and using multiple cabinet combinations for placement, hardware B needs to be installed
2. Before installing hardware B, remove the back plate screws first, and then lock hardware B with the removed back plate screws