

安装示意图/Assembly Instruction

产品名称 Model NO.	TBC889	排骨架规格 Ranked bed slat specifications (1440*1800)
产品规格 Specification	1500*2000	
尺寸组合 Combined size	1590*2225*1060mm	

配件表/Accessories list		部件表/Parts List
编号 NO.	名称 Name	图示 Icon
A	说明书(含安装图) Mounting Instruction (with drawing)	
B	Double hole small corner code (双孔小角码)	
C	Right angle code(直角码)	
D	(中档卡扣) Intermediate clip	
E	(M6*25斜边十字螺杆) M6*25 bevel cross bolt	
F	(M5*30自攻螺丝) M5*30 self tapping screw	
G	(枪灰色五金脚) Gun gray metal foot	
H	(银色床垫挡 L=28CM) SILVER MATTRESS STOP L=28CM	
I	(M4*20自攻螺丝) M4*20 self tapping screw	
J	(M8*25斜边十字螺杆) M8*25 bevel cross bolt	
K	(12.5cm可调节塑料中脚) 12.5cm adjustable plastic middle foot	
L	Φ8垫片 Φ8 gasket	
M	(防撞螺杆) Mattress block	
拆装排骨架配套配件 Accessories of disassembled row bed slat		

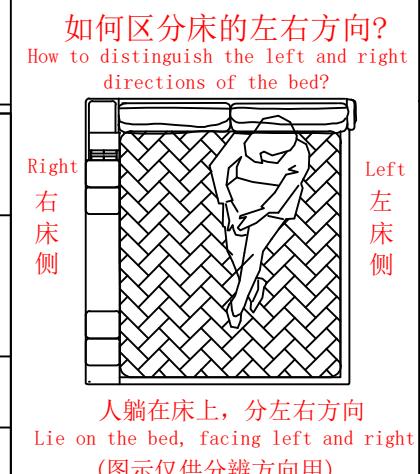


图1: 床头床边连接安装示意图
Figure 1: installation diagram of bedside connection

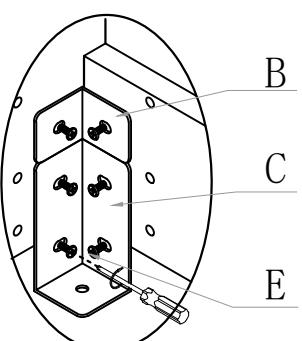


图2: 卡扣组合连接安装示意图
Figure 2: installation diagram of snap combination connection




图3: 卡扣安装示意图
Figure 3: schematic diagram of buckle installation



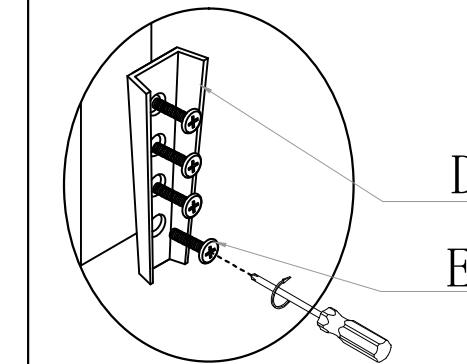


图4: 床脚安装示意图
Figure 4: installation diagram of bed foo

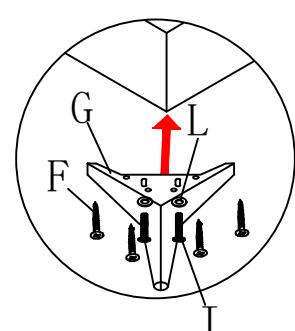

STEP 1:


按图示方式, 将床头、床边、床尾连接固定
Connect and fix the head, side and tail of the bed as shown in the figure

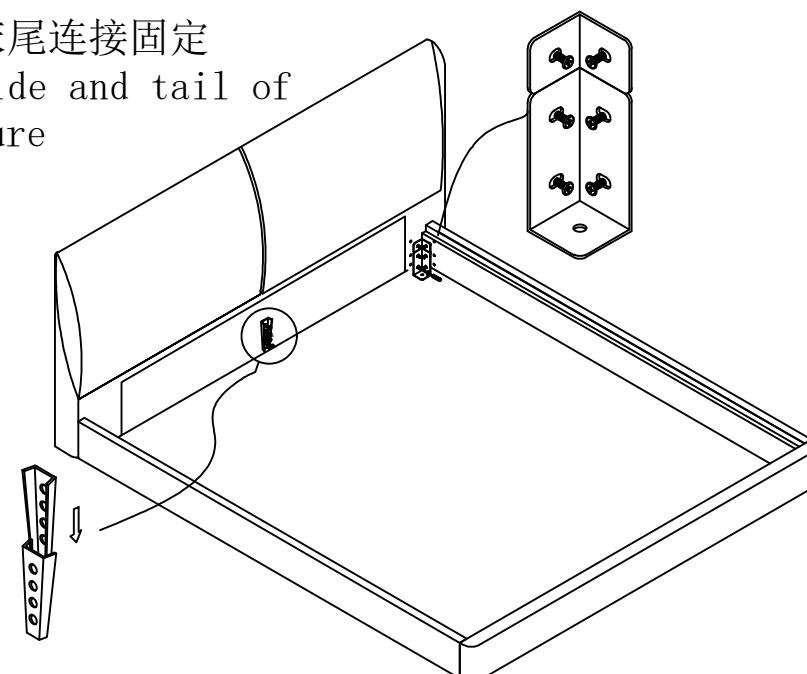


STEP 2:

按图示方式, 将中档五金脚安装、再从上往下的方式扣住卡扣。
Install the mid-range hardware feet as shown in the figure, and then fasten the buckle from top to bottom.

按图示方式, 将四个五金脚安装固定
Install and fix the four hardware feet as shown in the figure
按图示方式, 将两个可调节中脚分别安装固定在床头和中档
According to the figure, install and fix the two adjustable middle feet respectively at the head of the bed and the middle

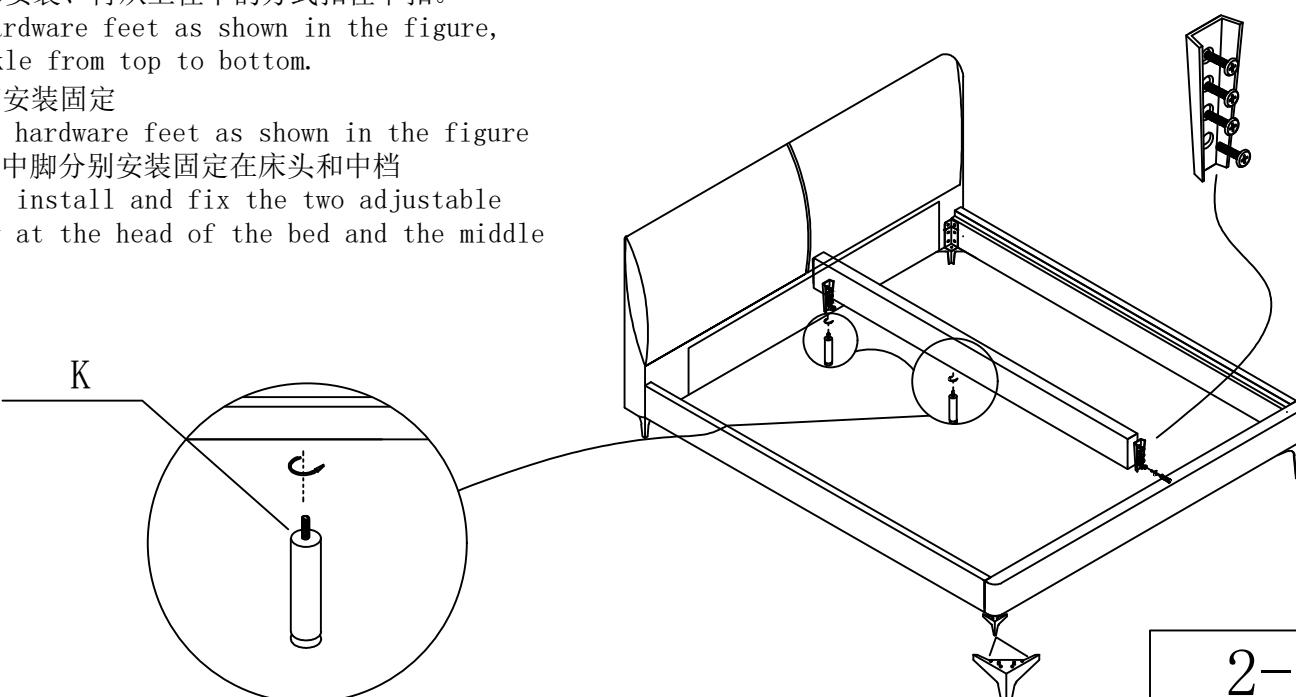

排骨架效果图
Ranked bed slat renderings

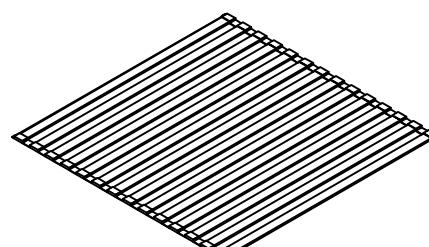


排骨架脚
The feet of
ranked bed slat

制图 Draw | Page NO. 页码 (2-1)

安装工具 Tool | 安装人数 Installer


充电式手电钻 或者 十字螺丝刀
Cordless hand drill
Phillips screwdriver

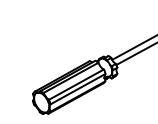


2-1

STEP 3:


按图示方式，将床垫档安装在床尾上。
Install the mattress stop on the end of the bed as shown in the figure.

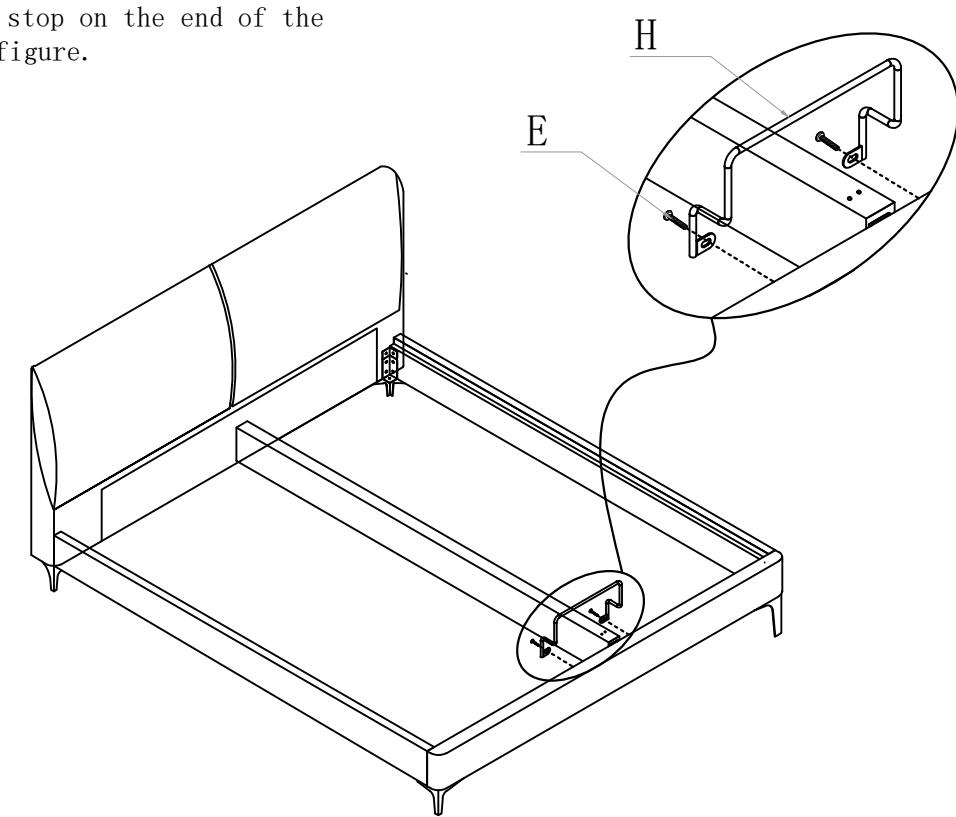**STEP 5:**

按图示方式，将防撞螺杆安装至床头背面。
Install the anti-collision screw to the back of the head of the bed as shown.

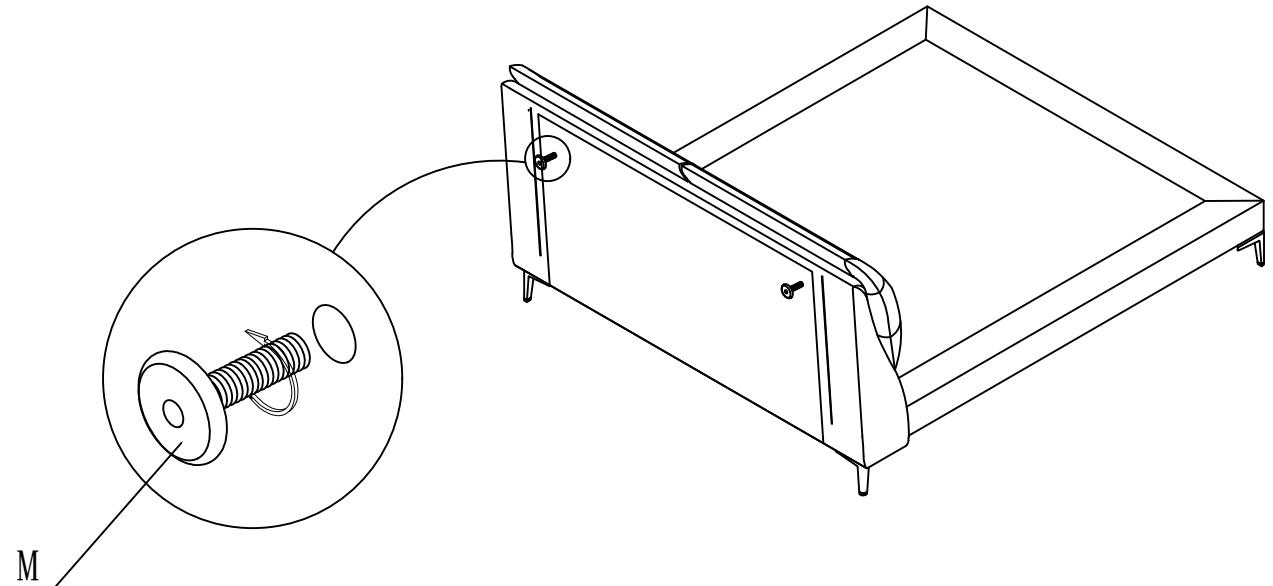**STEP 4:**

按图示方式，将排骨架平铺后、安装固定。
As shown in the figure, the row frame shall be tiled, installed and fixed.

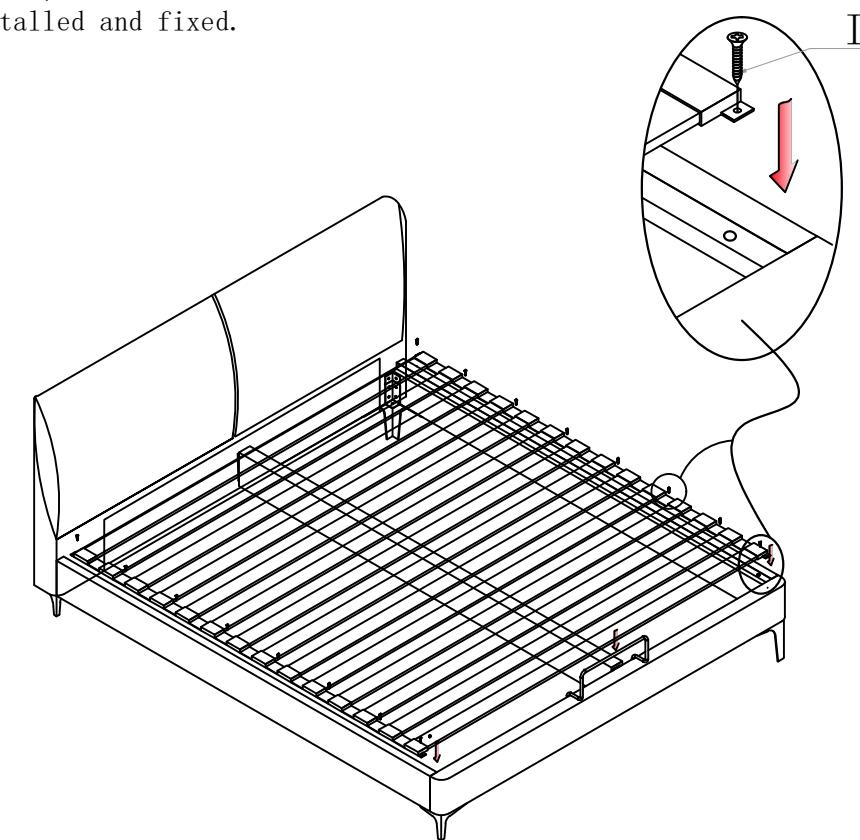**STEP 6:**