


Assembly Instructions

Japandi Range

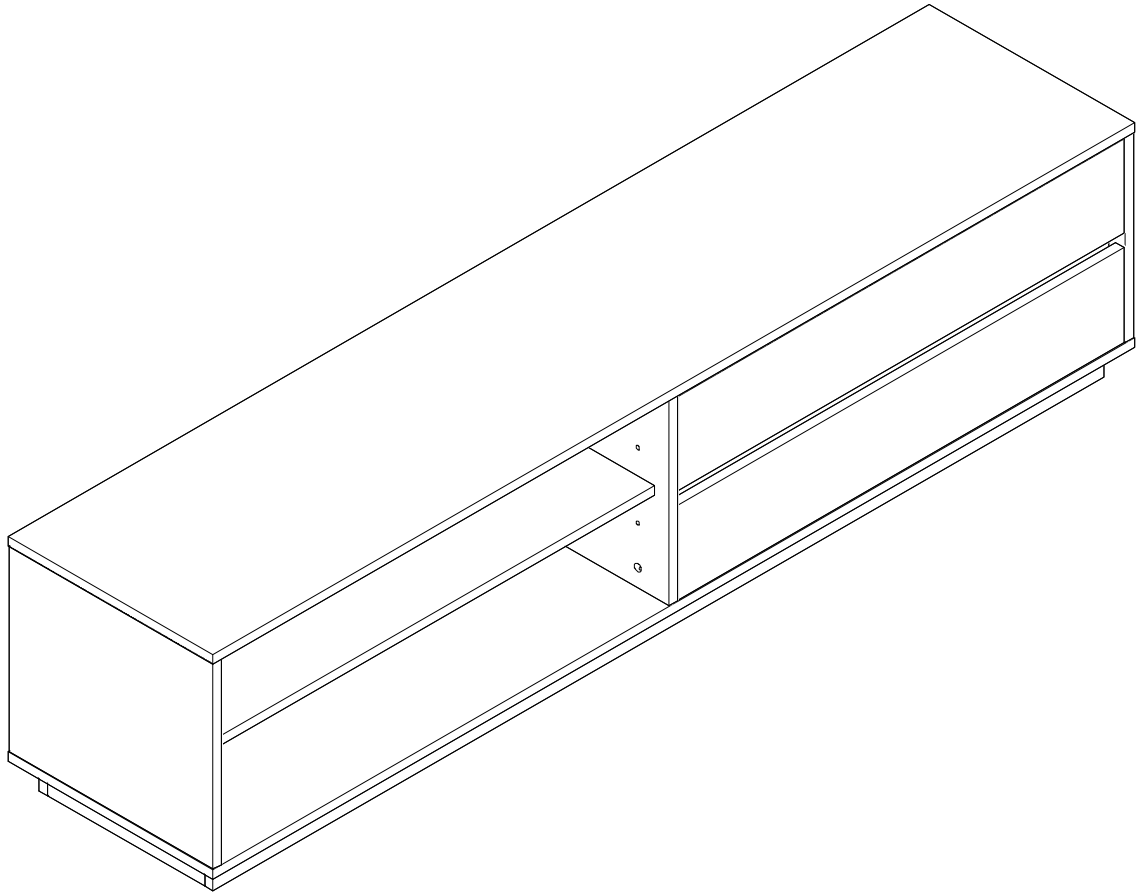

Loft

Product Code









TVM-LOF-JAP-1~9710

Dimensions(W x D x H)


180*40*43cm

Important

Please read through instruction carefully
Before assembly and keep for future reference.

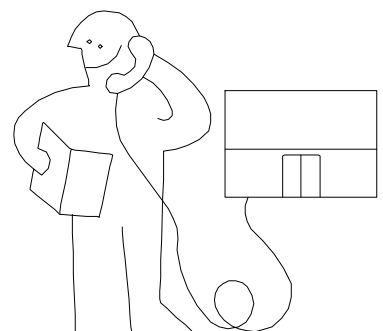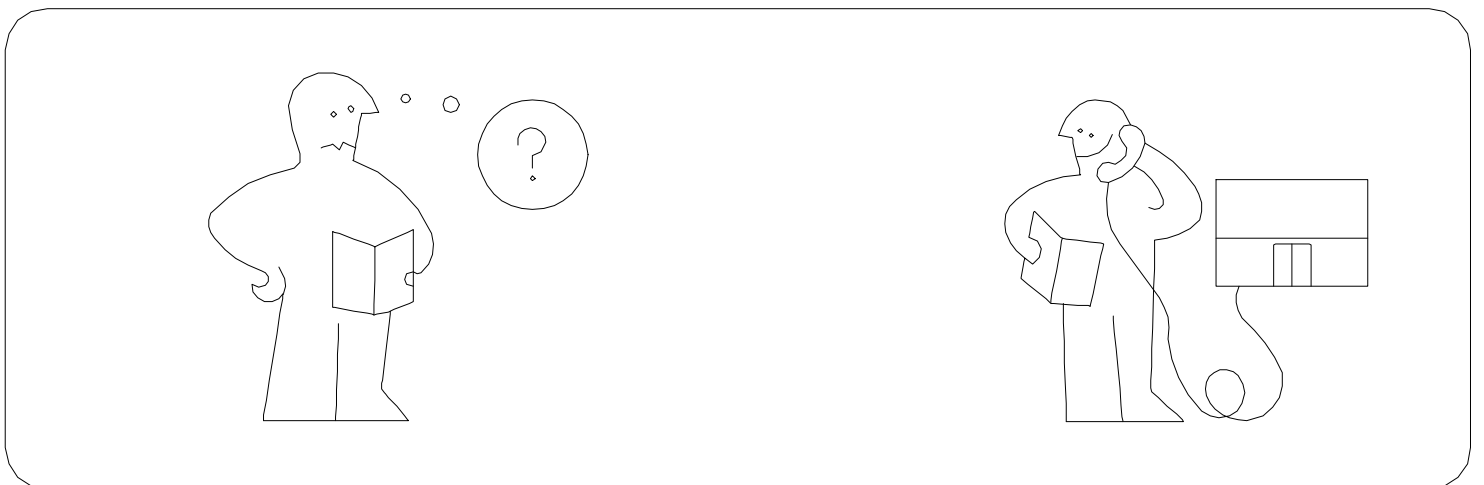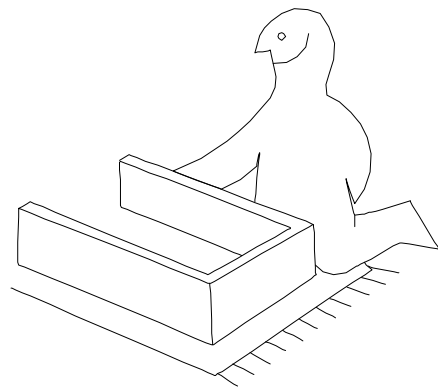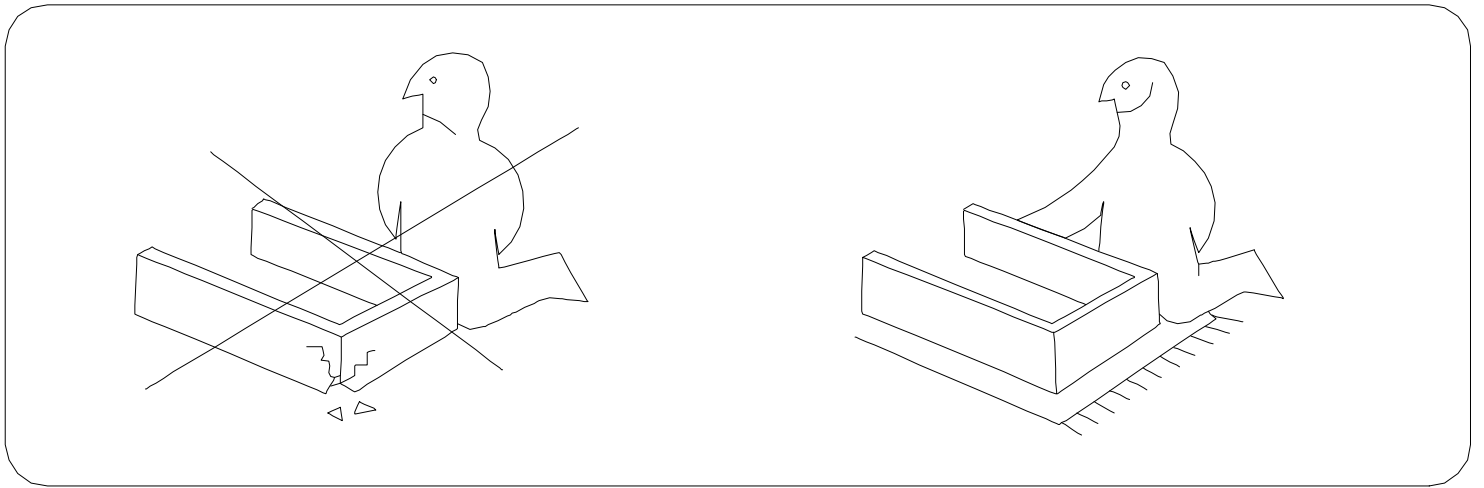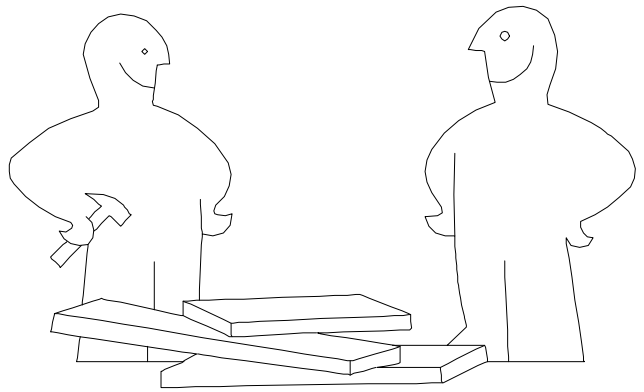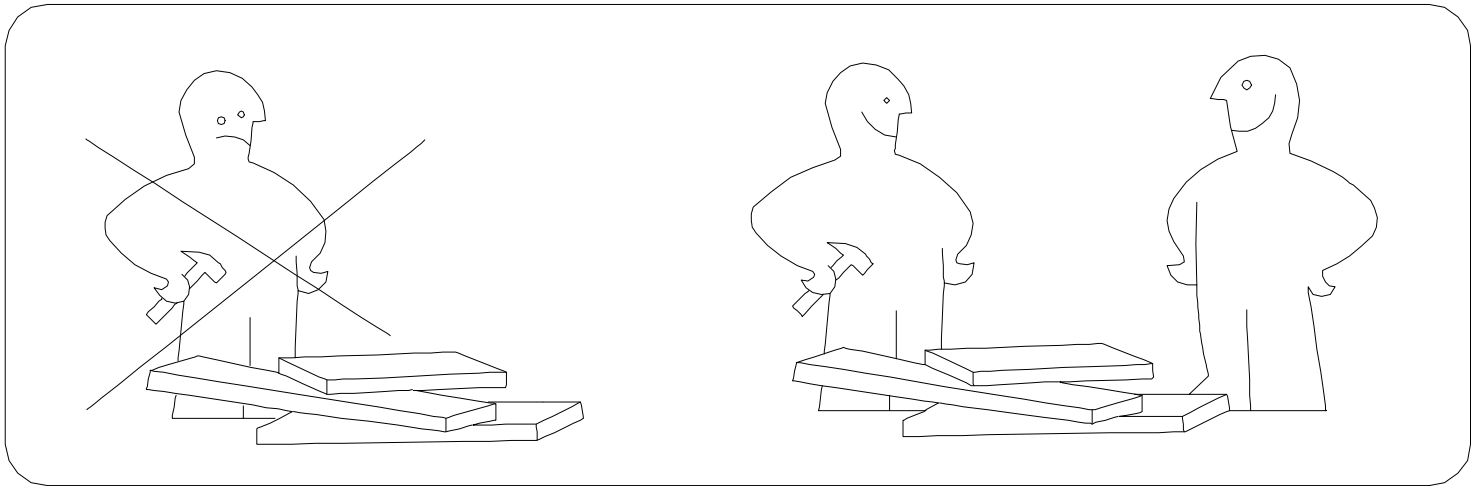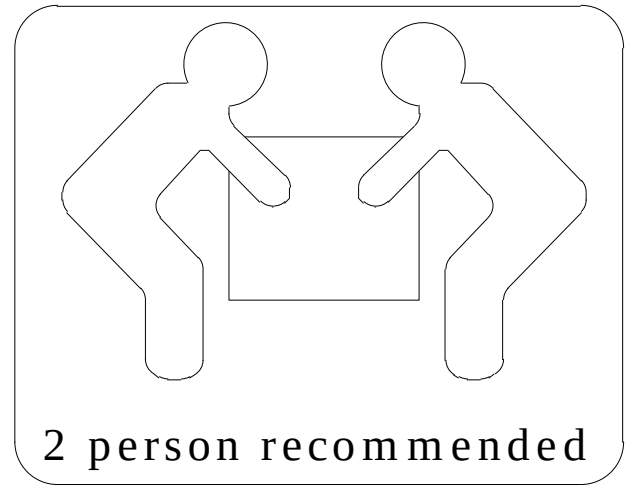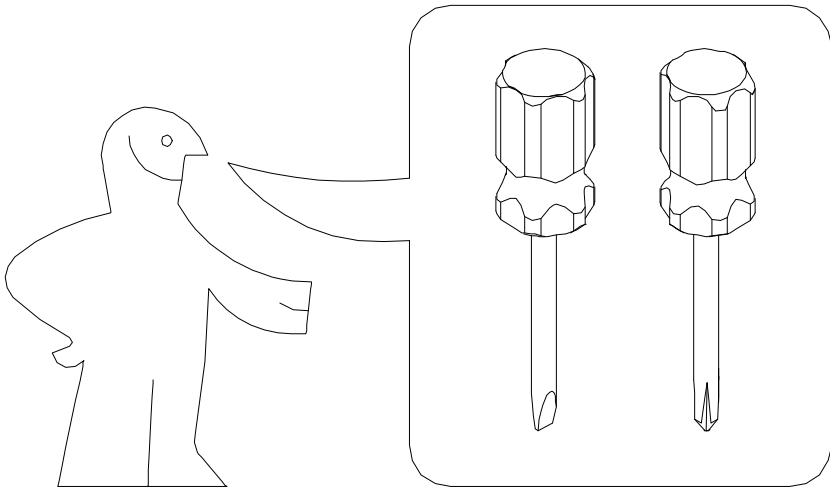


Panel No	Panel Sizes	Quantity		Panel No	Panel Sizes	Quantity
1	1800*400*16	1		10	871*160*16	1
2	1800*400*16	1		11	871*160*16	1
3	348*399*16	1		12	825*80*12	2
4	348*399*16	1		13	338*100*12	2
5	348*399*16	1		14	350*80*12	2
6	885*358*5	1		15	350*80*12	2
7	885*358*5	1		16	835*348*5	2
8	872*350*16	1		17	1740*50*16	2
9	875*60*16	1		18	308*50*16	3

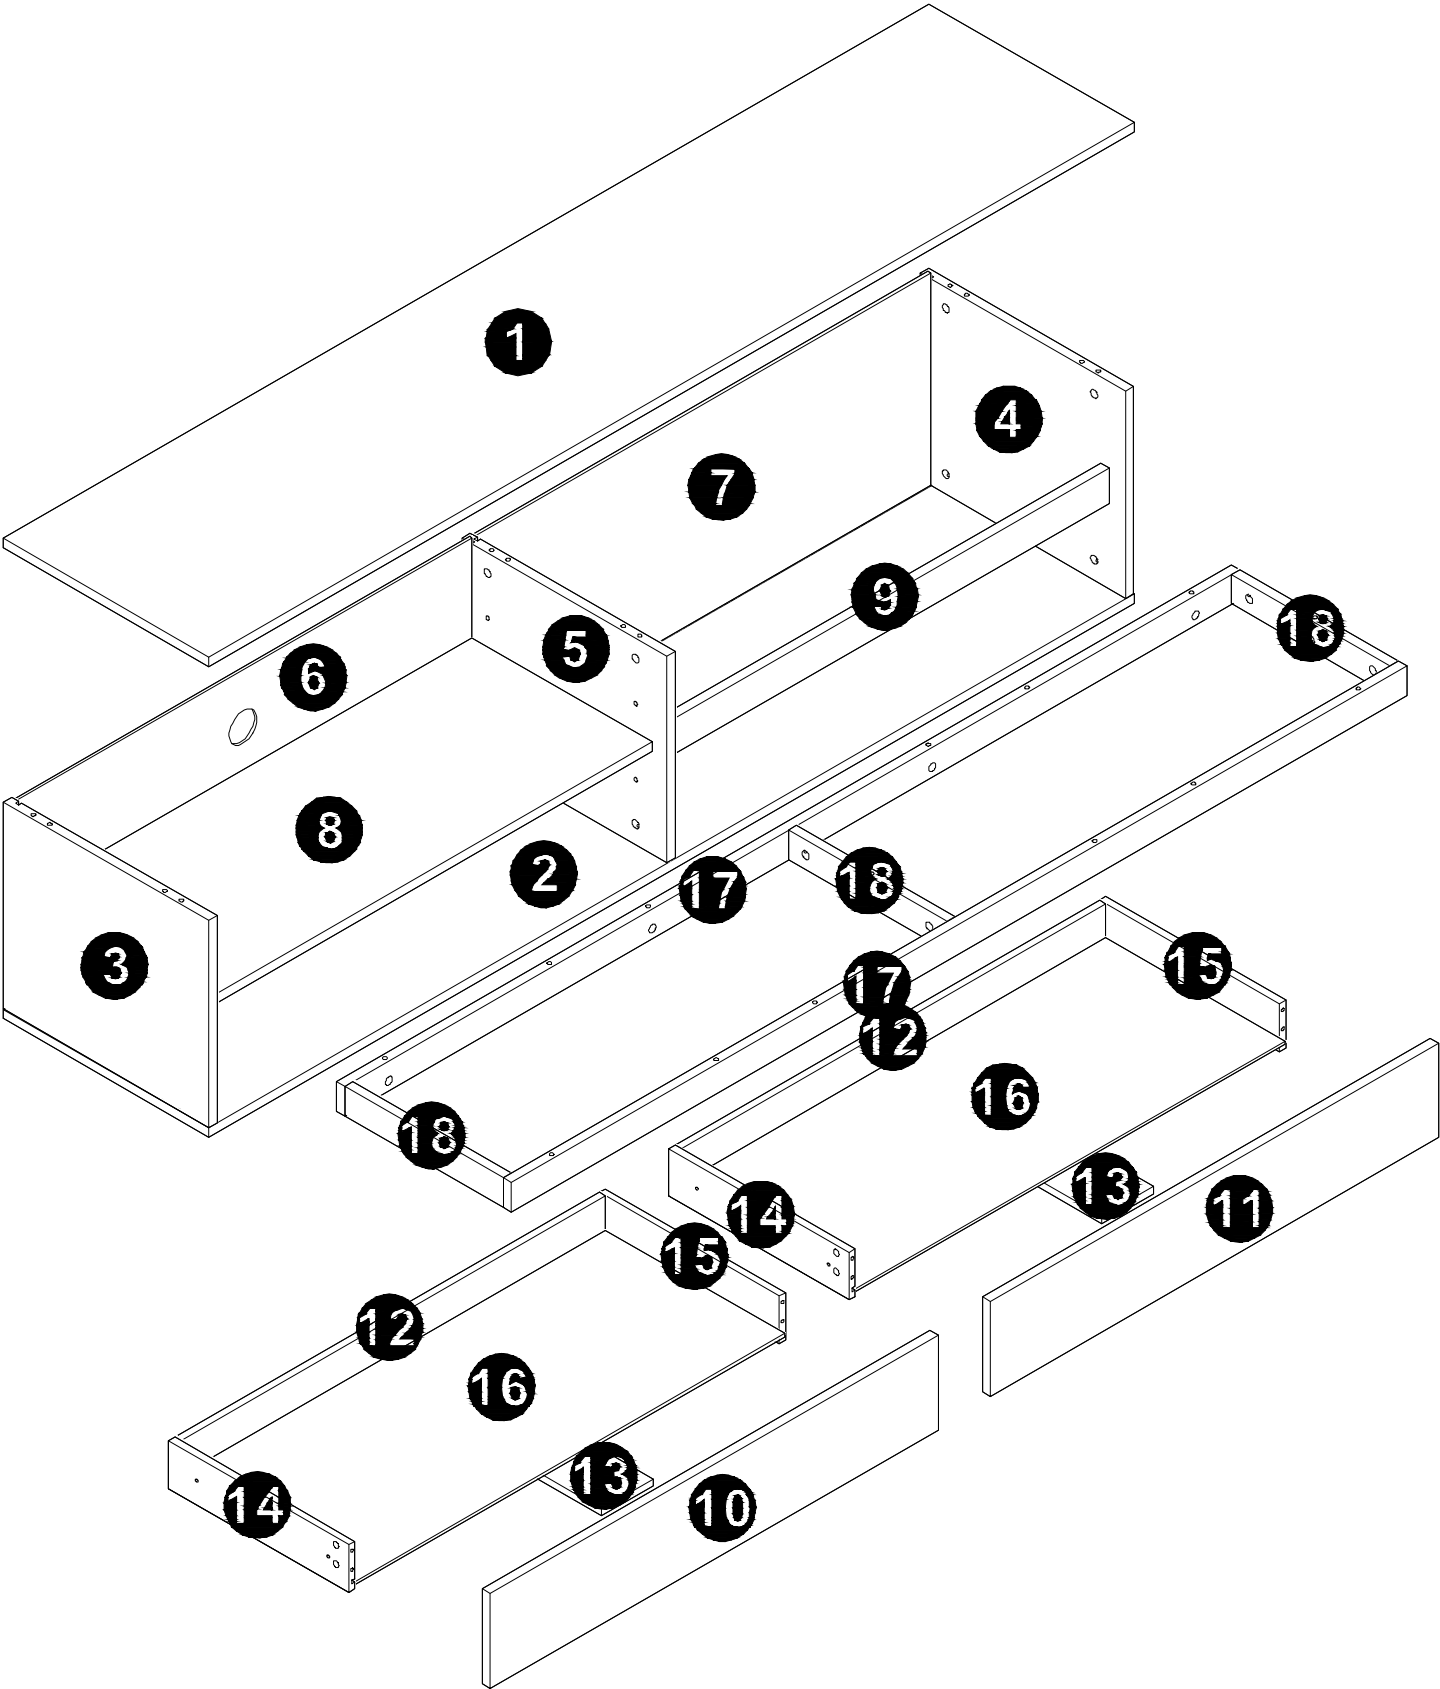


Fittings



A=31




B=18

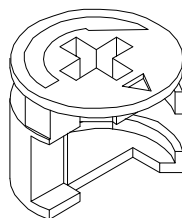


C=31




D=51

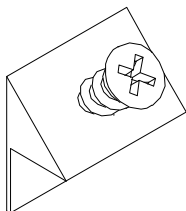


E=8

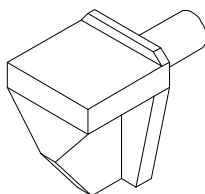

L=4

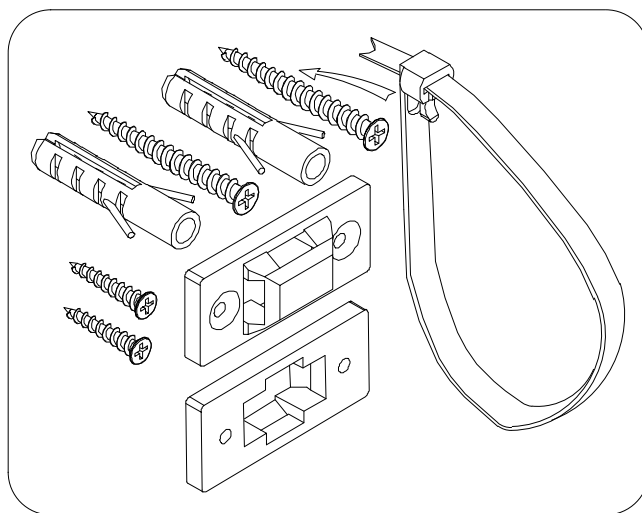


F=1

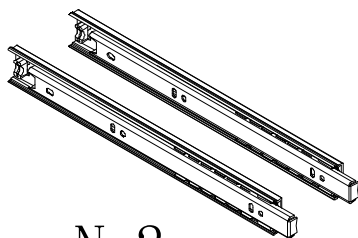

N=2



O=20




P=20






M3. 5*12

V1=16


STEP 1

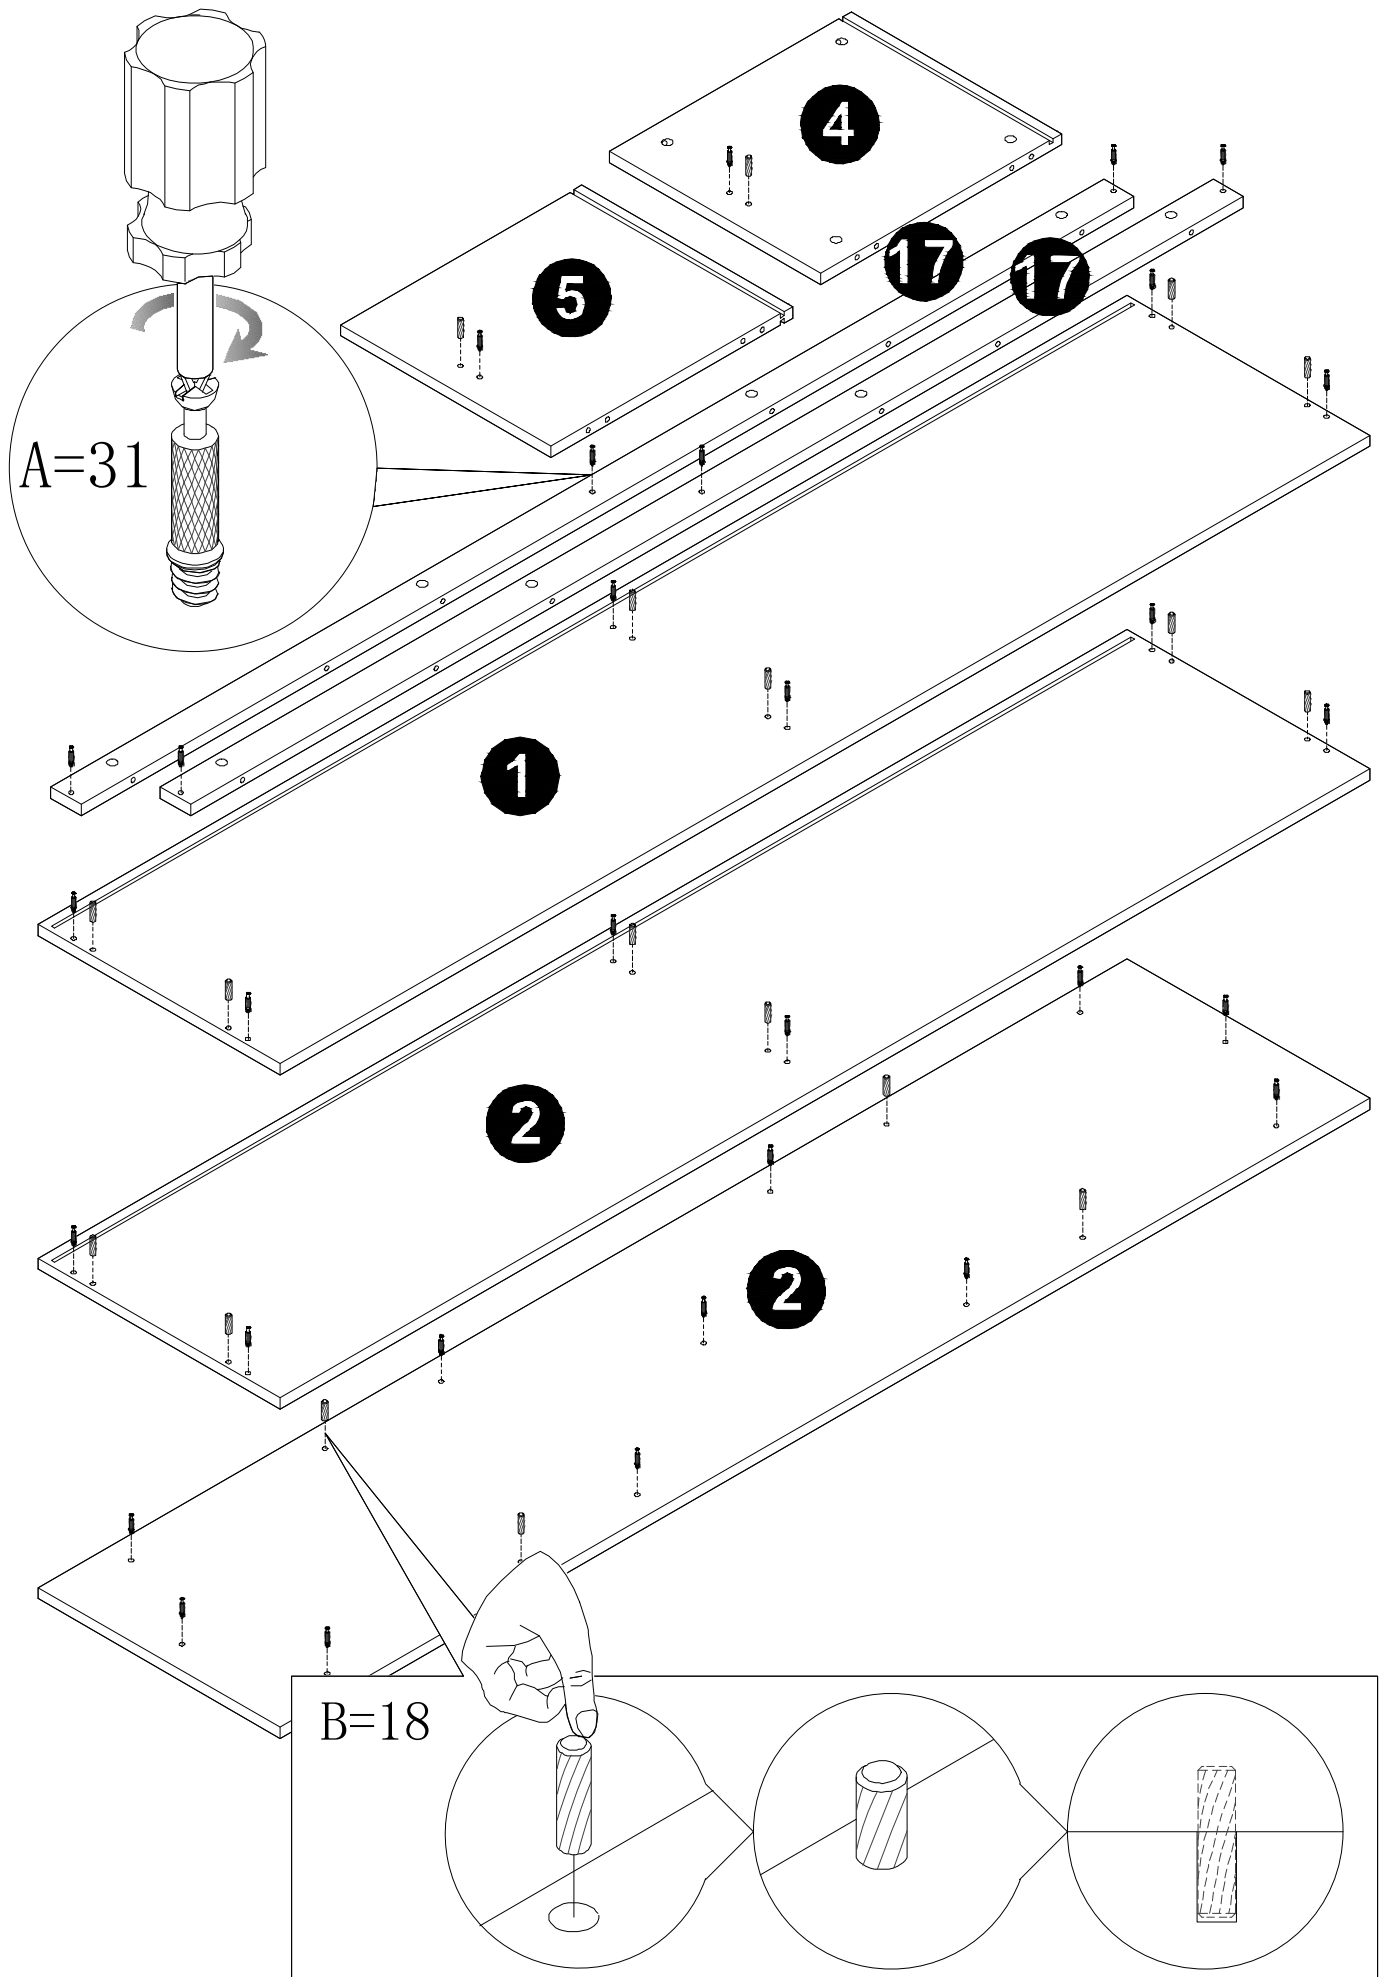



STEP2

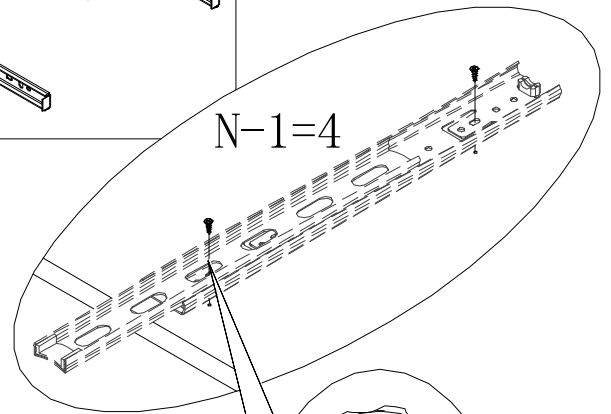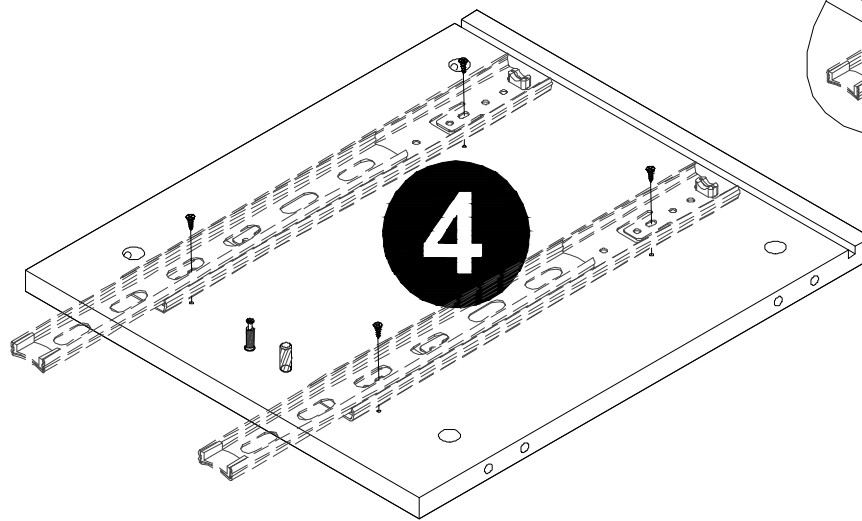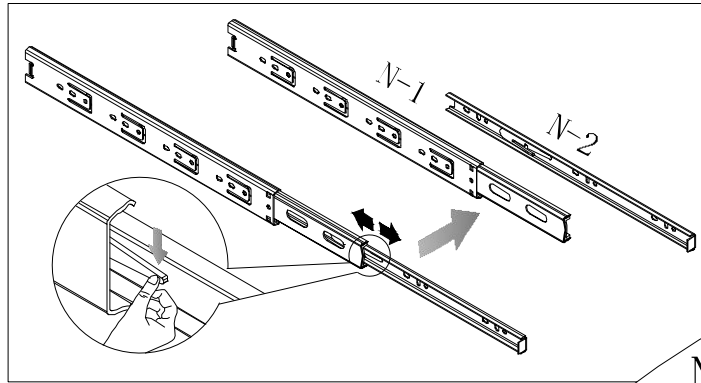

$N-1=4$

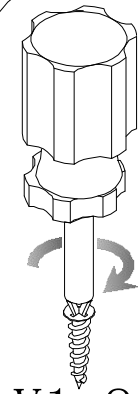

$V1=8$

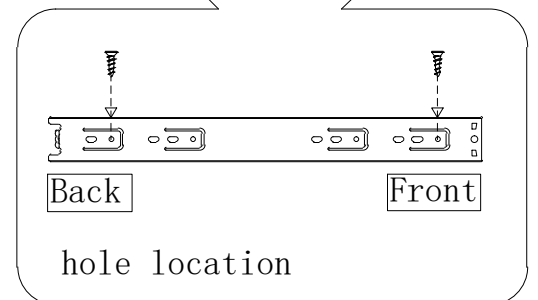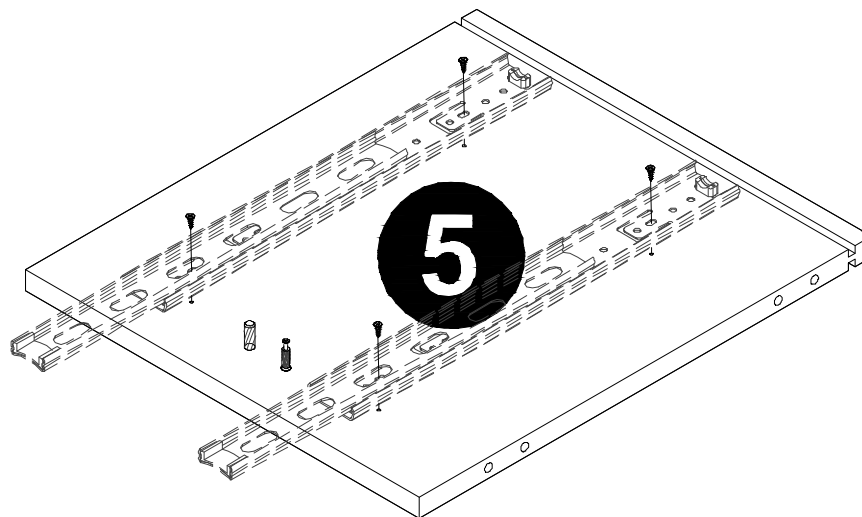


Back


Front

hole location


STEP3

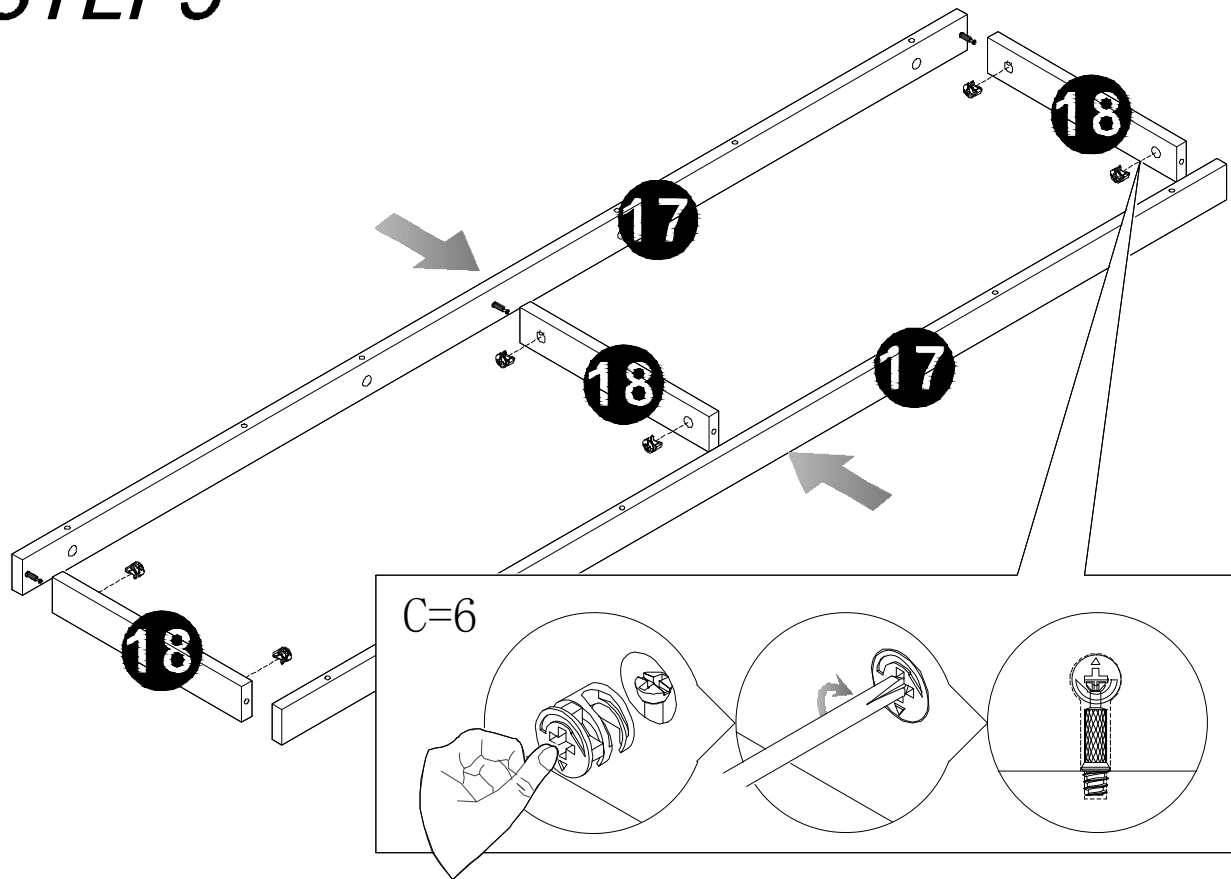


STEP4

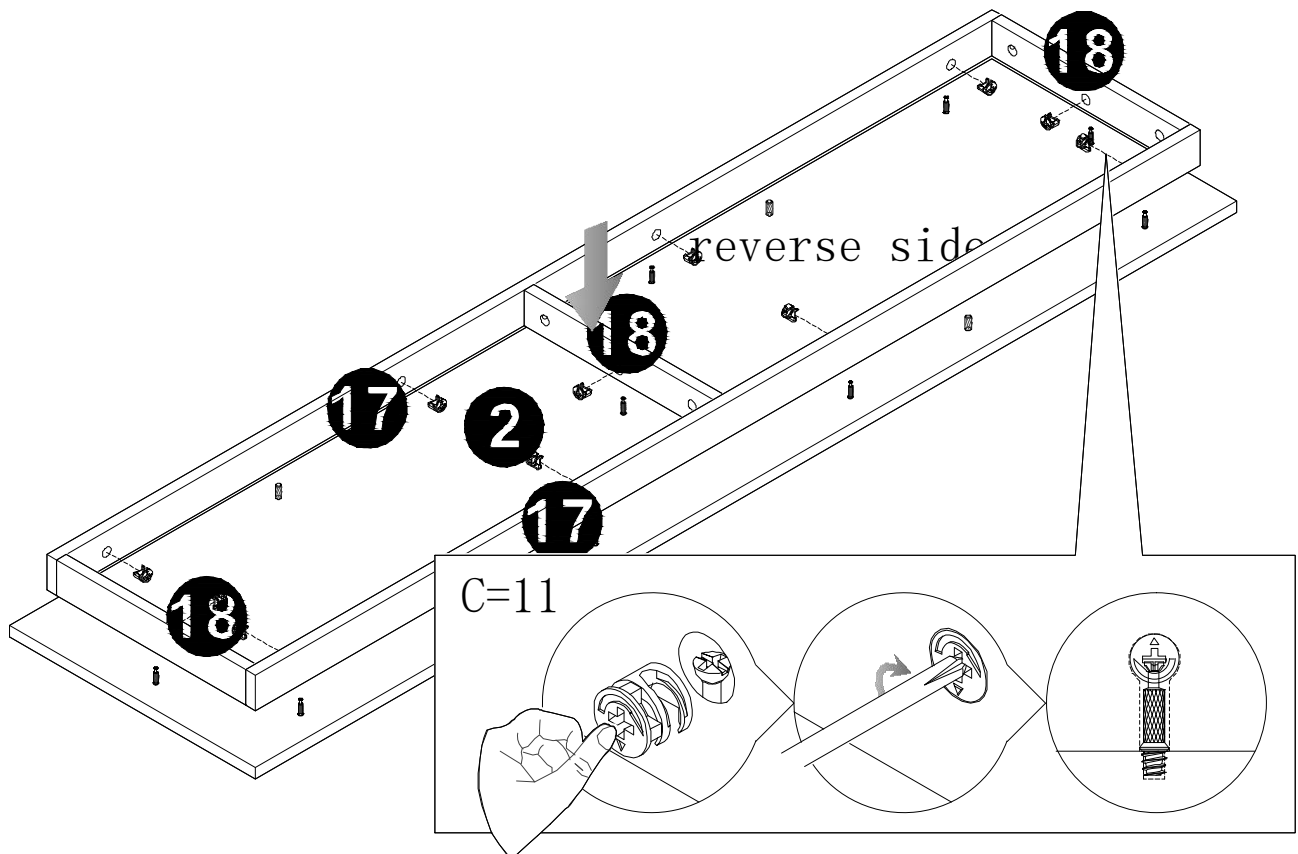


STEP5

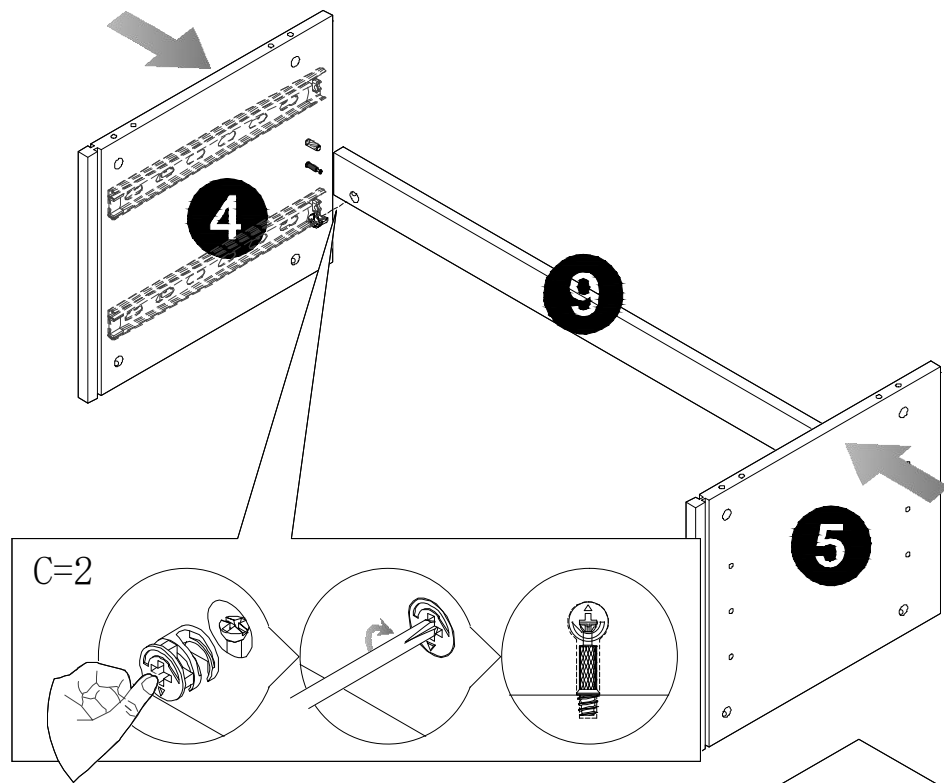


STEP6

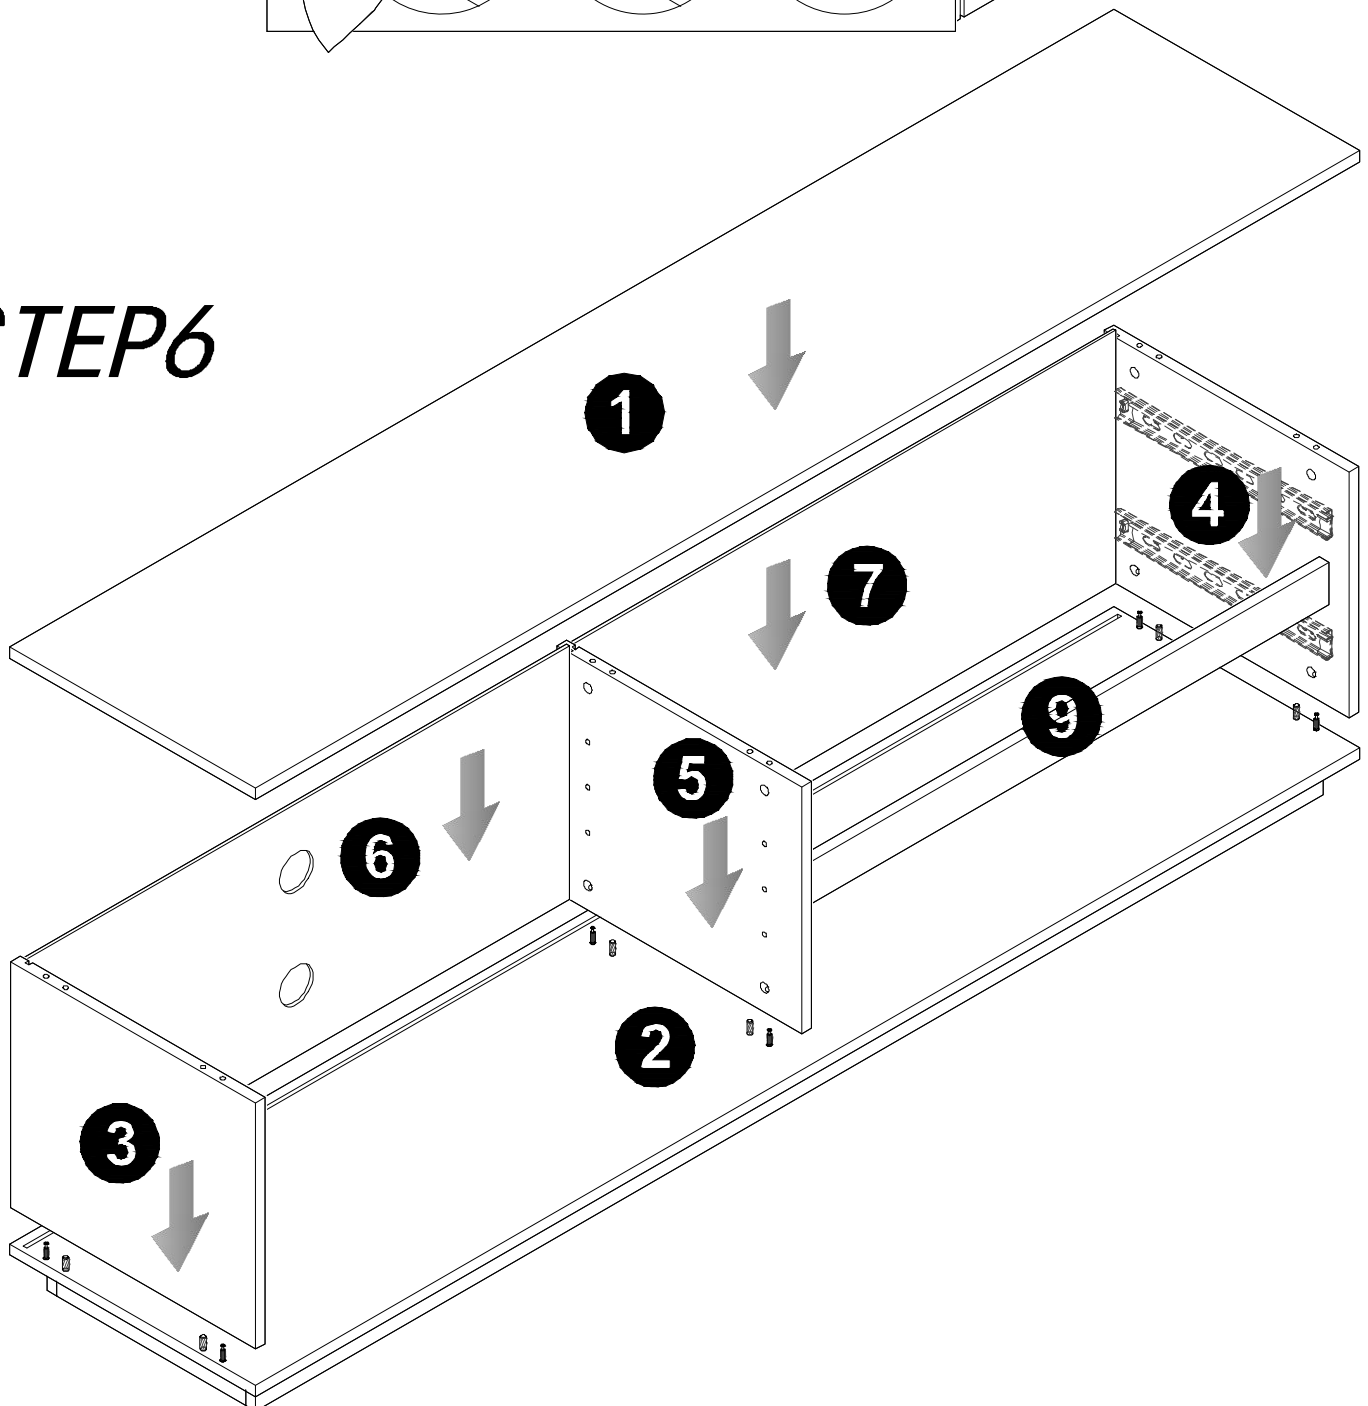


STEP7

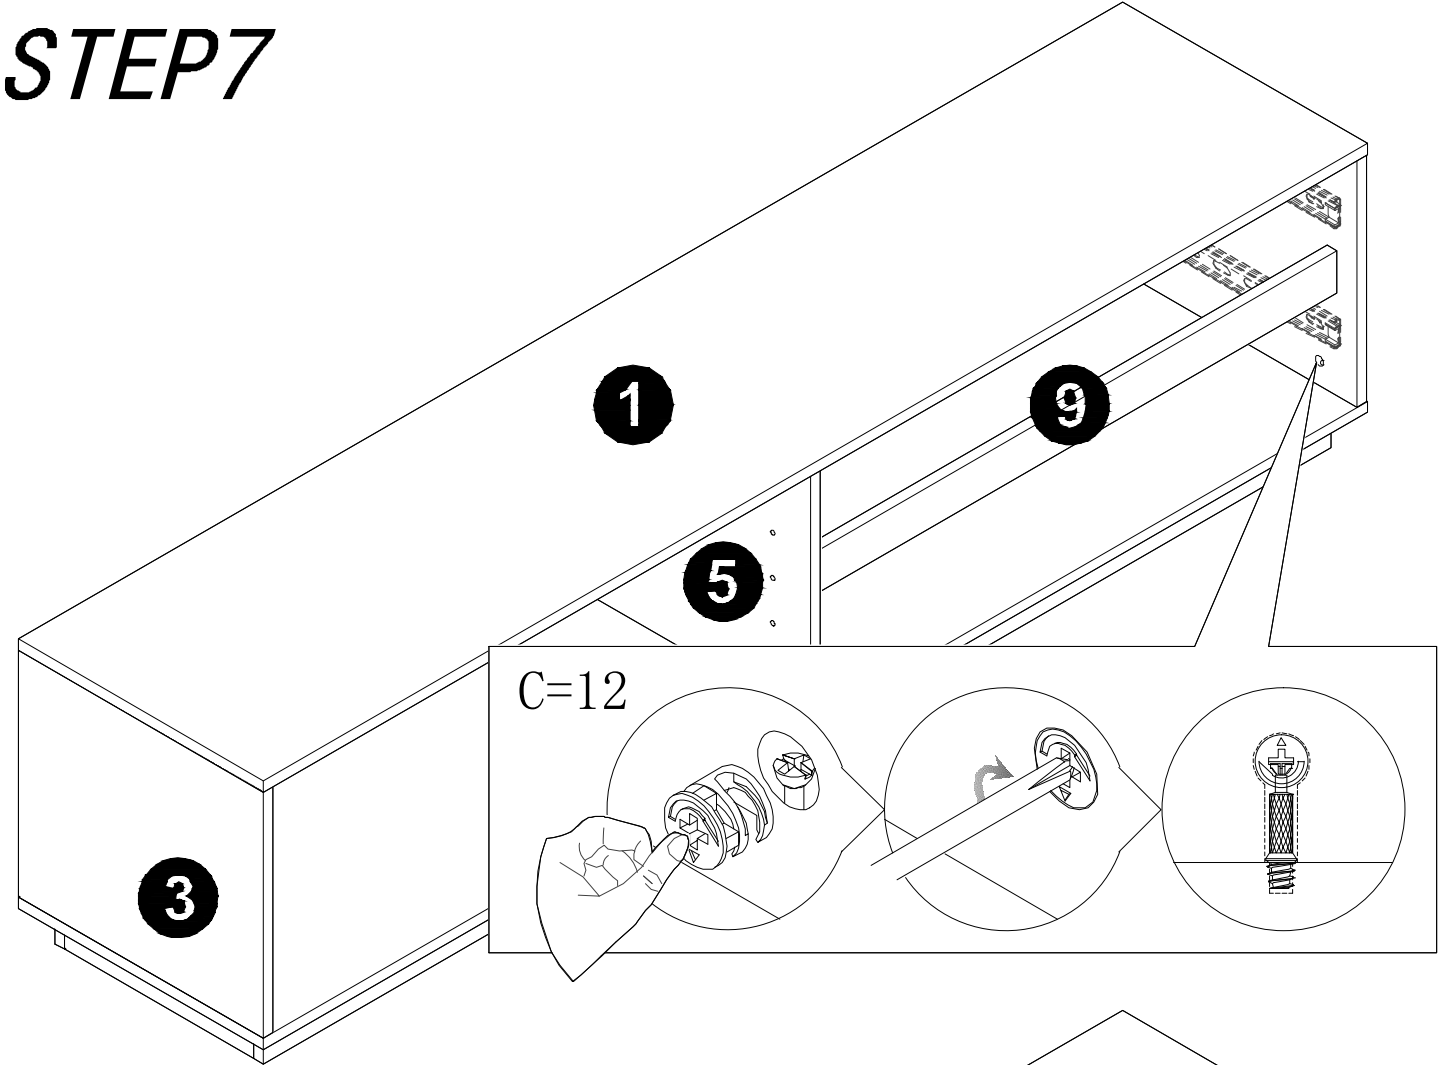


STEP8

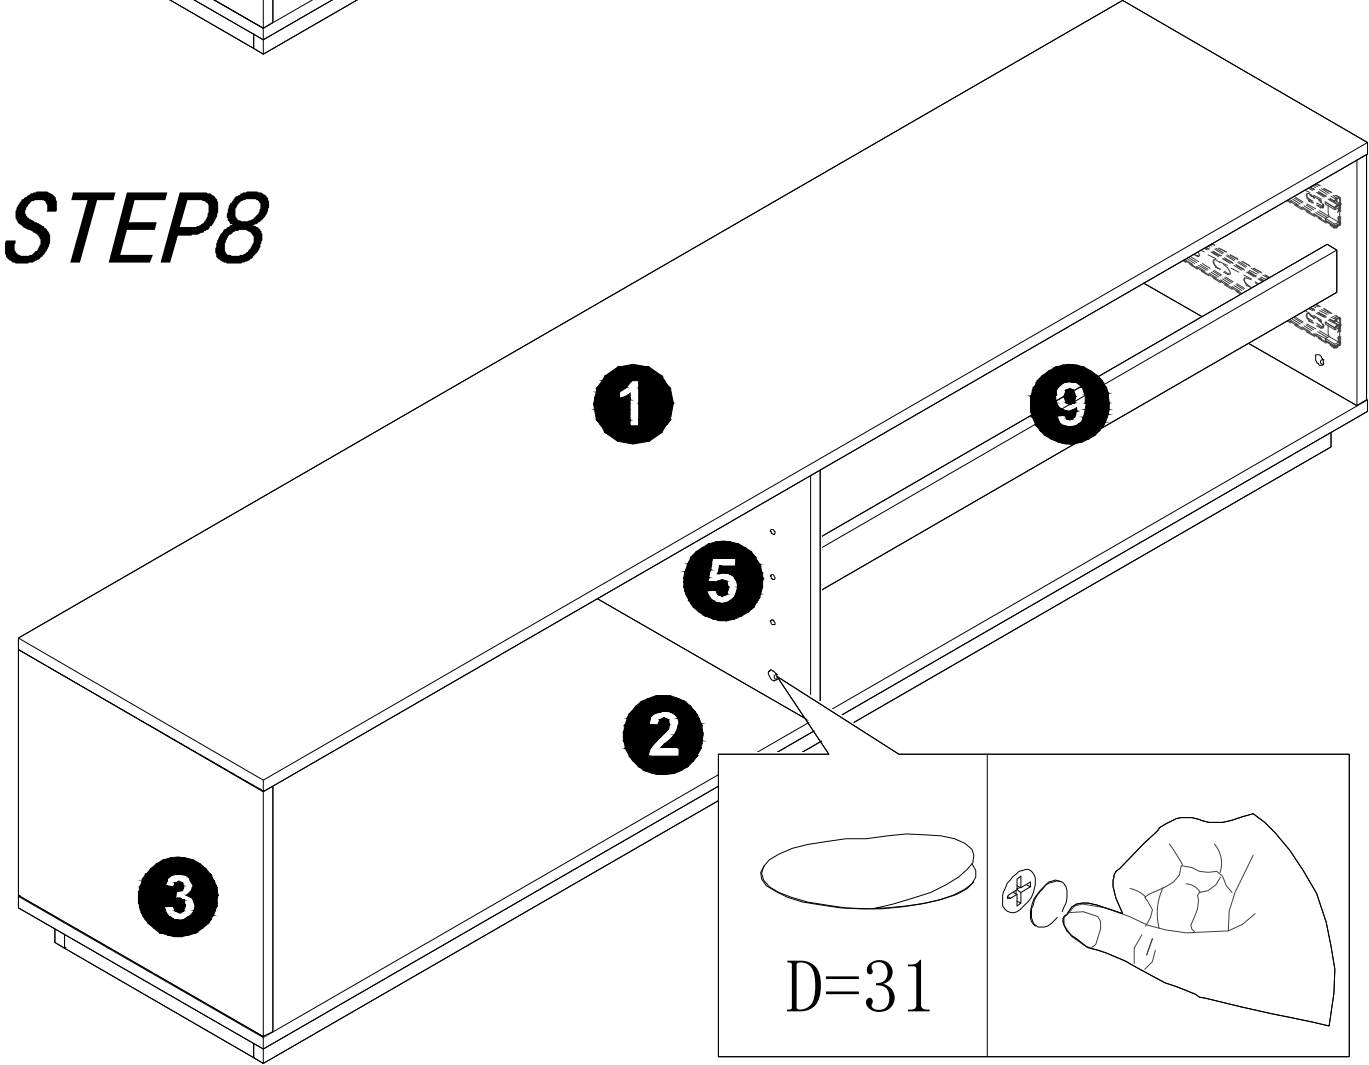

STEP 9

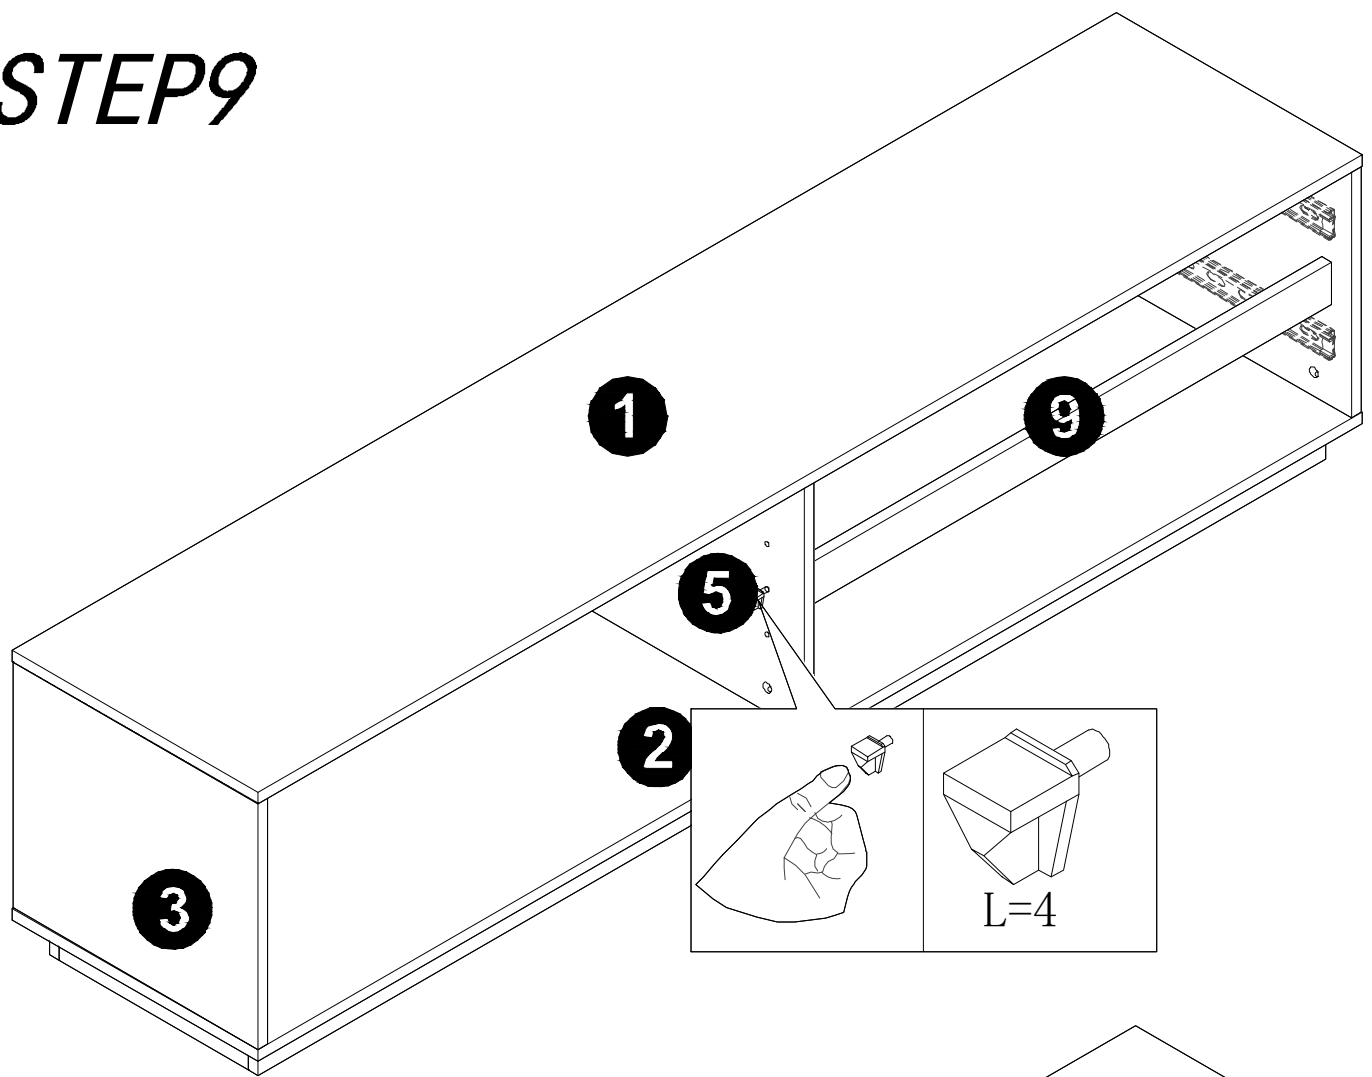


STEP 10

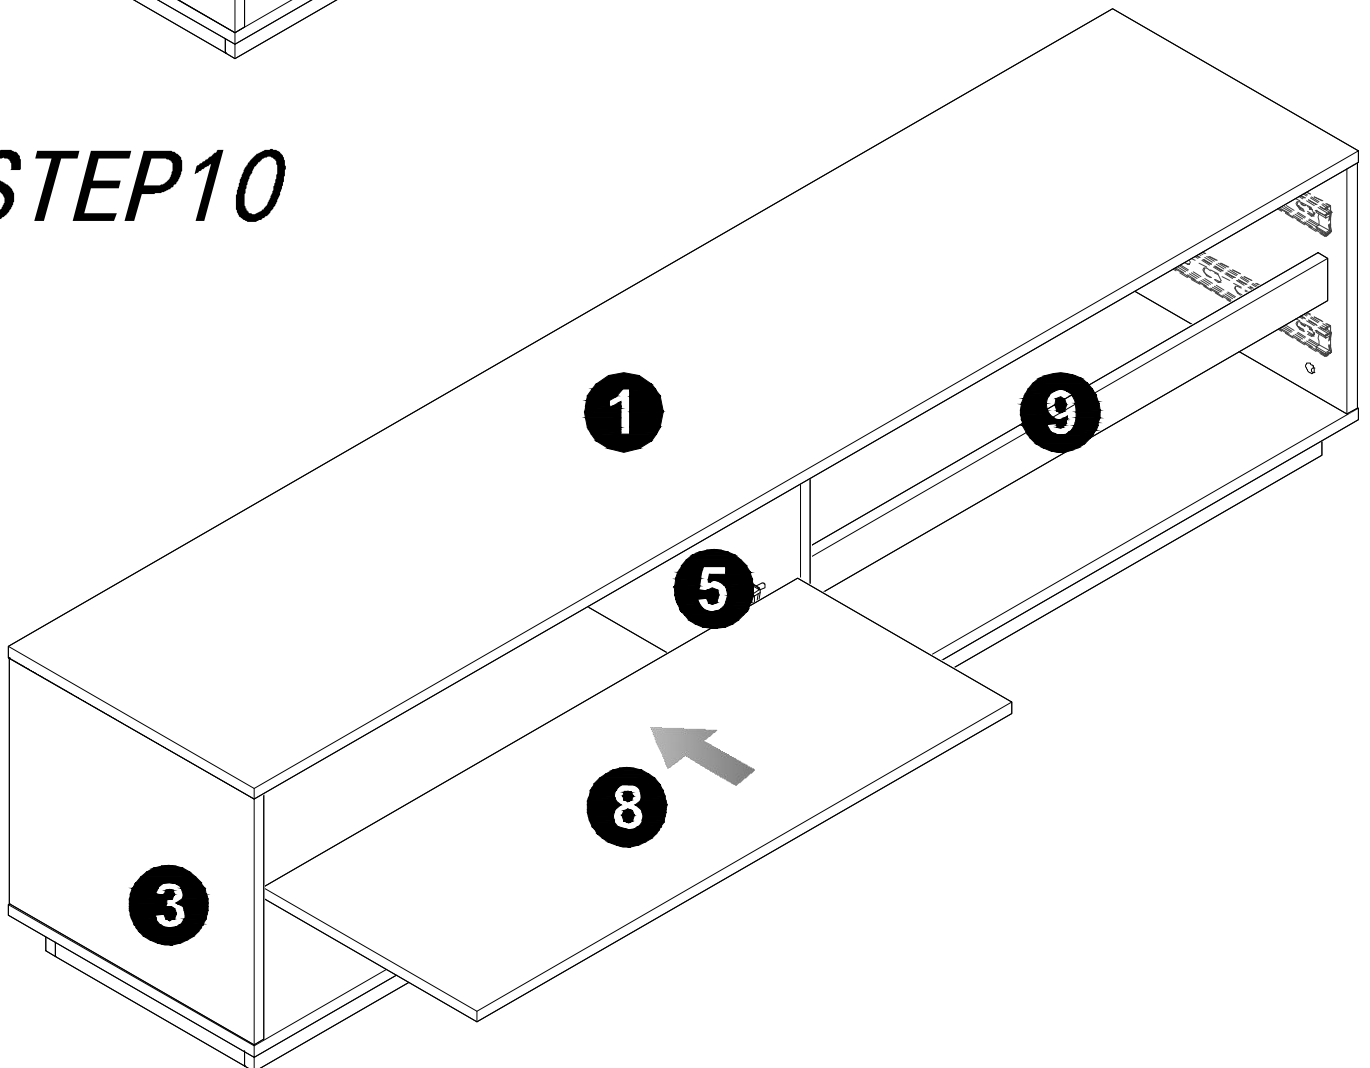


STEP 11


11-1

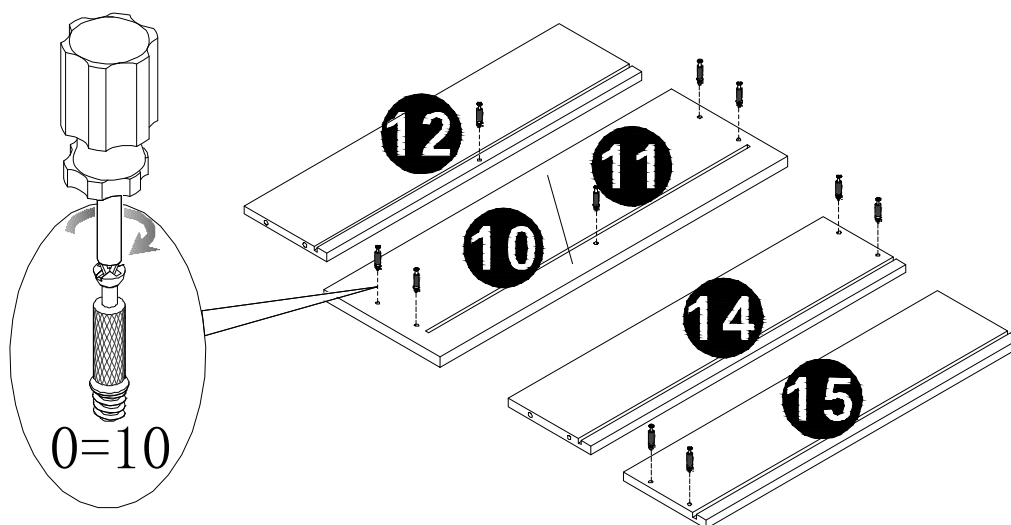

11-2

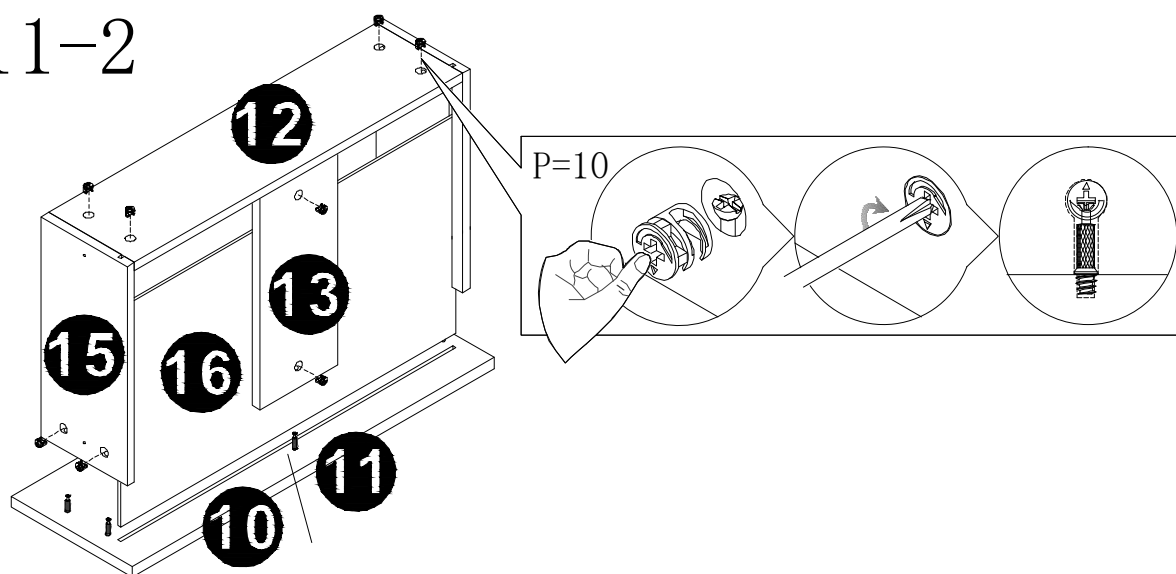


11-3

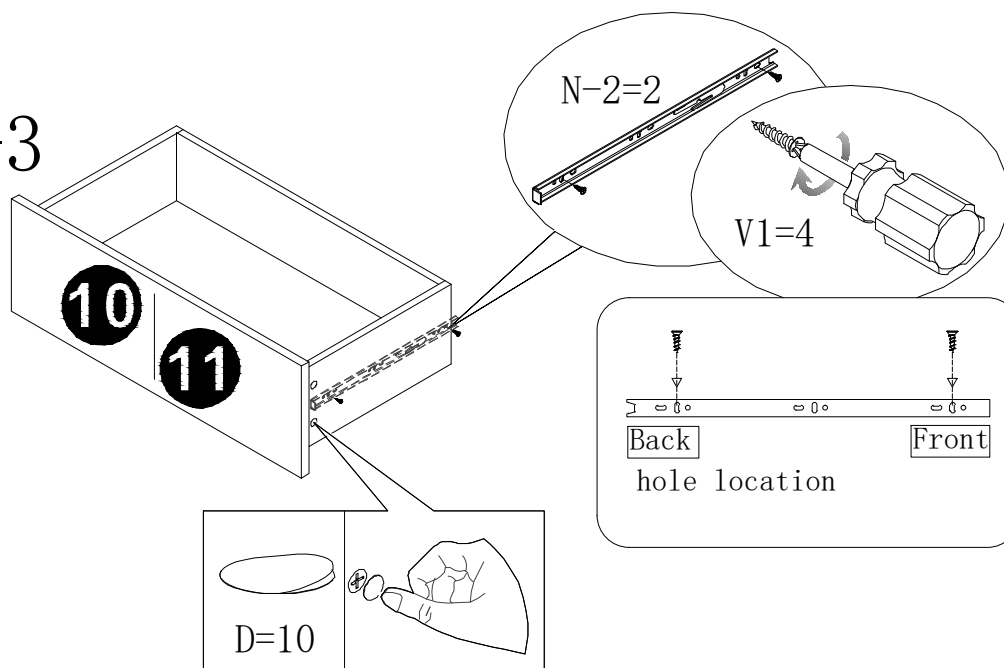


X2


STEP12

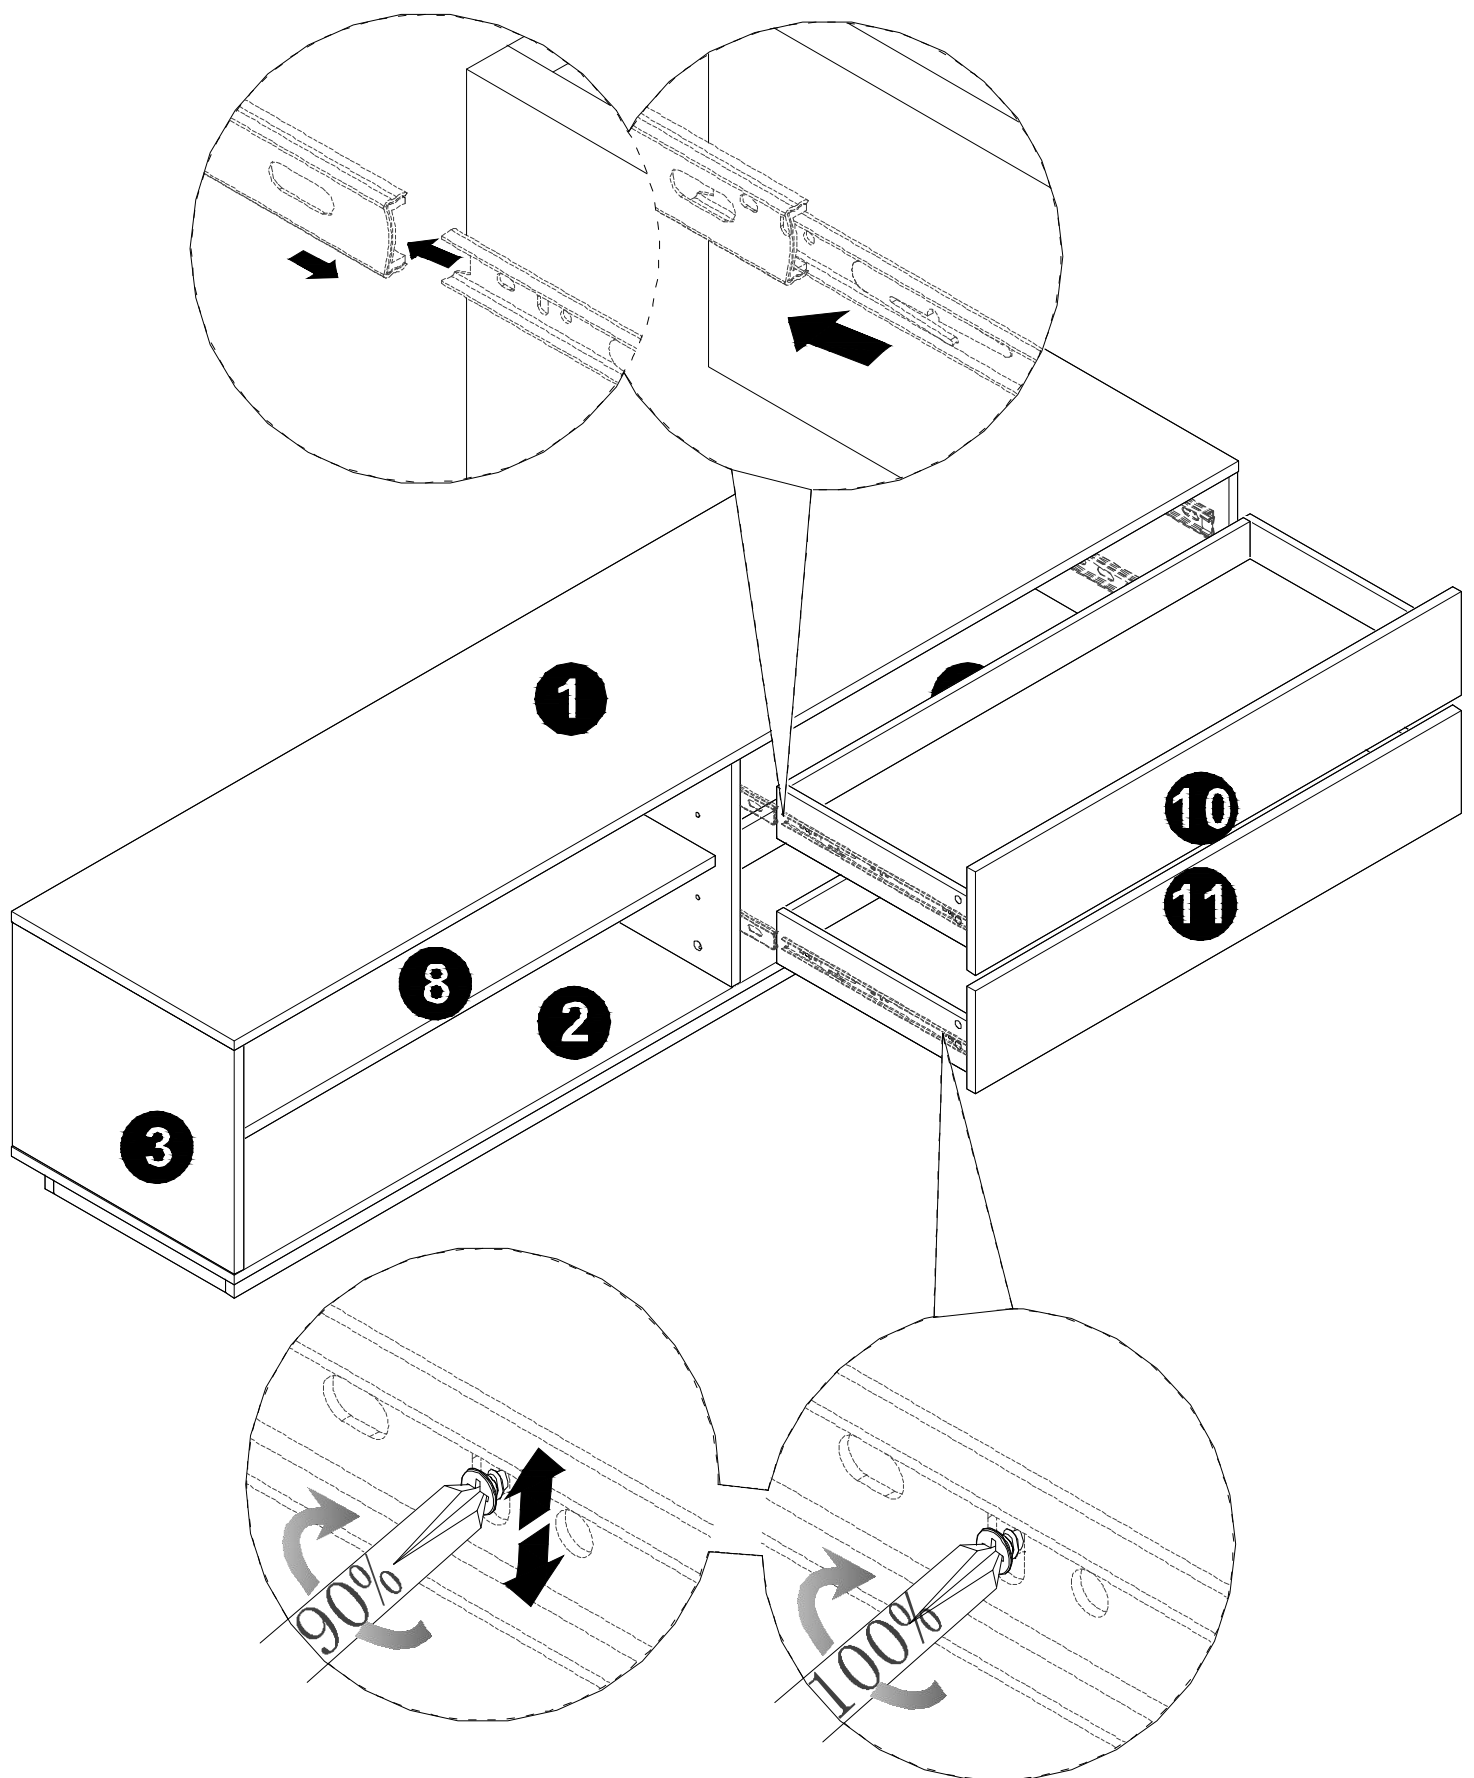


STEP13

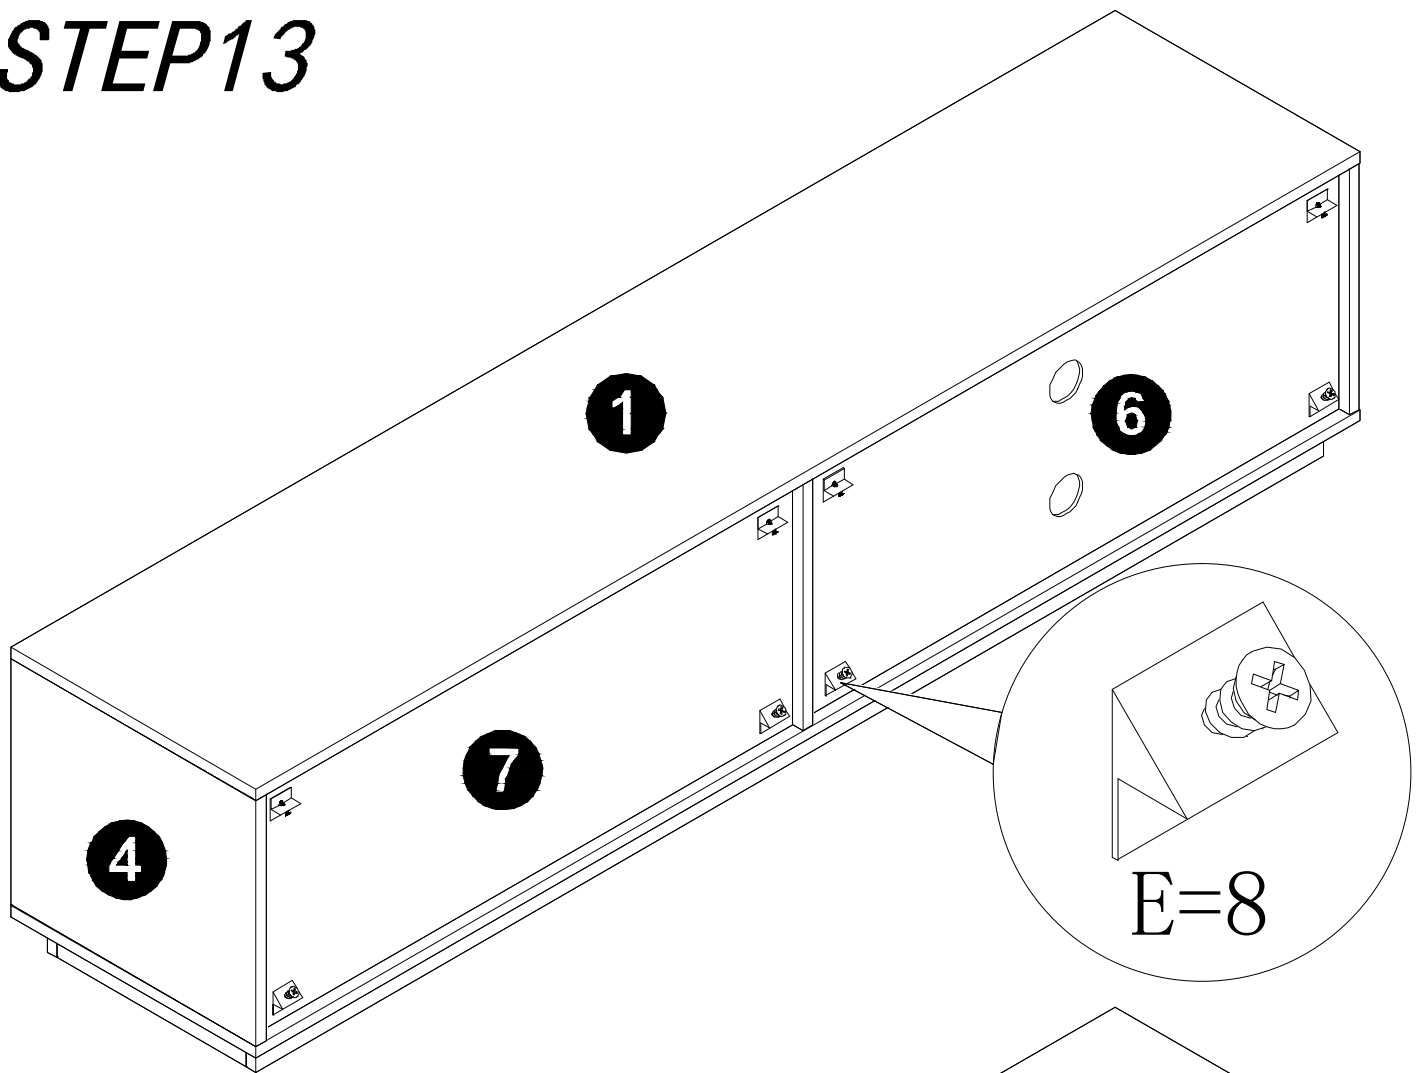

STEP14

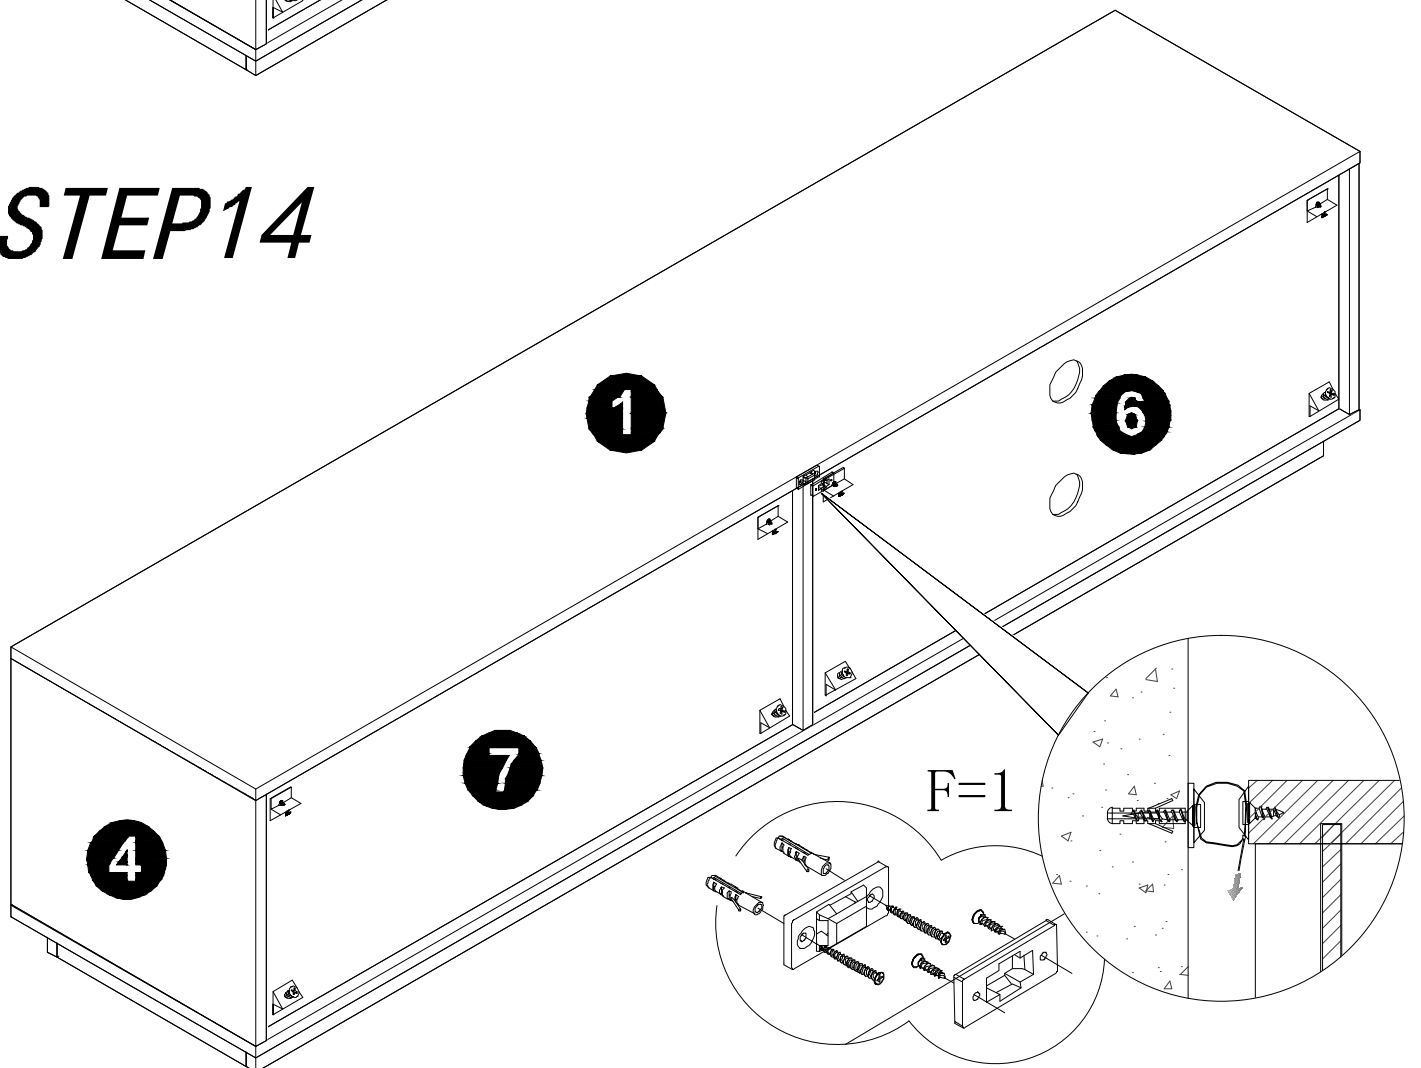


STEP15

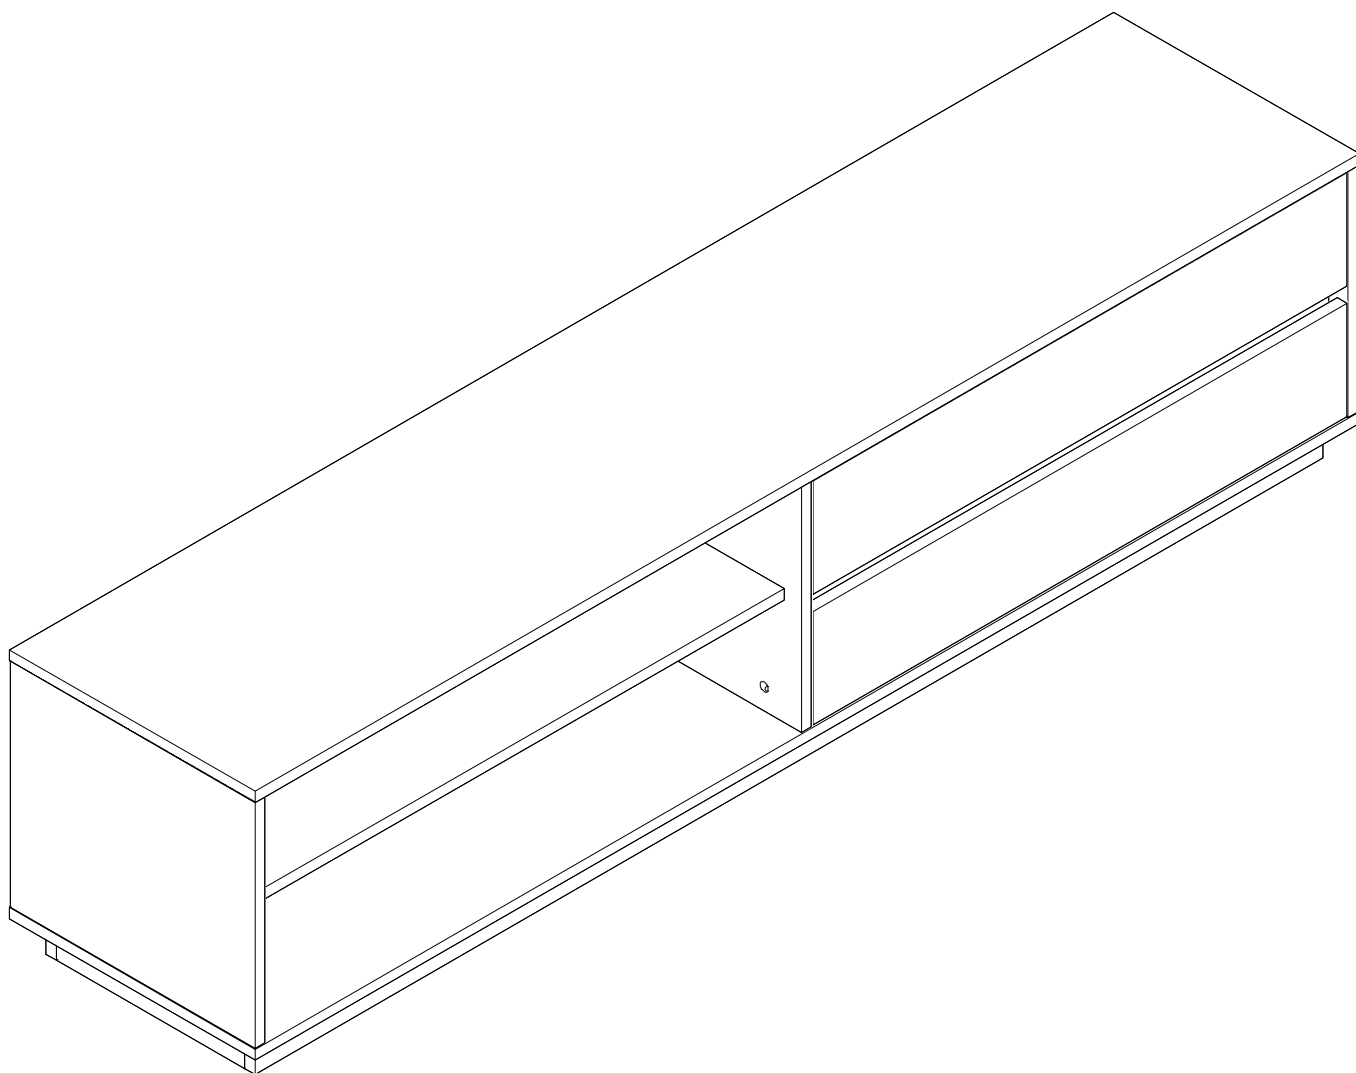

FINISH

萨哈电视柜三胺W180邮购包装

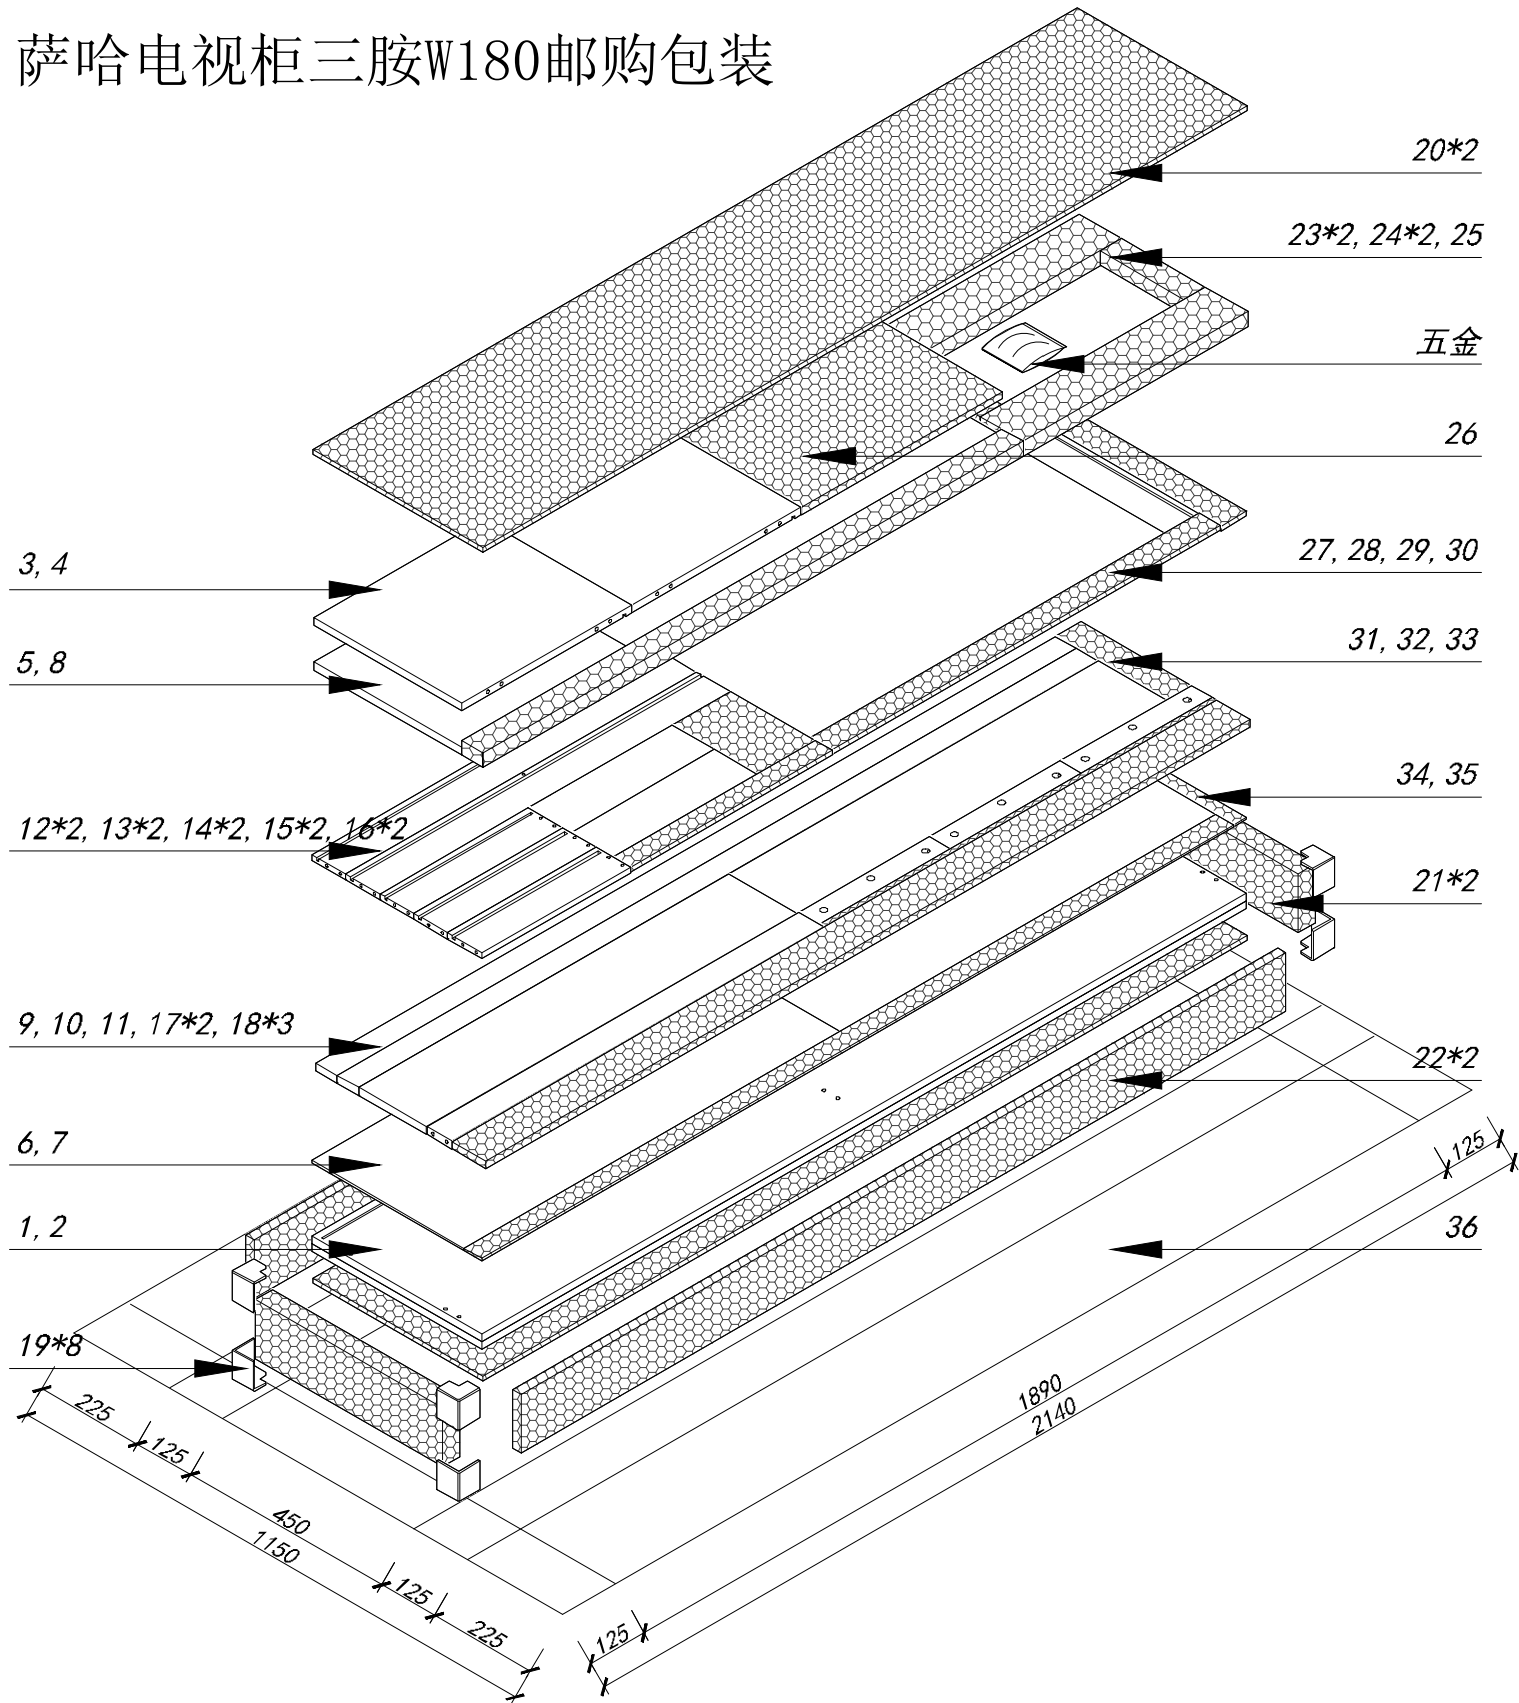

Panel No		Panel Sizes	Quantity
19	护角	50*50*50	8
20	泡沫	1800*400*10	2
21	泡沫	440*115*40	2
22	泡沫	1800*115*20	2
23	泡沫	529*100*30	2
24	泡沫	200*50*30	2
25	泡沫	1270*50*30	1
26	泡沫	473*350*15	1
27	泡沫	400*60*10	1

Panel No		Panel Sizes	Quantity
28	泡沫	915*50*10	1
29	泡沫	475*40*10	1
30	泡沫	200*137*10	1
31	泡沫	924*10*15	1
32	泡沫	260*58*15	1
33	泡沫	1800*80*15	1
34	泡沫	400*30*5	1
35	泡沫	1770*42*5	1
36	纸盒	内径1890*450*125	1