


Assembly Instructions

Nordic Range

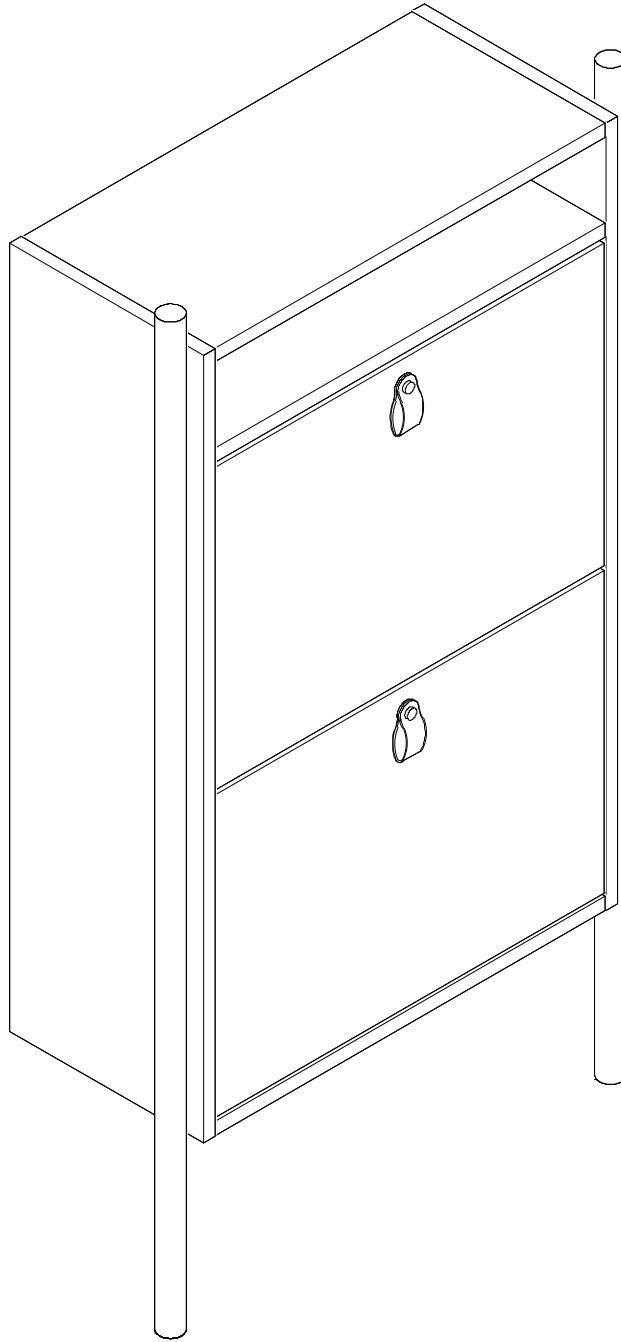

Loft

Product Code










SSC-LOF-NOR-1~9726

Dimensions(W x D x H)

56*26*92cm


Important

Please read through instruction carefully
Before assembly and keep for future reference.

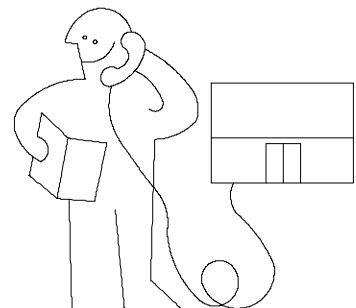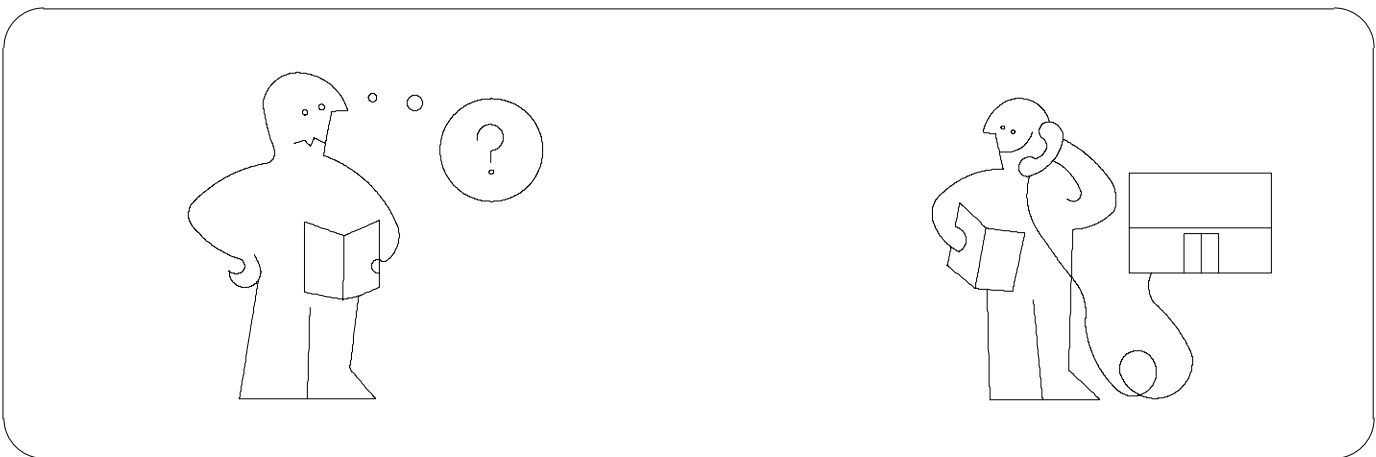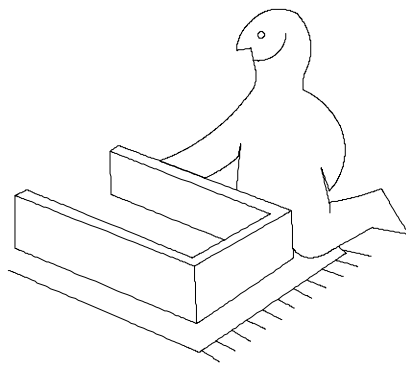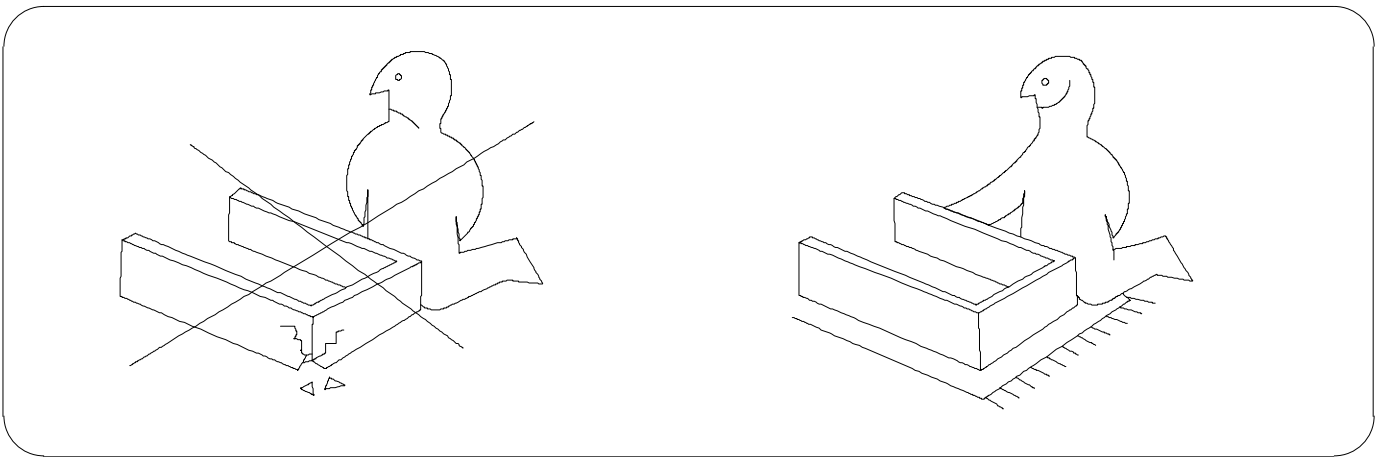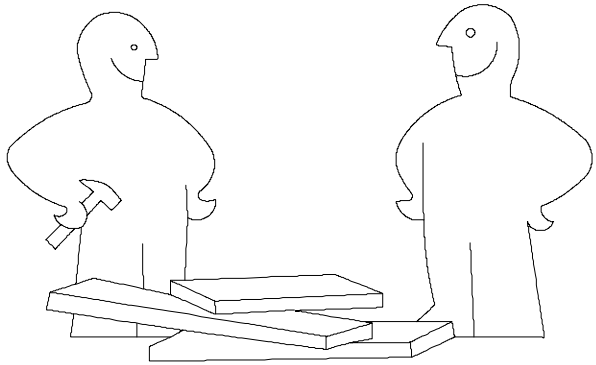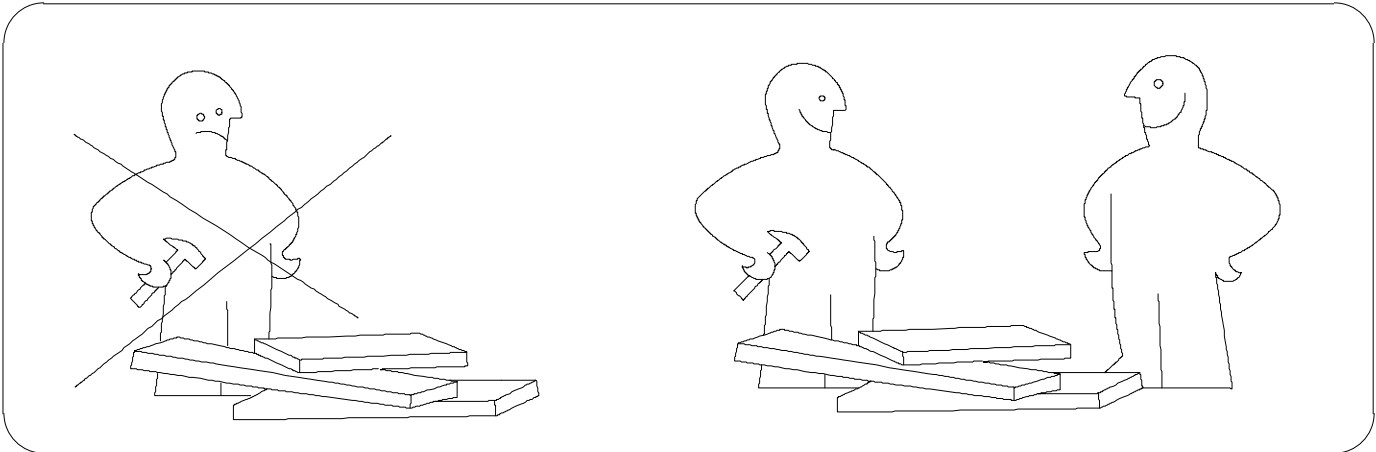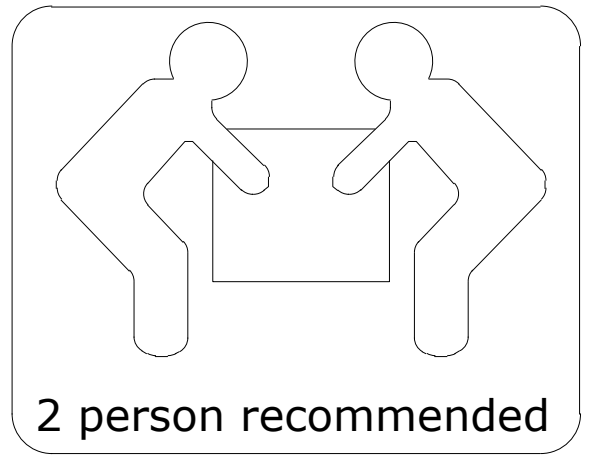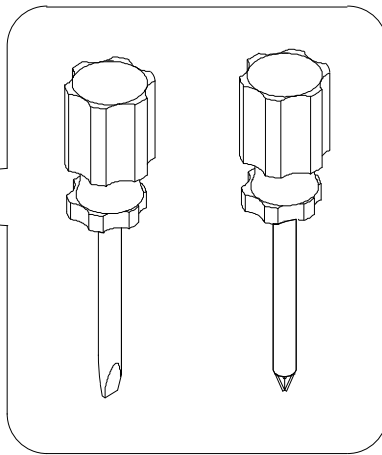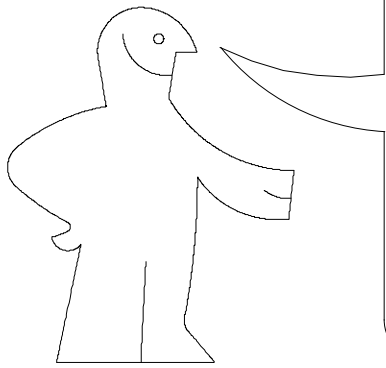


Panel No	Panel Sizes	Quantity
1	524*259*16	1
2	524*259*16	1
3	915*260*16	1
4	915*260*16	1
5	524*259*16	1
6	524*60*16	1


Panel No	Panel Sizes	Quantity
7	524*60*16	1
8	534*110*5	1
9	520*375*16	2
10	510*120*12	2
11	510*120*12	2
12	510*102*12	2

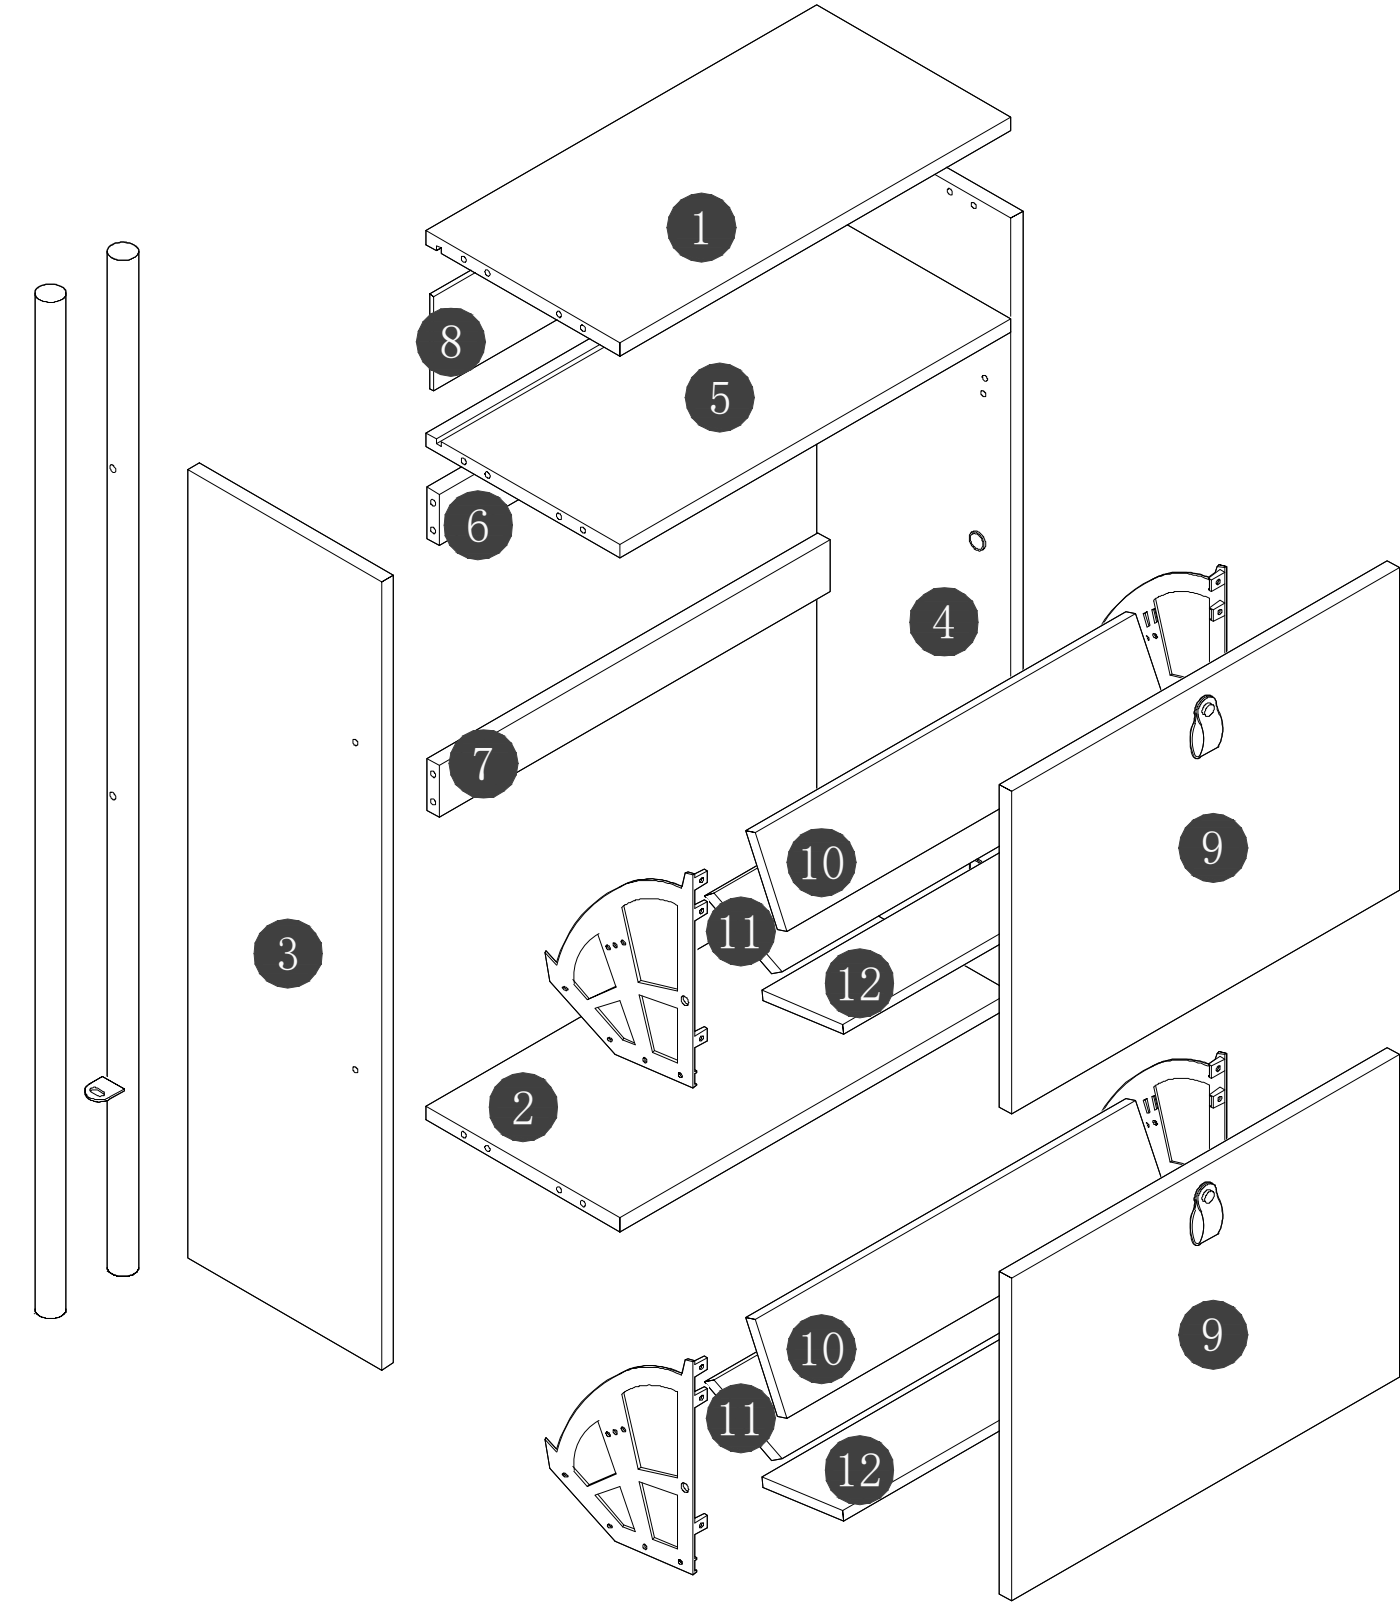


Fittings



A=18




B=18

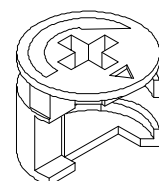


C=18




D=18

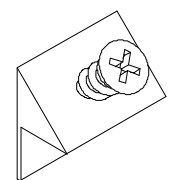


E=4

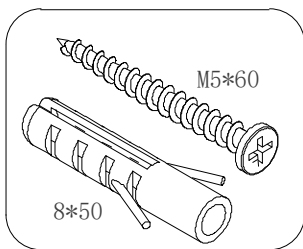

F=2




G1=2




G2=4



H=1

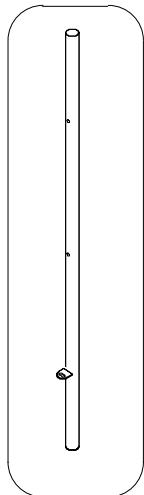


J=2

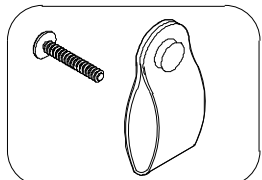

U=2



V1=4

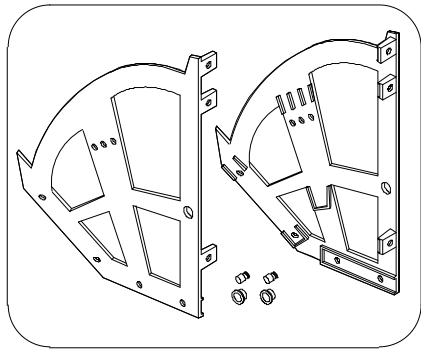

W=2



Z1=2




Z2=2




V2=32


STEP 1

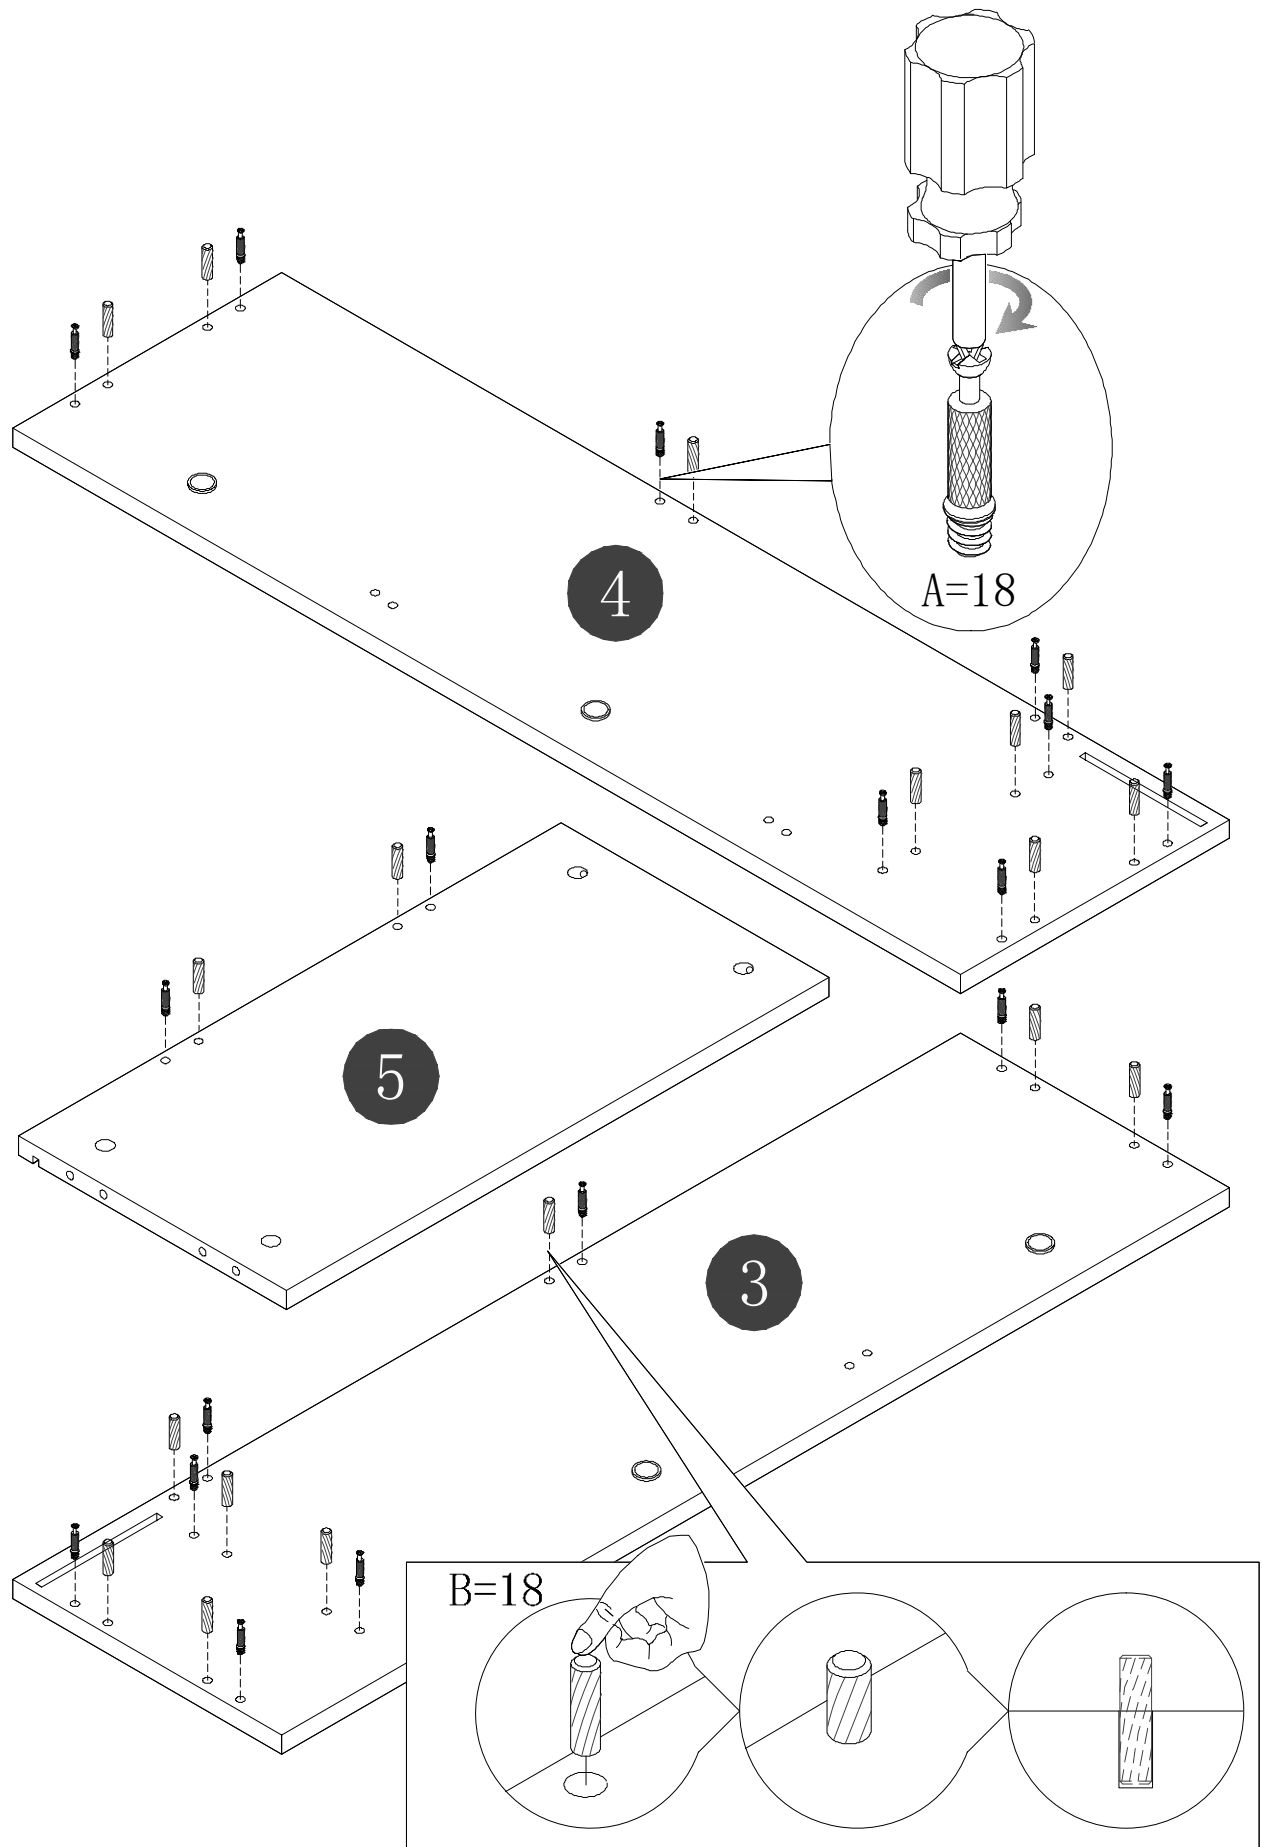


STEP 2

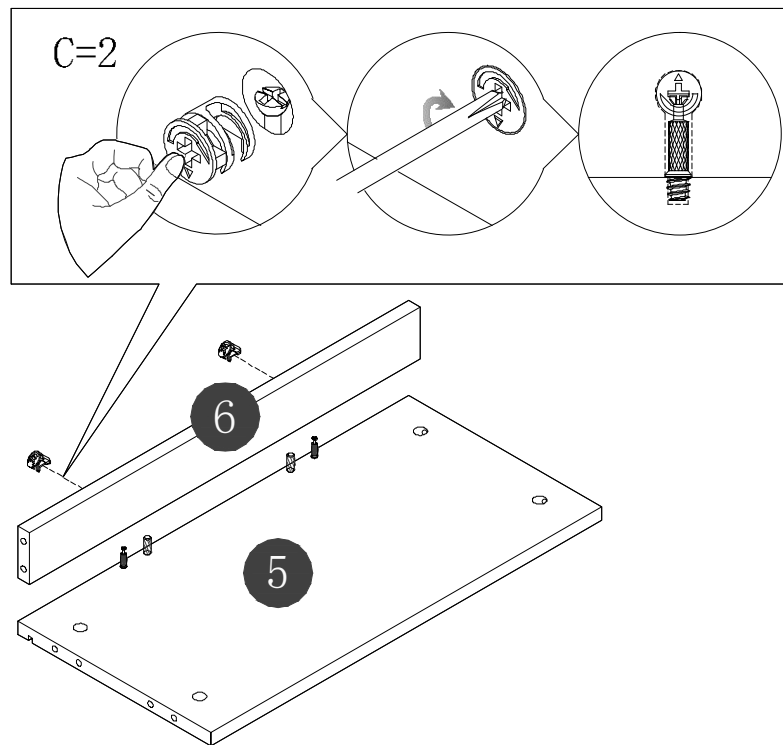


STEP 3

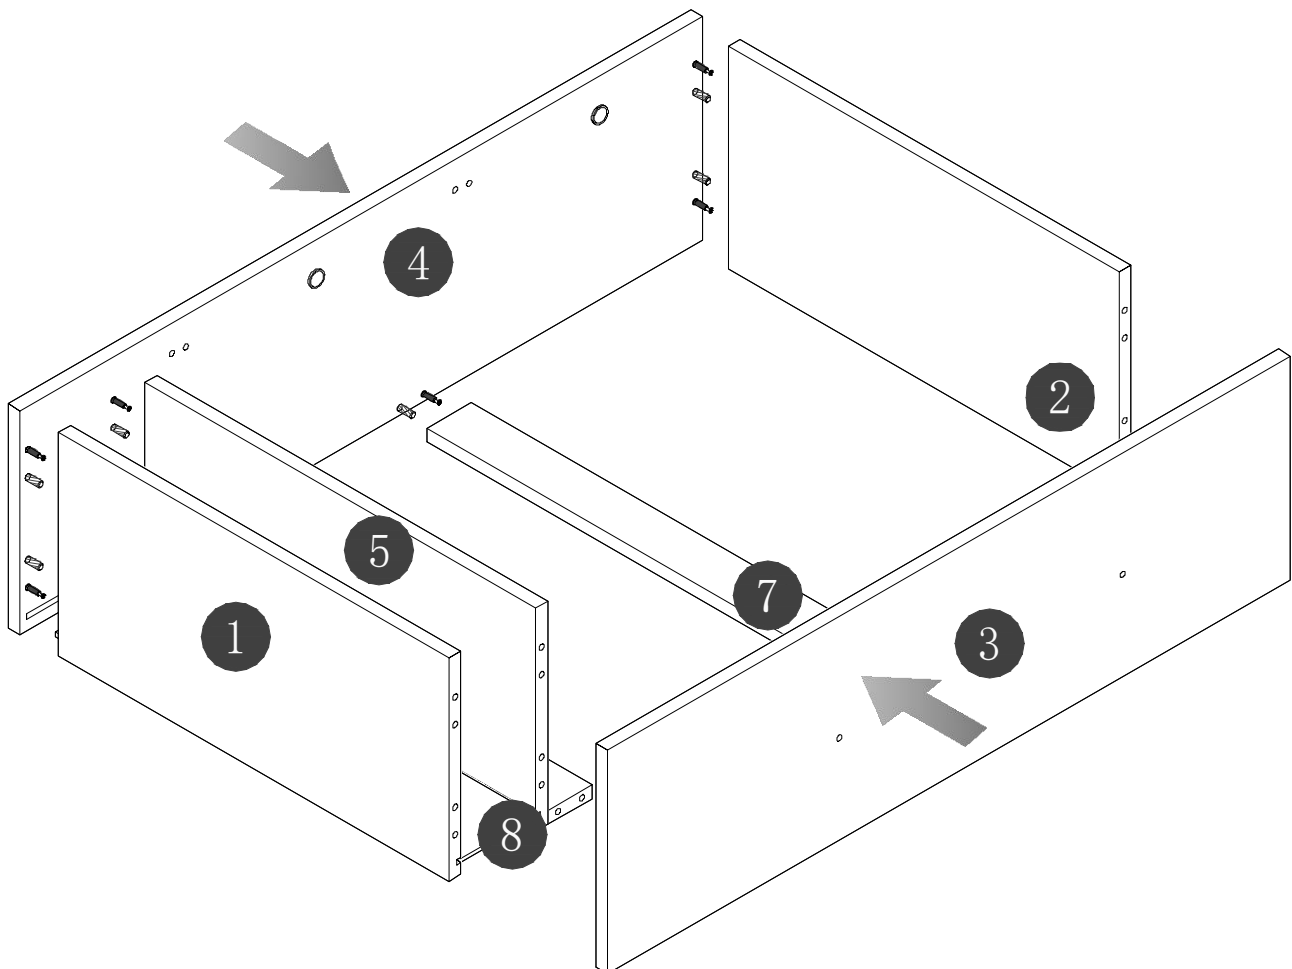


STEP 4

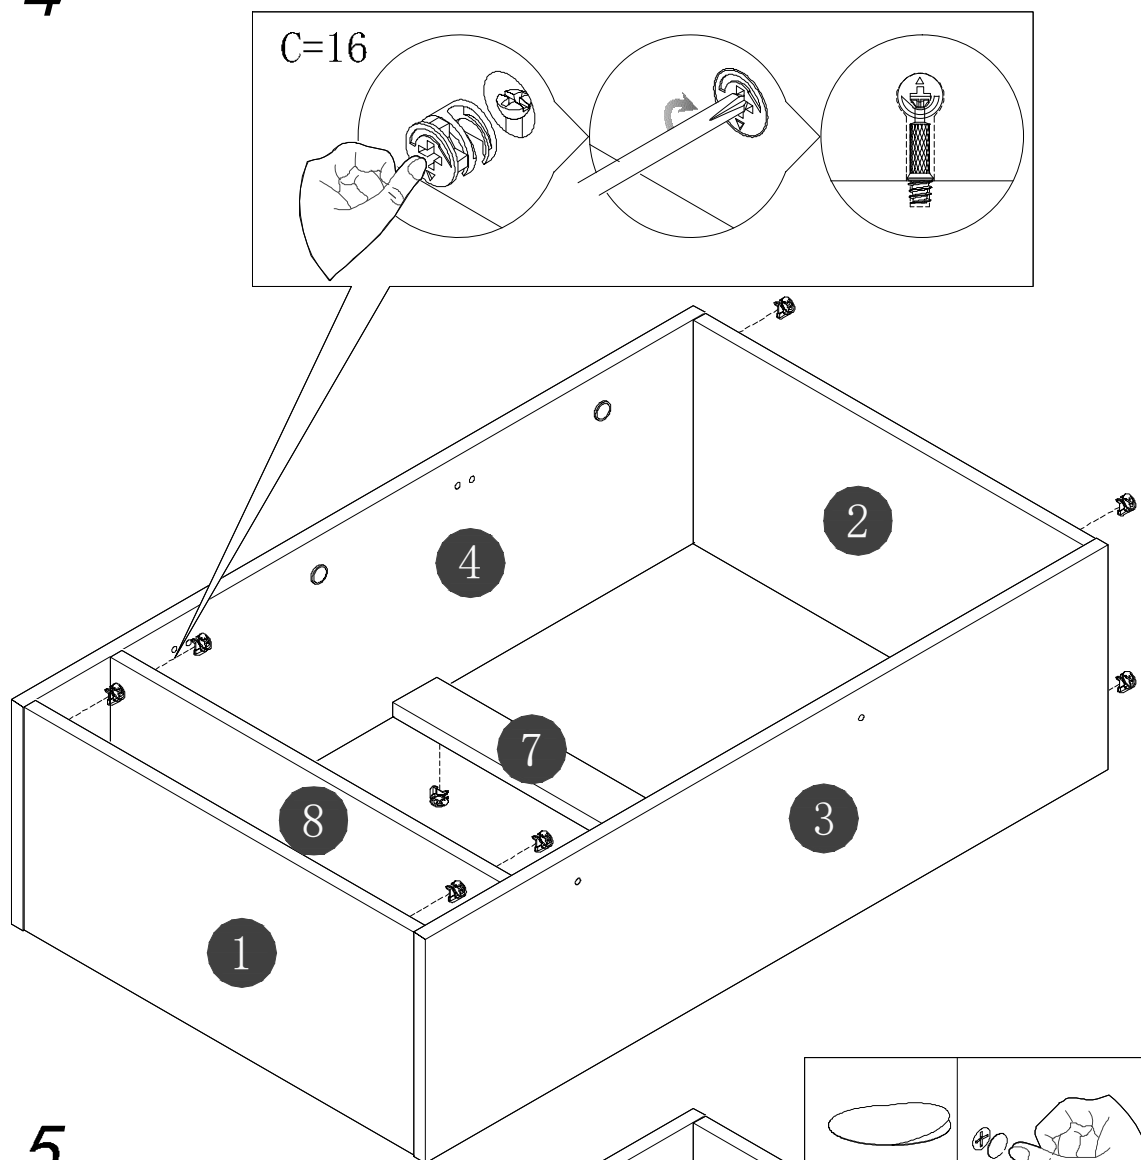


STEP 5

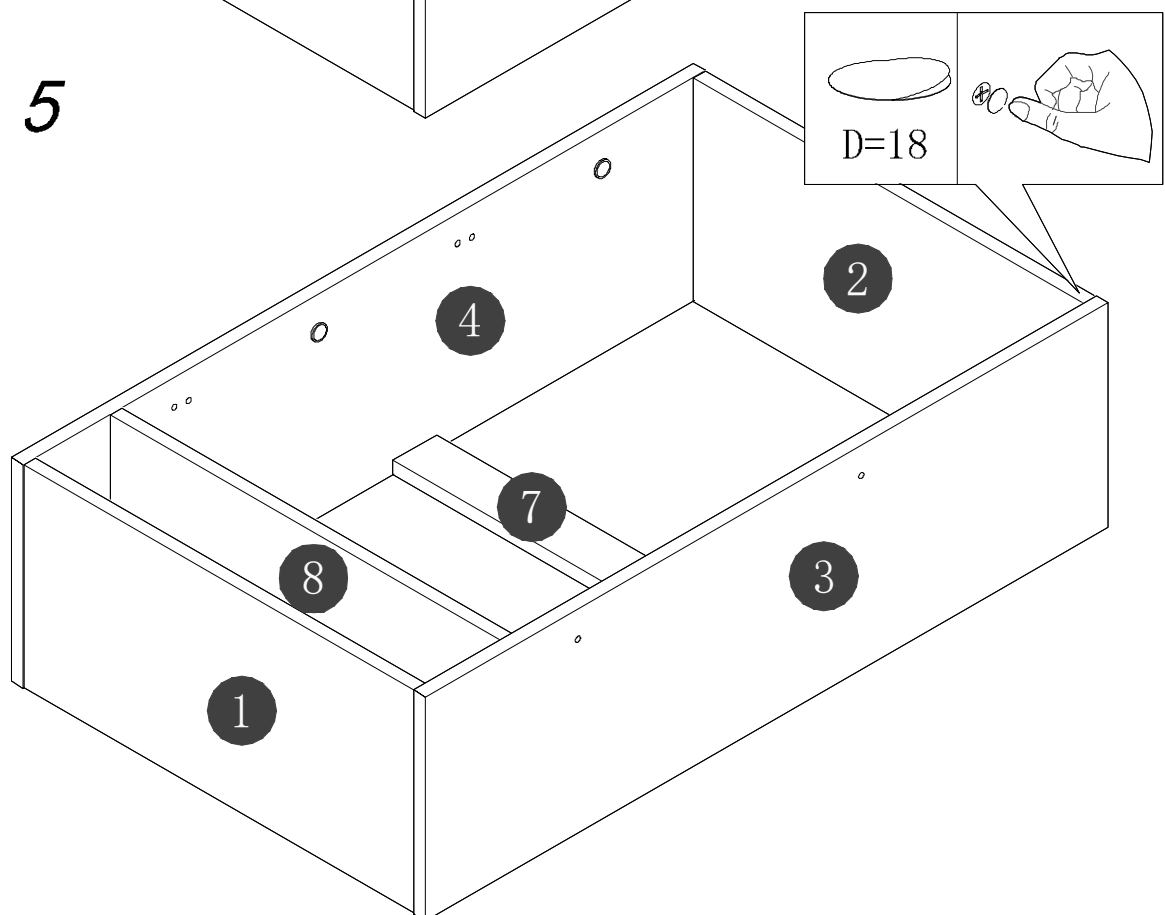


STEP 6

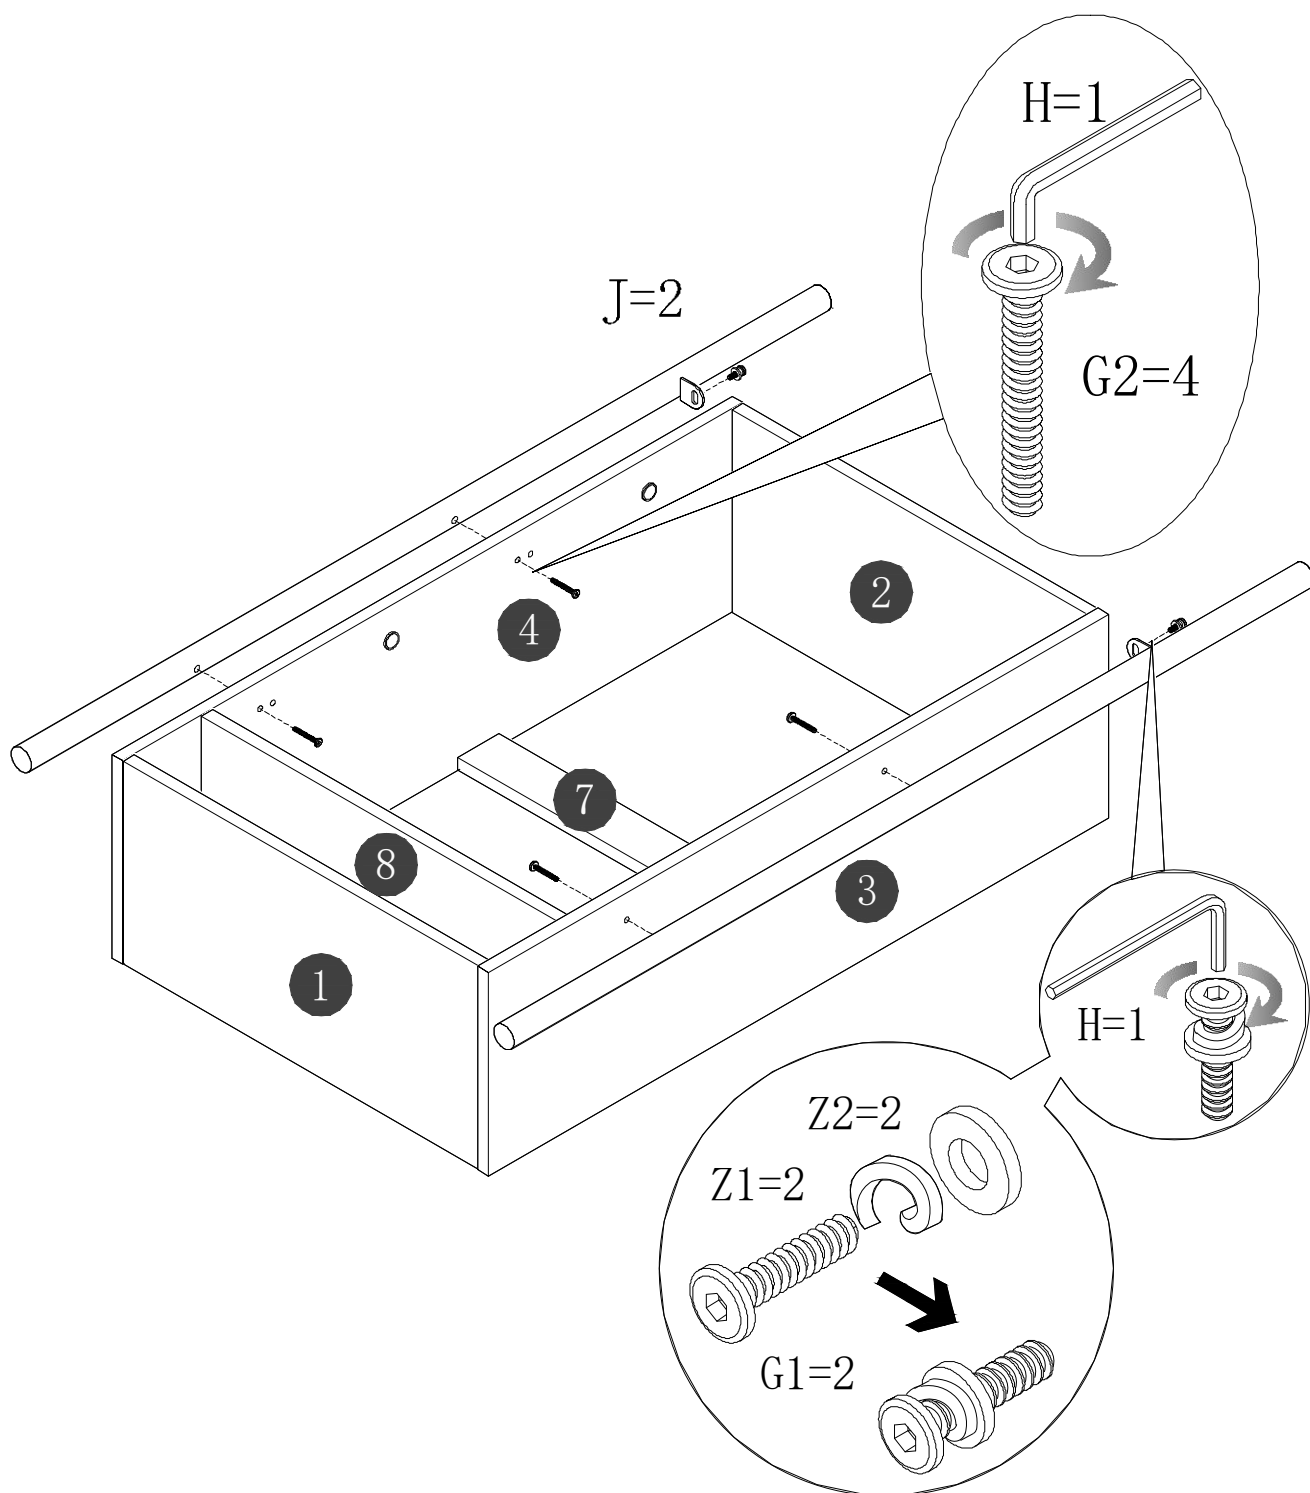


STEP 7

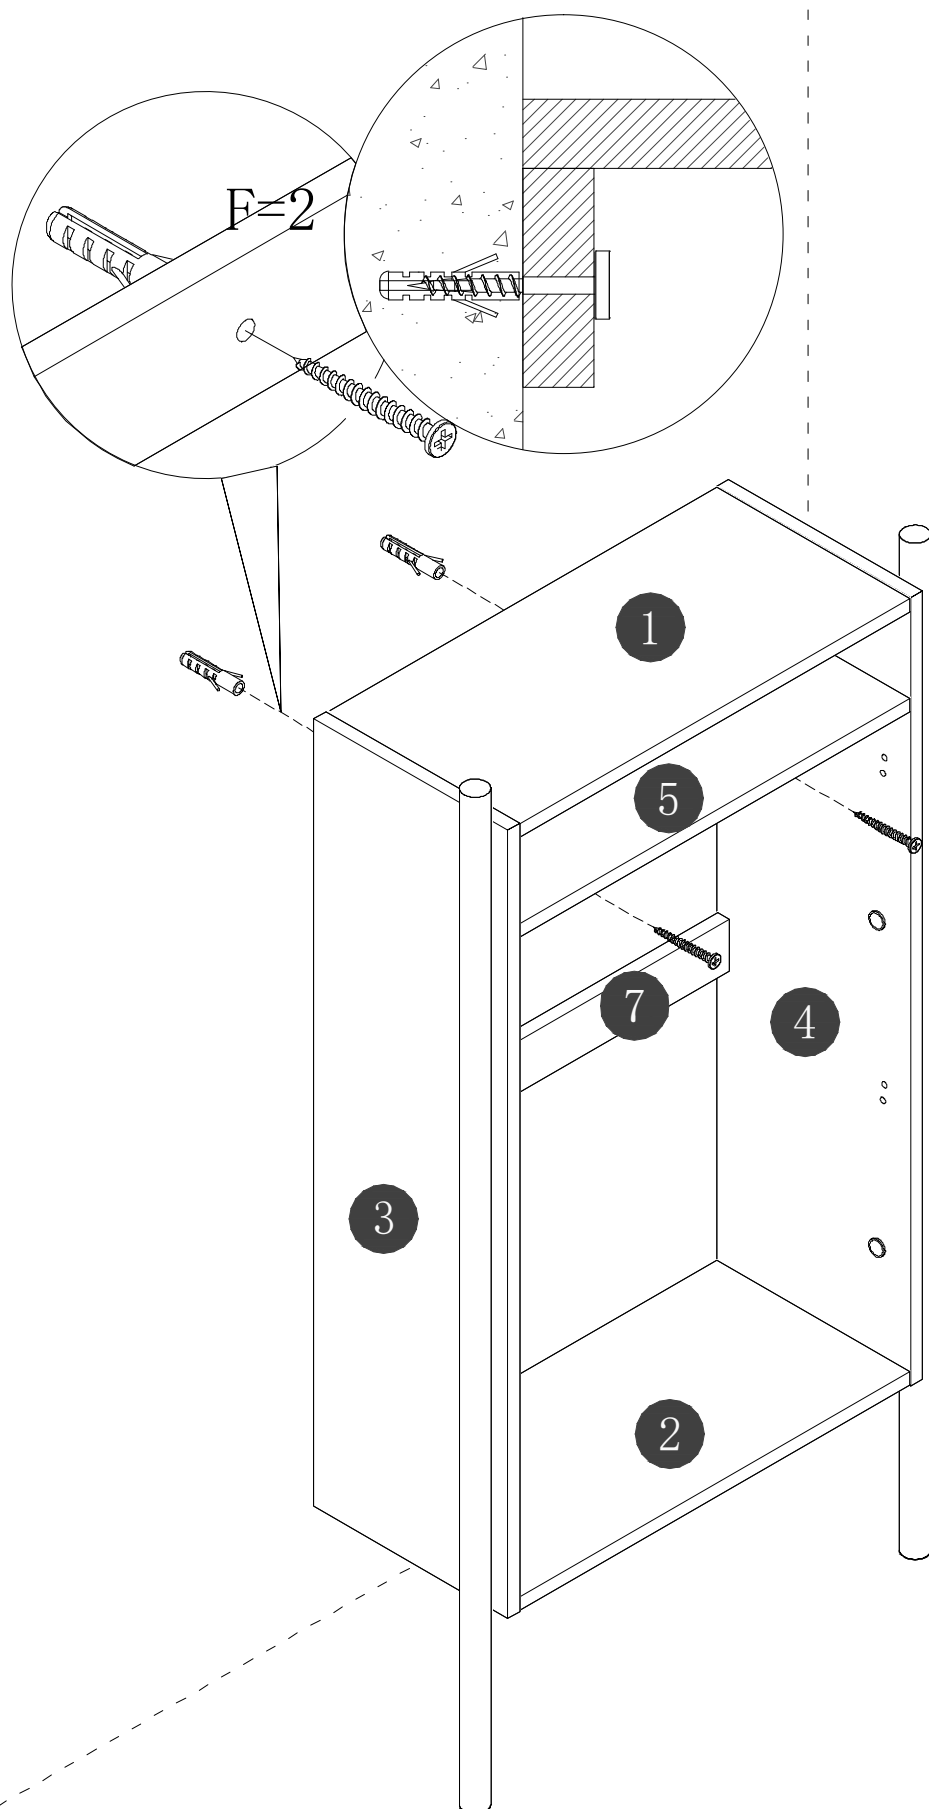


STEP 8

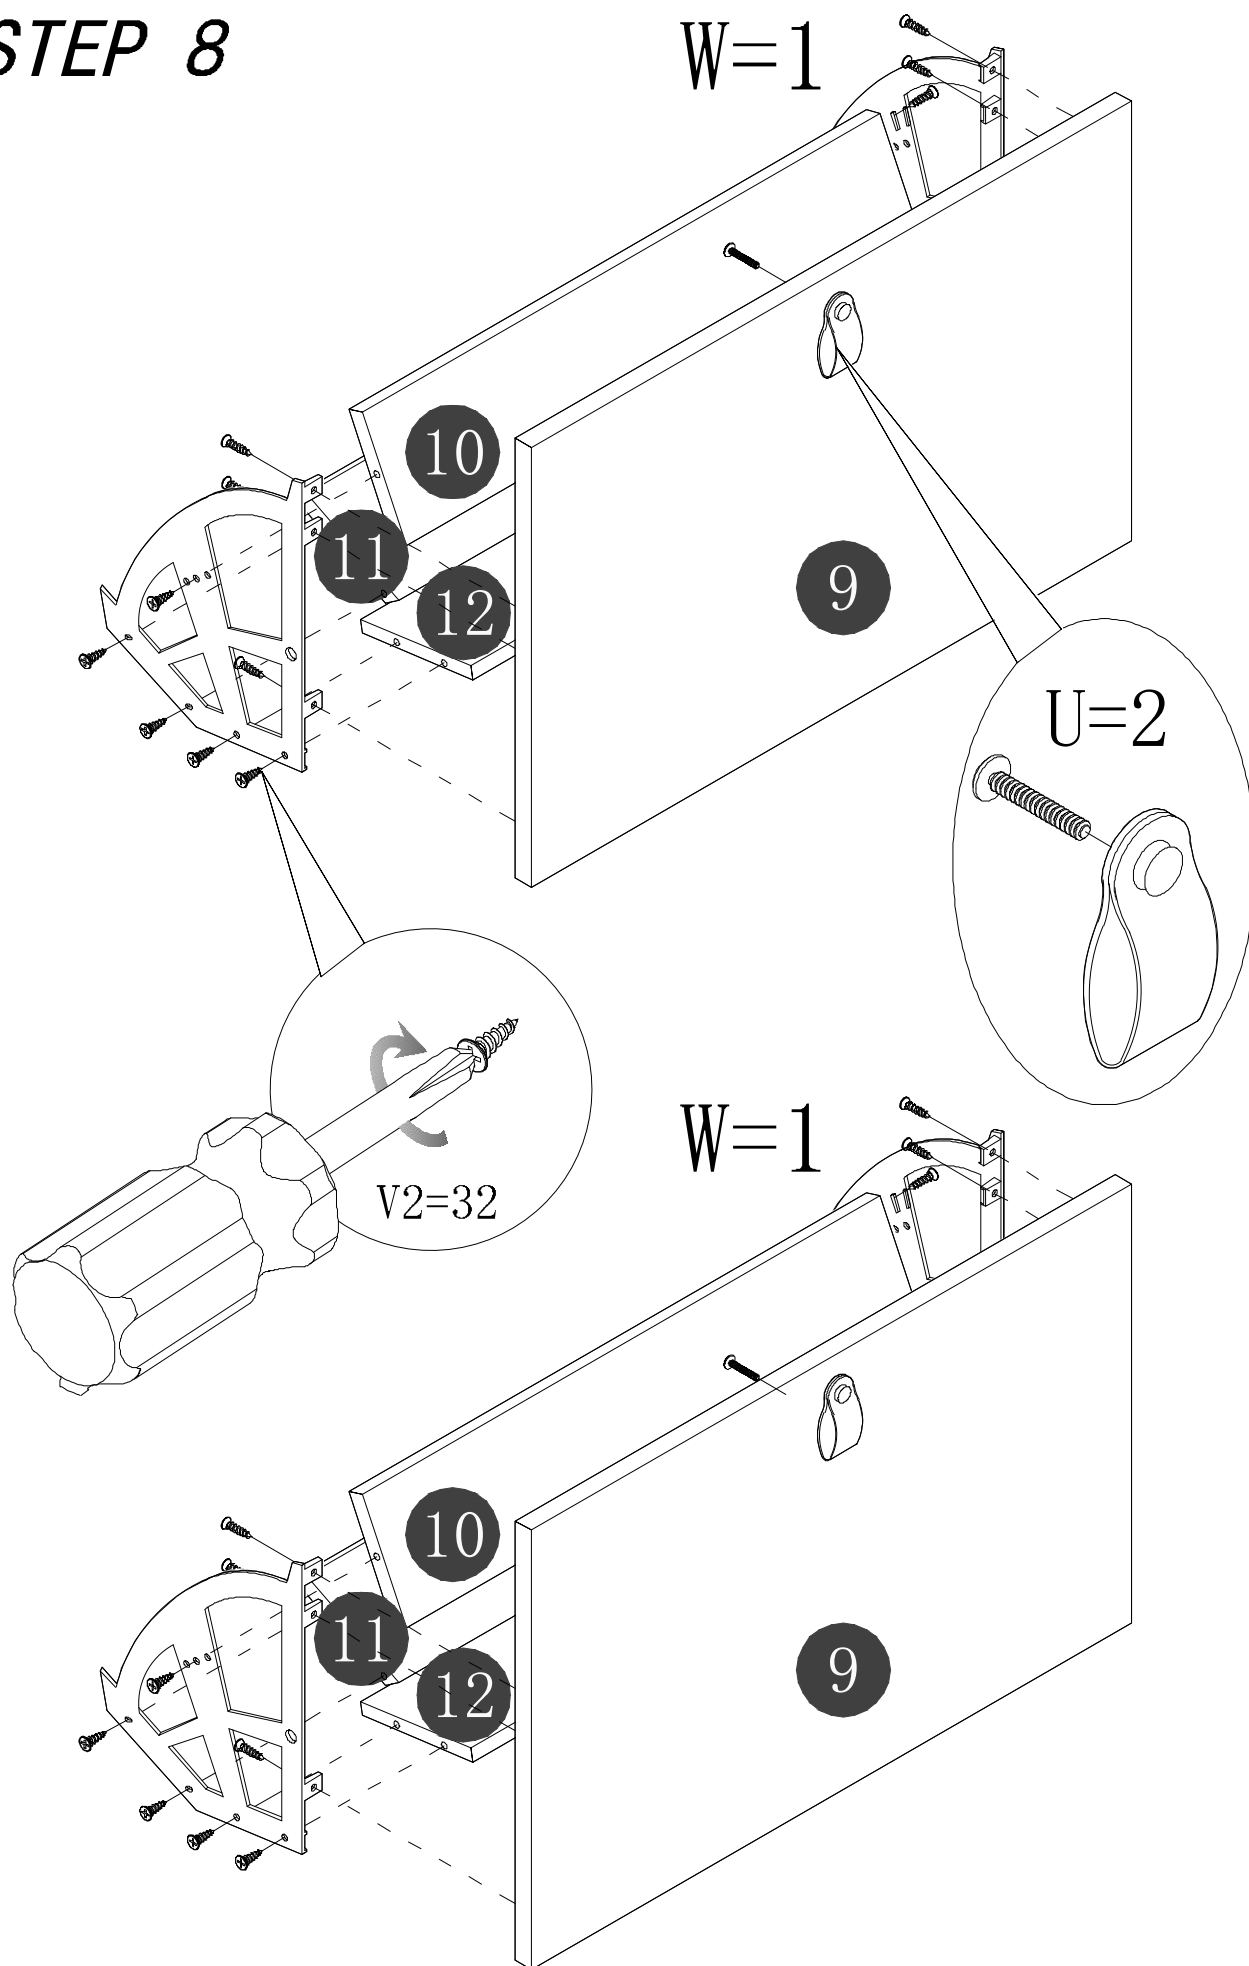

STEP 9

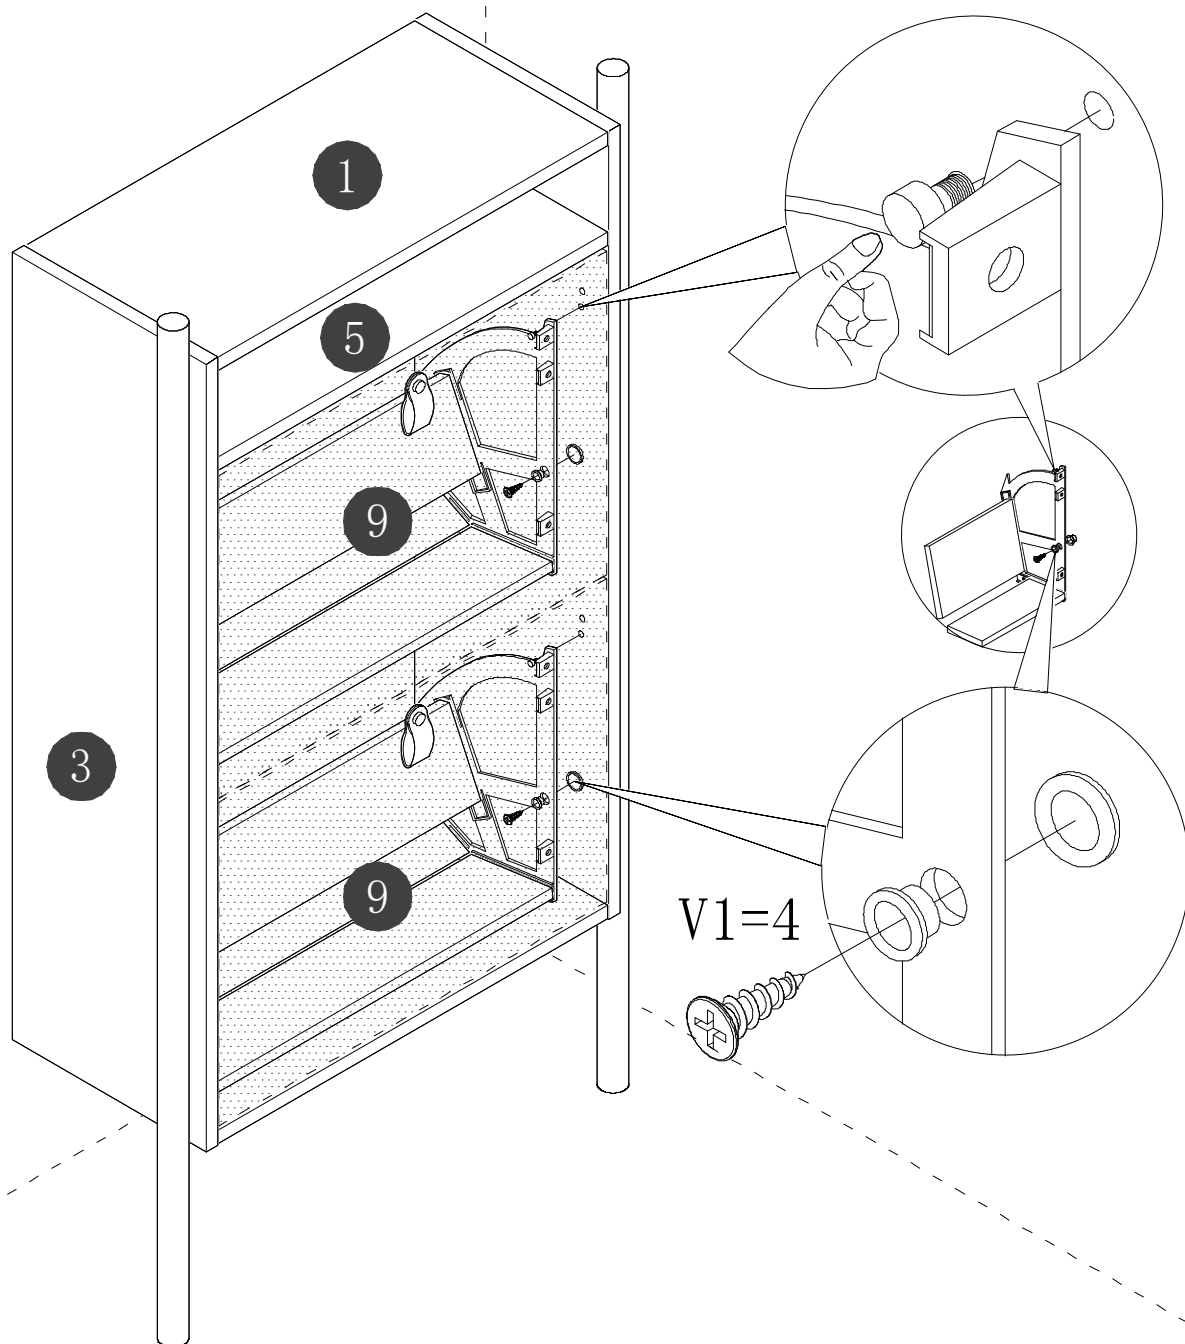


STEP 10

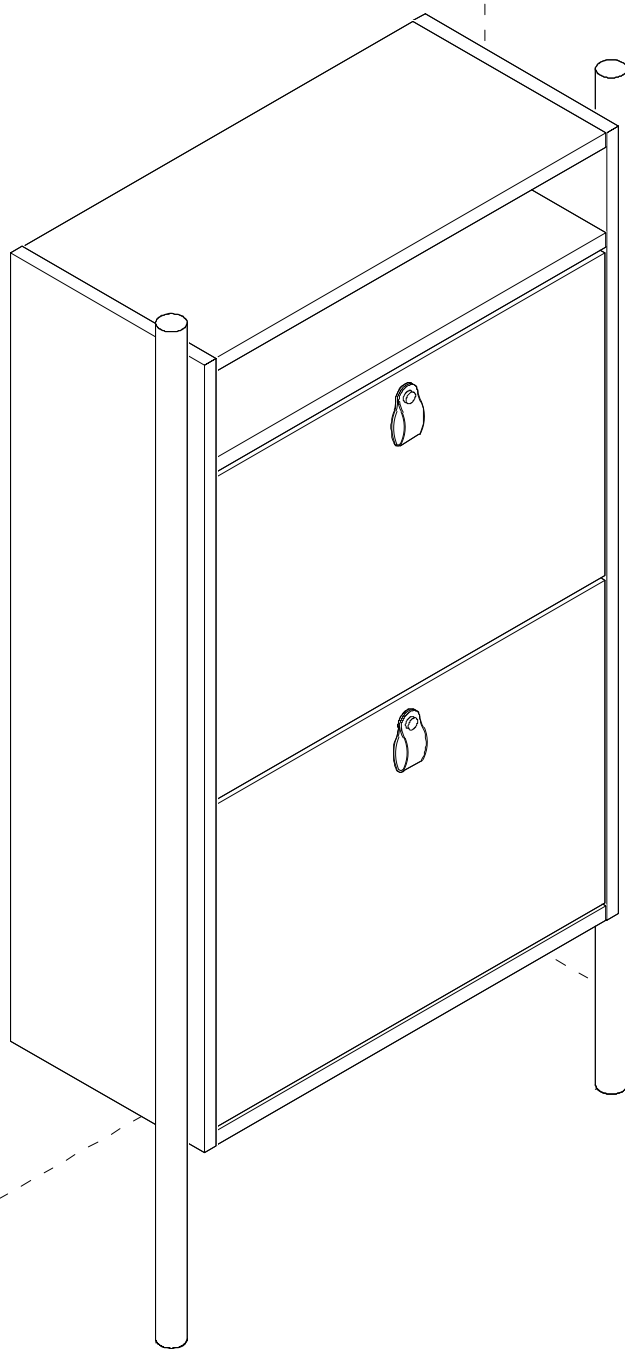

Finish

奥尔堡鞋柜邮购组包装

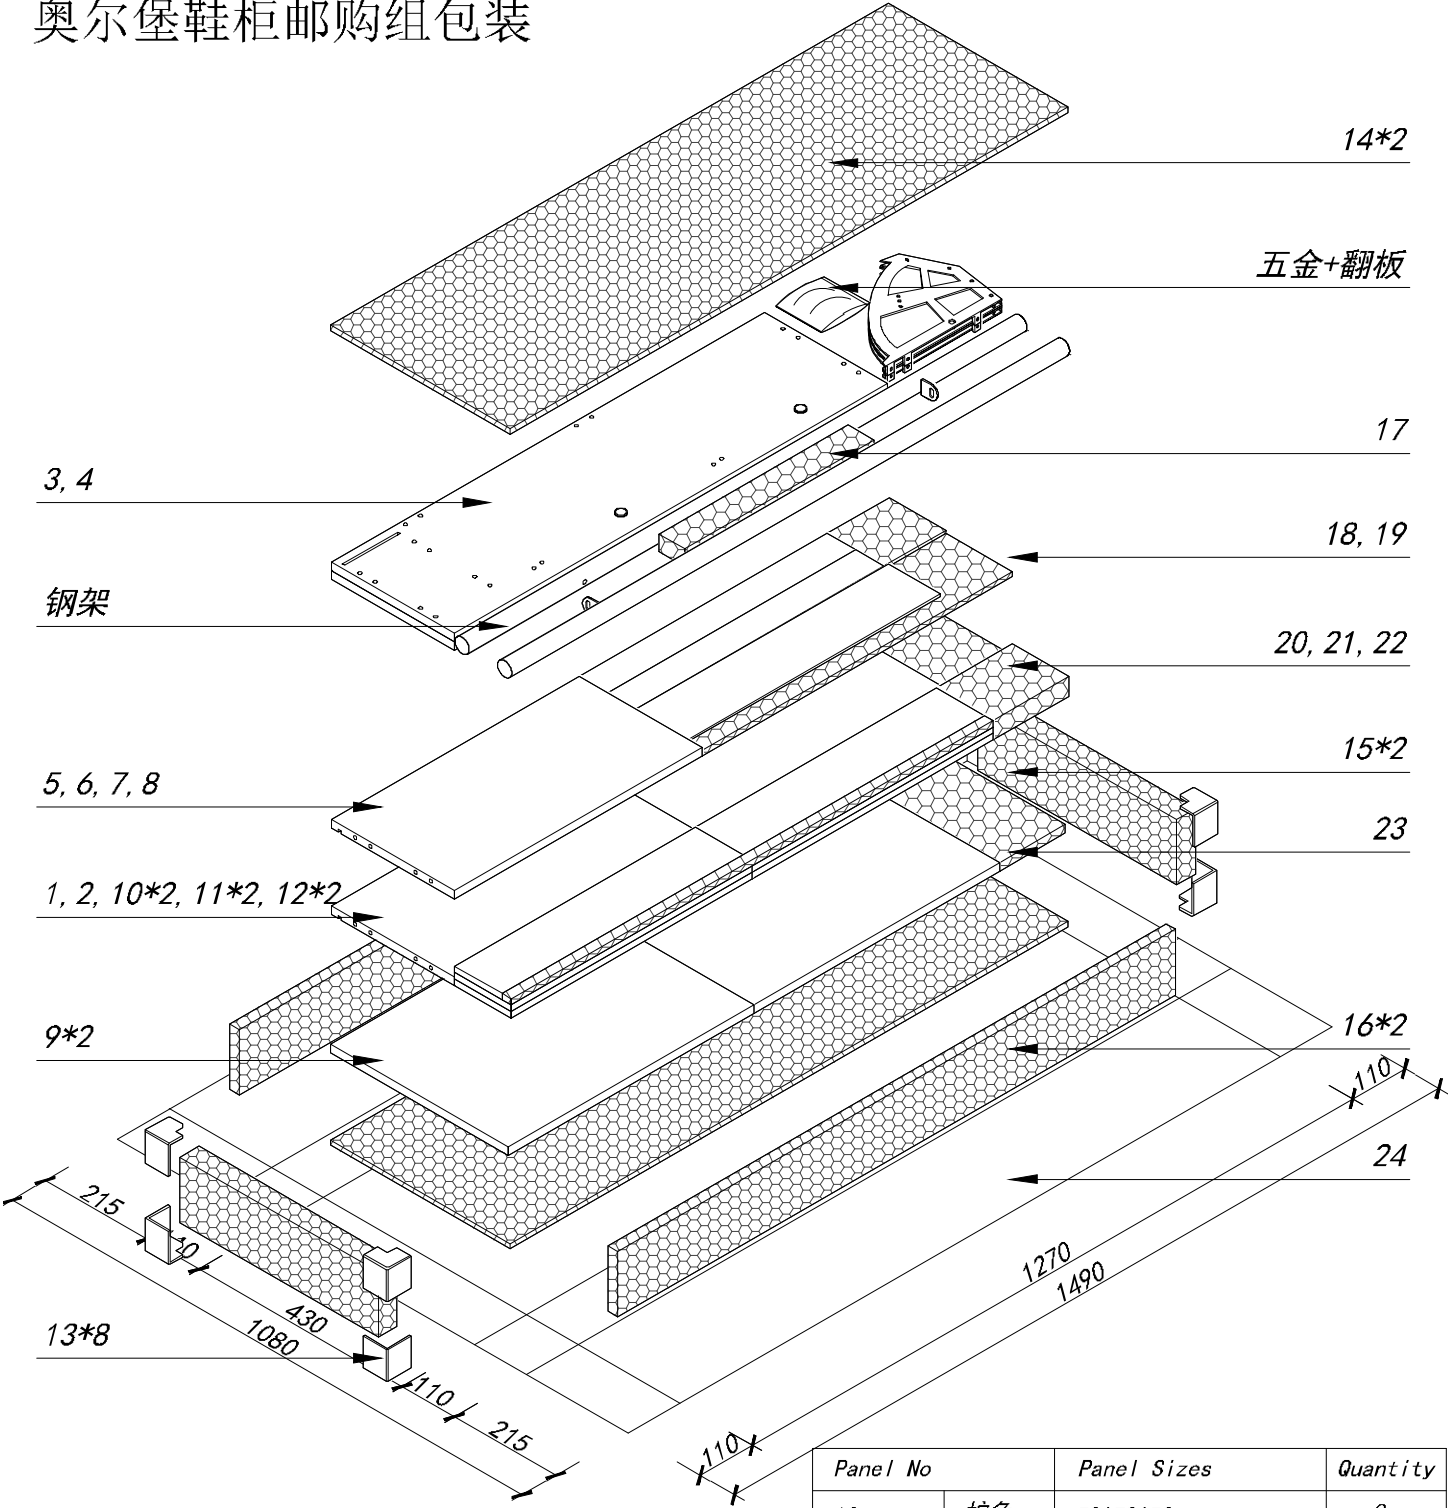

Panel No		Panel Sizes	Quantity
13	护角	50*50*50	8
14	泡沫	1180*380*10	2
15	泡沫	420*100*40	2
16	泡沫	1180*100*20	2
17	泡沫	400*55*30	1
18	泡沫	132*120*15	1
19	泡沫	655*140*10	1
20	泡沫	260*132*15	1
21	泡沫	160*120*35	1
22	泡沫	1020*18*10	1
23	泡沫	380*140*15	1
24	纸盒	内径1270*430*110	1