


Assembly Instructions

Nordic Range

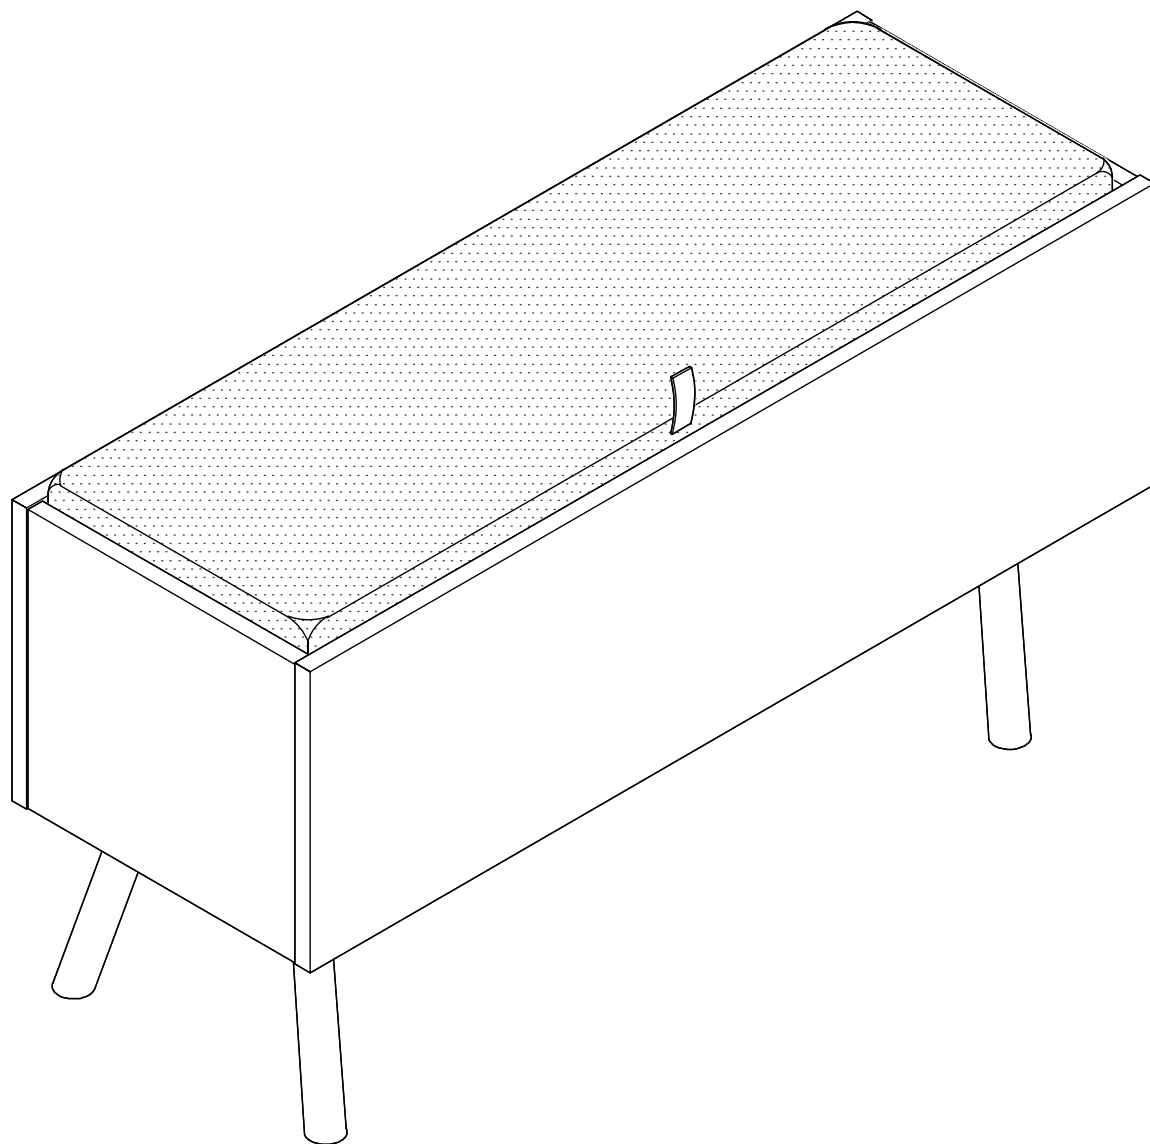

Loft

Product Code




BEN-LOF-NOR-1~9732

Dimensions(W x D x H)







91*32*46cm

Important

Please read through instruction carefully
Before assembly and keep for future reference.

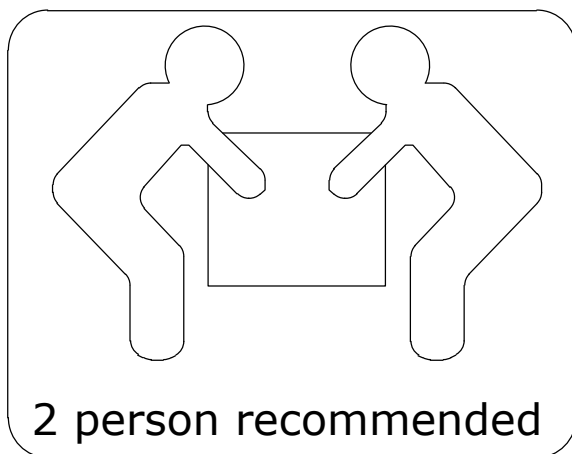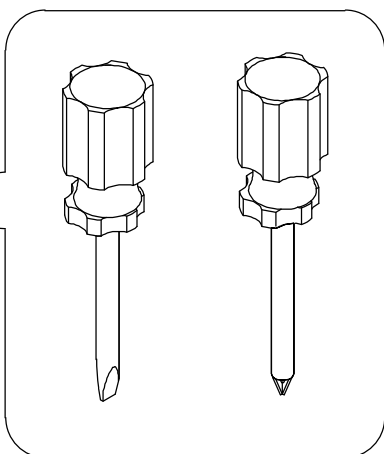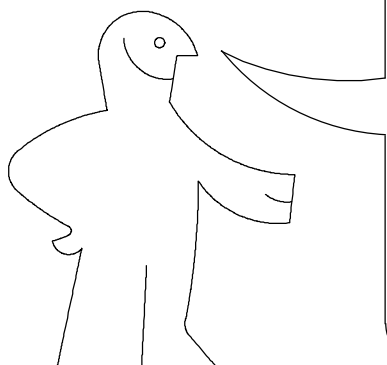


2 person recommended

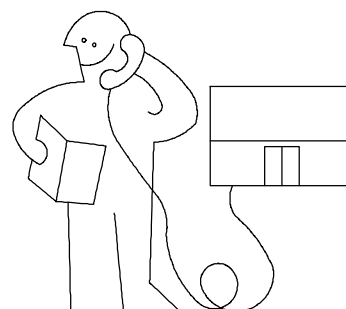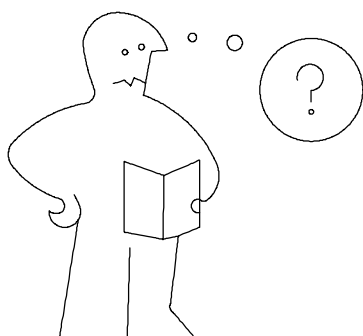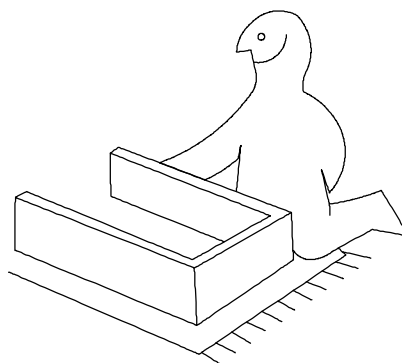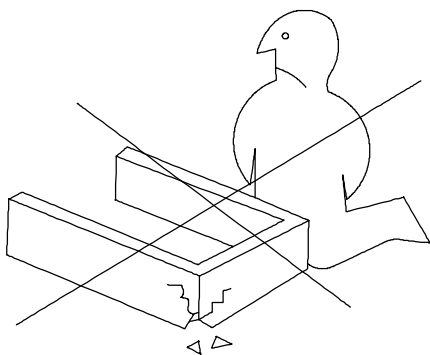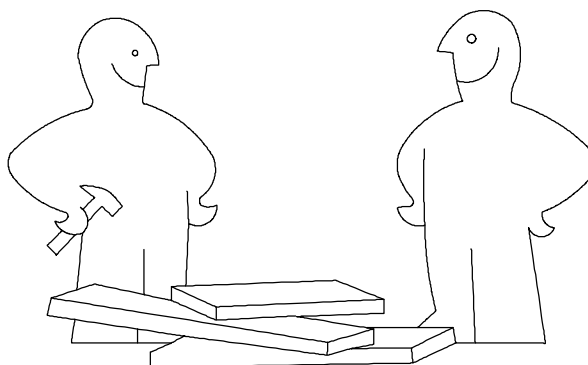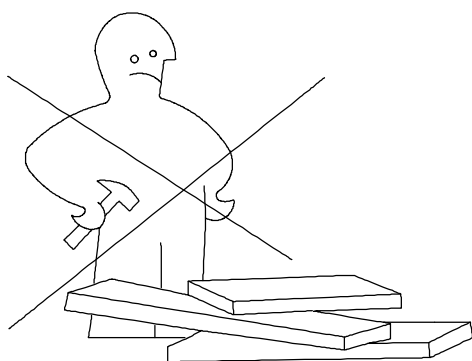


Panel No	Panel Sizes	Quantity
1	908*280*16	1
2	908*280*16	1
3	278*288*16	1
4	278*288*16	1


Panel No	Panel Sizes	Quantity
5	874*288*16	1
6	868*283*48	1
7	873*40*16	1

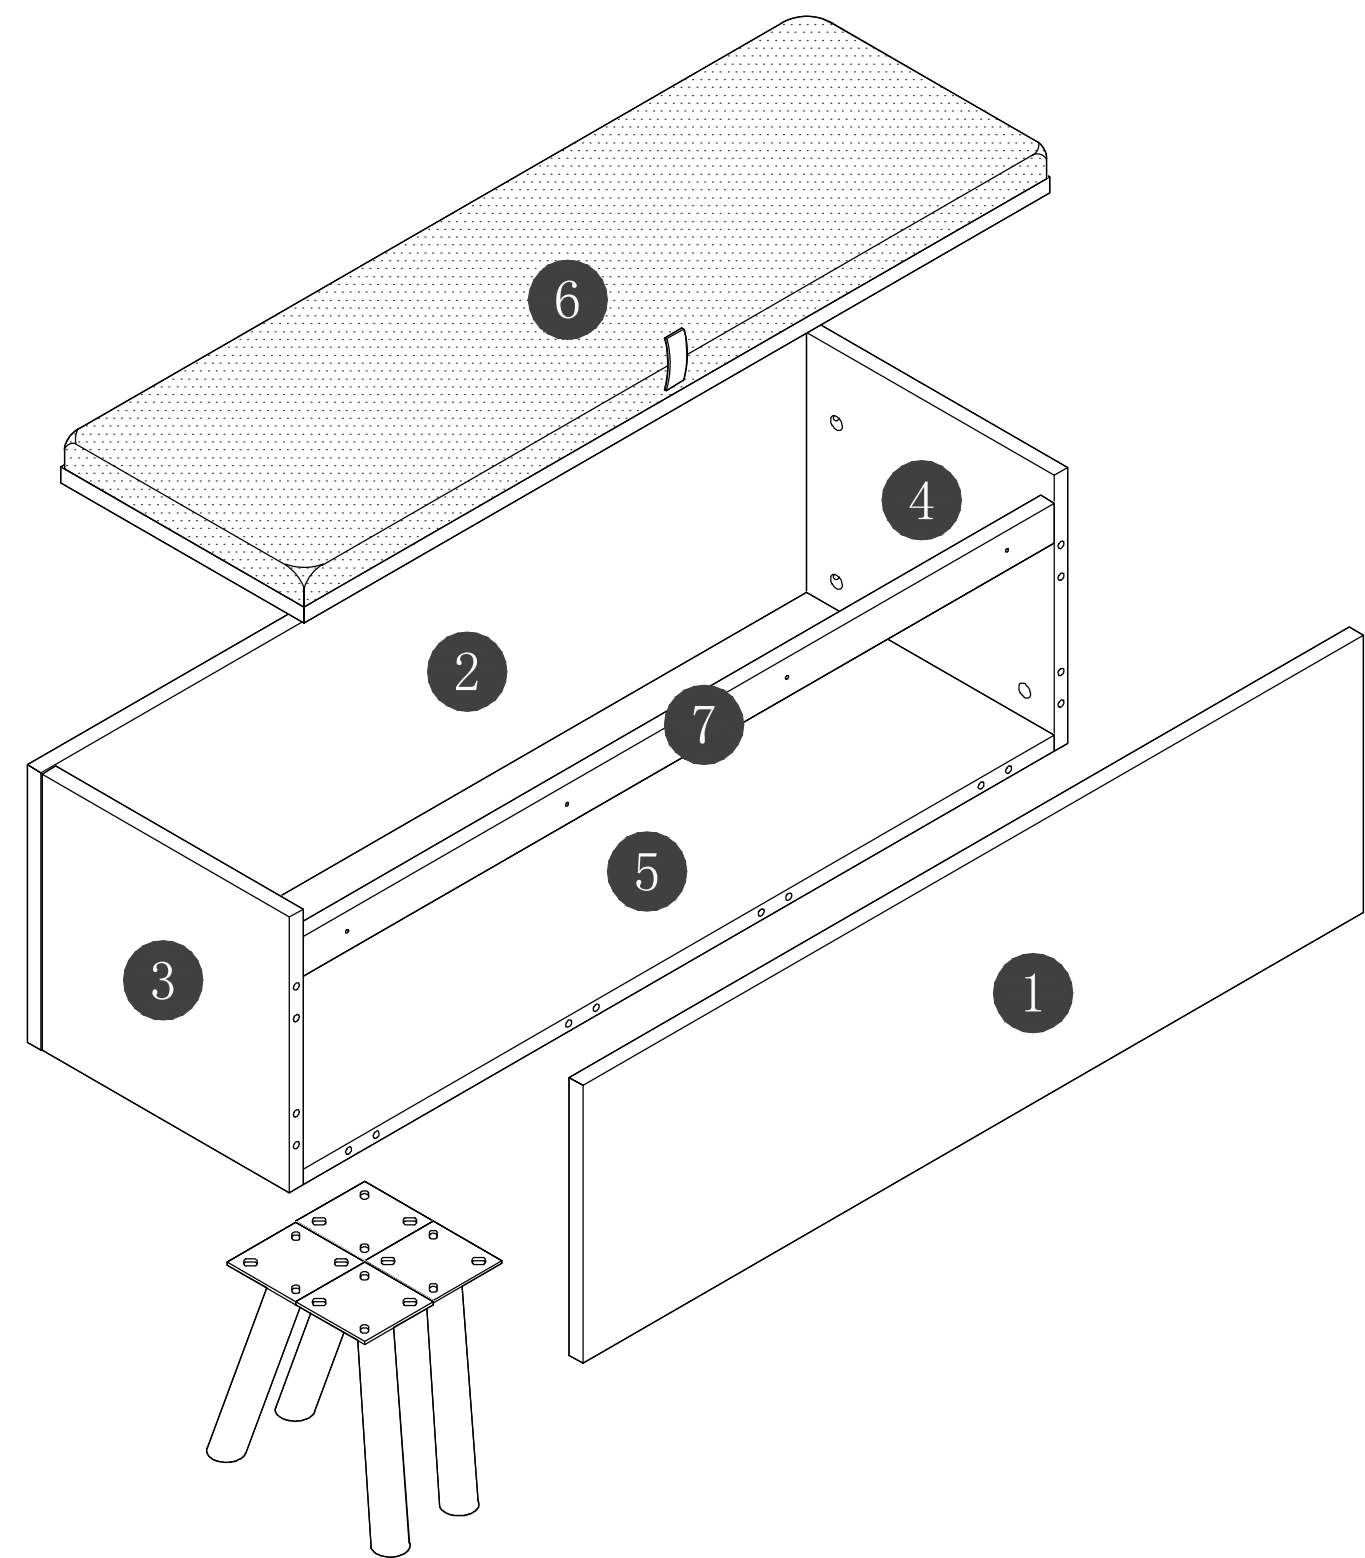


Fittings



A=22




B=20

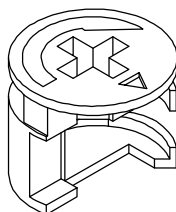


C=22




D=22

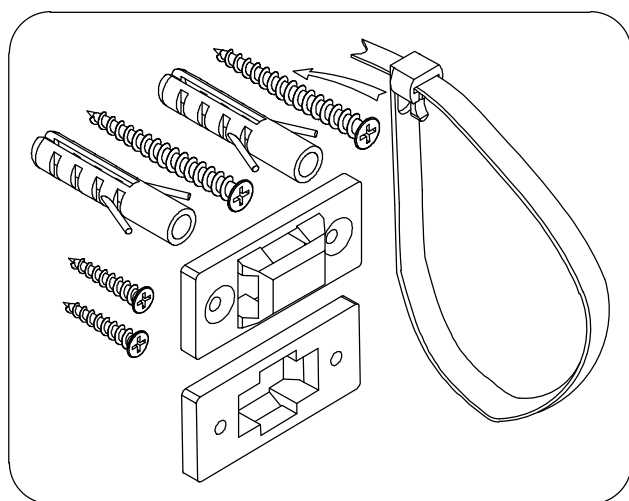

F=1




M6*16
G=16

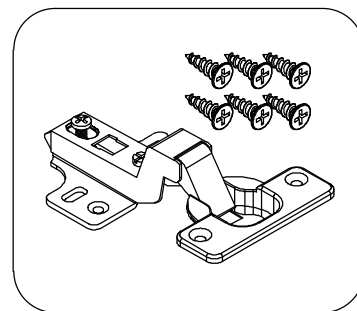


I3=2



H=1

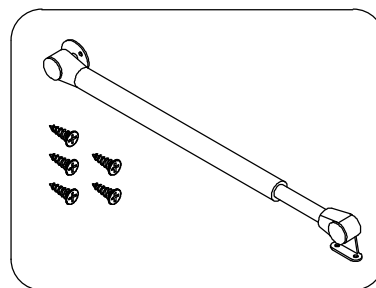


S=1

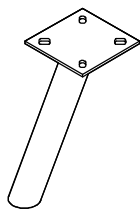


J=4



Z1=16




Z2=16




M4*25
V=4


STEP 1

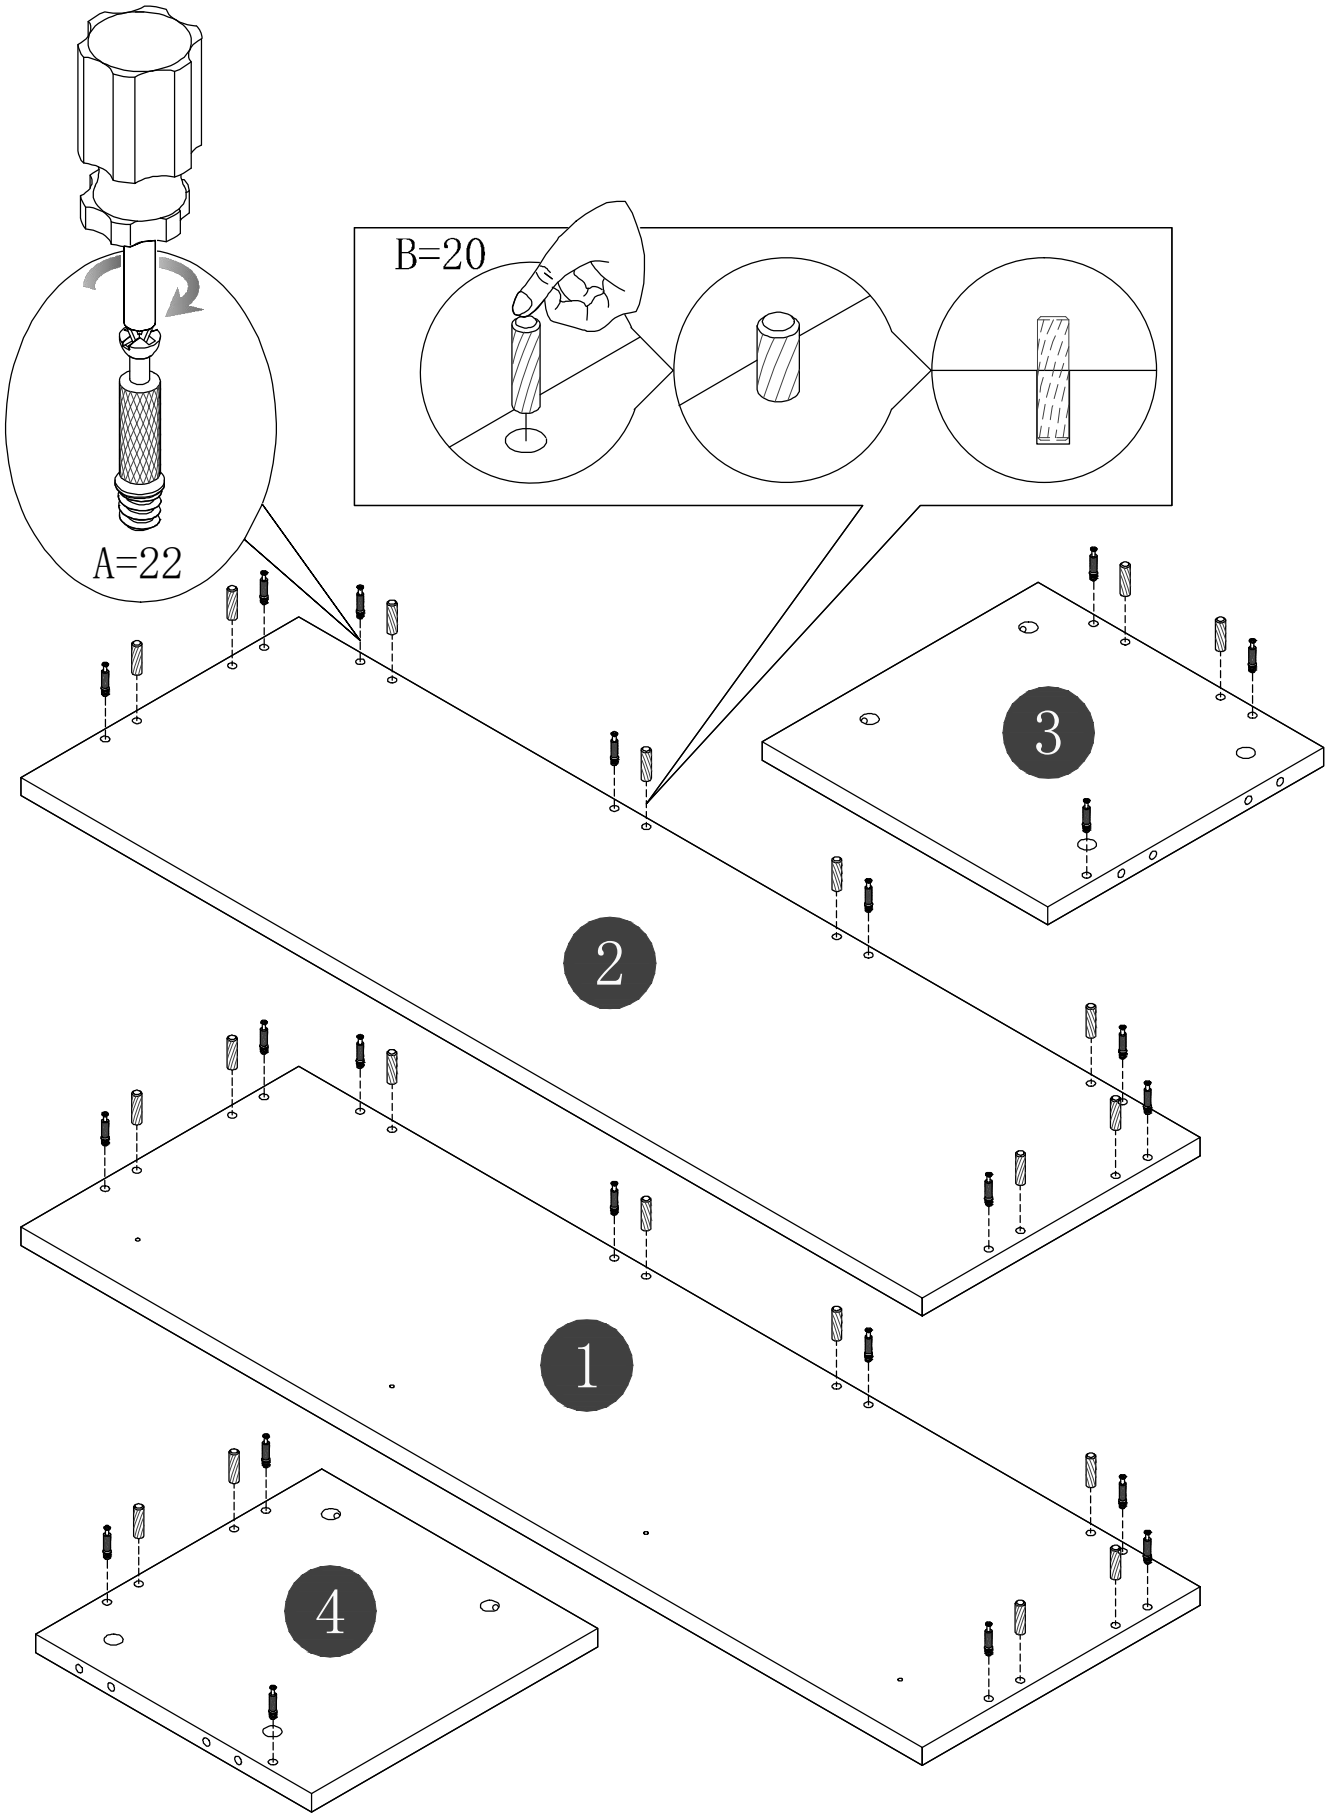


STEP 2

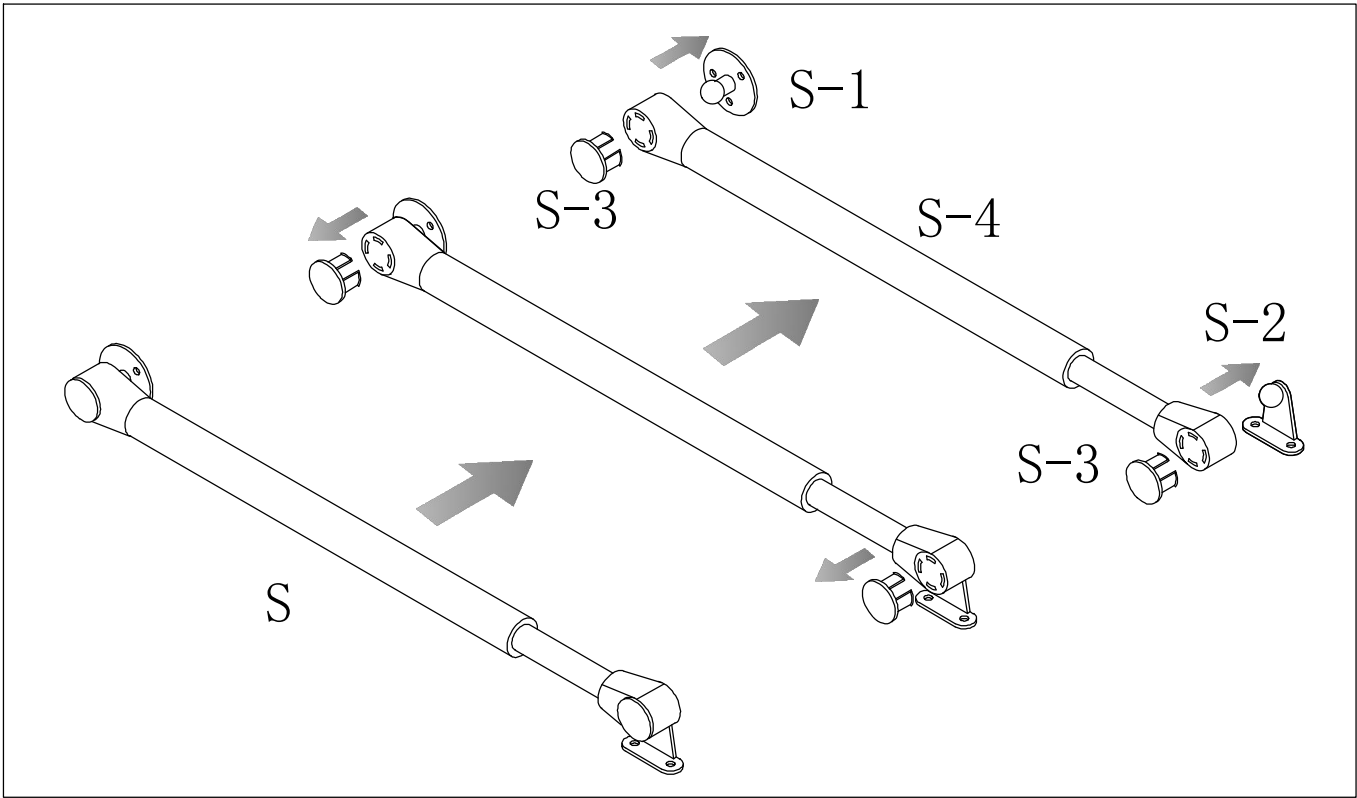


STEP 3

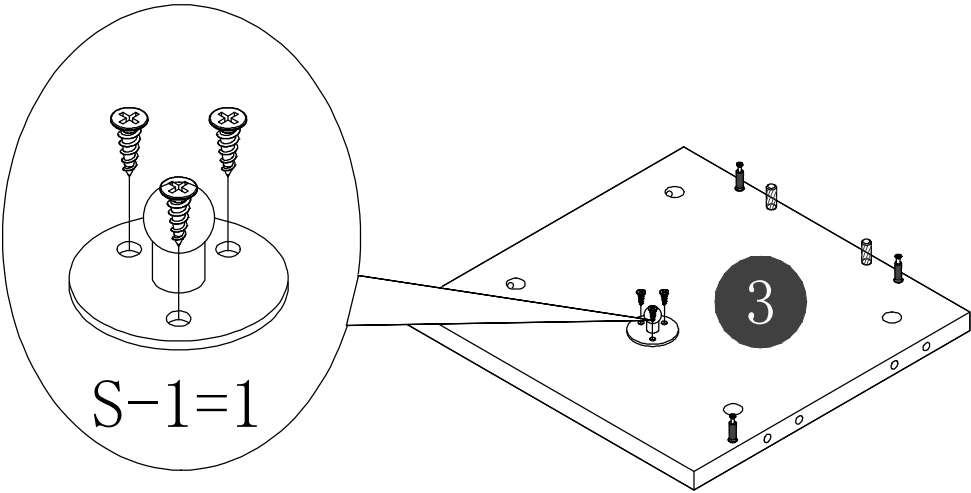


STEP 4

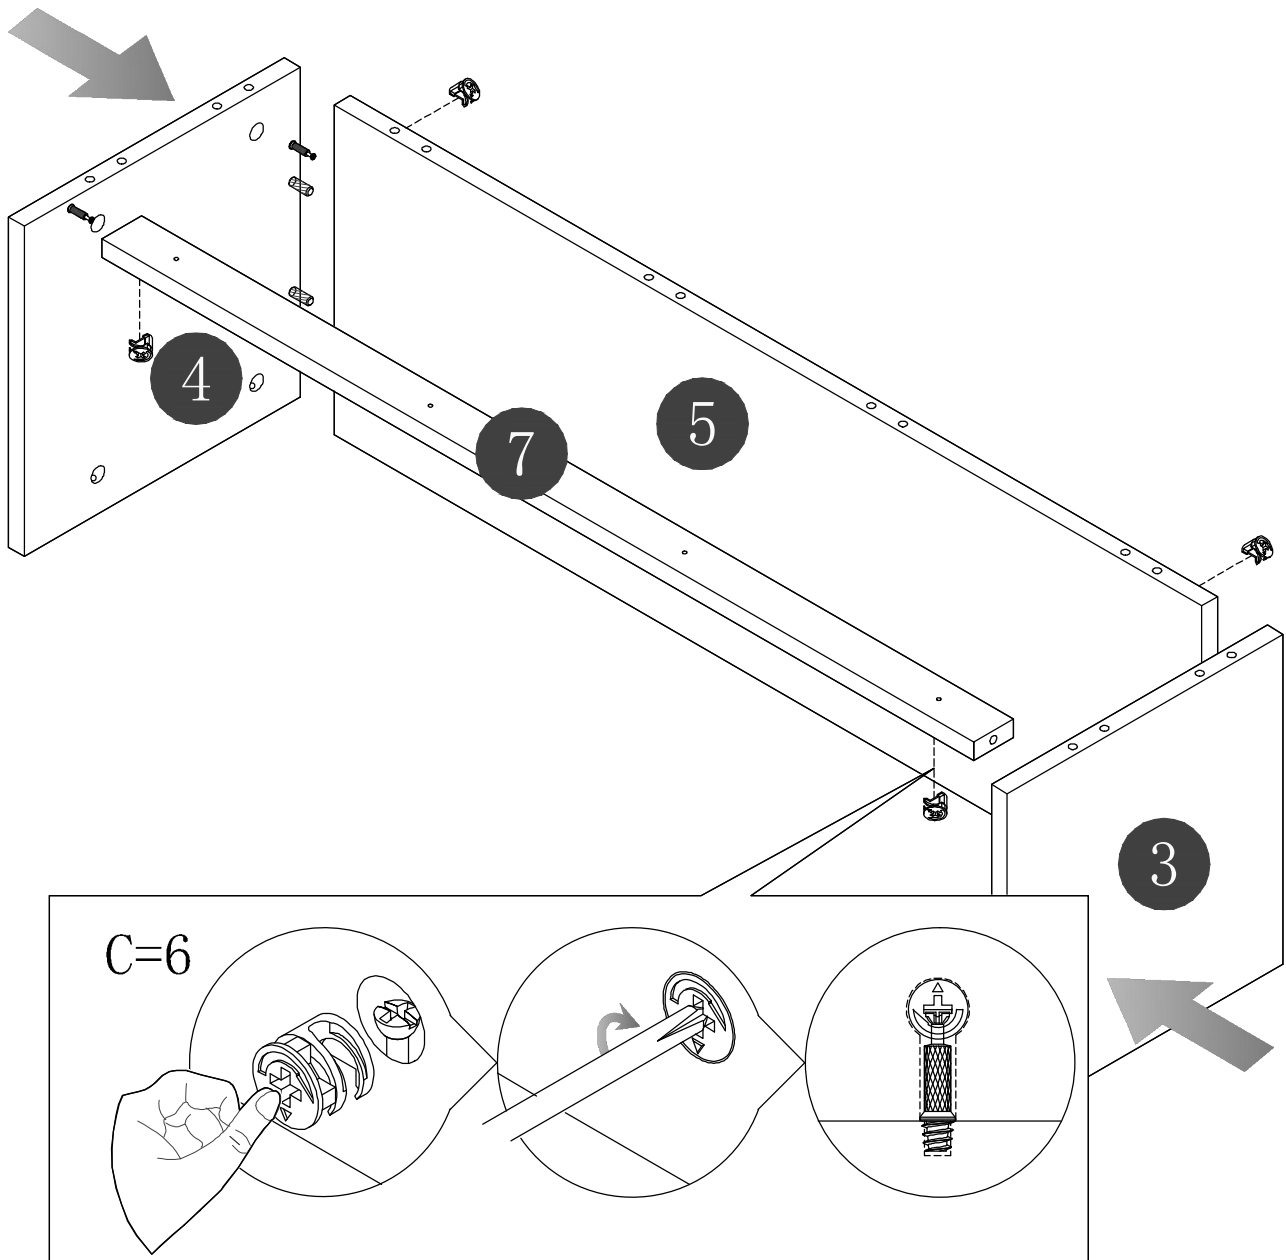


STEP 5

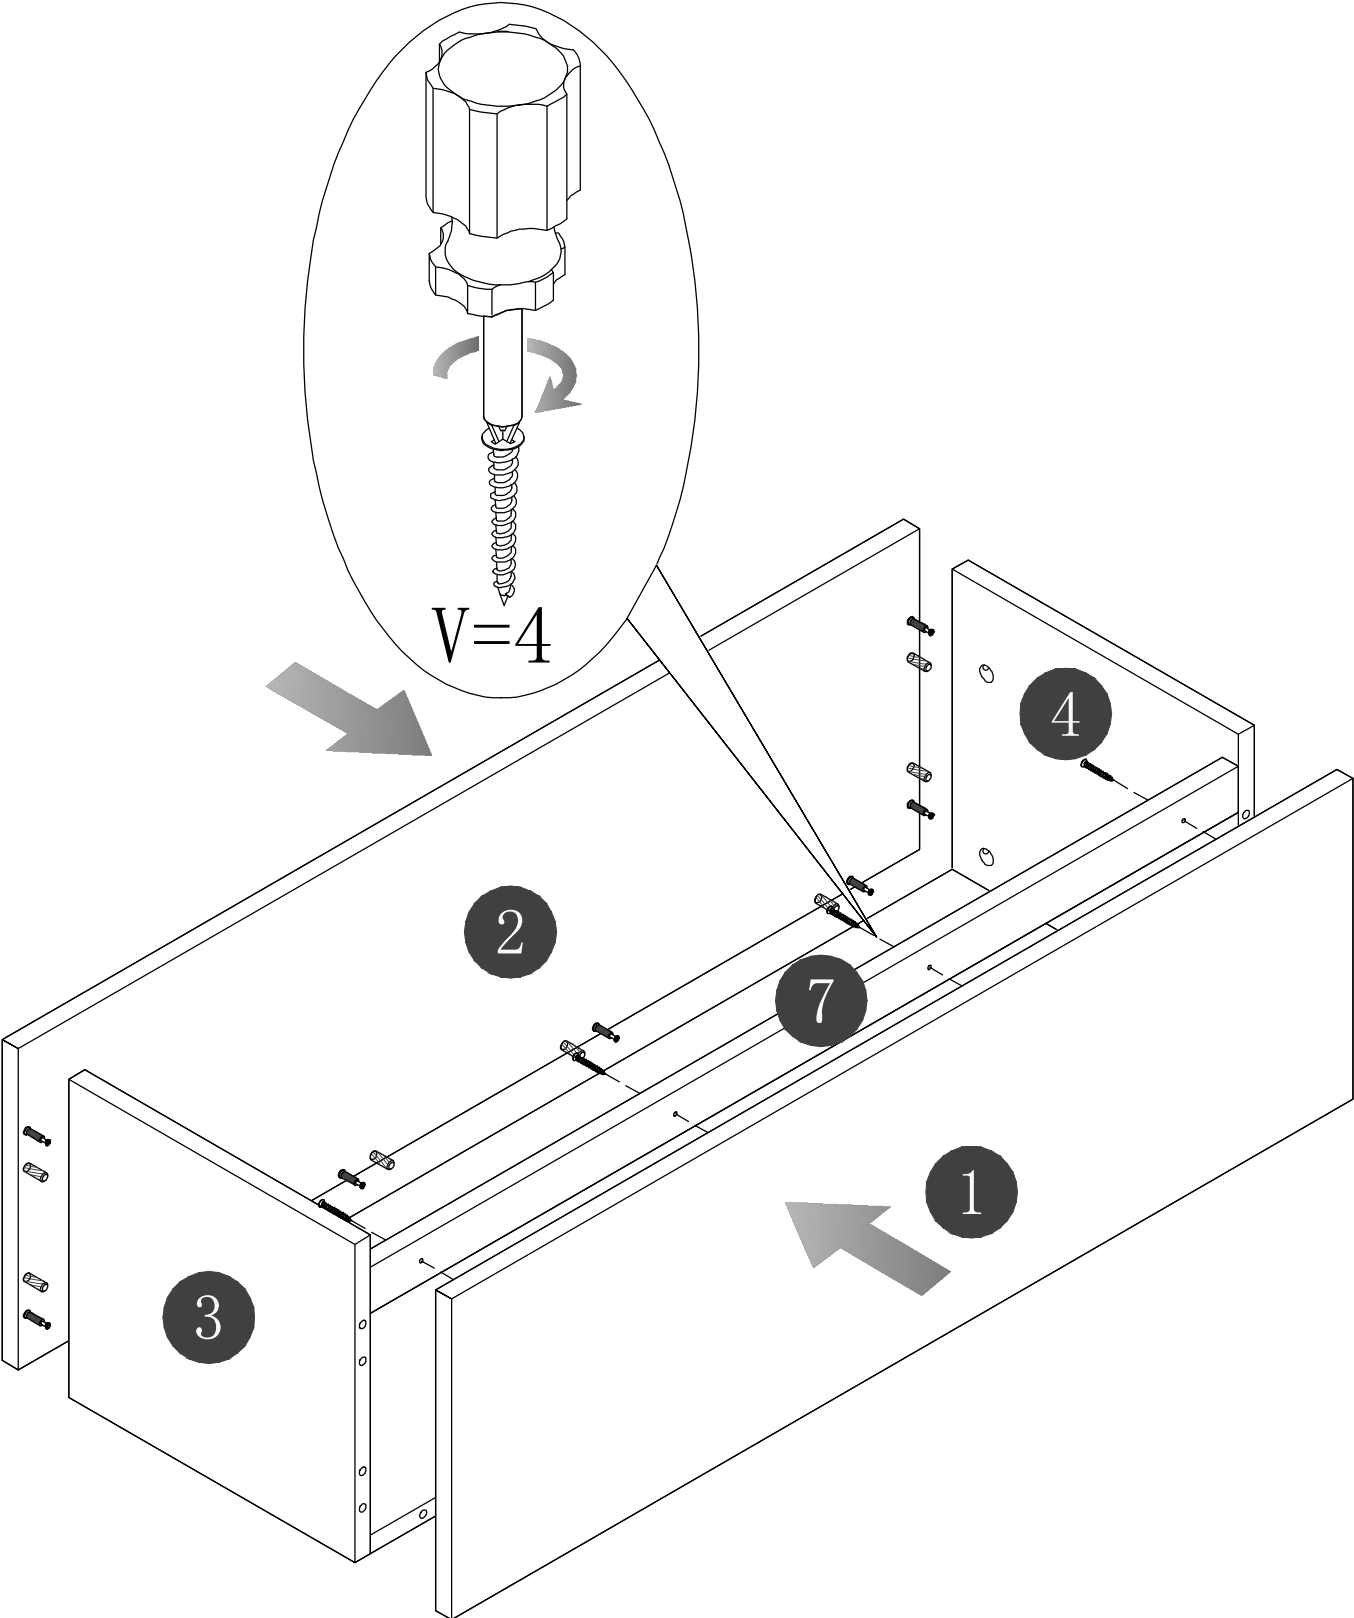


STEP 6

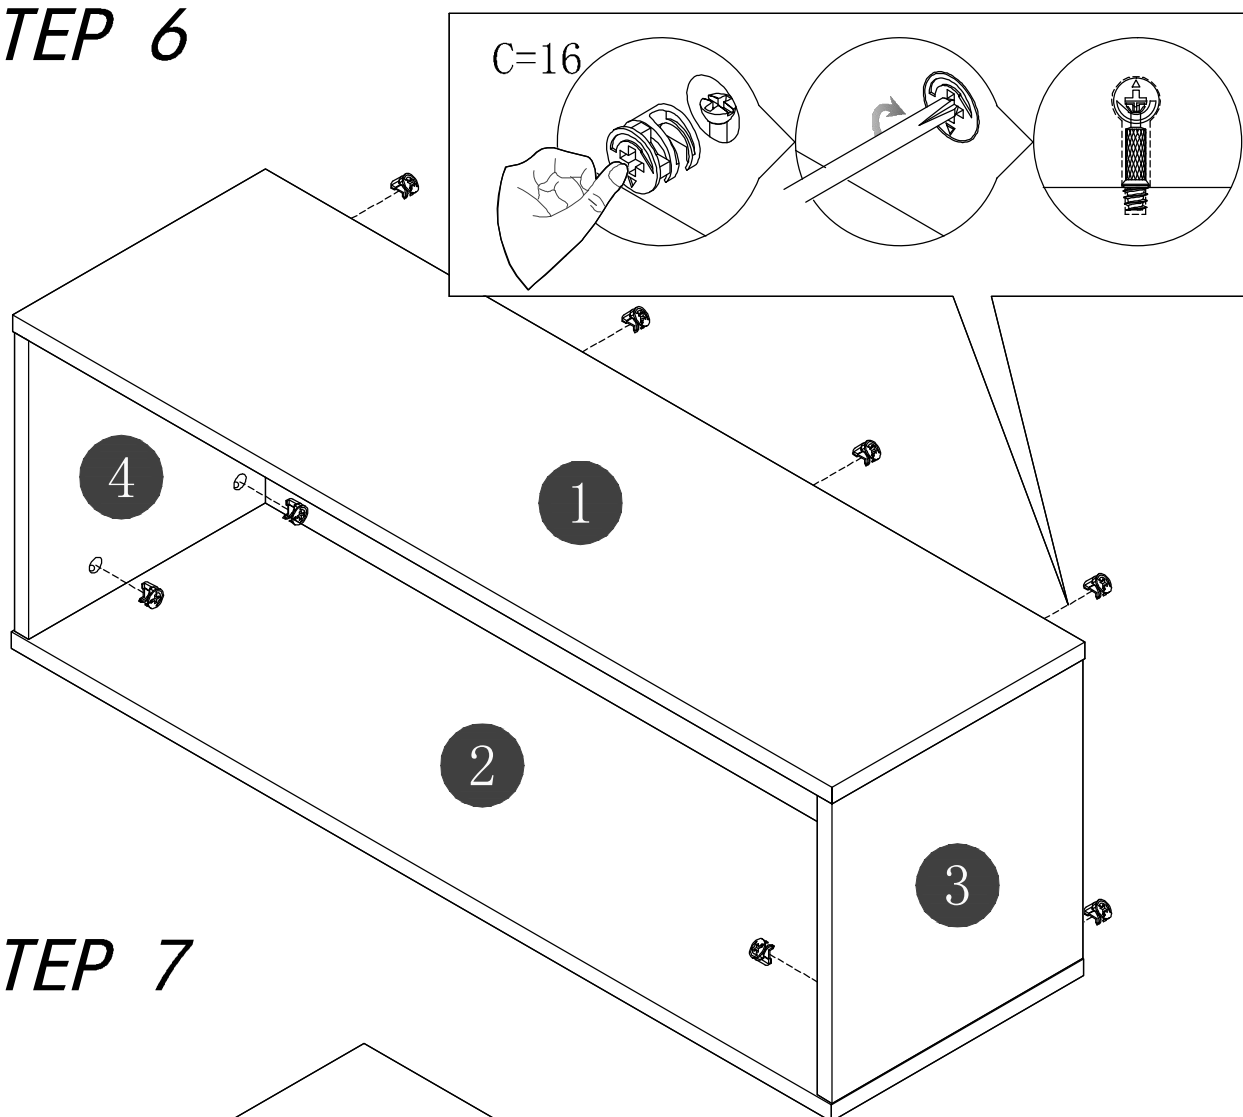


STEP 7

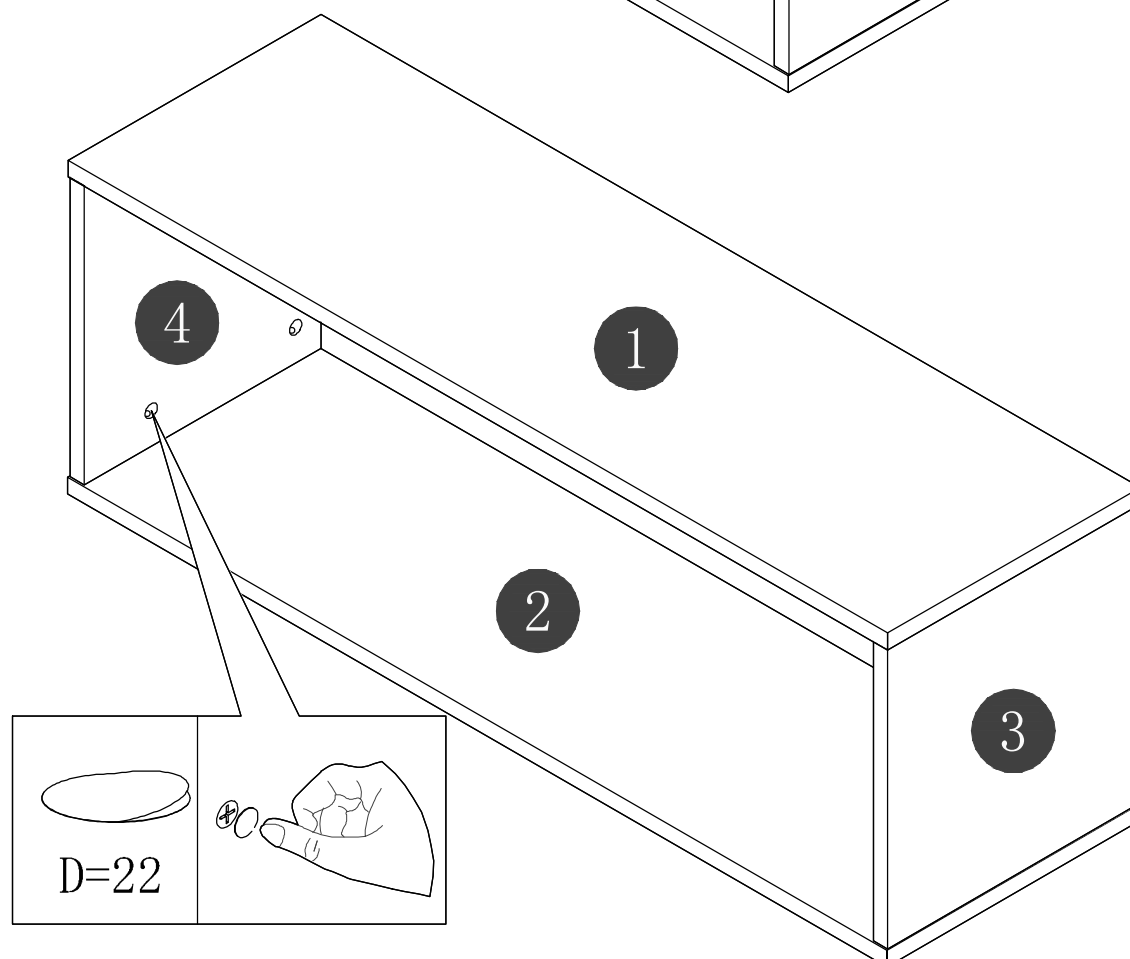


STEP 8

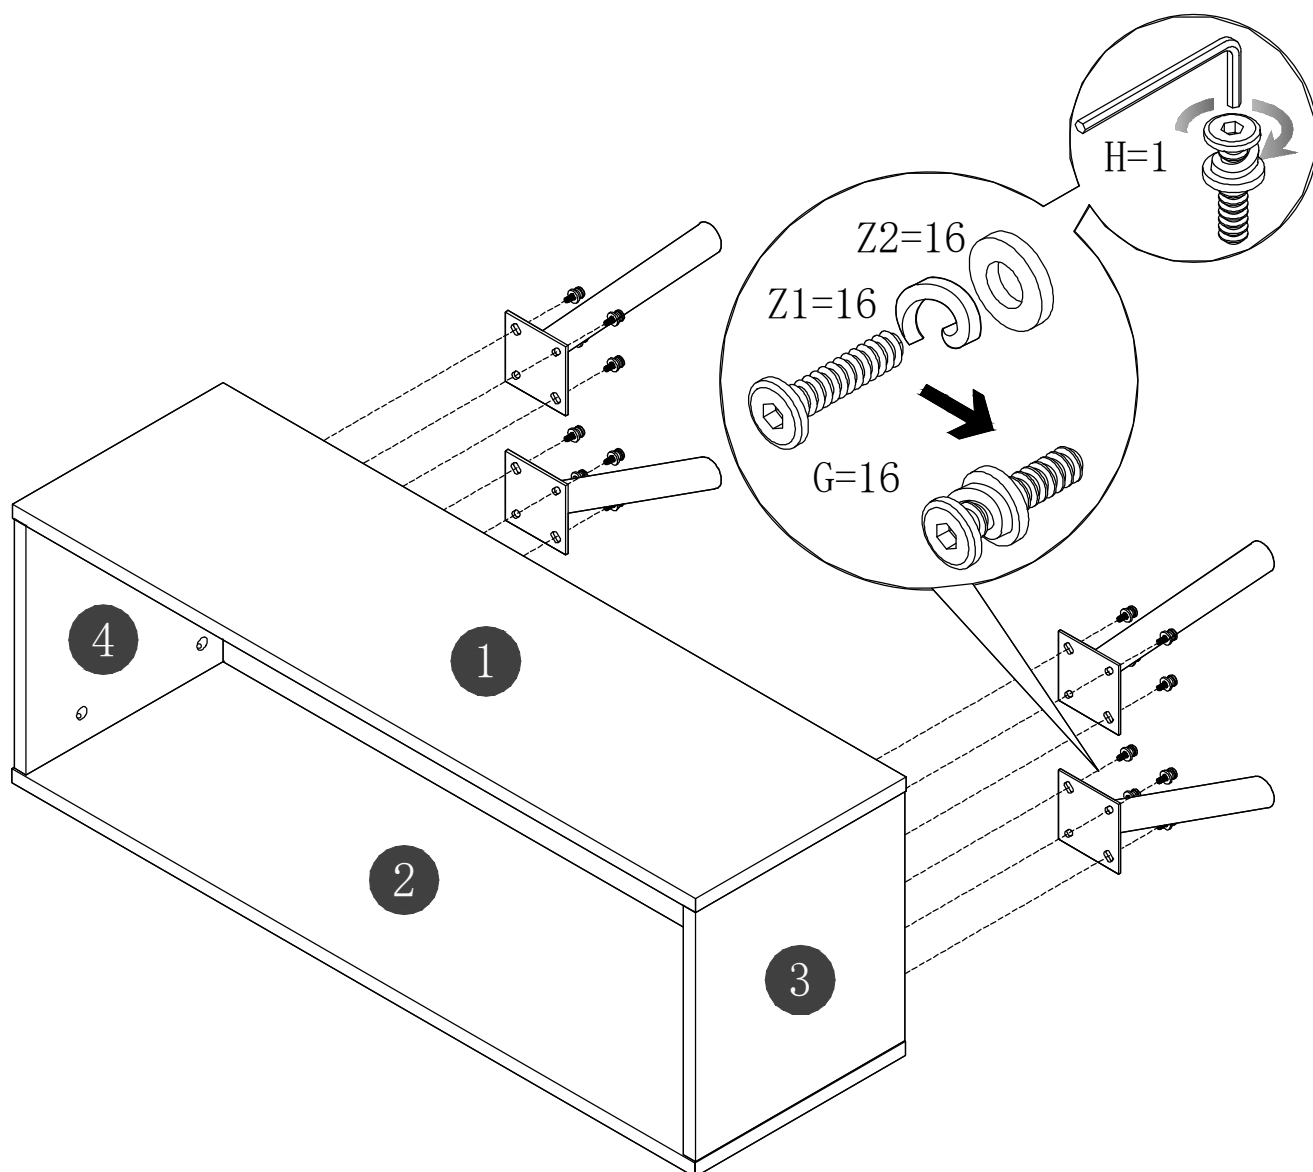


STEP 9

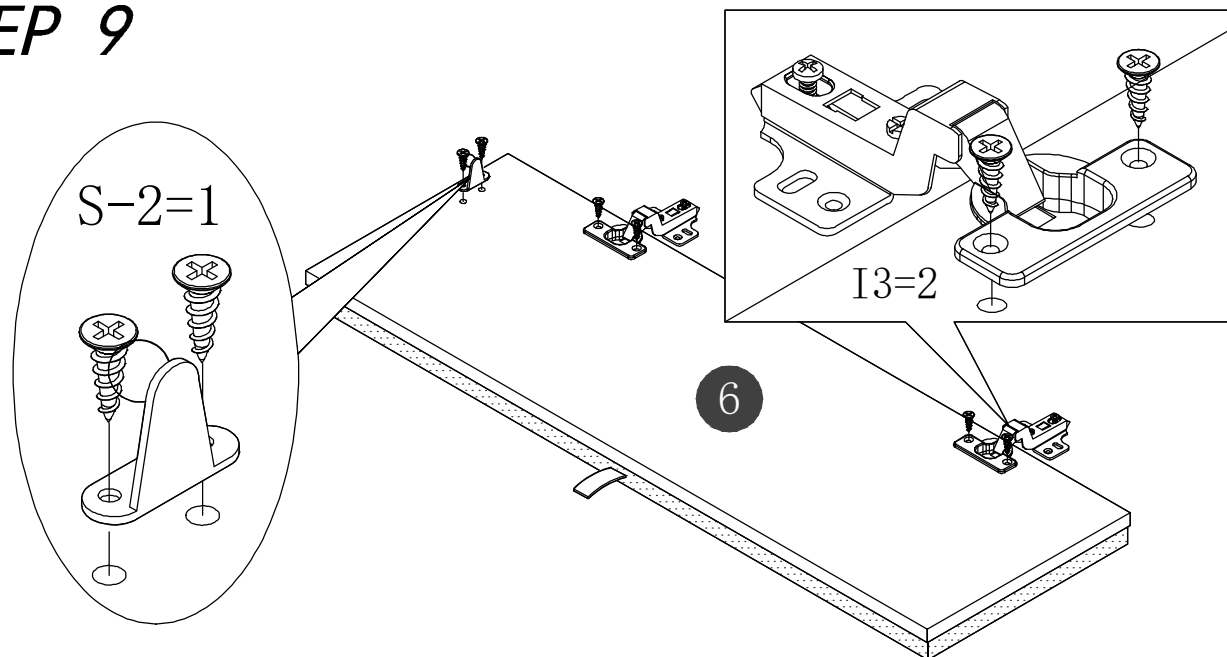





STEP 10

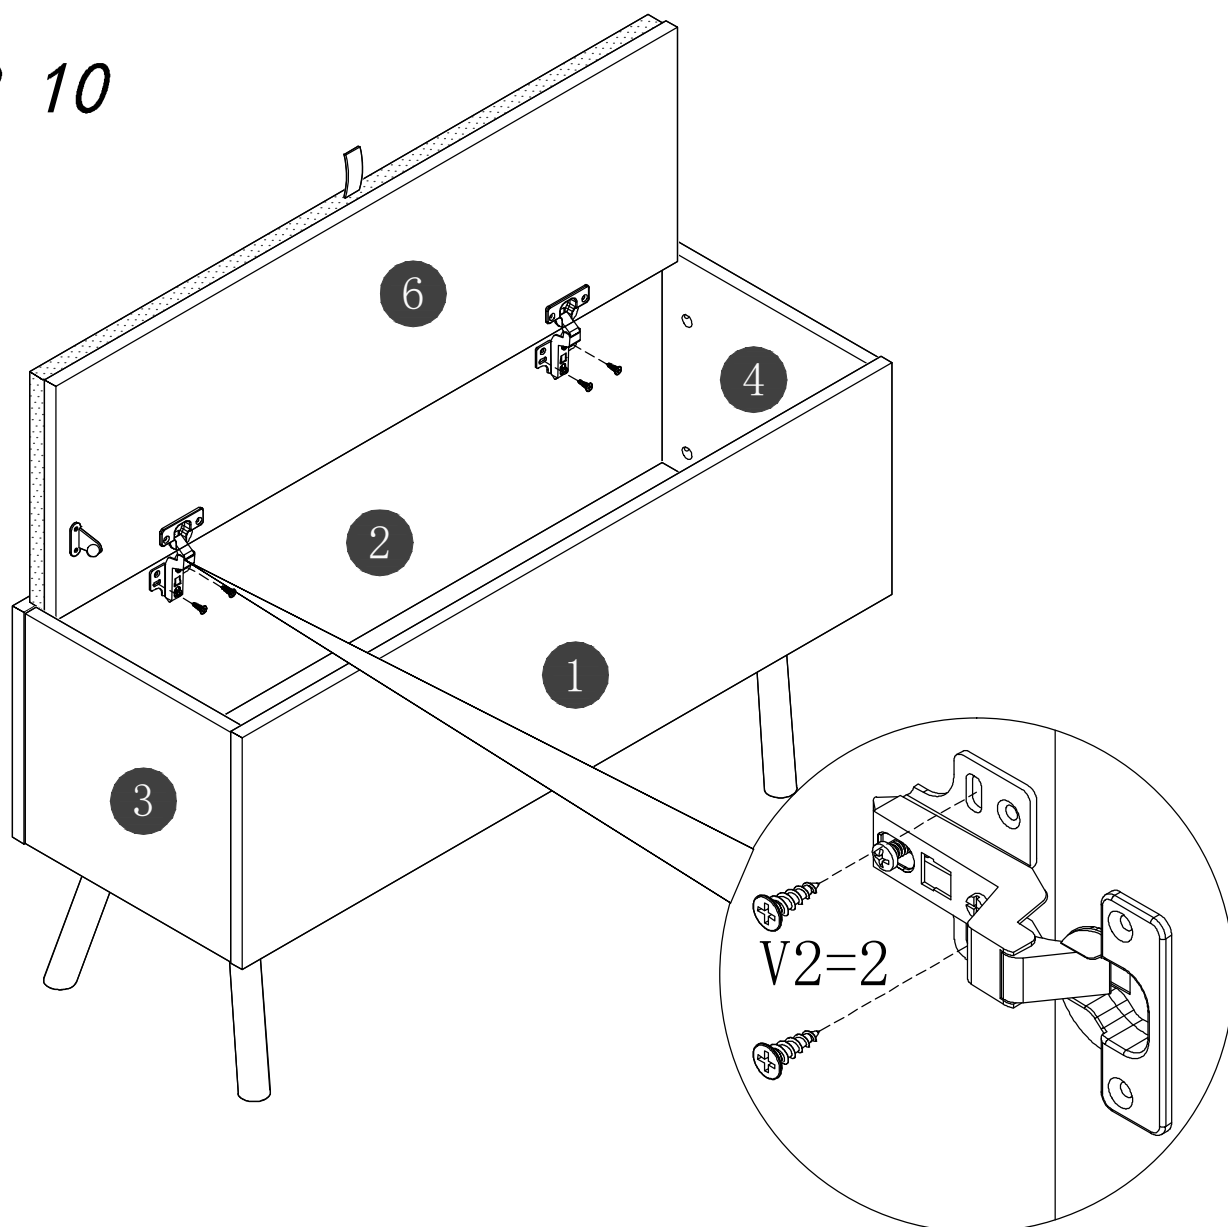


STEP 11

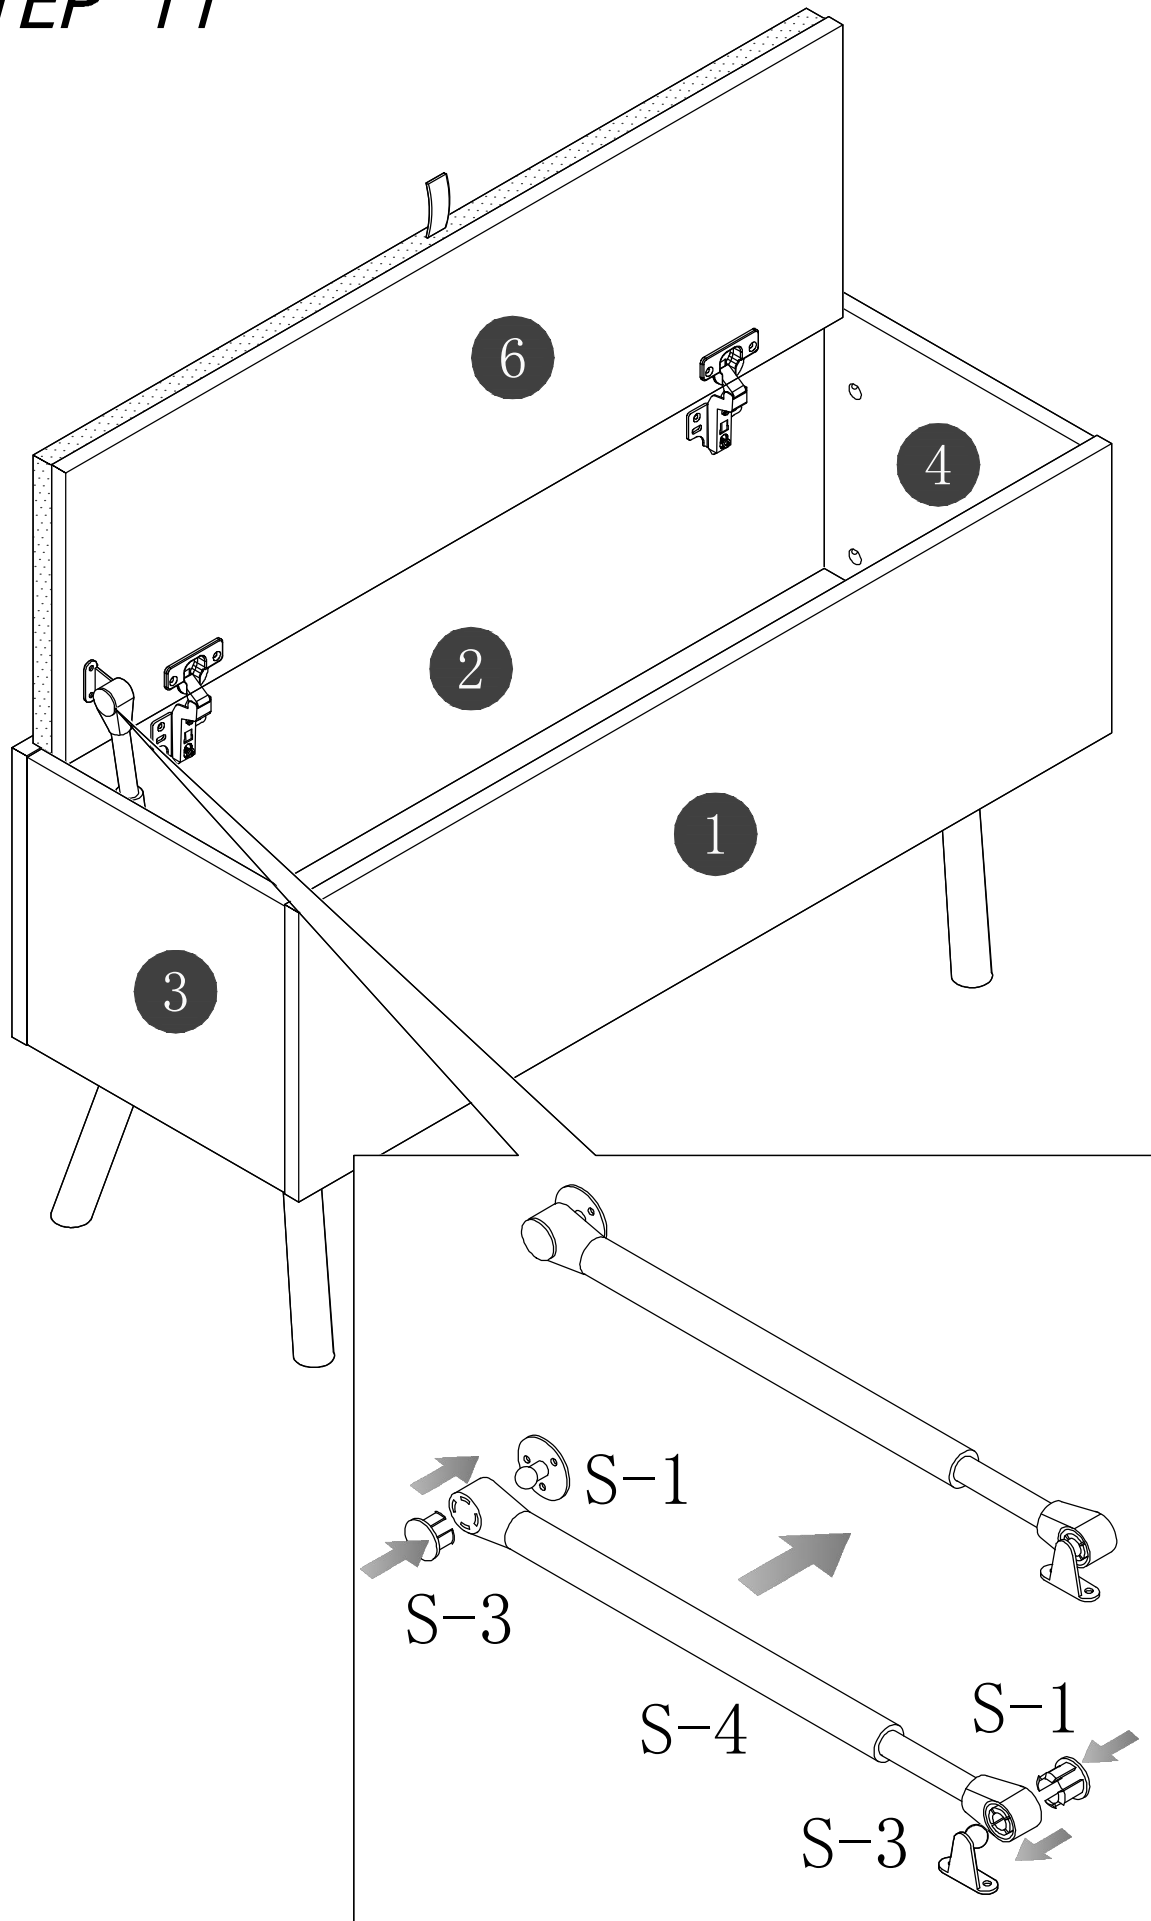


STEP 12

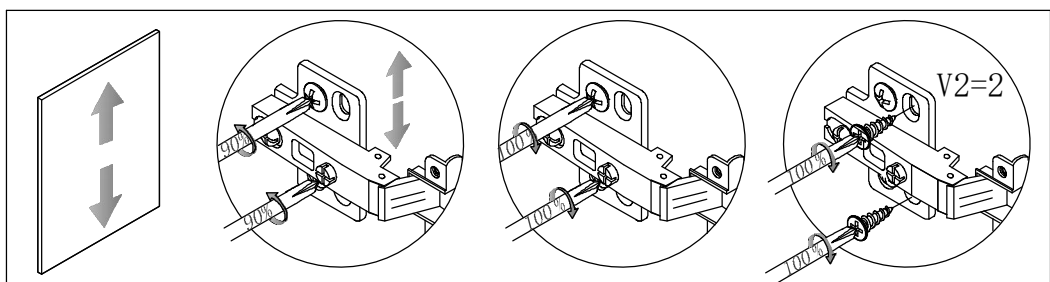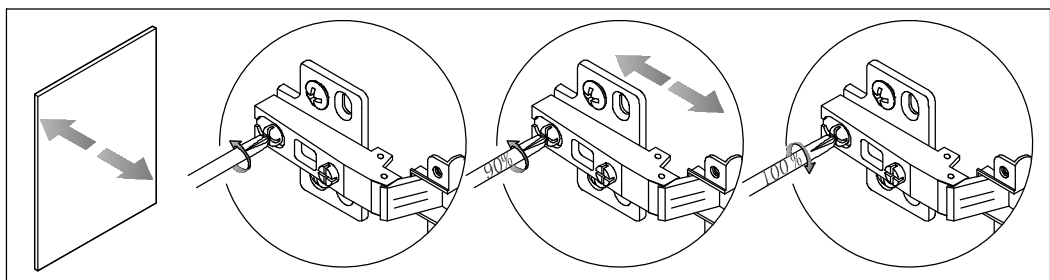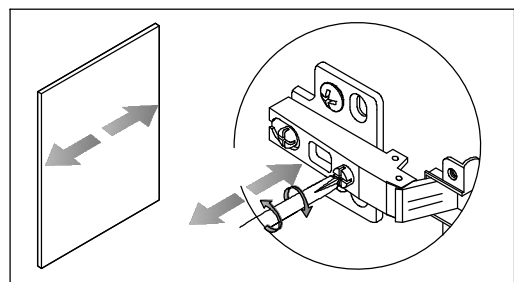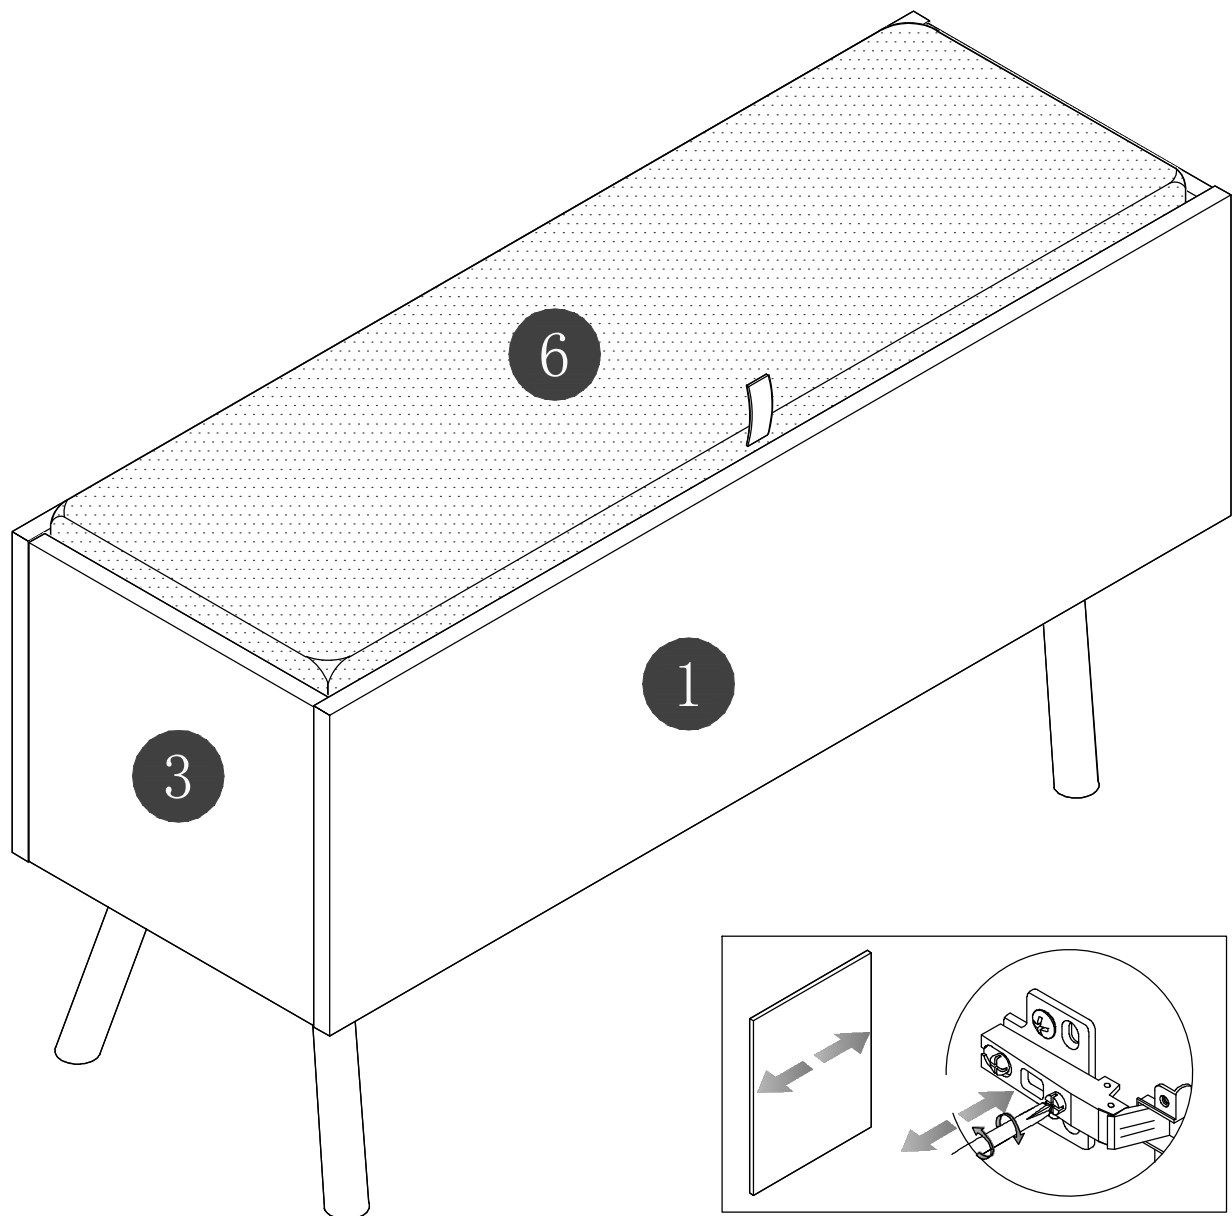

STEP 13

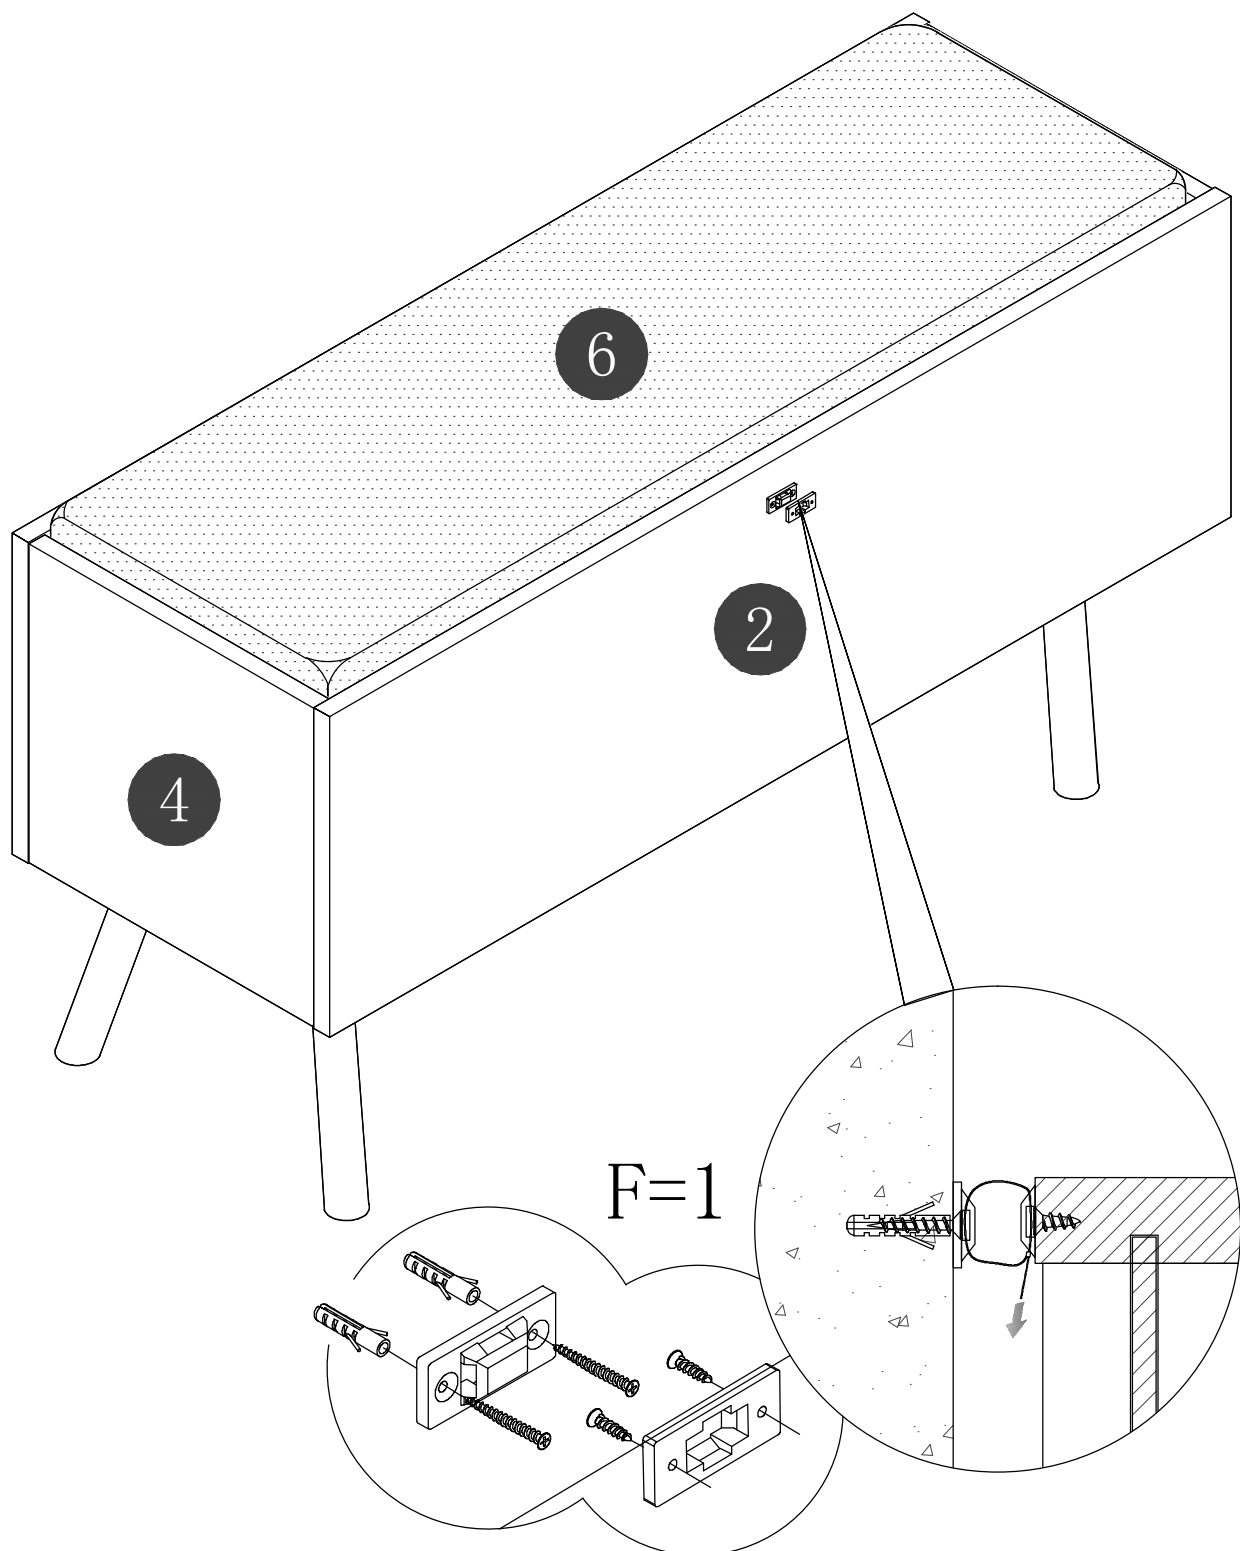


STEP 14

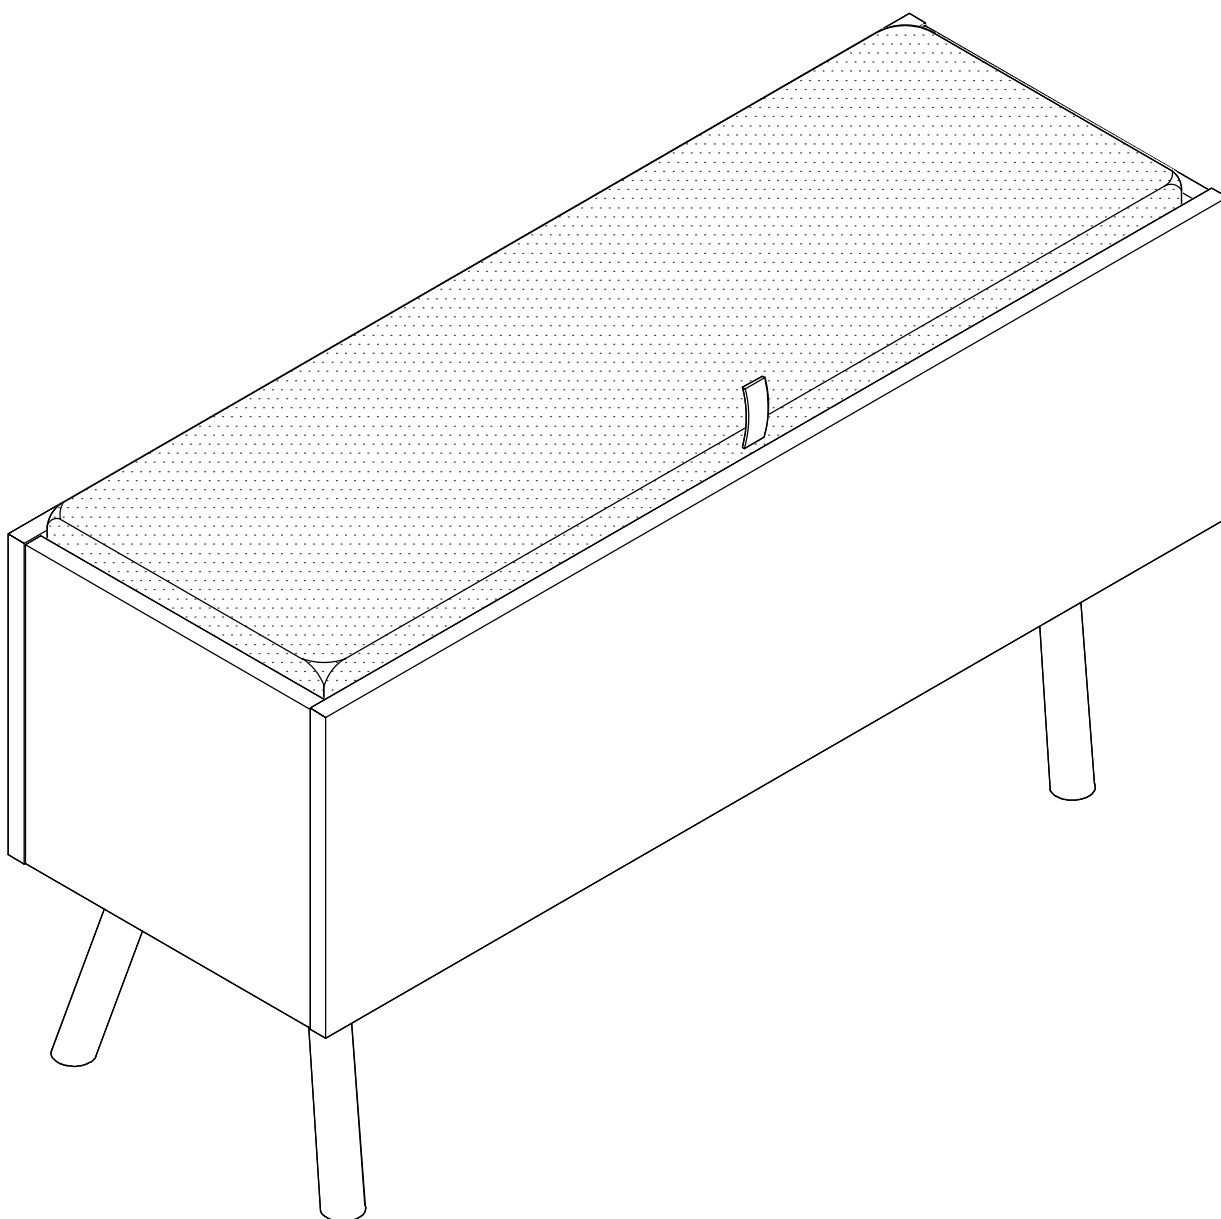

Finish

奥尔堡换鞋凳邮购组包装

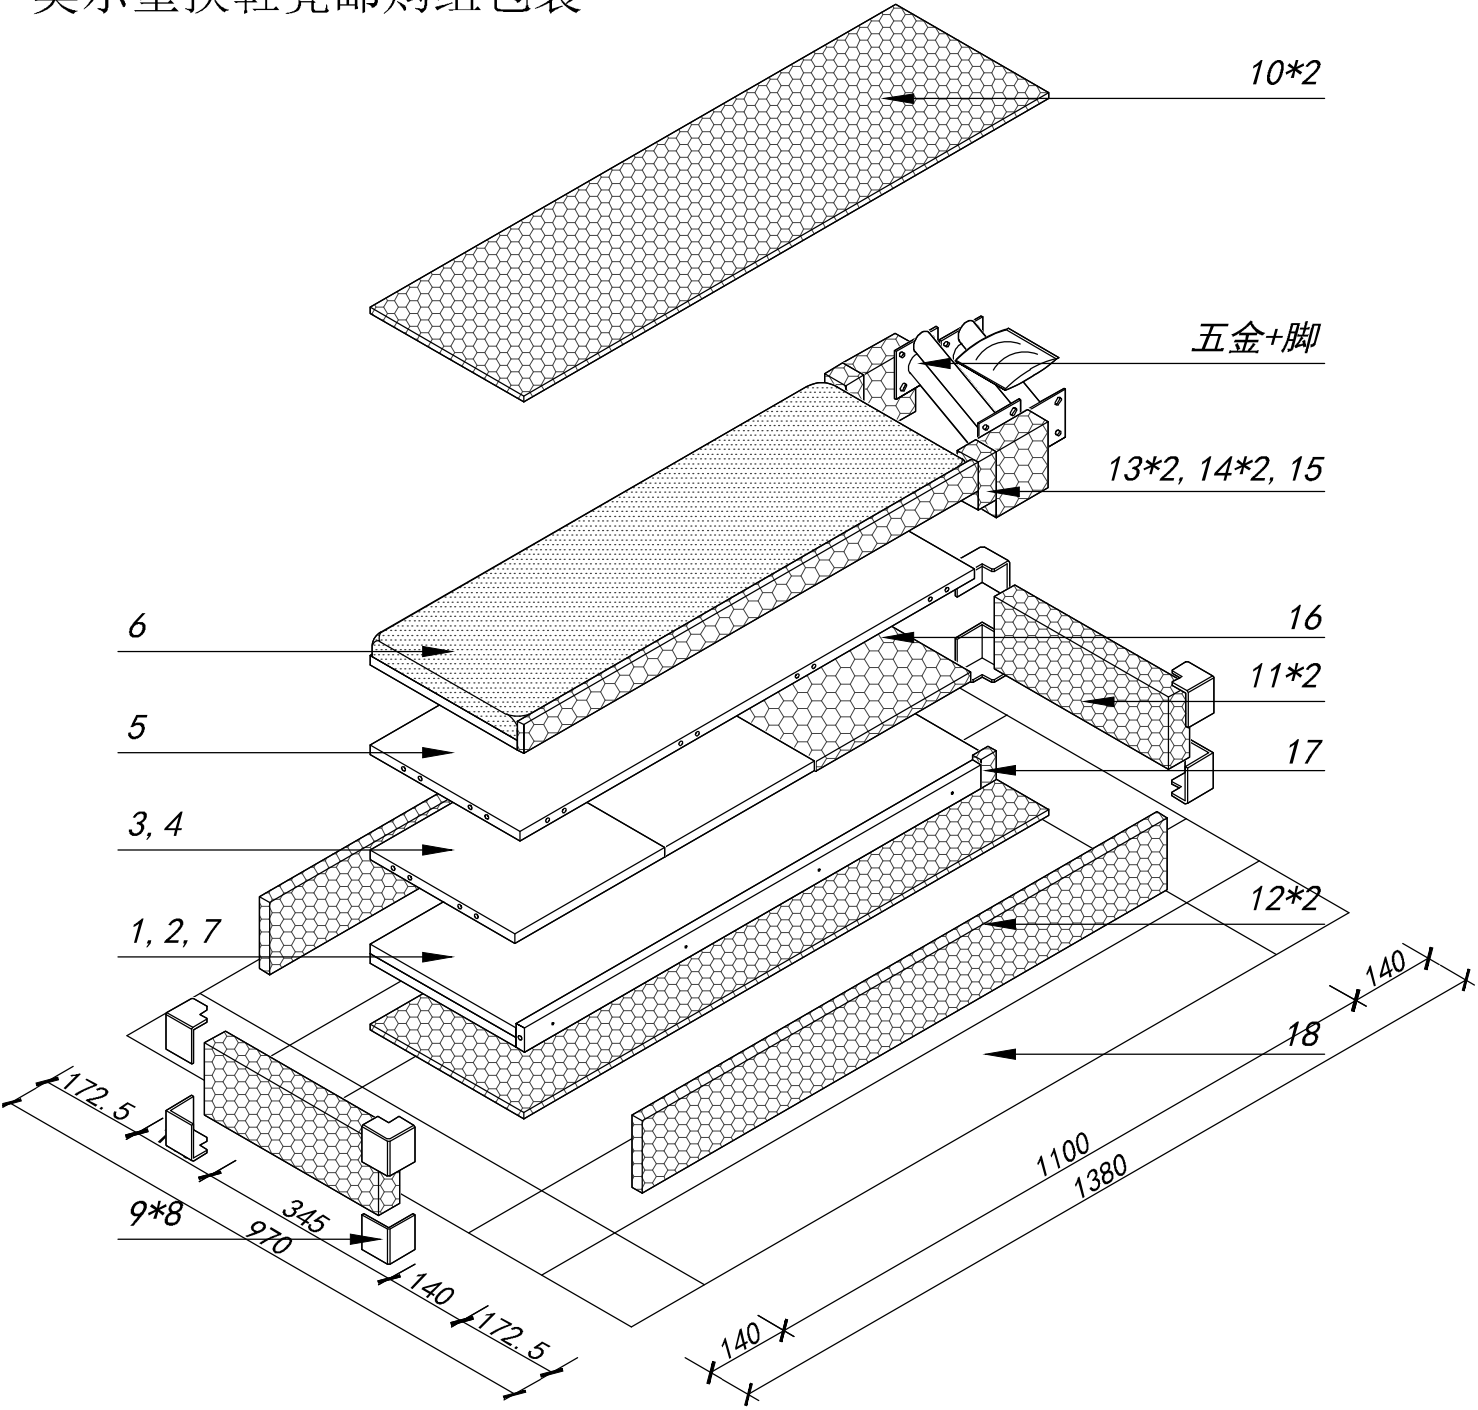

Panel No		Panel Sizes	Quantity
9	护角	50*50*50	8
10	泡沫	1010*295*10	2
11	泡沫	335*130*40	2
12	泡沫	1010*130*20	2
13	泡沫	110*100*40	2
14	泡沫	80*40*35	2
15	泡沫	874*12*45	1
16	泡沫	280*298*15	1
17	泡沫	45*30*15	1
18	纸盒	内径1100*345*140	1